



PL - INSTRUKCJA MONTAŻU: **BIURKO LUMI**
ENG - ASSEMBLY INSTRUCTIONS: **DESK LUMI**
DE - MONTAGEANLEITUNG: **SCHREIBTISCH LUMI**




ZESTAWIENIE OKUĆ: LIST OF FITTINGS: AUSSTATTUNGSLISTE:			22 x Nockenschloss Cam lock Mimośród		2 x Bolzen M4x30 Bolt M4x30 Śruba M4x30		24 x Schrauben 3,5x16 Screw 3,5x16 Wkręt 3,5x16		
1	2	3	4	5	6	7	8	9	10
									
Klucz „4” Wrench „4” Schlüssel „4” 1 x	Komfirmat Confirmat screw Bestätigung 12 x	Trzpień Cam lock bolt Nockenverriegelungs bolzen 22 x		Kołek 8x35 Dowel 8x35 Holzdübel 8x35 33 x	Ślizgacz meblowy Furniture glider Rutschig Möbel 2 x	Gwóźdź Nails Nagel 16 x		Prowadnice Guides Schubladenführungen 2 x	
									11
									
									Śruba M6x45 Bolt M6x45 Bolzen M6x45 4 x


ZESTAWIENIE ELEMENTÓW:
LIST OF ELEMENTS:
LISTE DER ELEMENTE:

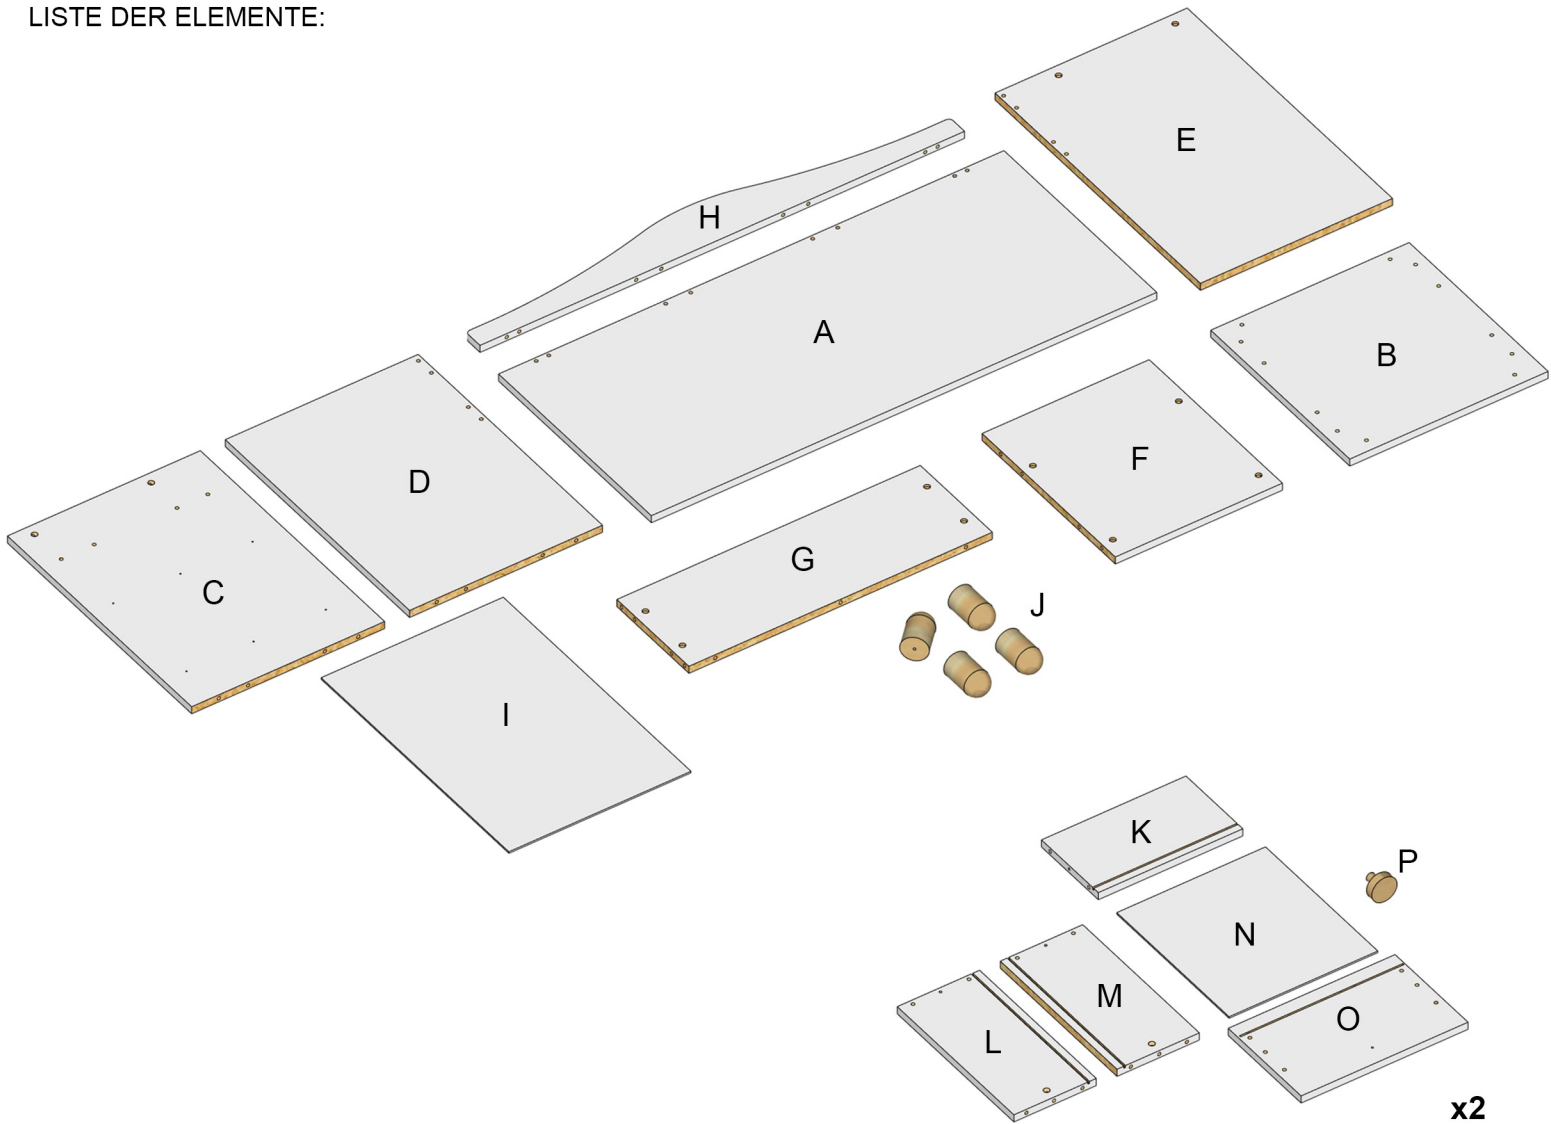


ROZDZIELENIE PROWADNICY
GUIDE SEPARATION
FÜHRUNGSABTEILUNG

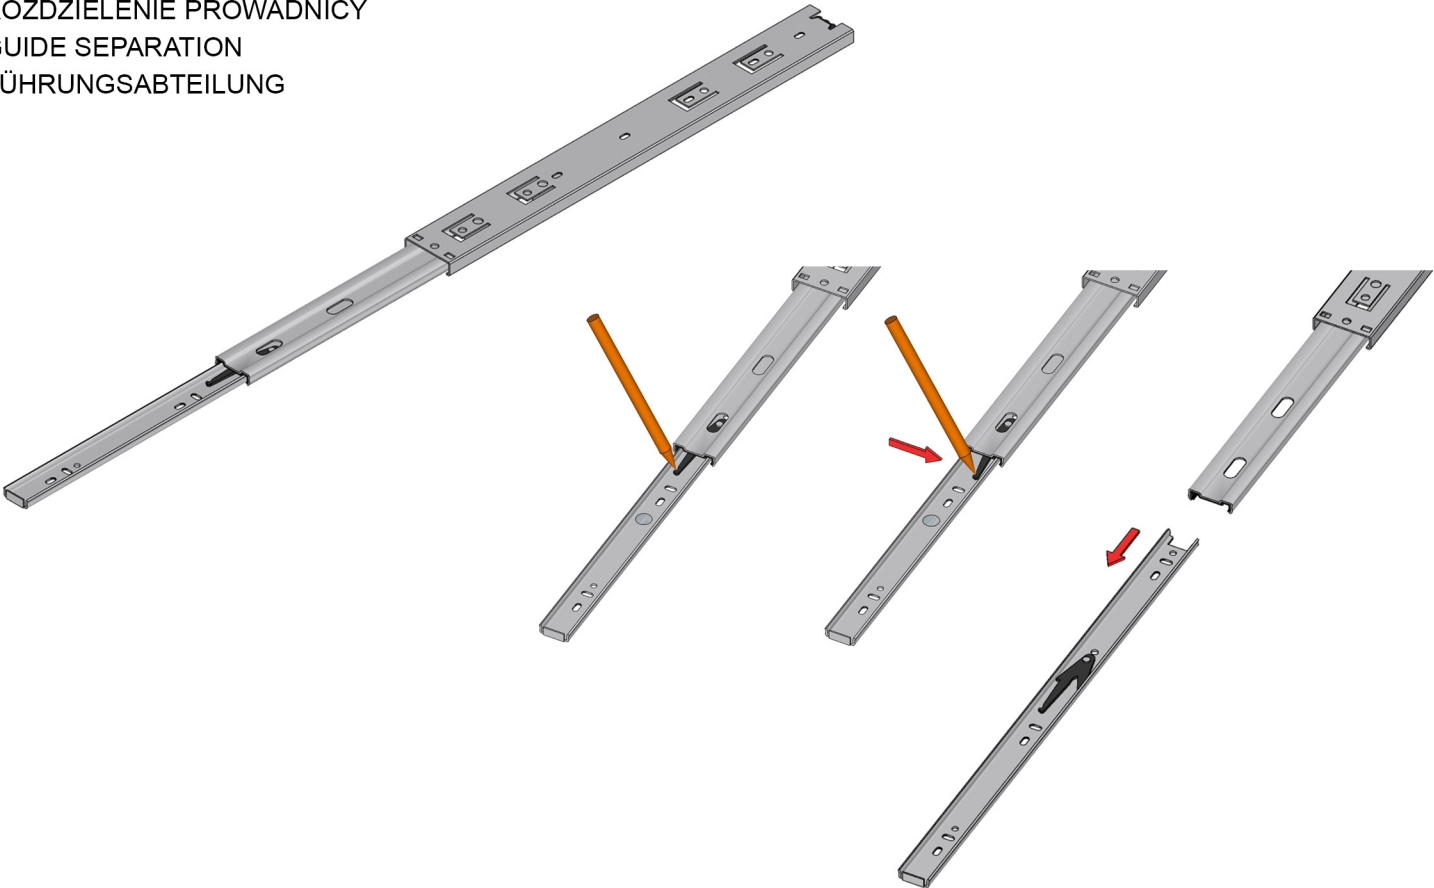


2

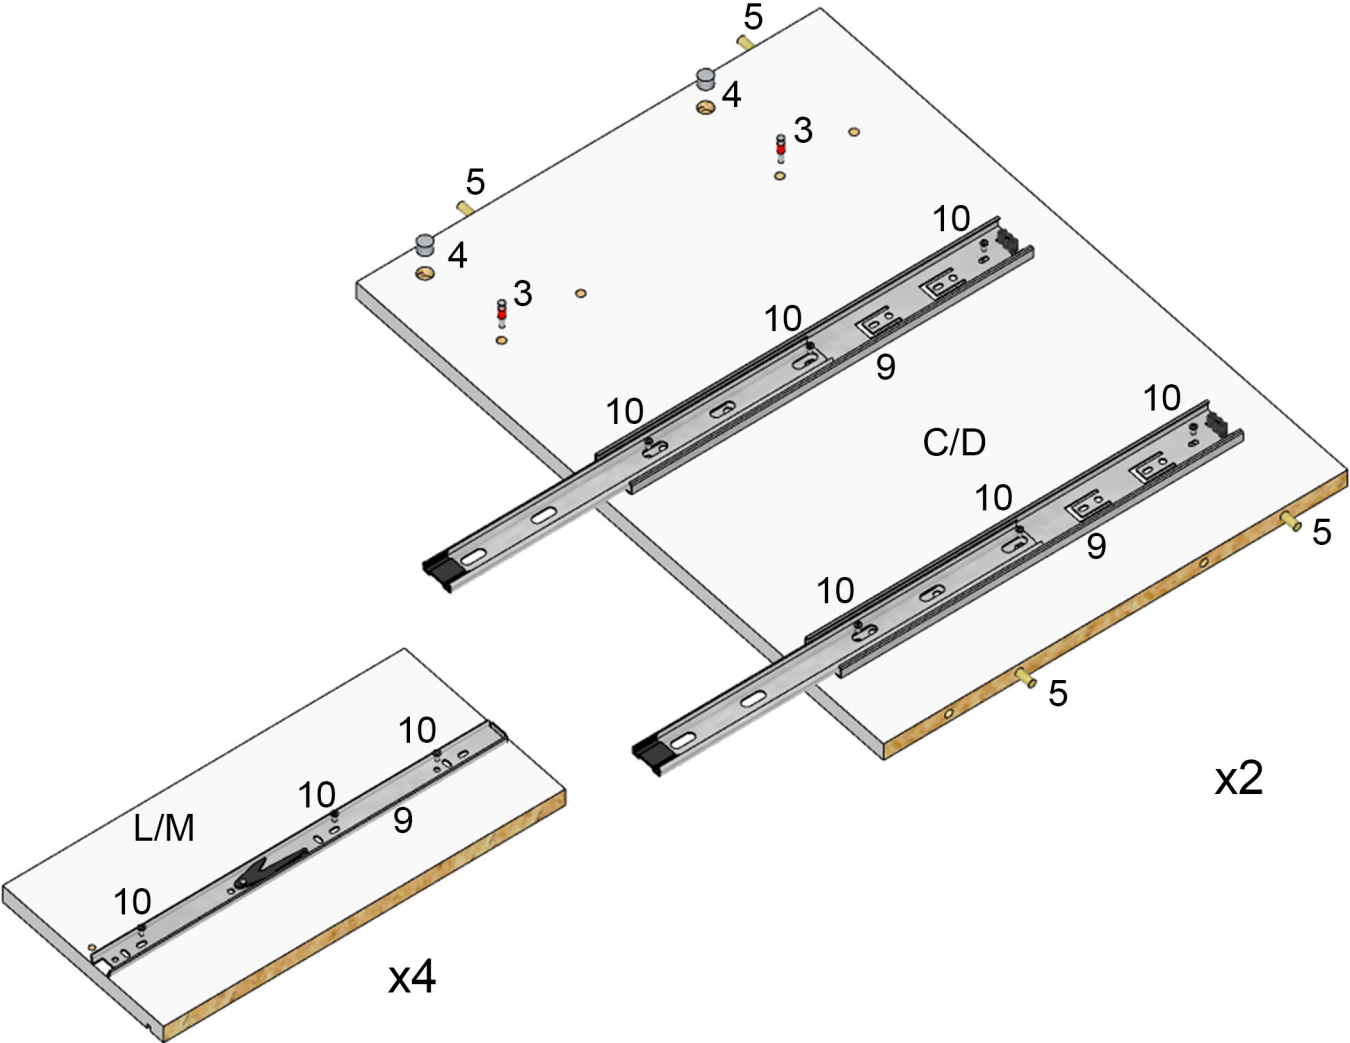


3

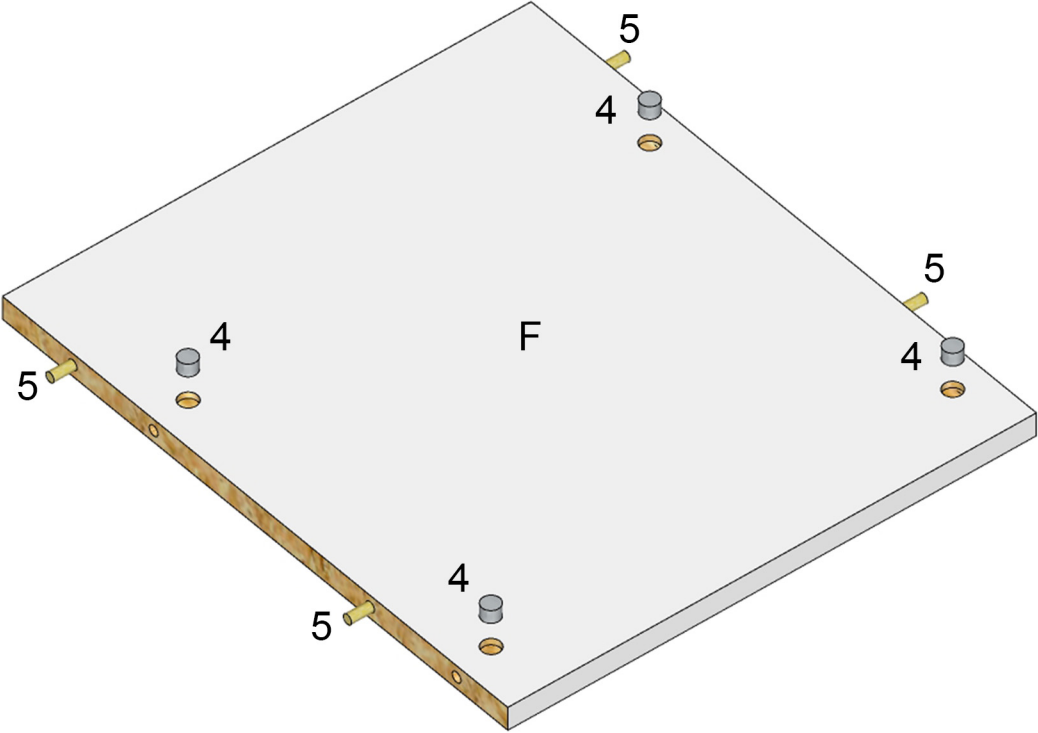


4

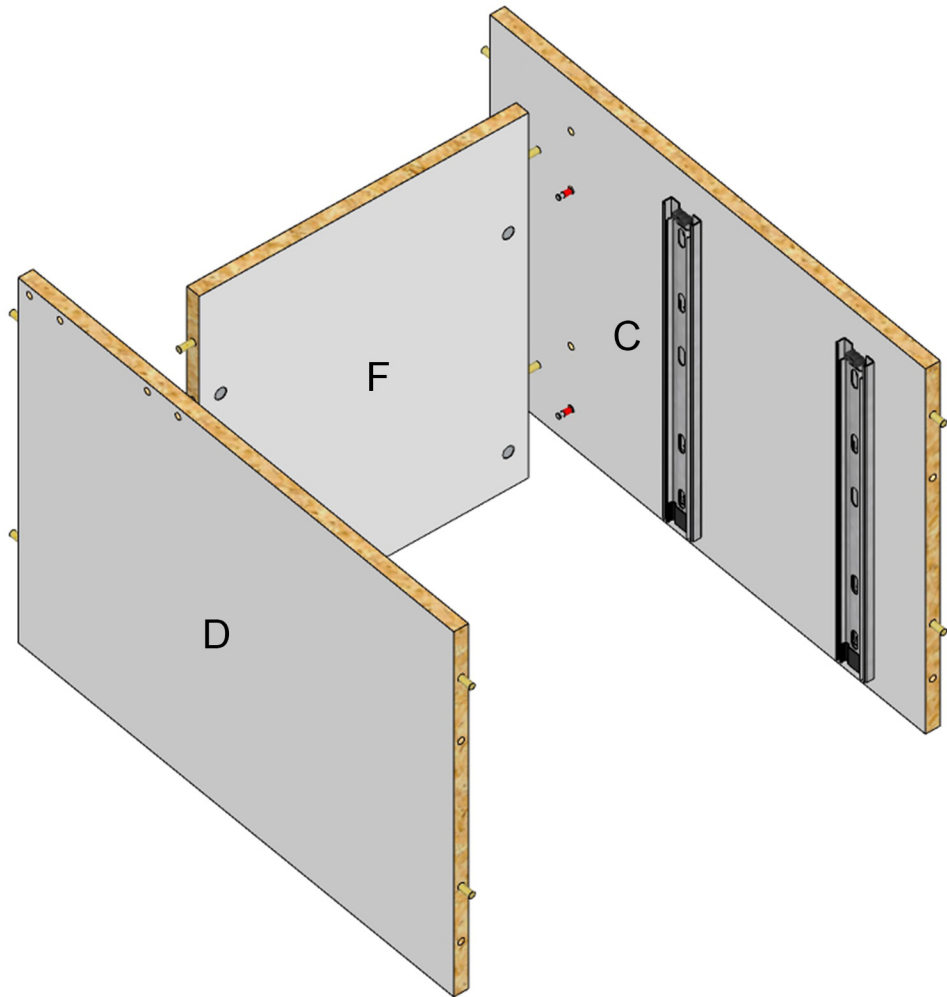


5a

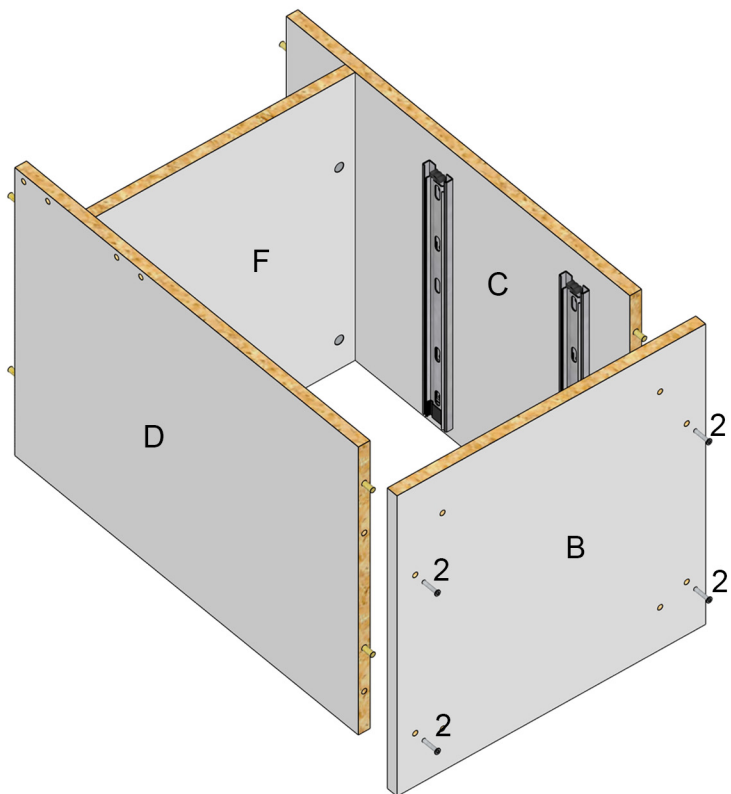


5b

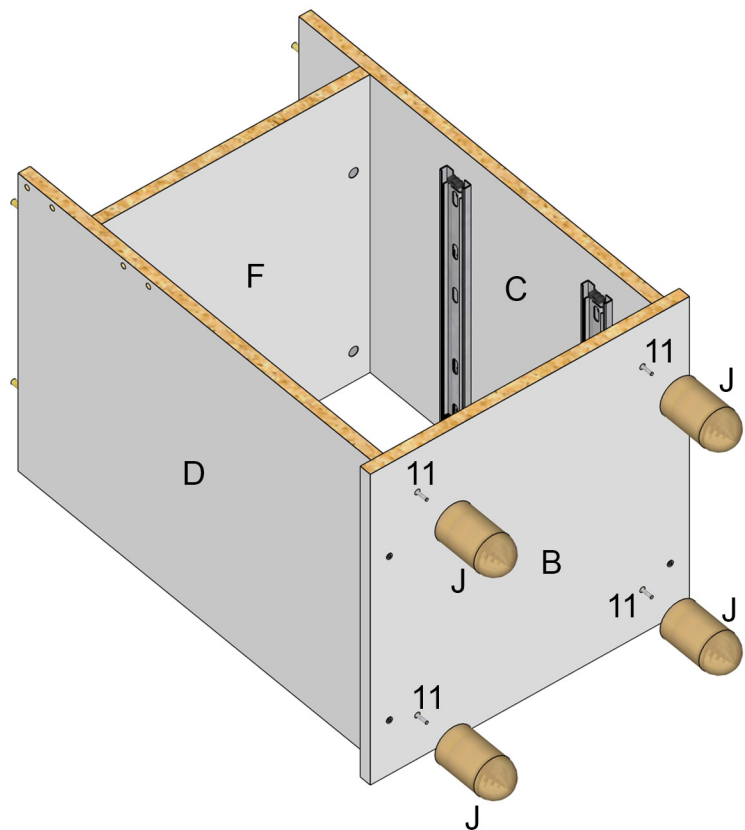


6

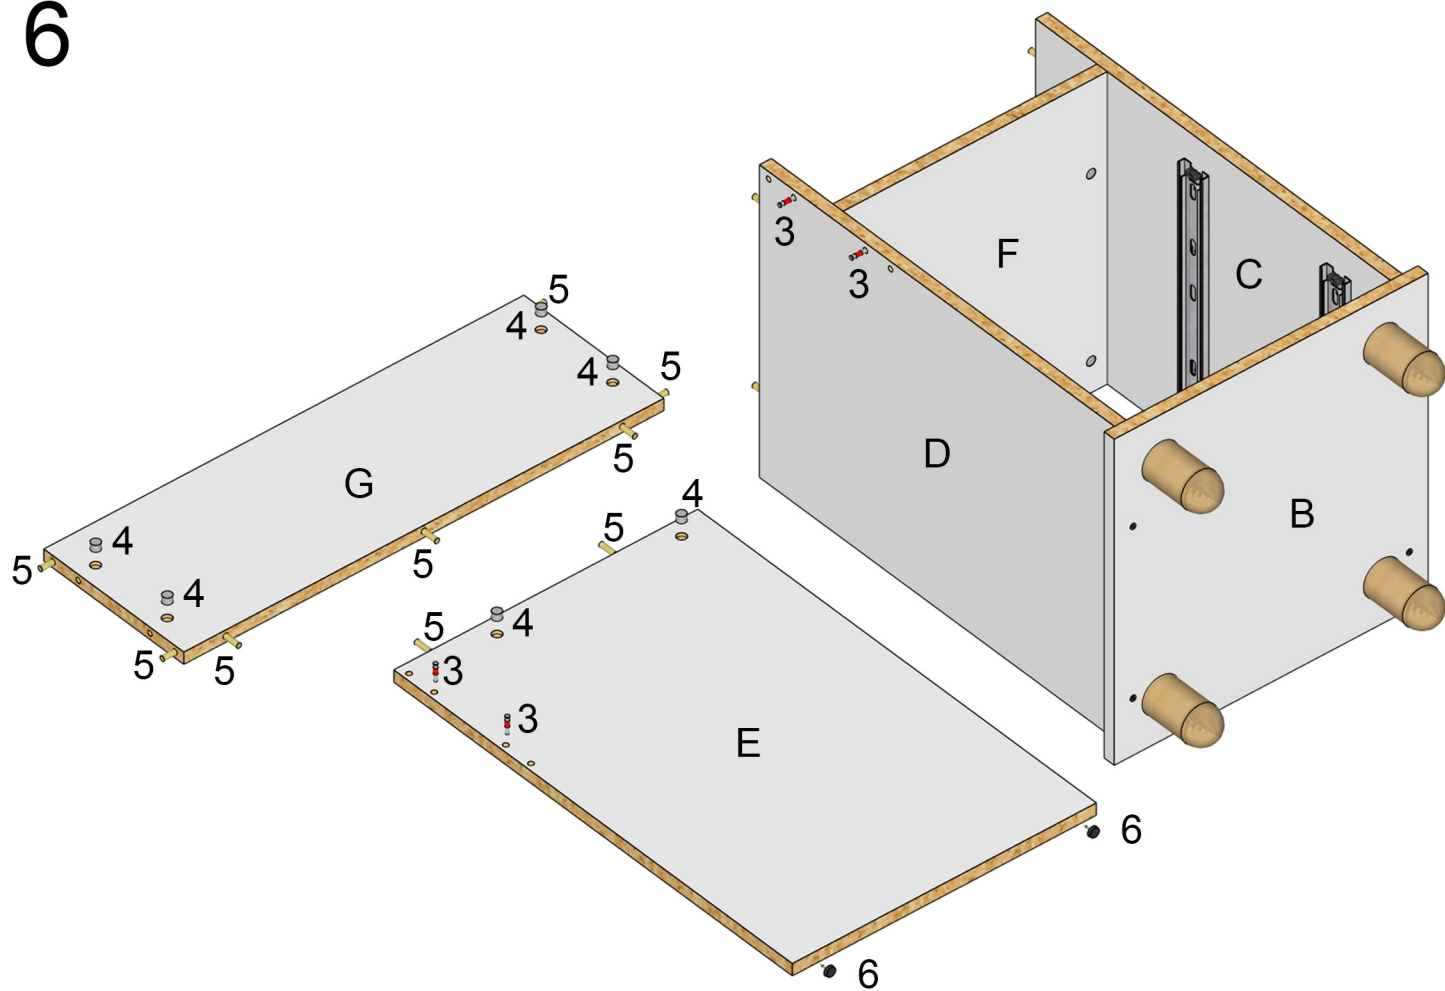


7

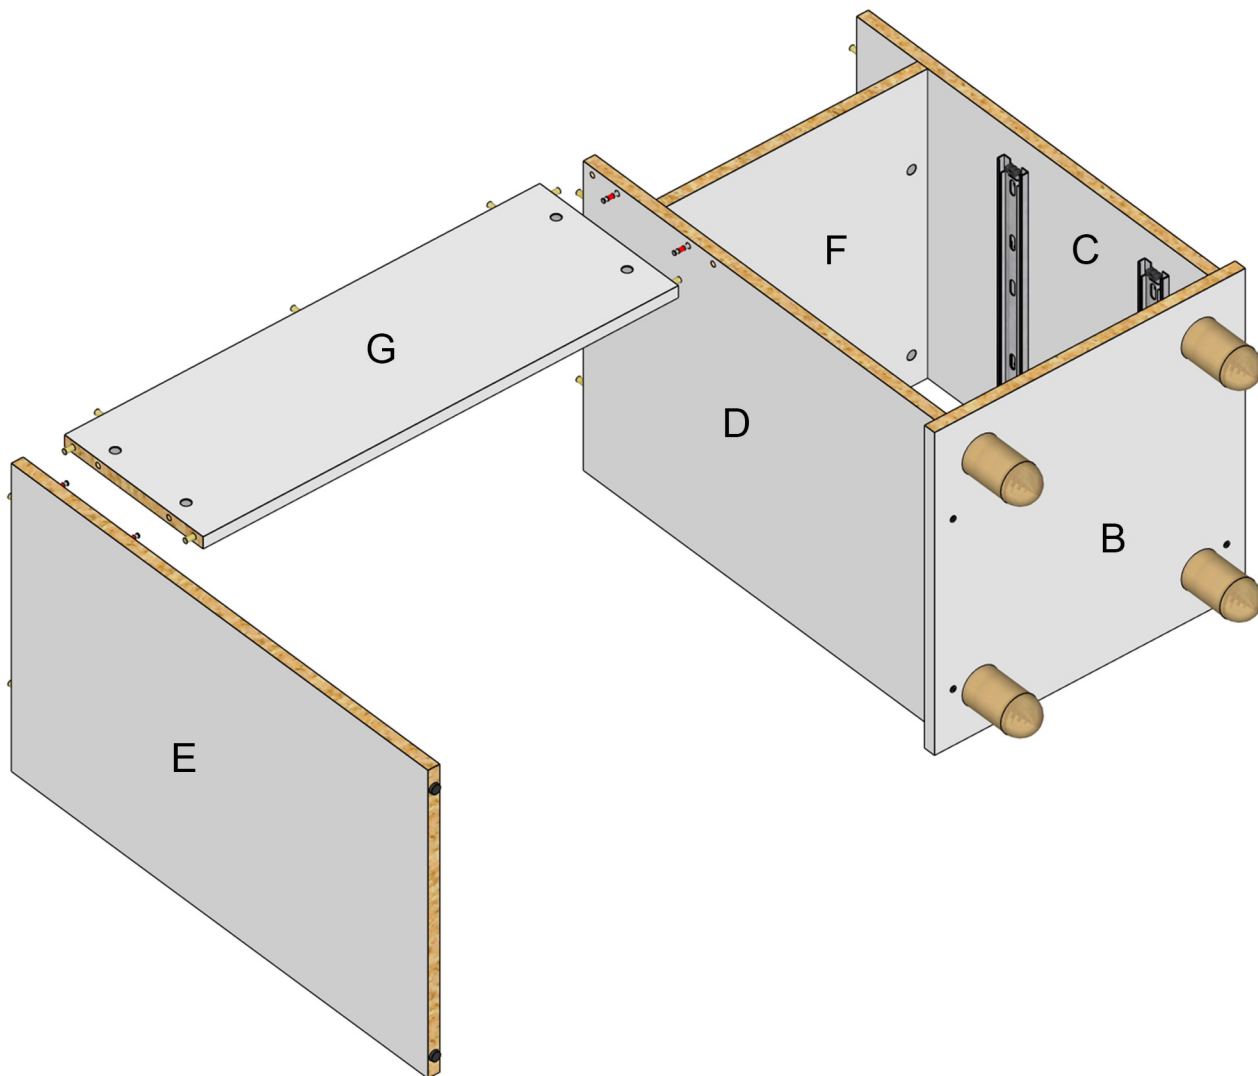

8

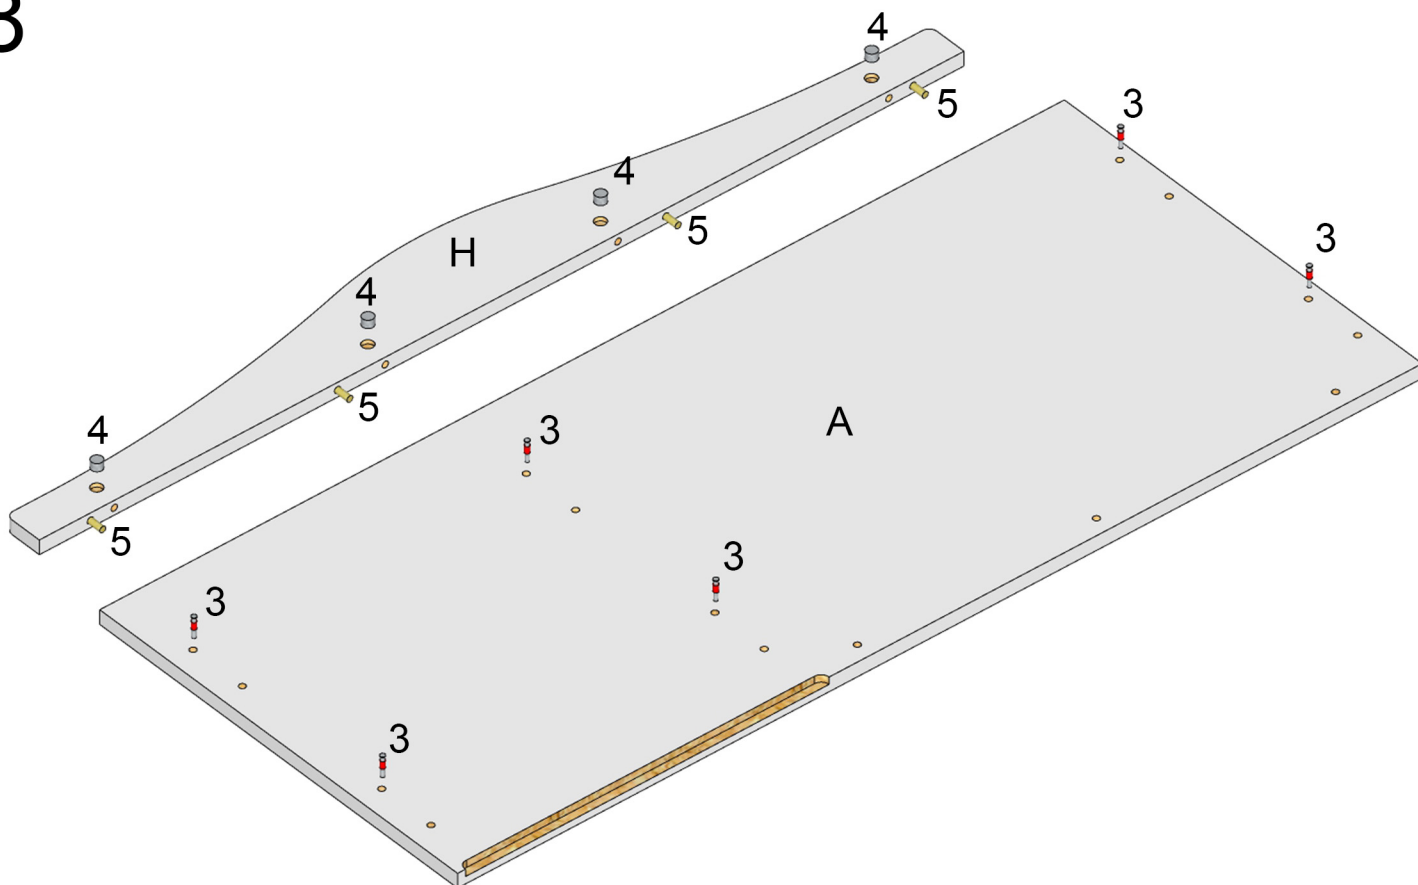

9

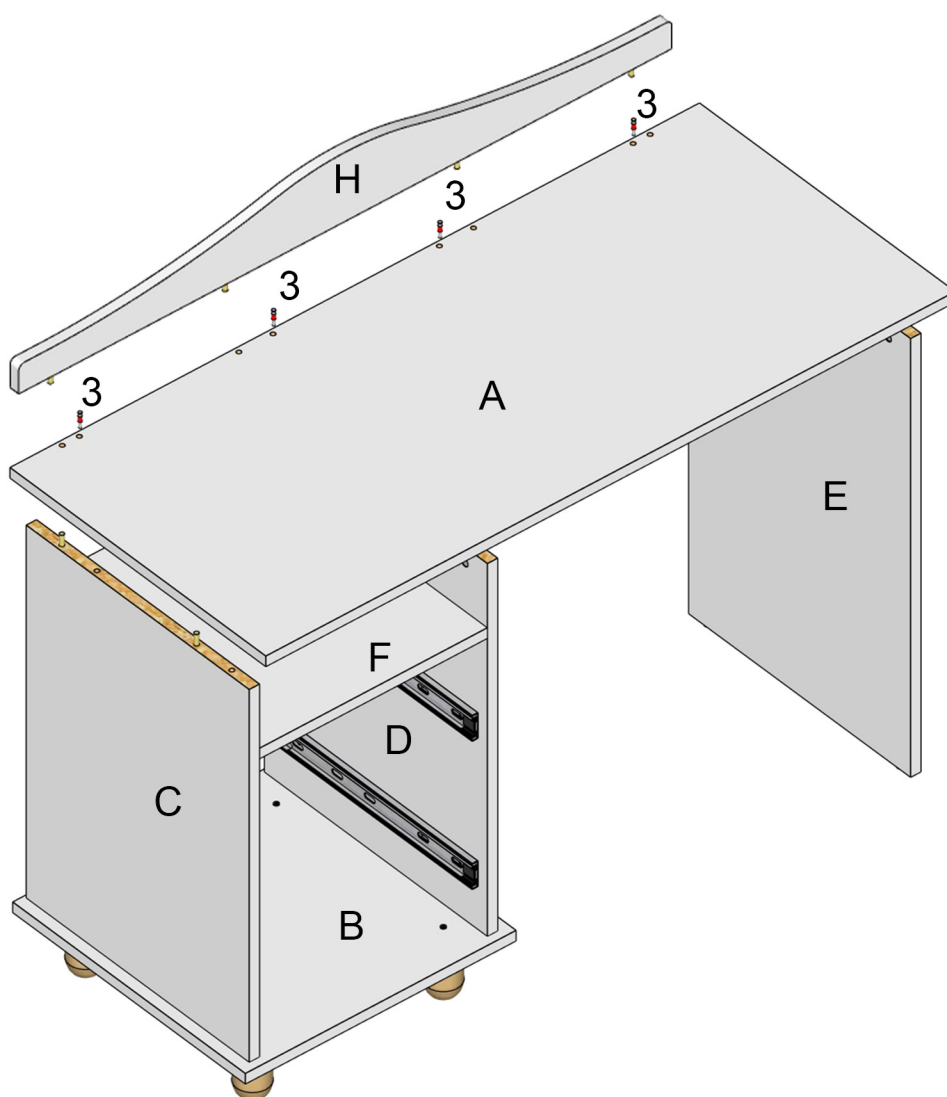


10


UWAGA! PRZED MONTAŻEM CZĘŚCI „I” SPRAWDŹ PRZEKĄTNĄ!!!

NOTE! BEFORE INSTALLING PART "I", CHECK THE DIAGONAL!!!


AUFMERKSAMKEIT! VOR DER MONTAGE VON TEIL „I“ DIE DIAGONALE PRÜFEN!!!

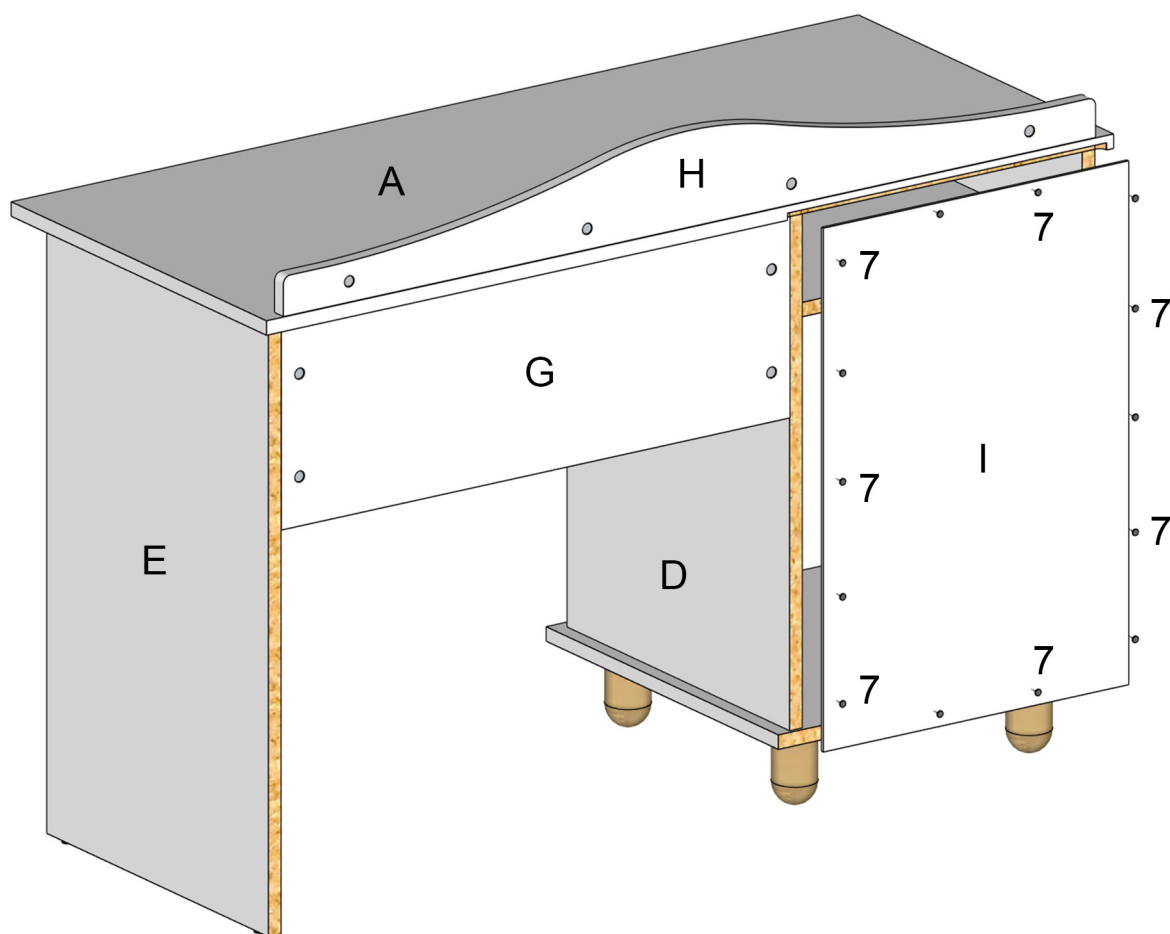

11

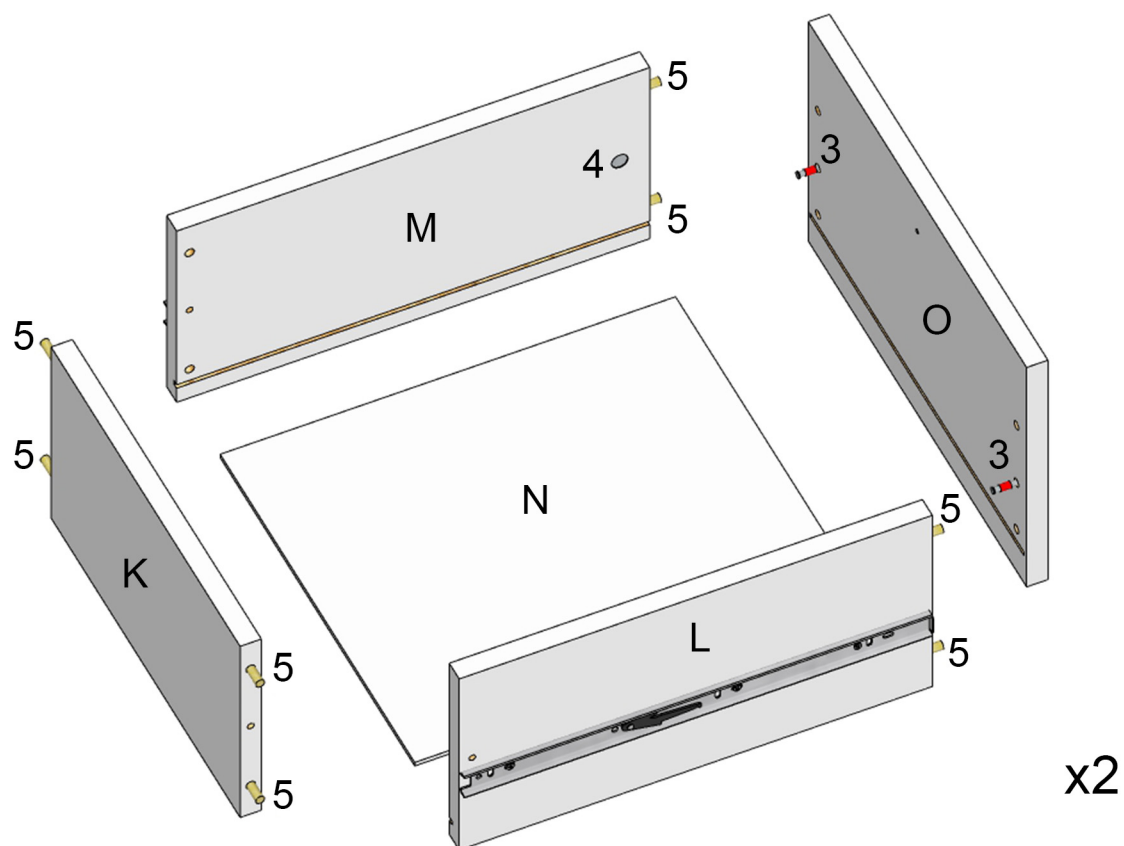

12

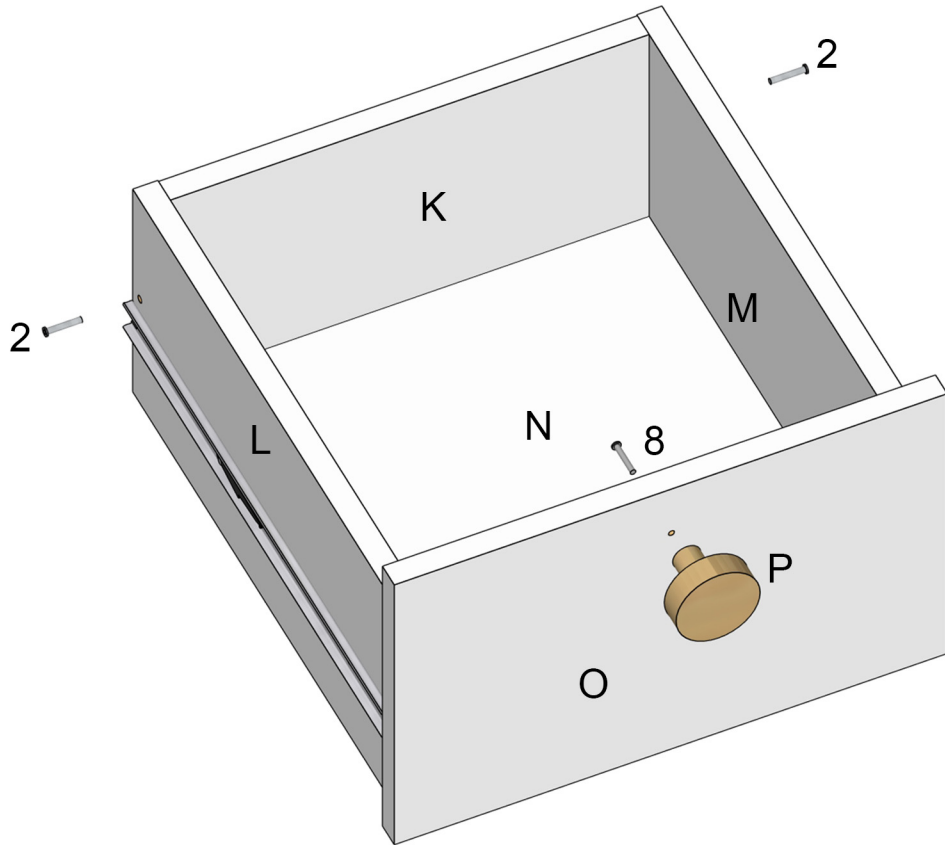

13

