



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**Toyota Corolla 12 XII Station Wagon
(2018->>)**

COR12K KPL


SOLARRIDE Zakonik, odoryi pzoewekozesneSolarRide do Toyota Corolla 12 XII Kombi od 2018-KPL-3kg

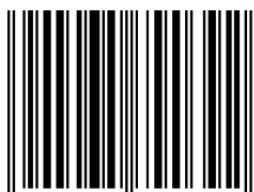

5 904035 790392 >

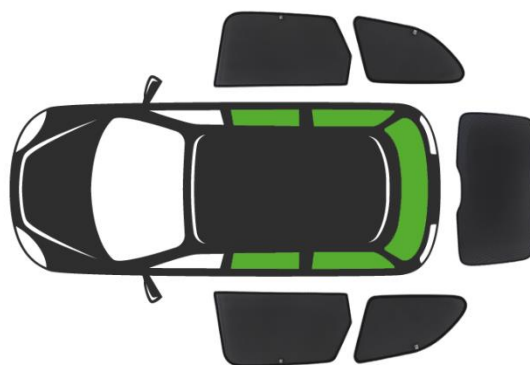

2 x

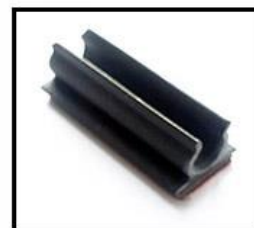

6 x



