






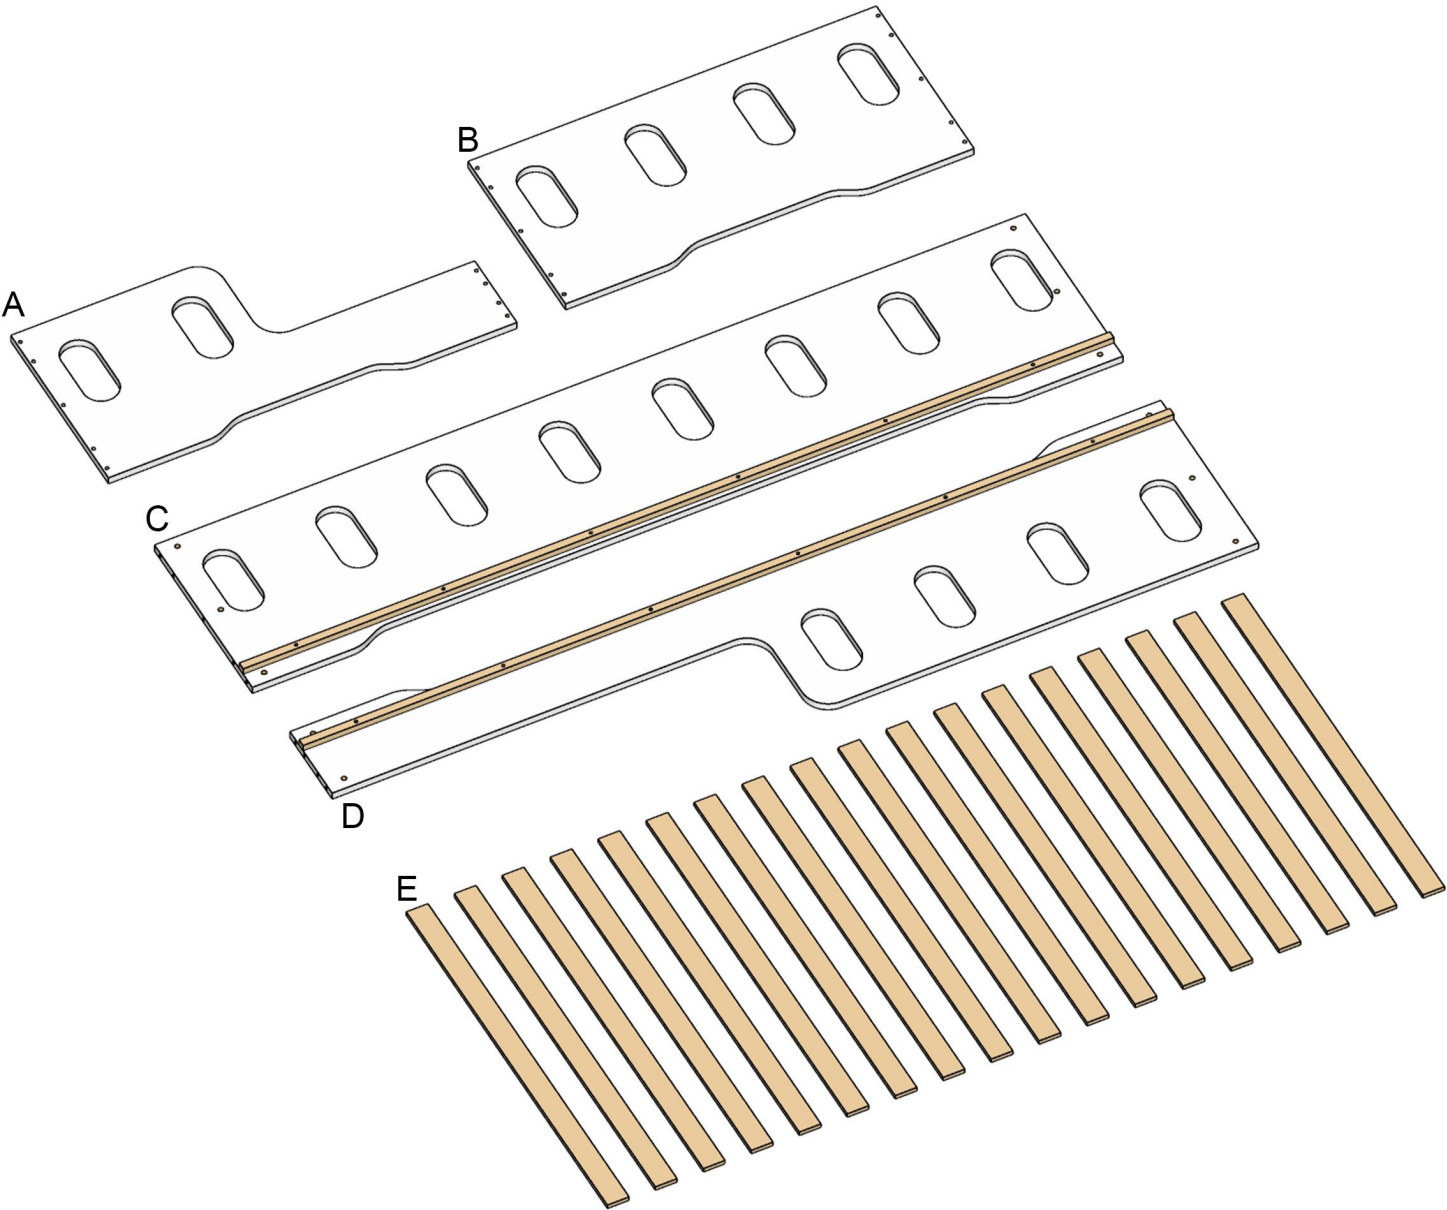
LIST OF FITTINGS:

				
Wrench 1 pcs.	Bolt M6x60 11 pcs.	Barrel nut 11 pcs.	Wooden dowels 8 pcs.	Screw (3,5cm) 32/40 pcs.*


* number of screws depending on the thickness of the slats under mattress

ATTENTION: it is recommended that assembly and disassembly be carried by two people.


LIST OF ELEMENTS:




1

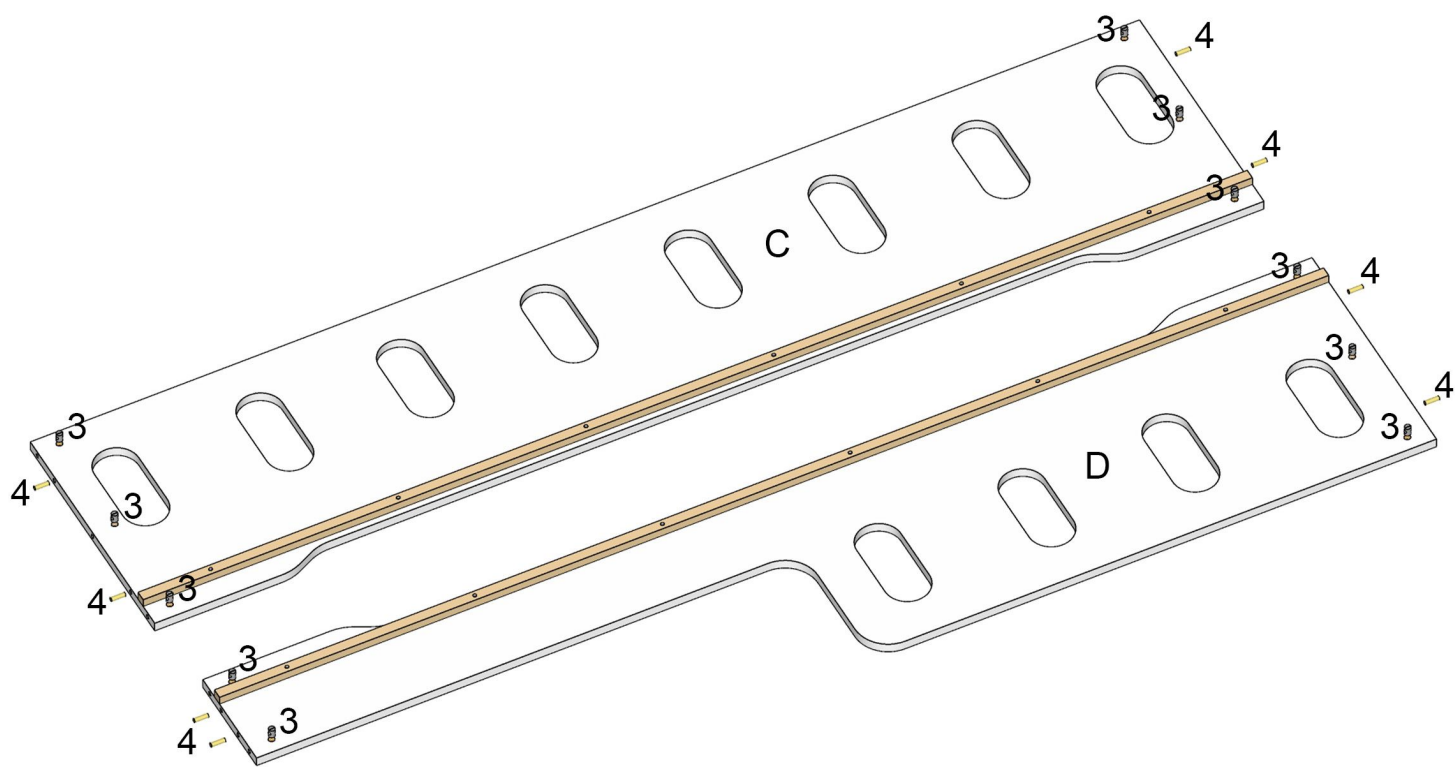

2

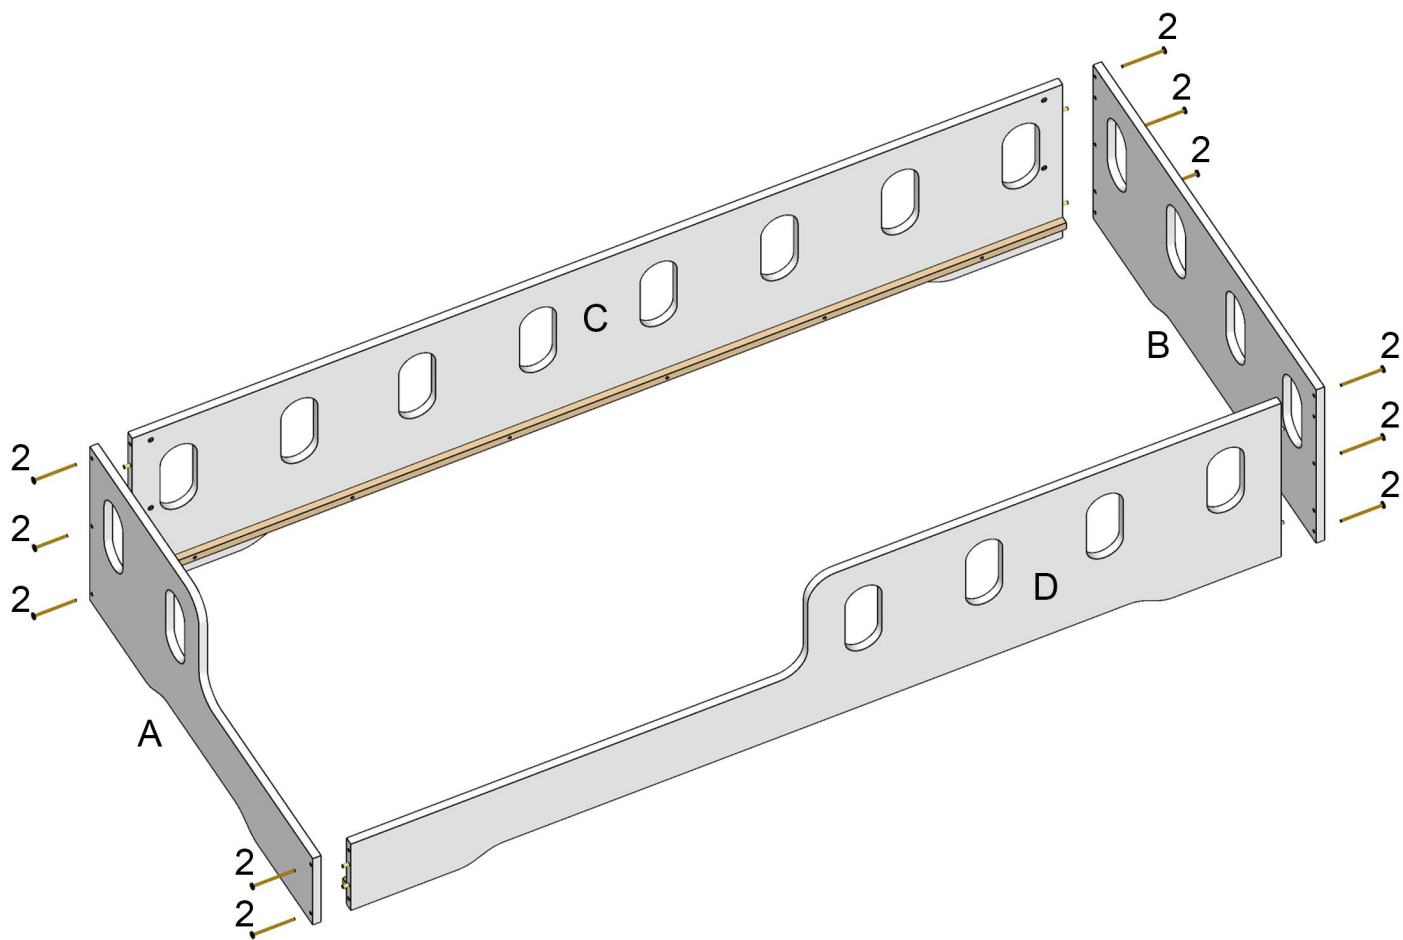

3

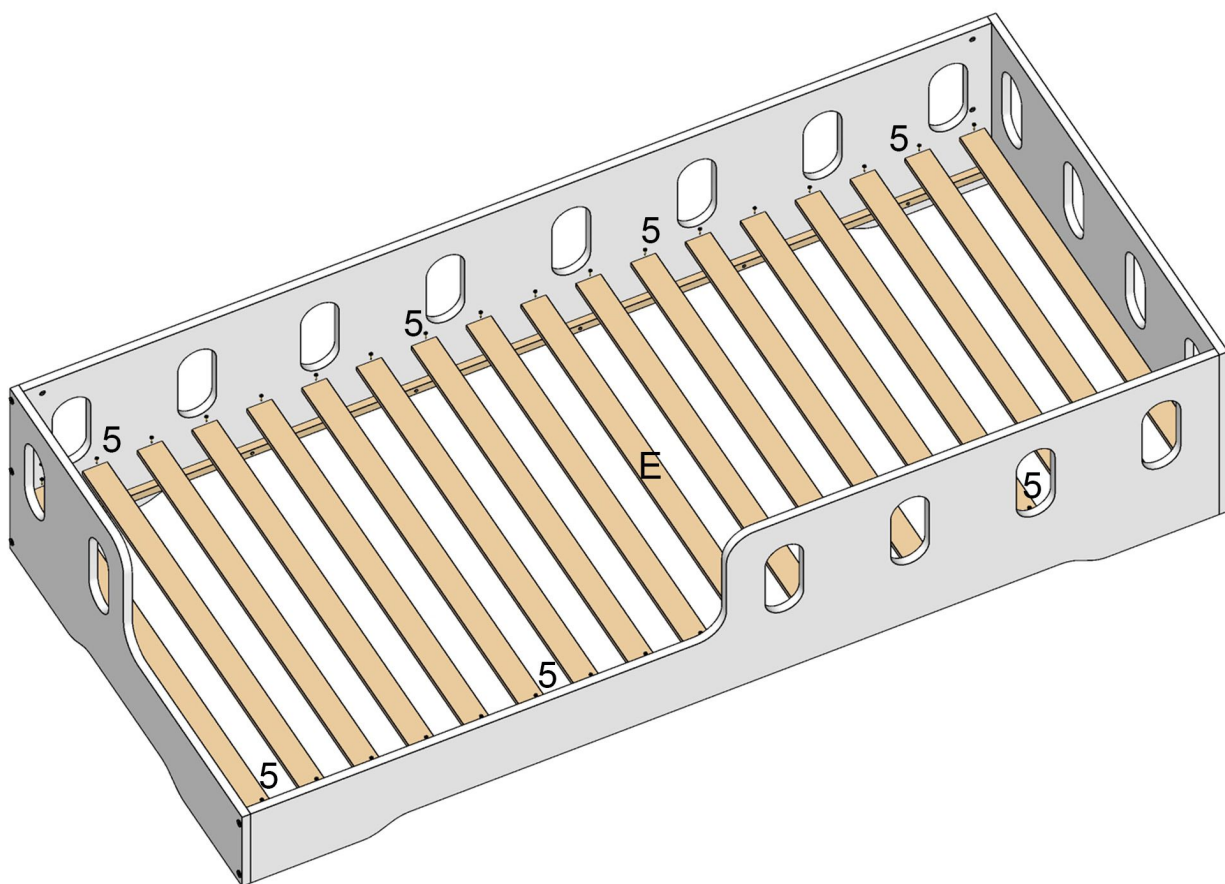

4

