



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Skoda Rapid Spaceback (2013-2019)

RAPID K BEZ KL

SOLARRIDE Zakladi, olovy provedené do Skoda Rapid Spaceback (2013-2019) BEZ KL, 2kg.

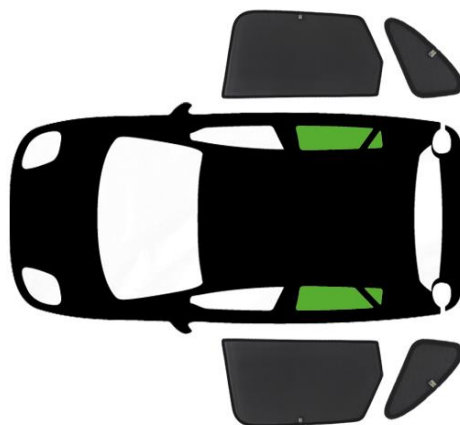

6 x



2 x



