



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



VW Passat B6 Sedan (2005-2010)

B6S DR



VW Passat B7 Sedan (2010-2014)

B7S DR

SOLARRIDE Zakorki, naklony przeznaczonych do VW Volkswagen Passat B6 Sedan (2005-2010) DR 1kg




5 904035 790842 >

SOLARRIDE Zakorki, naklony przeznaczonych do VW Volkswagen Passat B7 Sedan (2010-2014) DR 1kg



5 904035 790859 >

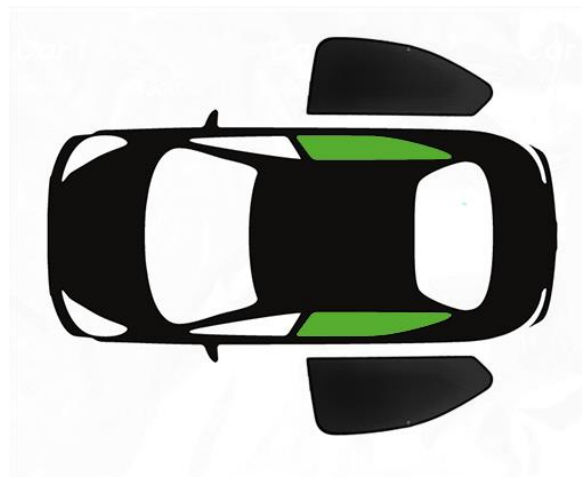

6 x



