



①



Strip off 1.6 inch of a cable jacket and fold braid back over it. Cut off aluminum foil for each pair, and use a supplied copper foil shield surrounding a cable.


JACK PIN DESIGNATIONS	TIA/EIA T568A	TIA/EIA T568B
	1 White/Green	white/Orange
	2 Green	Orange
	3 white/Orange	White/Green
	6 Orange	Green
	4 Blue	Blue
	5 white/Blue	white/Blue
	7 White/Brown	White/Brown
	8 Brown	Brown

②

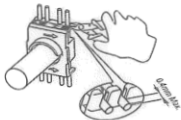


Insert a cable into the termination cap and fan out all four twisted pairs. Following the instruction of the color-coded wire position printed on the termination cap, position conductors into the slots and make sure the conductors are in the proper slot. Trim the ends of the conductors

③

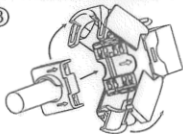


Install the termination cap to outlet, which will also allocate the conductors sitting on the slots.

④

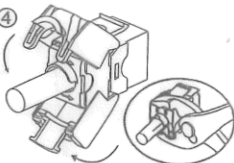

Secure the hinged outlet by using a crimp tool until it completely snaps to effect the connection.

⑤

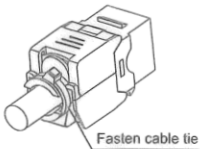

Fasten cable tie