



Instrukcja montażu folii hydrożelowej Supero (z pozycjonerem USB-C)



Samoregeneracja
Auto Repair



Niepekająca



Ultra cienka



Doskonała
gładkość

Wersja folii Supero z pozycjonerem zapewnia **maksymalną precyzję montażu**. Dzięki specjalnej końcówce, którą wkładasz do portu USB-C telefonu, masz pewność, że folia znajdzie się dokładnie tam, gdzie trzeba. Gotowy? Zaczynamy!

Słowniczek pojęć

- **Folia hydrożelowa** – elastyczna, samoregenerująca się osłona ekranu, idealnie dopasowująca się do płaskich i zakrzywionych powierzchni.
- **Ściereczka alkoholowa** – nasączona alkoholem chusteczka do czyszczenia ekranu z tłuszczu i zanieczyszczeń.
- **Ściereczka z mikrofibry** – miękka, sucha ściereczka do osuszenia i wypolerowania wyświetlacza.
- **Naklejka do usuwania kurzu** – naklejka służąca do pozbywania się drobnych pyłków z powierzchni ekranu.
- **Pozycjoner** – element montażowy, który wkładasz do portu USB-C telefonu, aby idealnie ustawić folię.
- **Naklejki pozycjonujące** – samoprzylepne paski pomocne przy ustawianiu folii (opcjonalne).
- **Warstwa klejąca** – spód folii, który przykleja się do ekranu.
- **Rakla (karta aplikacyjna)** – plastikowy element służący do dociskania folii i wygładzania powierzchni.





Krok po kroku:

1. Przygotowanie ekranu

Zacznij od przetrwania ekranu **ściereczką alkoholową**, aby pozbyć się tłustych plam i brudu. Następnie wypoleruj powierzchnię **suchą ściereczką z mikrofibry**. Na koniec użyj **naklejki do usuwania kurzu**, aby usunąć drobne pyłki i zanieczyszczenia. Czysty ekran = idealna aplikacja.



2. Usuń środkową warstwę ochronną

Zdejmij środkową warstwę transportową z folii – to ta, która przylega bezpośrednio do ekranu.



3. Włóż pozycjoner do portu USB-C

Delikatnie umieść pozycjoner w porcie USB-C swojego telefonu. Następnie włóż końcówkę folii w szczelinę pozycjonera – dzięki temu folia sama ustawi się w odpowiednim miejscu.



4. Przyklej środek folii

Delikatnie dociśnij środkową część folii do ekranu – najlepiej zaczynając od środka i przesuwając na boki.






5. Aplikacja dolnej części


Zegnij dolną część folii i usuń warstwę klejącą.

Za pomocą rakli przyciskaj folię w kierunku dolnej krawędzi telefonu – płynnie i równomiernie.

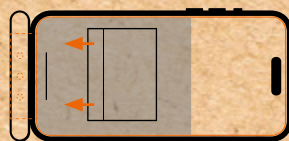

6. Aplikacja górnej części

Powtórz ten sam proces z górną częścią folii. Odklej warstwę i dociśnij folię w stronę górnej krawędzi.

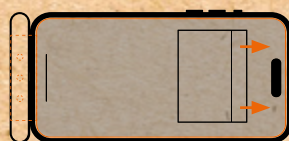

7. Wygładź powierzchnię

Użyj rakli lub ściereczki z mikrofibry, aby wypchnąć pęcherzyki powietrza – przesuwaj od środka w stronę krawędzi.

Nie martw się! Drobne bąbelki znikną w ciągu 24 godzin.




8. Zakończenie montażu

Zdejmij wierzchnią warstwę ochronną z folii.

Na koniec delikatnie wyjmij pozycjoner z portu USB-C.

Gotowe – ekran jest zabezpieczony i prezentuje się świetnie!

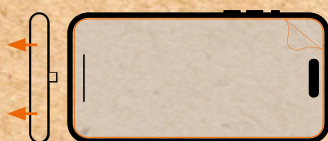



Dodatkowe informacje:

- W przypadku zakrzywionych ekranów, dociśnij brzegi dopiero po usunięciu wszystkich bąbelków i zdjęciu warstwy ochronnej.
- Dzięki elastyczności hydrożelu, folia idealnie przylega do każdej powierzchni - bez efektu odstawania.

Demontaż folii hydrożelowej - Supero

1. Podważ jeden z rogów paznokciem lub plastikową kartą.
2. Powoli odklejaj folię, ciągnąc ją równomiernie.
3. Przetrzyj ekran - gotowe!

Porada SUPERO

**Przed montażem upewnij się, że folia pasuje do modelu Twojego telefonu.
Precyzyjne dopasowanie to gwarancja idealnego efektu**



Supero Hydrogel Film Installation Guide (USB-C Positioner Version)



Auto Repair



Crack-Resistant



Ultra-Thin



Ultra-Smooth
Surface

The Supero hydrogel film with a USB-C positioner offers maximum installation precision. Thanks to the small alignment tool that fits into the USB-C port, you can be sure the film is perfectly positioned. Ready? Let's get started!

Glossary of Terms

- **Hydrogel film** - a flexible, self-healing screen protector that adapts perfectly to flat and curved displays.



- **Alcohol wipe** - a cloth soaked in isopropyl alcohol for cleaning grease and dirt from the screen.



- **Microfiber cloth** - a soft, dry cloth for drying and polishing the screen.



- **Dust absorber** - a sticker used to remove tiny dust particles from the screen.



- **Positioner** - a small mounting tool that fits into the USB-C port to help align the film precisely.



- **Guide stickers** - adhesive tabs that help position the film (optional).



- **Adhesive layer** - the bottom part of the film that sticks to the screen.



- **Squeegee / application card** - a plastic tool used to press and smooth the film during application.





Step-by-Step Instructions:

1. Prepare the screen

Start by cleaning the screen with the **alcohol wipe** to remove grease and fingerprints. Then, polish and dry it with the **microfiber cloth**. Finish by using the **dust absorber** to pick up any remaining particles. A clean screen = a perfect installation.



2. Remove the middle protective layer

Peel off the middle (transport) layer of the film - this is the part that touches the screen.



3. Insert the USB-C positioner

Gently place the **positioner** into your phone's USB-C port. Then insert the end of the film into the positioner's slot - this will hold it in the correct position.



4. Attach the center of the film


Press the **center of the film** gently onto the screen, starting from the middle and spreading outward.






5. Apply the bottom section

Fold down the bottom part of the film and peel off the adhesive backing. Use the **squeegee** to press the film smoothly toward the bottom edge.

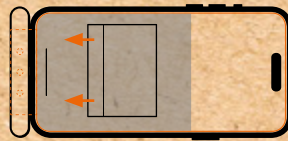

6. Apply the top section

Repeat the process with the **top part** of the film. Peel the backing and press the film toward the top edge using the squeegee.

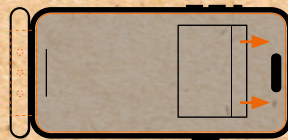


7. Smooth the surface

Use the **squeegee or microfiber cloth** to push any air bubbles toward the nearest edge. Don't worry – small bubbles will disappear within 24 hours.



8. Final steps

Peel off the **outer protective layer** of the film. Carefully remove the **USB-C positioner** from your phone. Done – your screen is now protected and looking flawless!

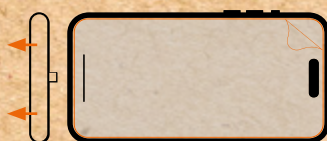



Additional Information:

- For **curved screens**, press down the edges only after removing all bubbles and peeling off the top protective layer.
- Thanks to its flexibility, hydrogel film **adheres seamlessly** - no lifting or gaps.

Removing the Hydrogel Film - Supero

1. Lift one corner using your fingernail or a plastic card.
2. Slowly peel off the film evenly.
3. Wipe the screen clean - and you're good to go!

Supero Tip:

Before starting, double-check that the film matches your phone model. A perfect fit means a perfect result