


Instrukcja montażu

WAŻNE! PRZECZYTAJ I UWAGNIE POSTĘPUJ ZGODNIE Z NINIEJSZĄ INSTRUKCJĄ ORAZ ZACHOWAJ JĄ NA PRZYSZŁOŚĆ

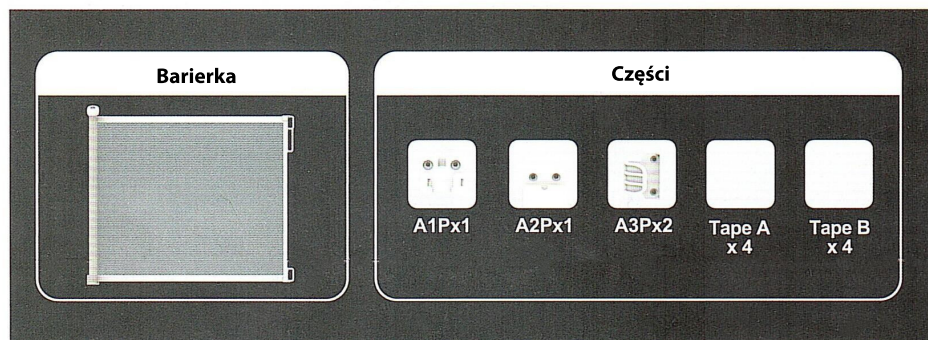

Uwaga


- Przed montażem upewnij się, że powierzchnia do montażu jest równa i gładka;
- Wyczyść powierzchnię alkoholem izopropylowym, delikatnie przetrzyj i pozostaw do całkowitego wyschnięcia bez wilgotnego oleju i kurzu.
- Taśma A nadaje się tylko do powierzchni szklanych i kafelkowych.
- Taśma B nadaje się tylko do gładkich powierzchni malowanych emulsją, gładkich powierzchni drewnianych i gładkich powierzchni metalowych.
- Mocno dociśnij rzepak przez 30 sekund po przyklejeniu do powierzchni i upewnij się, że taśma została dobrze przyklejona.
- Wyjmij korpus bramy po montażu i odczekaj 24 godziny przed użyciem.
- Upewnij się, że postępujesz zgodnie z zalecanymi krokami montażu.

OSTRZEŻENIE: Ta bramka zabezpieczająca jest przeznaczona wyłącznie do ochrony dzieci. Nie należy się na niej opierać ani kłaść, ponieważ może to spowodować niebezpieczeństwo.


Instalacja




1. Wyczyść ramę drzwi w miejscu

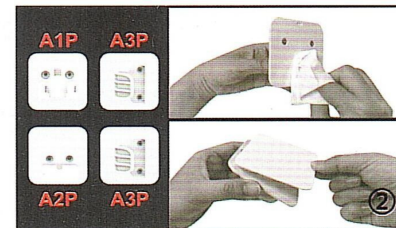


2. Wyczyść tylną stronę A1P/A2P/A3P i przyklej taśmę klejącą

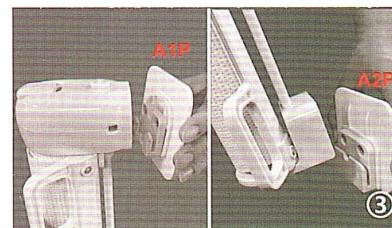


3. Zamontowano A1P/A2P na bramce

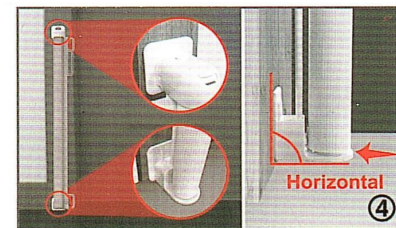

4. Przyklej bramkę, którą zamontowano za pomocą A1P/A2P do ramy drzwi w miejscu czyszczenia, dociśnij ją, aż będzie

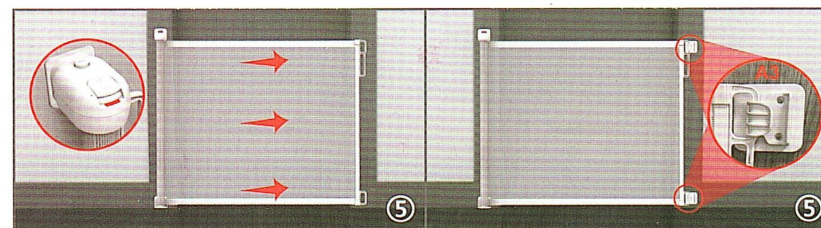


5. Przytrzymaj uchwyt i wyciągnij siatkę barierową do pozycji, w której A3P musi zostać zainstalowany, i upewnij się, że powierzchnia siatki jest płaska w pionie. Zaczep A3P odpowiednio do wiszącej części bramy, przyklej A3P do odpowiedniej pozycji ościeżnicy, dociśnij, aż będzie bezpieczny.

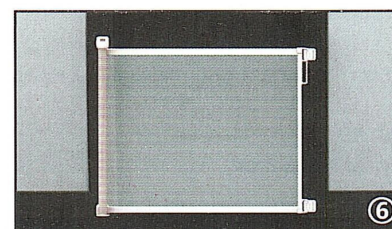

6. Instalacja ukończona

13.5CM X 21CM

⚠ IMPORTANT! READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

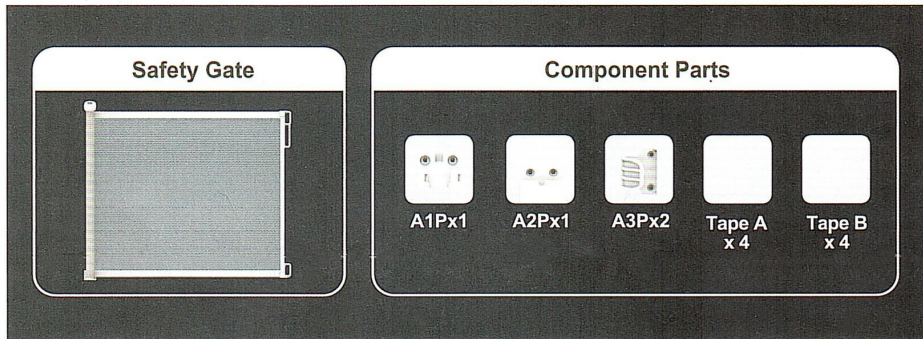

Warm Notice


- Before installation, please make sure the surface for installation is even and smooth;
- Clean surface with isopropyl rubbing alcohol, wipe gently and let dry thoroughly without moist oil and dust.
- **Tape A** only suitable for glass and tile surface only.
- **Tape B** only suitable for smooth Emulsion paint surface, smooth wood surface, and smooth metal surface only.
- Press the tape firmly for 30 seconds after adhere on the surface and make sure the tape has been stuck well throughly.
- Take out the gate body after installation, and Wait for 24 hours before using.
- Please make sure follow the recommended steps for installation.

⚠ WARNING : This safety gate is for childproof protection device only, be aware not to lean on or lie on it in case dangerous situation.


Installation




1. Clean the door frame where to pasted

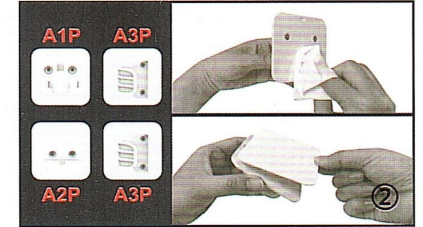


2. Clean the back side of A1P/A2P/A3P and paste the adhesive tape

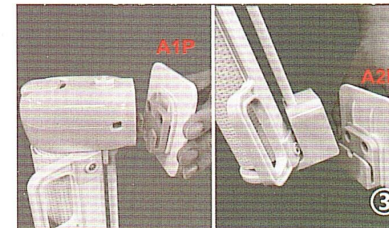


3. Installed A1P/A2P on the gate

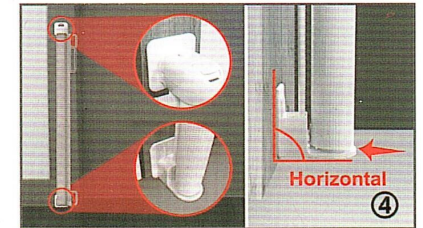

4. Pasted the gate which have been installed with A1P/A2P on the door frame where is cleaned, press it until secure.

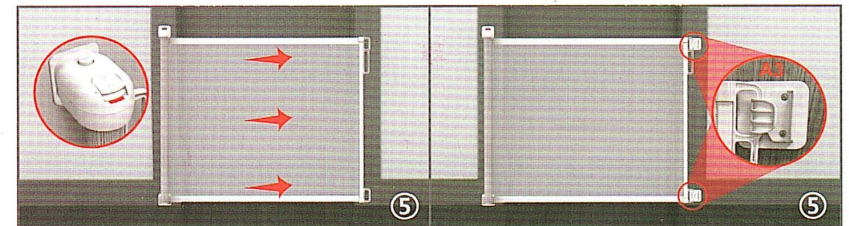

5. Hold the handle and pull out mesh barrier to the position where A3P needs to be installed position and made sure to keep the mesh surface vertically flat. Hook the A3P to the hanging part of gate respectively, paste the A3P on the corresponding door frame position, press it until secure.

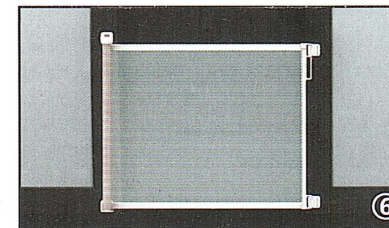

6. Installation completed