



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Toyota Prius II XW20 (2003-2009)

PRIUS II KPL

SOLARRIDE Zaslónki Toyota Prius II XW20 (2003-2009) KPL 3kg

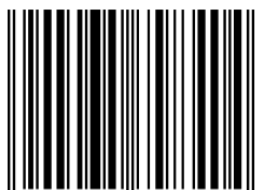

5 904035 798404 >

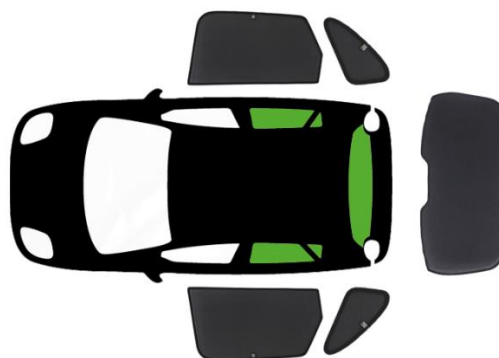

6 x



