

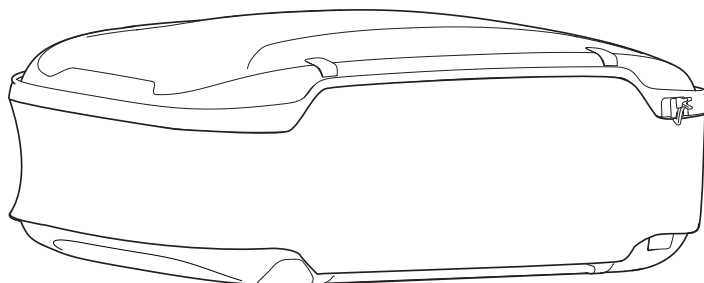
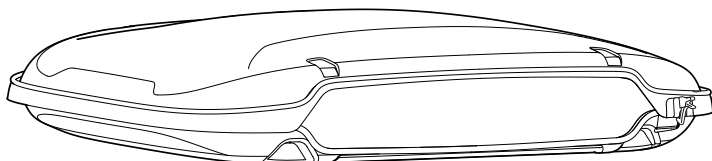


INSTALLATION AND SAFETY INSTRUCTIONS
 INSTRUCTIONS POUR L'INSTALLATION ET LA SÉCURITÉ
 EINBAU-UND SICHERHEITSHINWEISE
 MONTERING- OCH SÄKERHETSINSTRUKTIONER

autoform
 URBAN LOADER




A

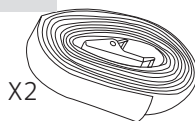


X2

B

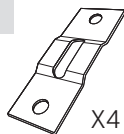

X4

C



X8

D




X8

E



X4

F




X4

G




X4

H





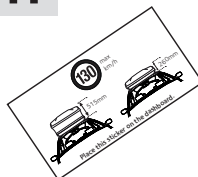


I

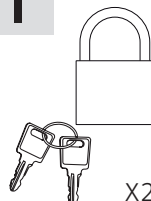

X2

INSTALLING

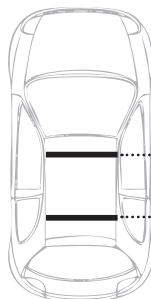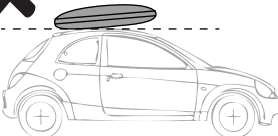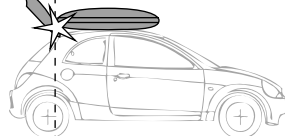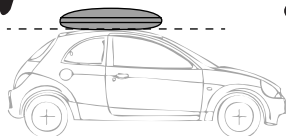

min 395 mm
max 810 mm


C

D


G

B



F

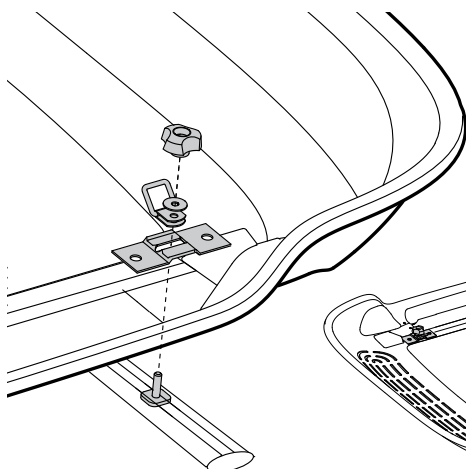


Attach the box to the roof racks on all four attachment points

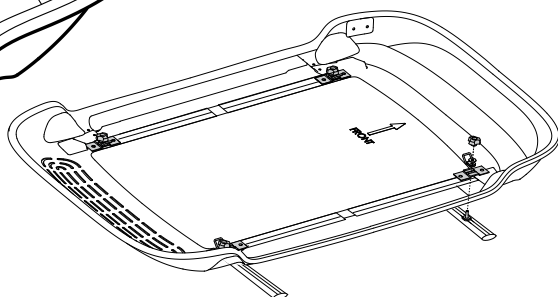

1a

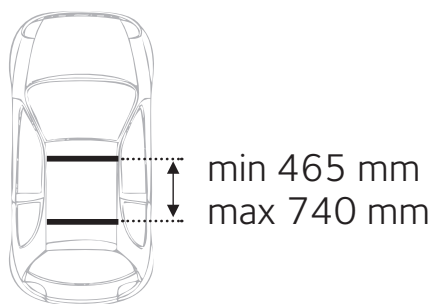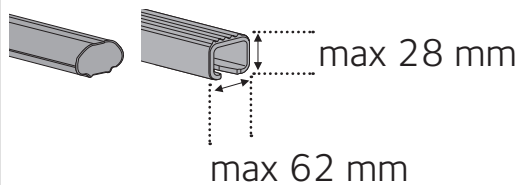


Attach the box to the roof racks on all four attachment points

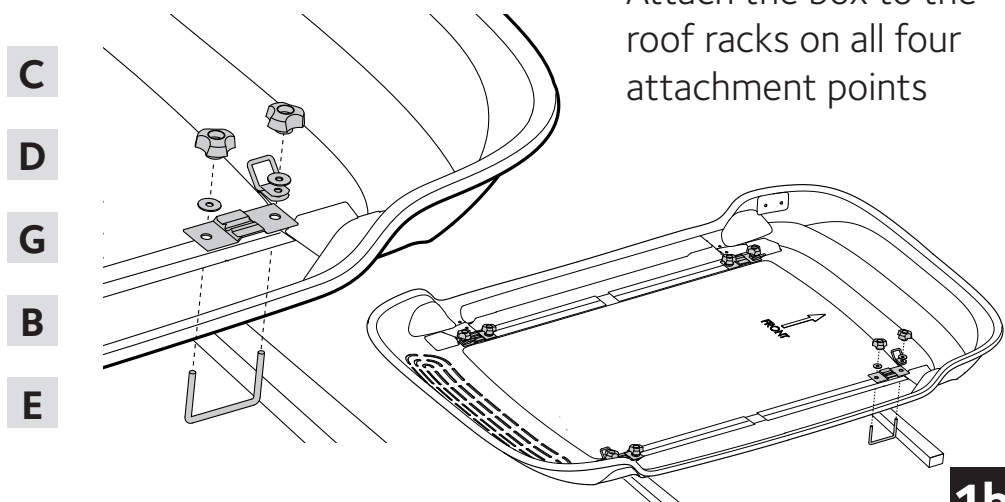

1b


A Attach loading straps

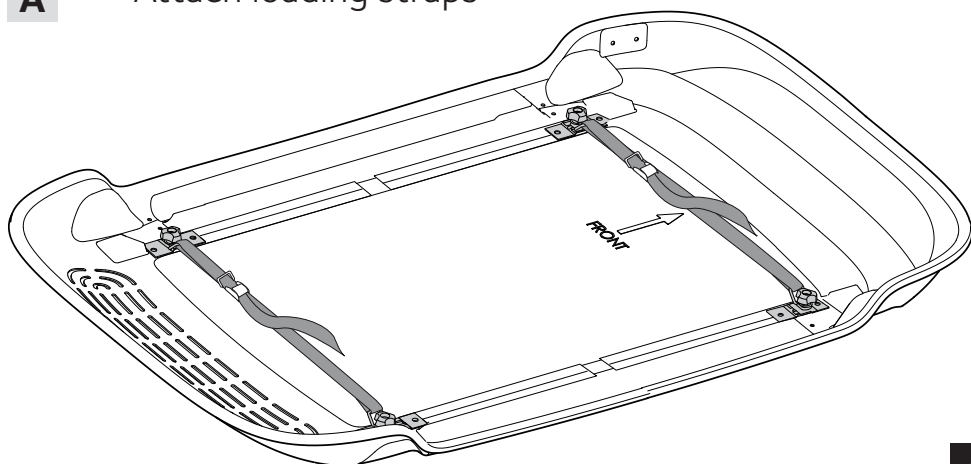


2

OPENING

- 1) Open outer zipper completely
- 2) Release the hitch and push the top upwards.

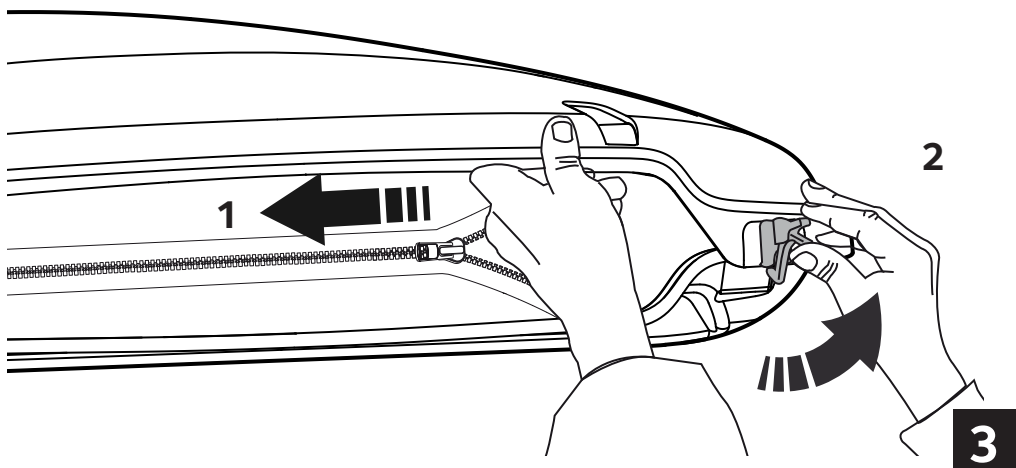


- 1) Push until top clicks into place. Repeat on other side.
- 2) Open the inner zipper.

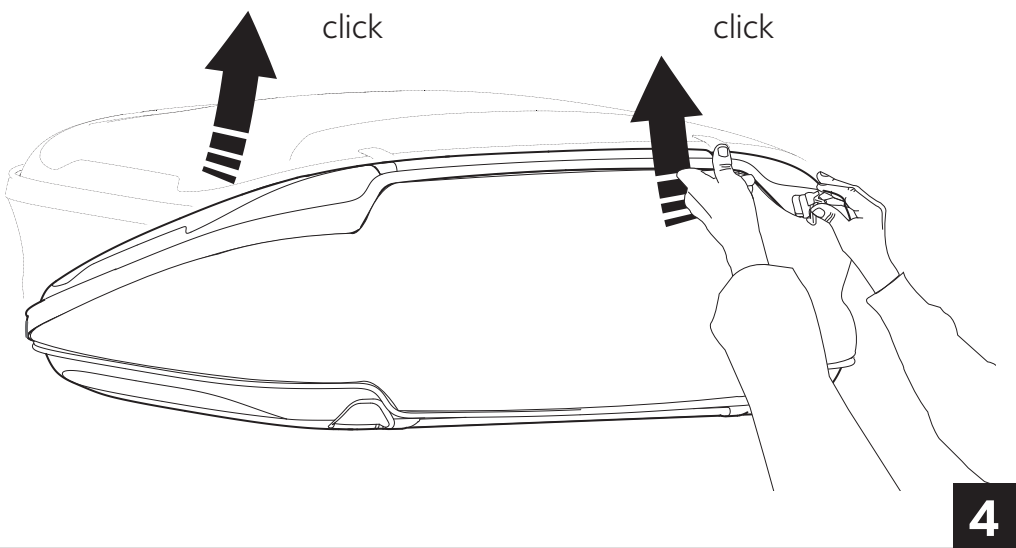

LOADING


Place the load evenly throughout the box.
All items are to be fastened with the loading straps.

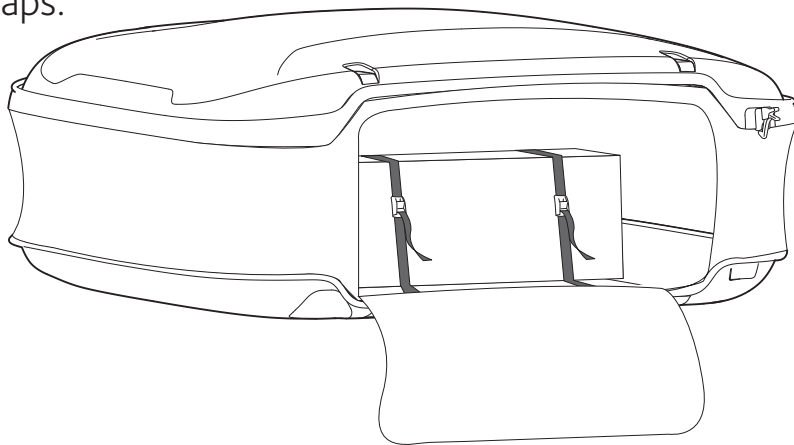

5


Warning!

Load must not contain any sharp objects.
Do not close top when loaded.
Max load: 50kg

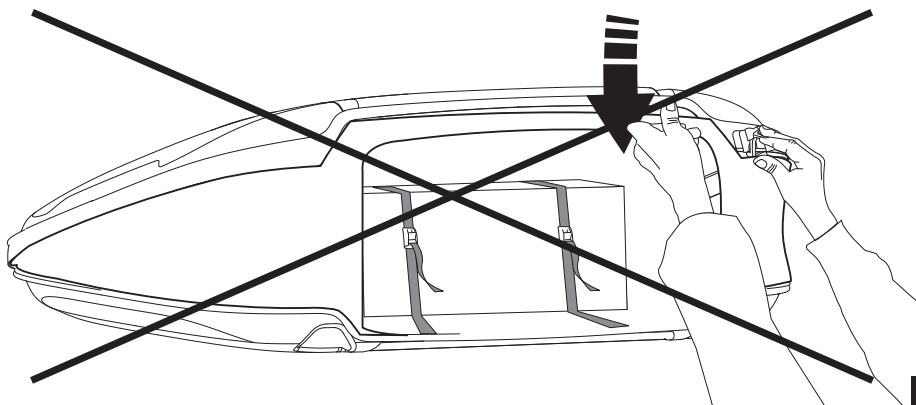


6

CLOSING

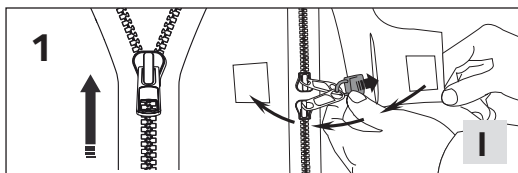

- 1) Close inner zipper and secure with padlocks.
- 2) Push to close.
- 3) Use both hands when closing.



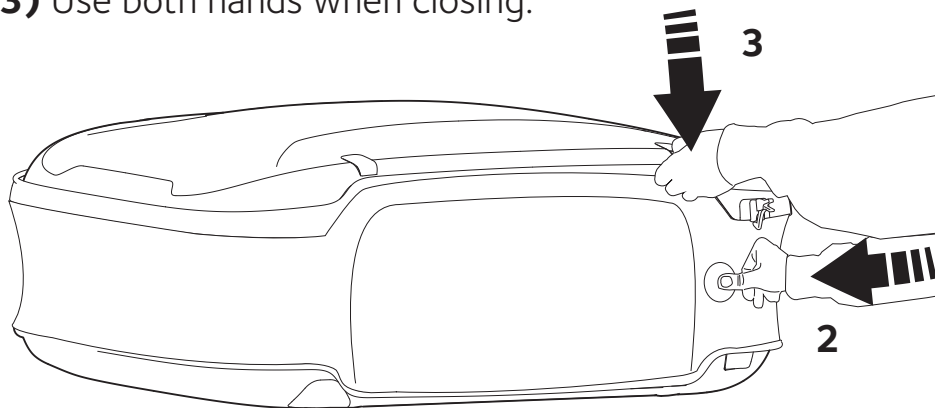


7

Box is properly closed when top covers bottom and both hitches are clicked into place and outer zipper is closed.

click

click

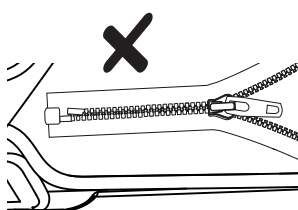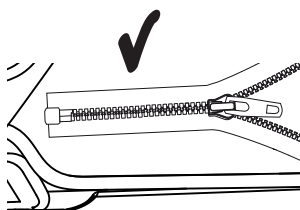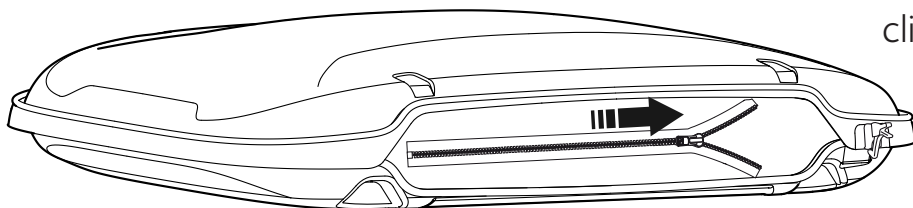

Make sure that the two ends are completely drawn together.


8

Check drivers manual for maximum permitted roof load of your car.


15 kg

+ 50 kg

< max



The roof box is water resistant,
not completely water proof.



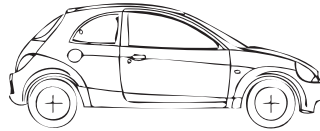


Warning!




max
km/h






H

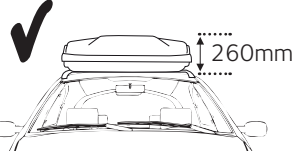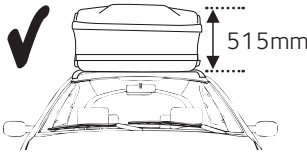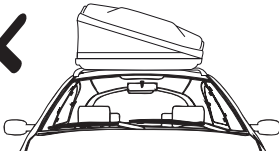

Place the attached sticker on the dashboard.

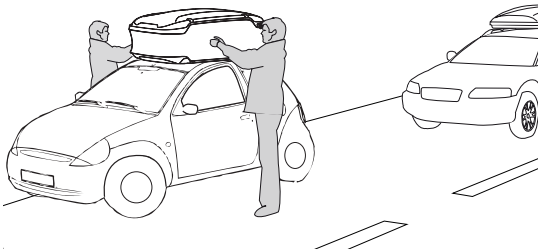

Please consider difference
in car behavior (crosswinds,
cornering and braking)

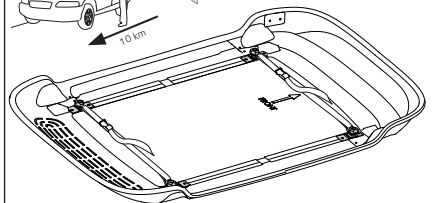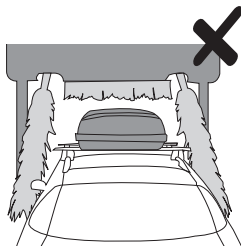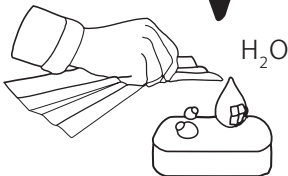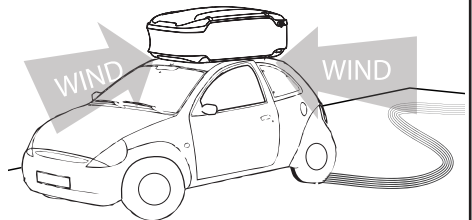

Autoform AB
Box 155
782 24, Malung
SWEDEN

Phone: +46(0)280-59 33 00

E-mail: info@autoform.se
calixboxes.com