



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**VW Volkswagen Passat B7 Variant
(2010-2014)**

B7K KPL

SOLARRIDE, kodów precyzyjnie SolarRide do VW Volkswagen Passat B7 Variant (2010-2014) B7 3kg

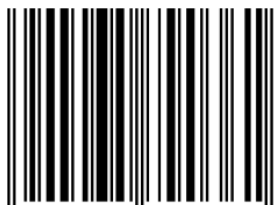

5 904035 790361 >

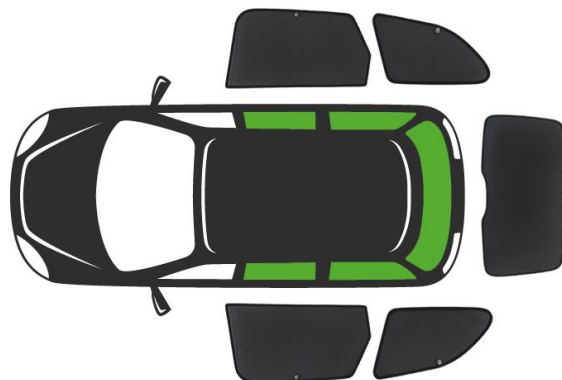


6 x



3 x



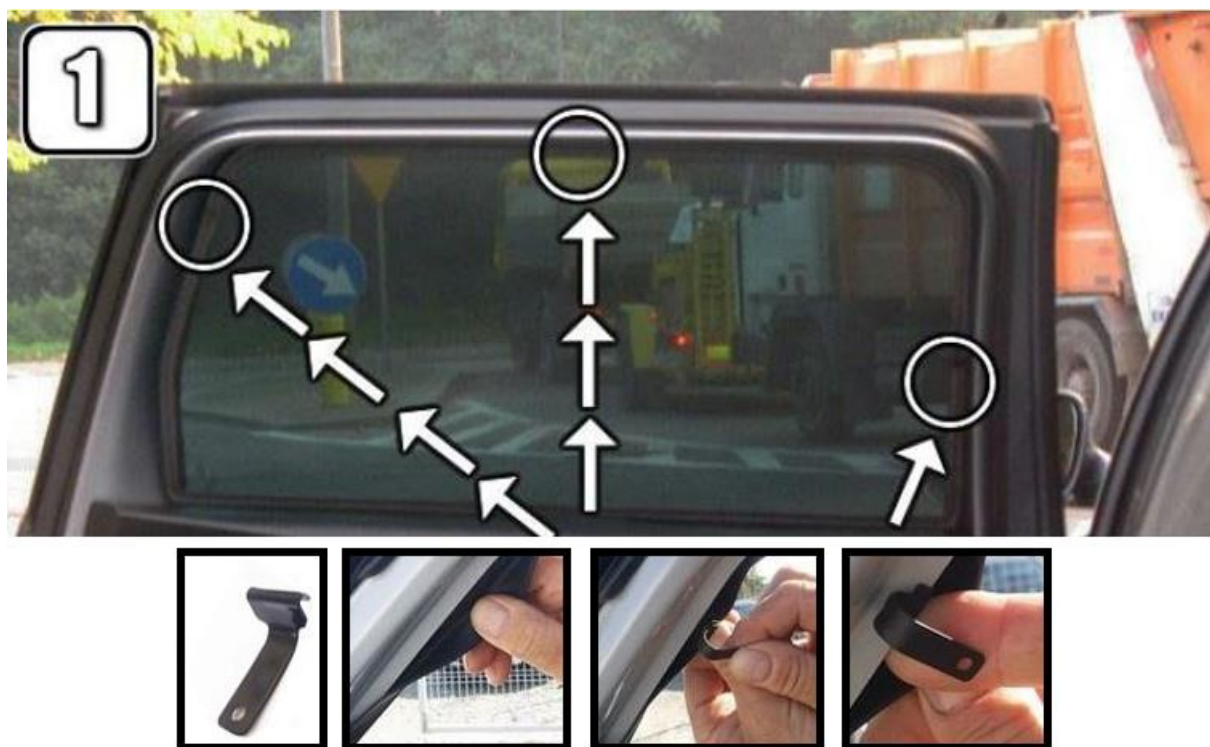

- Zastlonki przestrzeni bagażowej instaluje się na wcisk.
- Car shades of the luggage compartment are installed press-fit without mounting clips.
- Stínítka zavazadlového prostoru se instalují lisováním bez montážních klipsů.
- Der Sonnenschutz des Gepäckraums wird durch Einpressen ohne Befestigungsklammern montiert.
- Le pare soleil du compartiment à bagages est installé par pression sans clips de montage.
- As cortinas laterais da bagageira são montadas por pressão sem cliques de fixação.
- Las cortinillas laterales del maletero se montan a presión, sin clips de fijación.
- Le tendine laterali del bagagliaio sono montate a pressione senza clip di fissaggio.
- Bočne zavjese prtljažnika su presovane bez kopči za pričvršćivanje.
- Perdelele laterale ale compartimentului pentru bagaje sunt montate prin presare, fără cleme de fixare.
- Bočné clony batožinového priestoru sa montujú lisovaním bez upevňovacích svoriek.



