



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Skoda Octavia I Liftback (1996-2010)

O1S DR

SOLARRIDE Zaforki, odory przeciwsłoneczne do Skoda Octavia I Liftback (1996-2010) DR 1lg



5 904035 791399 >

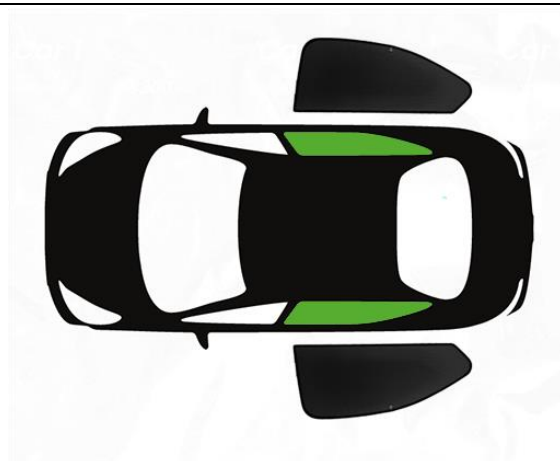

6 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

