



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**BMW X5 E70 (2006-2013)**

**X5 E70 KPL**


SOLARRIDE, SolarRide / X5 E70 / solarshade.com SolarRide do BMW X5 E70 (2006-2013) KPL 017.jpg



5 904035 795823 >


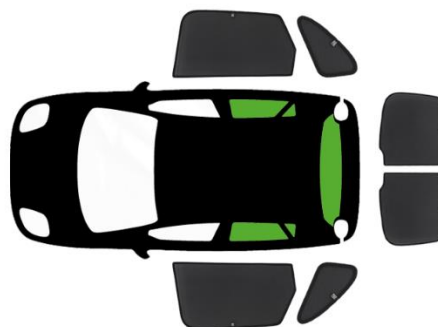


**4 x**

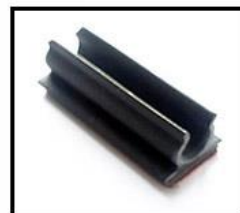

**6 x**



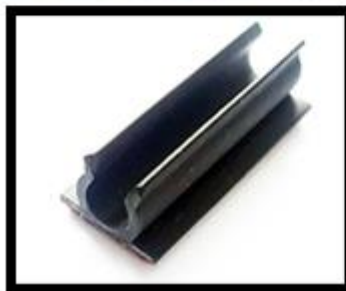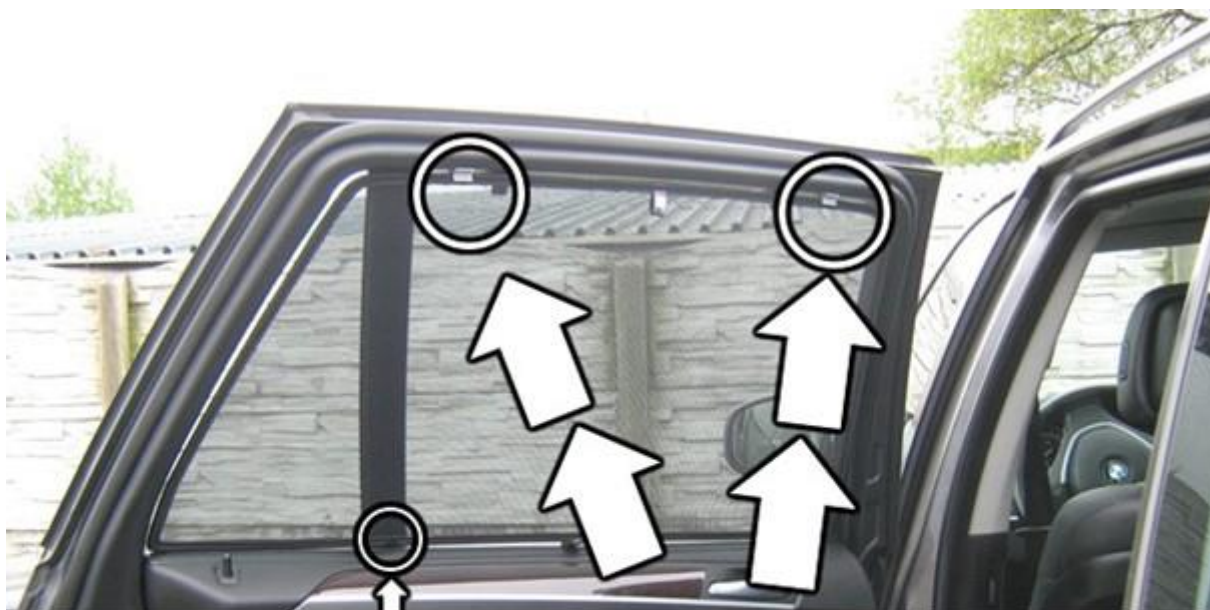

**DO NOT TOUCH 24h  
NO TOCAR 24h  
NIE DOTYKAĆ 24h**

