



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Kia Ceed 2 II 5dr (2012-2018)

**CEED2HB
BEZ KL**

SOLARRIDE zaštitnik oslony przeciwkrocznemu dla Kia Ceed II Hatchback (2012-2018) BEZ KLAPY 2kg

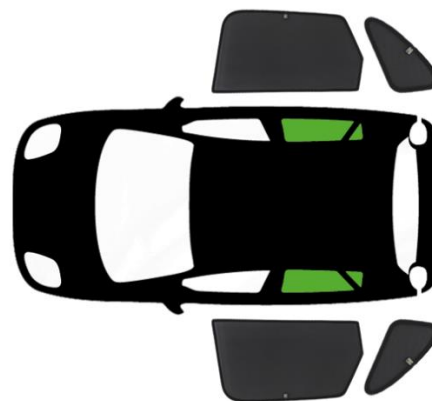


6 x



2 x



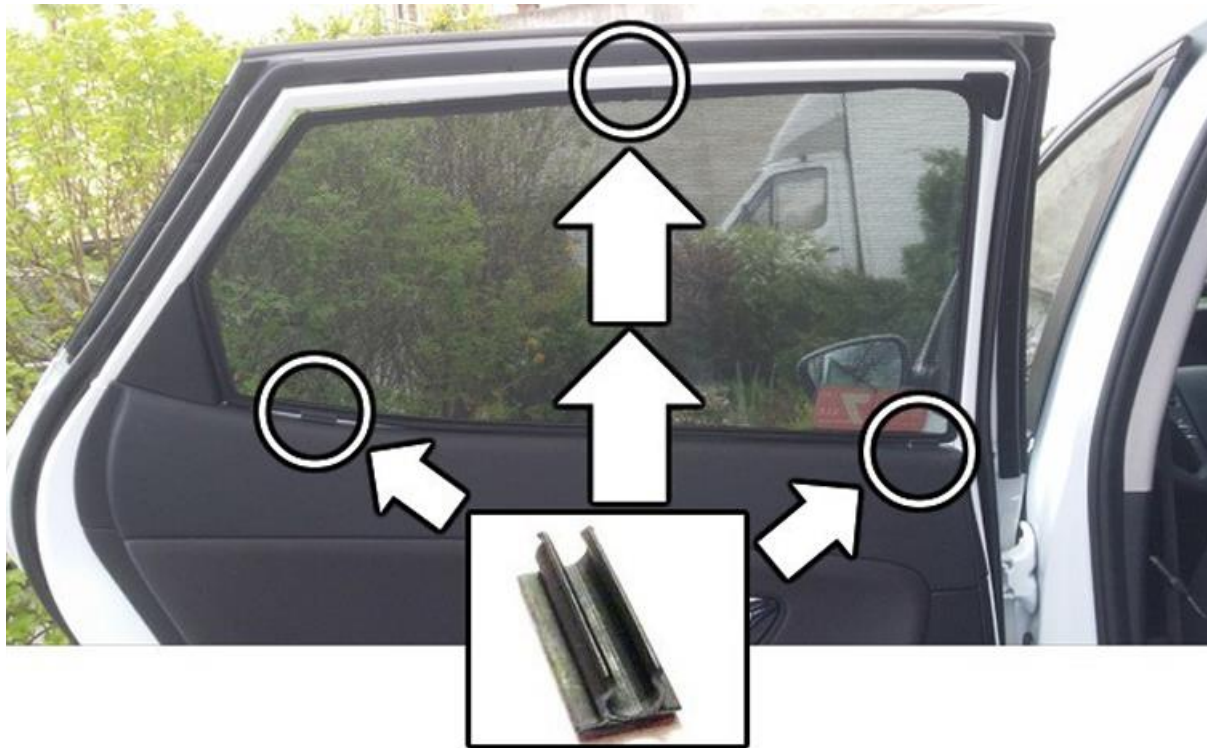

DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h

