



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X5 E70 (2006-2013)

X5 E70 BEZ KL


SOLARRIDE: zaštitni / roletni / cakovi proizvodnima SOLARRIDE do BMW X5 E70 (2006-2013) BEZ KL 2kg



5 904035 791313 >


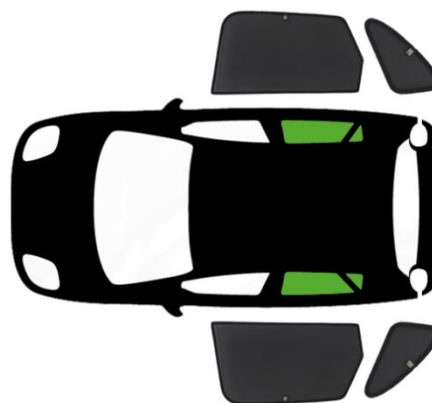


4 x

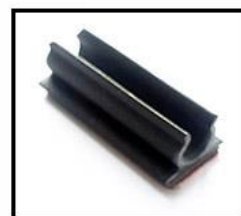

4 x



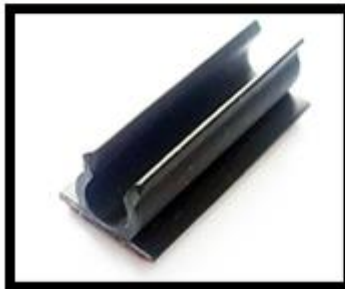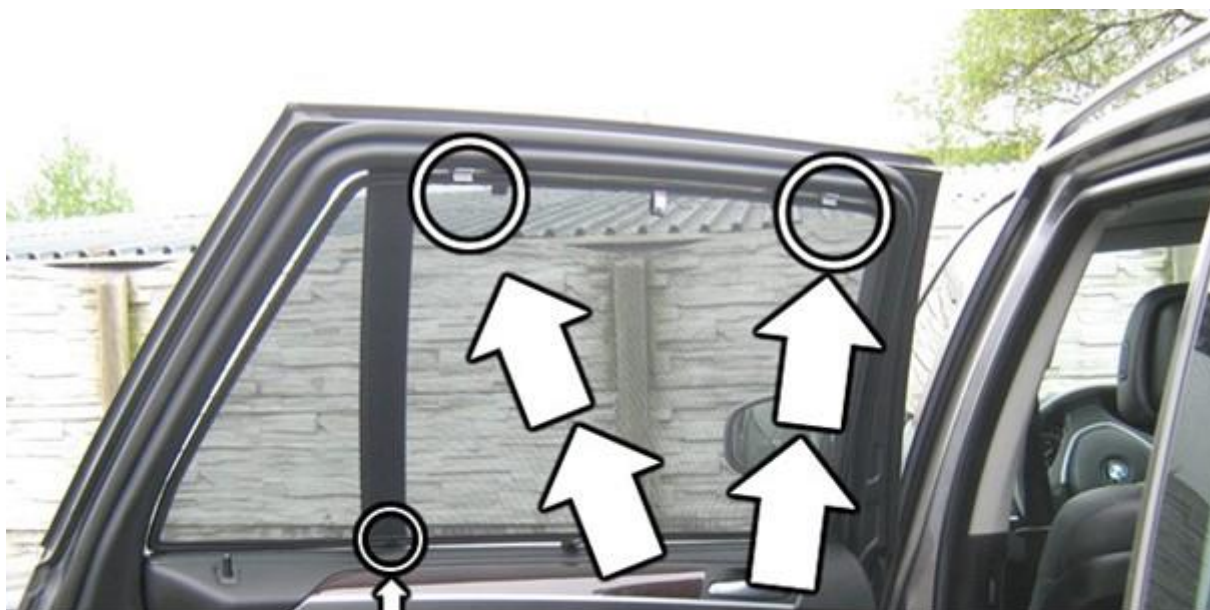

**DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h**



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

