



VW Volkswagen Up! 5dr 2011-2023

UP KPL




Škoda Citigo 2011-2019

CITIGO KPL



SEAT Mii 2011-2019

MII KPL

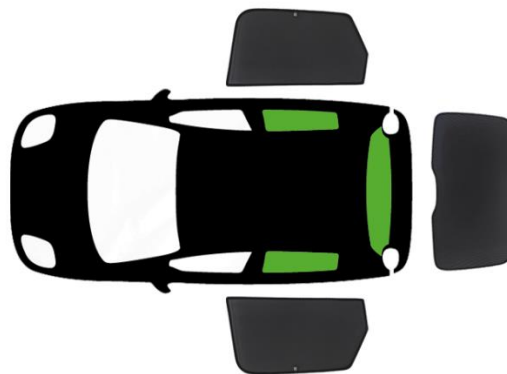

8 x



1 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž


SOLARRIDE Zaslonki do VW Volkswagen Up! 5dr (od 2011) KOMPLET 2kg



SOLARRIDE Zaslonki do SKODA CITYGO (2011-2019) KPL 2kg



SOLARRIDE Zaslonki do SEAT Mii 5dr (2011-2021) KOMPLET 2kg

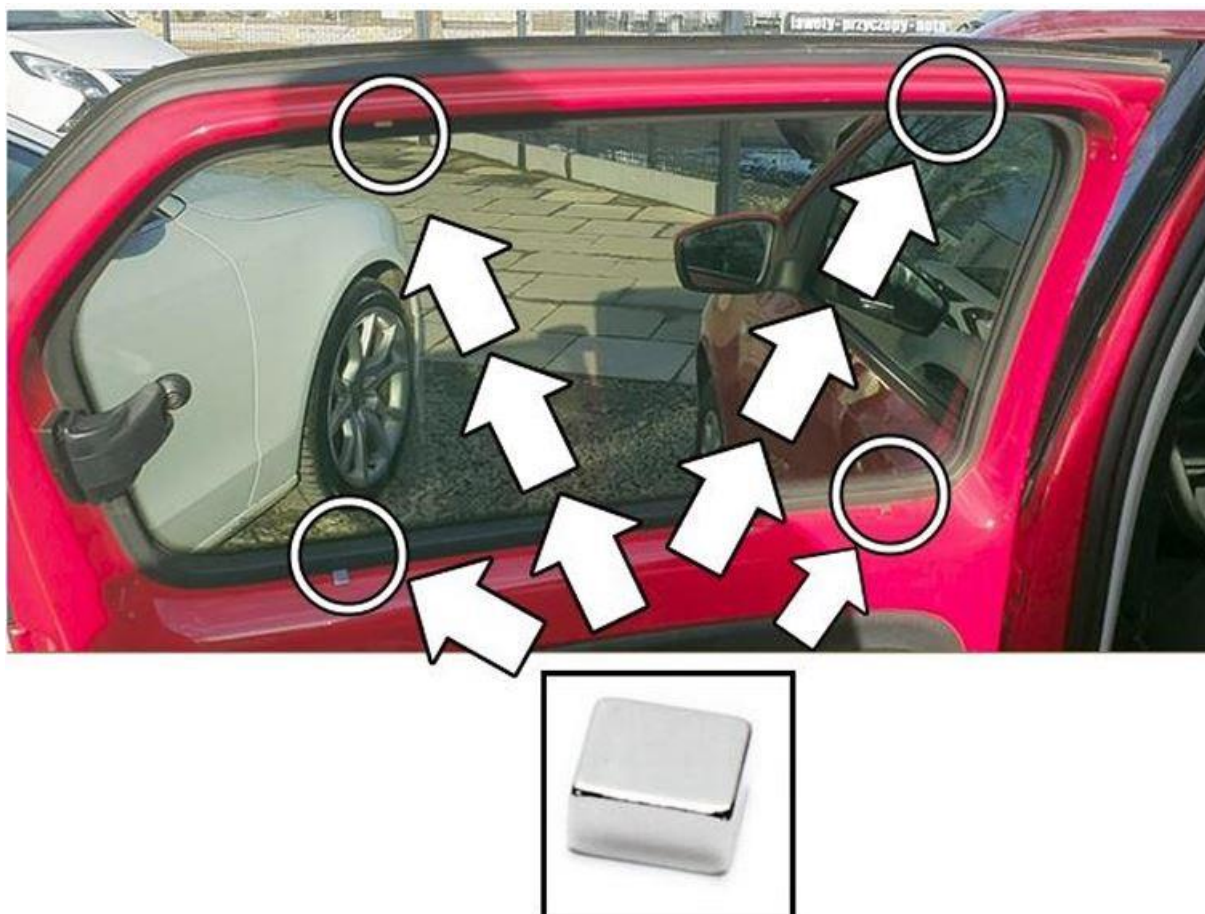



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

