

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

WATERPROOF SHOWER SUBSTRATE

MODEL:

JQ-3636/JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and dose not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODEL:JQ-3636/JQ-4872/JQ-6038/JQ-7272

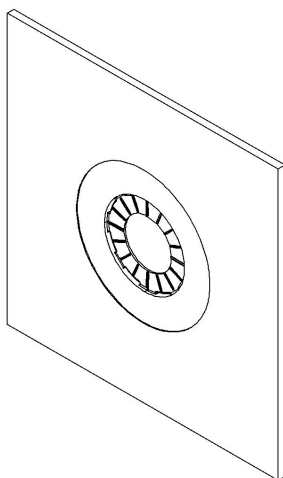

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

Part List

Code	Name	Picture	QTY.
A	Tray		2
B	Waterproof Cloth		2

Model	Specification (inch)	Colour	Shower Tray Hole
JQ-3636	38*36	Gray	Centre
JQ-4872	48*72		Centre
JQ-6038	60*38		Centre
JQ-7272	72*72		Centre

INSTALLATION STEPS

◆Clean any dust or other debris from the surface of the solid backing. Dampen particularly dry and porous substrates in order to help prevent premature drying or skinning of the thin-set mortar.

Step 1:



Cover the mixing valve seal(Not provide)



Make the surface even

Step 2:



Unfold the tray



Embed the tray in the mortar

Step 3:



Brush the mortar



Install the waterproofing corners(Not provide)

	Trim the corner(Not provide)
--	-------------------------------------

Step 4:

	
Brush the mortar	Cover the waterproofing strip(Not provide)
	
Make the surface even	

Step 5:

	
--	--

Brush the mortar	Cover the pipe seal
	Trim the pipe seal(Not provide)

Step 6:

	
Brush the mortar	Press the bonding flange into the mortar(Not provide)
	
Rotate the flange to fix it firmly	Brush the mortar around
	
Trim the surface	Cover the waterproofing membrane(Not provide)



Make the surface even

Step 7:



Install the drain adjustment
ring(Not provide)



Ensure full coverage

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technique Assistance et certificat de garantie électronique

www.vevor.com/support

SUBSTRAT DE DOUCHE IMPERMÉABLE

MODÈLE:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and dose not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODÈLE : JQ-3636 /JQ-4872/JQ-6038/JQ-7272.

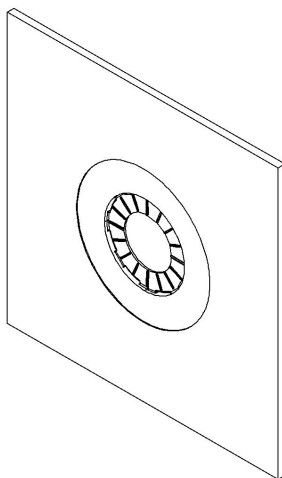

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Avertissement : Pour réduire le risque de blessure, l'utilisateur doit lire attentivement le manuel d'instructions.

Liste des pièces

Code	Nom	Image	QTÉ.
UN	Plateau		2
B	Tissu imperméable _		2

Modèle	Spécification (pouces)	Couleur	Trou pour receveur de douche
JQ-3636	38* 36	Gris	Centre
JQ-4872	48 * 72		Centre
JQ-6038	60*38		Centre
JQ-7272	72*72		Centre

ÉTAPES D'INSTALLATION

◆ Nettoyez toute poussière ou autre débris de la surface du support solide. Humidifier les supports particulièrement secs et poreux afin d'éviter un séchage prématuré ou un pelage du mortier-colle.

Étape 1:



Couvrir le joint du mitigeur (Non fourni)



Rendre la surface uniforme

Étape 2 :



Dépliez le plateau



Encastrer le plateau dans le mortier

Étape 3 :



Badigeonner le mortier



Installer les coins d'étanchéité (non fournis)

	Coupez le coin (non fourni)
--	------------------------------------

Étape 4 :

	
Badigeonner le mortier	Couvrir la bande d'étanchéité (non fournie)
	
Rendre la surface uniforme	

Étape 5 :

	
--	--

Badigeonner le mortier	Couvrir le joint du tuyau
	Coupez le joint de tuyau (non fourni)

Étape 6 :

	
Badigeonner le mortier	Enfoncez la bride de liaison dans le mortier (non fourni)
	
Faites pivoter la bride pour la fixer fermement	Badigeonner le mortier autour
	
Couper la surface	Couvrir l'étanchéité

	membrane (non fournie)
	Rendre la surface uniforme

Étape 7 :

	
Installez la bague de réglage de la vidange (non fournie)	Assurer une couverture complète

Adresse : Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Importé en Australie : SIHAO PTY LTD, 1 ROKEVA STREETASTWOOD
NSW 2122 Australie

Importé aux États-Unis : Sanven Technology Ltd., Suite 250, 9166
Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Fabriqué en Chine

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technique Assistance et certificat de garantie électronique

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technisch Support- und E-Garantie-Zertifikat www.vevor.com/support

WASSERFESTER DUSCHGRUND

MODELL:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and dose not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODELL: JQ-3636 /JQ-4872/JQ-6038/JQ-7272

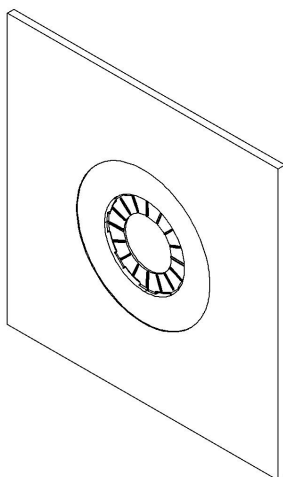

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warnung: Um das Verletzungsrisiko zu verringern, muss der Benutzer die Bedienungsanleitung sorgfältig lesen.

Stückliste

Code	Name	Bild	MENG E.
A	Tablett		2
B	Wasserdichtes Tuch _		2

Modell	Spezifikation (Zoll)	Farbe	Loch für Duschwanne
JQ-3636	38* 36	Grau	Center
JQ-4872	48 * 72		Center
JQ-6038	60*38		Center
JQ-7272	72*72		Center

INSTALLATIONSSCHRITTE

◆ Entfernen Sie Staub und andere Rückstände von der Oberfläche der festen Unterlage. Befeuchten Sie besonders trockene und poröse Untergründe, um ein vorzeitiges Austrocknen oder eine Hautbildung des Dünnbettmörtels zu verhindern.

Schritt 1:



Decken Sie die Dichtung des Mischventils ab (nicht im Lieferumfang enthalten).



Machen Sie die Oberfläche eben

Schritt 2 :



Klappen Sie das Fach auf



Die Schale in den Mörtel einbetten

Schritt 3 :



Den Mörtel bestreichen



Installieren Sie die wasserdichten Ecken (nicht im Lieferumfang enthalten).

	Schneiden Sie die Ecke ab (nicht vorgesehen)
--	---

Schritt 4 :

	
Den Mörtel bestreichen	Decken Sie den Abdichtungsstreifen ab (nicht im Lieferumfang enthalten).
	
Machen Sie die Oberfläche eben	

Schritt 5 :

	
Den Mörtel bestreichen	Decken Sie die Rohrdichtung ab
	Schneiden Sie die Rohrdichtung ab (nicht im Lieferumfang enthalten).

Schritt 6 :

	
Den Mörtel bestreichen	Drücken Sie den Klebeflansch hinein Mörtel (nicht vorgesehen)
	
Drehen Sie den Flansch, um ihn fest zu befestigen	Den Mörtel rundherum bestreichen

	
Beschneiden Sie die Oberfläche	Decken Sie die Abdichtung ab Membran (nicht bereitgestellt)
	Machen Sie die Oberfläche eben

Schritt 7 :

	
Installieren Sie den Ablaufeinstellring (nicht im Lieferumfang enthalten).	Sorgen Sie für eine vollständige Abdeckung

Adresse: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Importiert nach AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australien

In die USA importiert: Sanven Technology Ltd., Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

In China hergestellt

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technisch Support- und E-Garantiezertifikat

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Tecnico Supporto e certificato di garanzia elettronica www.vevor.com/support

SUPPORTO DOCCIA IMPERMEABILE

MODELLO:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODELLO:JQ-3636 /JQ-4872/JQ-6038/JQ-7272

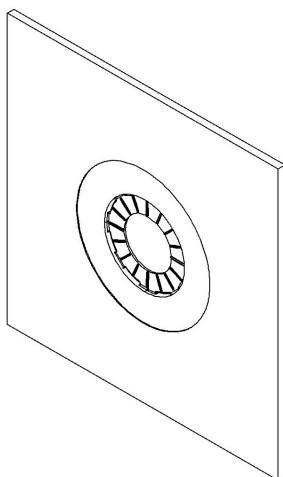

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Avvertenza: per ridurre il rischio di lesioni, l'utente deve leggere attentamente il manuale di istruzioni.

Elenco delle parti

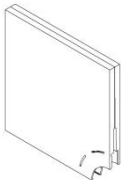Codice	Nome	Immagine	QUANTITÀ.
UN	Vassoio		2
B	Tessuto impermeabile _		2

Modello	Specifica (pollici)	Colore	Foro per piatto doccia
JQ-3636	38* 36	Grigio	Centro
JQ-4872	48 * 72		Centro
JQ-6038	60*38		Centro
JQ-7272	72*72		Centro

FASI DI INSTALLAZIONE

◆ Rimuovere polvere o altri detriti dalla superficie del supporto solido.
Inumidire i supporti particolarmente asciutti e porosi per evitare un precoce essiccamento o sfogliamento della malta sottile.

Passo 1:



Coprire la guarnizione della
valvola miscelatrice (non fornita)



Rendi la superficie uniforme

Passo 2 :



Aprire il vassoio



Incorporare la vaschetta nel
mortaio

Passaggio 3 :



Spennellare la malta



Installare gli angoli
impermeabilizzanti (non forniti)

	Taglia l'angolo (non fornito)
--	--------------------------------------

Passaggio 4 :

	
Spennellare la malta	Coprire la striscia impermeabilizzante (non fornita)
	
Rendi la superficie uniforme	

Passaggio 5 :

	
--	--

Spennellare la malta	Coprire la guarnizione del tubo
	Tagliare la guarnizione del tubo (non fornita)

Passaggio 6 :

	
Spennellare la malta	Premere la flangia di collegamento nel mortaio (non fornito)
	
Ruotare la flangia per fissarla saldamente	Spennellare la malta
	

Taglia la superficie	Coprire l'impermeabilizzazione membrana (non fornita)
	Rendi la superficie uniforme

Passaggio 7 :

	
Installare l'anello di regolazione dello scarico (non fornito)	Garantire una copertura completa

Indirizzo: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Importato in AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Importato negli Stati Uniti: Sanven Technology Ltd., Suite 250, 9166
Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made in China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Tecnico Supporto e certificato di garanzia elettronica

www.vevor.com/support



Técnico Soporte y certificado de garantía electrónica www.vevor.com/support

SUSTRATO DE DUCHA IMPERMEABLE

MODELO:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and dose not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODELO: JQ-3636 /JQ-4872/JQ-6038/JQ-7272

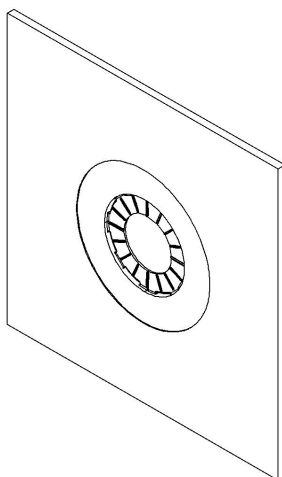

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Advertencia: para reducir el riesgo de lesiones, el usuario debe leer atentamente el manual de instrucciones.

Lista de			
Código	Nombre	Imagen	CANT.
A	Bandeja		2
B	Paño impermeable _		2

Modelo	Especificación (pulgadas)	Color	Orificio para plato de ducha
JQ-3636	38* 36	Gris	Centro
JQ-4872	48 * 72		Centro
JQ-6038	60*38		Centro
JQ-7272	72*72		Centro

PASOS DE INSTALACIÓN

◆ Limpie el polvo u otros residuos de la superficie del respaldo sólido. Humedezca los sustratos particularmente secos y porosos para ayudar a prevenir el secado prematuro o la formación de piel del mortero de capa delgada.

Paso 1:



Cubra el sello de la válvula
mezcladora (no incluido)



Haz la superficie uniforme

Paso 2 :



desplegar la bandeja



Incrustar la bandeja en el mortero.

Paso 3 :



Cepilla el mortero



Instale las esquinas
impermeabilizantes (no incluidas)

	Recortar la esquina (no proporcionar)
--	--

Etapa 4 :

	
Cepilla el mortero	Cubra la tira impermeabilizante (no incluida)
	
Haz la superficie uniforme	

Paso 5 :

	
--	--

Cepilla el mortero	Cubra el sello de la tubería
	Recorte el sello de la tubería (no incluido)

Paso 6 :

	
Cepilla el mortero	Presione la brida de unión en el mortero (no proporcionar)
	
Gire la brida para fijarla firmemente.	Cepille el mortero alrededor
	
Recortar la superficie	Cubrir la impermeabilización

	membrana (no proporcionada)
	Haz la superficie uniforme

Paso 7 :

	
Instale el anillo de ajuste del drenaje (no incluido)	Garantizar una cobertura total

Dirección: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi Shanghai

Importado a AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Importado a EE. UU.: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Hecho en china

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Técnico Certificado de soporte y garantía electrónica

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Techniczny Certyfikat wsparcia i e-gwarancji www.vevor.com/support

WODOODPORNE PODŁOŻE PRYSZNICOWE

MODEL:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODELU: JQ-3636 /JQ-4872/JQ-6038/JQ-7272

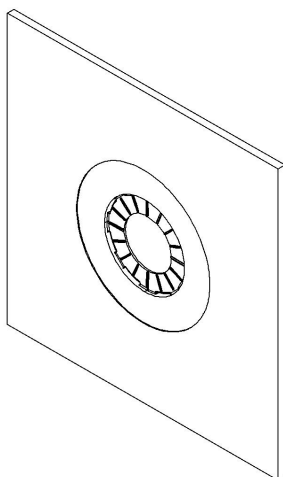

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Ostrzeżenie — aby zmniejszyć ryzyko obrażeń, użytkownik musi uważnie przeczytać instrukcję obsługi.

Lista części

Kod	Nazwa	Zdjęcie	ILOŚĆ.
A	Taca		2
B	Wodoodporna tkanina C		2

Model	Specyfikacja (cale)	Kolor	Otwór na brodzik
JQ-3636	38* 36	Szary	Centrum
JQ-4872	48 * 72		Centrum
JQ-6038	60*38		Centrum
JQ-7272	72*72		Centrum

KROKI INSTALACJI

◆ Wyczyść powierzchnię stałego podłoża z kurzu i innych zanieczyszczeń. Szczególnie suche i porowate podłoża należy zwilżyć, aby zapobiec przedwczesnemu wysychaniu lub tworzeniu się kożucha cienkowarstwowej zaprawy.

Krok 1:



Zakryj uszczelkę zaworu
mieszającego (nie dostarczana)



Wyrównaj powierzchnię

Krok 2 :



Rozłóż tacę



Zanurz tacę w zaprawie

Krok 3 :



Posmaruj zaprawę



Zainstaluj narożniki
hydroizolacyjne (nie dostarczaj)

	Przytnij róg (nie dostarczaj)
--	--------------------------------------

Krok 4 :

	
Posmaruj zaprawę	Zakryj pasek hydroizolacyjny (nie dostarczany)
	
Wyrównaj powierzchnię	

Krok 5 :

	
--	--

Posmaruj zaprawę	Zakryć uszczelkę rury
	Przytnij uszczelkę rury (nie dostarczaj)

Krok 6 :

	
Posmaruj zaprawę	Wciśnij kołnierz łączący w zaprawa (nie zapewnia)
	
Obróć kołnierz, aby go mocno zamocować	Posmaruj zaprawą dookoła
	
Przytnij powierzchnię	Pokryj hydroizolację

	membrana (nie zapewnia)
	Wyrównaj powierzchnię

Krok 7 :

	
Zamontuj pierścień regulacyjny spustu (nie dostarczany)	Zapewnij pełne pokrycie

Adres: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Szanghaj

Import do AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW
2122 Australia

Import do USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Wyprodukowano w Chinach

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Techniczny Certyfikat wsparcia i e-gwarancji

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technisch Ondersteuning en e-garantiecertificaat www.vevor.com/support

WATERDICHT DOUCHESUBSTRAAT

MODEL:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODEL: JQ-3636 /JQ-4872/JQ-6038/JQ-7272

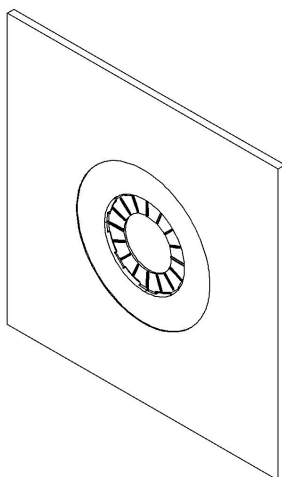

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Waarschuwing-Om het risico op letsel te verminderen, moet de gebruiker de handleiding zorgvuldig lezen.

Onderdelen lijst

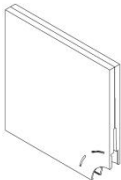Code	Naam	Afbeelding	AANTAL
A	Dienblad		2
B	Waterdichte doek —		2

Model	Specificatie (inch)	Kleur	Douchebakgat
JQ-3636	38* 36	Grijs	centrum
JQ-4872	48 * 72		centrum
JQ-6038	60*38		centrum
JQ-7272	72*72		centrum

INSTALLATIESTAPPEN

◆ Verwijder stof en ander vuil van het oppervlak van de stevige achterkant. Bevochtig vooral droge en poreuze ondergronden om voortijdige uitdroging of huidverkleuring van de dunbedmortel te helpen voorkomen.

Stap 1:



Bedek de mengklepafdichting (niet meegeleverd)



Maak het oppervlak egaal

Stap 2 :



Vouw de lade open



Plaats de lade in de mortel

Stap 3 :



Borstel de mortel



Installeer de waterdicht makende hoeken (niet voorzien)

	Trim de hoek (niet voorzien)
--	-------------------------------------

Stap 4 :

	
Borstel de mortel	Bedek de waterdichtingsstrip (niet voorzien)
	
Maak het oppervlak egaal	

Stap 5 :

	
--	--

Borstel de mortel	Bedek de buisafdichting
	Knip de buisafdichting af (niet voorzien)

Stap 6 :

	
Borstel de mortel	Druk de verbindingsflens in de mortel (niet verstrekken)
	
Draai de flens om deze stevig vast te zetten	Borstel de mortel rond
	
Snijd het oppervlak af	Bedek de waterdichting

	membraan (verstrek niet)
	Maak het oppervlak egaal

Stap 7 :

	
Installeer de afvoerafstelring (niet meegeleverd)	Zorg voor volledige dekking

Adres: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Geïmporteerd naar AUS: SIHAO PTY LTD, 1 ROKEVA
STREETEASTWOOD NSW 2122 Australië

Geïmporteerd naar de VS: Sanven Technology Ltd., Suite 250, 9166
Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Gemaakt in China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technisch Ondersteuning en e-garantiecertificaat

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Teknisk Support och e-garanticertifikat www.vevor.com/support

VATTENTÄTT DUSCHUNDERLAG

MODELL:

JQ-3636 /JQ-4872/JQ-6038/JQ-7272

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**WATERPROOF SHOWER
SUBSTRATE**

MODELL: JQ-3636 /JQ-4872/JQ-6038/JQ-7272

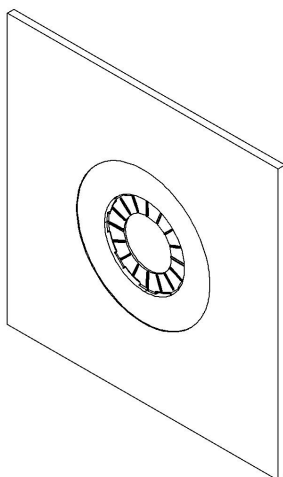

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Varning - För att minska risken för skada måste användaren läsa instruktionerna noggrant.

Dellista

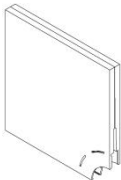Koda	namn	Bild	ANTAL
A	Bricka		2
B	Vattentät klädsel _		2

Modell	Specifikation (tum)	Färg	Hål för duschkar
JQ-3636	38* 36	grå	Centrum
JQ-4872	48 * 72		Centrum
JQ-6038	60*38		Centrum
JQ-7272	72*72		Centrum

INSTALLATIONSSTEG

◆ Ta bort allt damm eller annat skräp från ytan på den fasta baksidan. Fukta särskilt torra och porösa underlag för att förhindra för tidig torkning eller avskalning av det tunna bruket.

Steg 1:



Täck blandningsventilens tätning
(medföljer ej)



Gör ytan jämn

Steg 2 :



Vik ut brickan



Bädda in brickan i murbruket

Steg 3 :



Borsta murbruket



Installera vattentäta hörnen
(medföljer ej)

	Trimma hörnet (medföljer ej)
--	-------------------------------------

Steg 4 :

	
Borsta murbruket	Täck vattentättningsremsan (medföljer ej)
	
Gör ytan jämn	

Steg 5 :

	
--	--

Borsta murbruket	Täck rörtätningen
	Trimma rörtätningen (medföljer ej)

Steg 6 :

	
Borsta murbruket	Pressa in limningsflänsen i murbruk (Inte tillhandahålls)
	
Vrid flänsen för att fixera den ordentligt	Borsta murbruket runt
	
Trimma ytan	Täck vattentätningen

	membran (medföljer ej)
	Gör ytan jämn

Steg 7 :

	
Installera avloppsjusteringsringen (medföljer ej)	Säkerställ full täckning

Adress: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Importerad till AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australien

Importerad till USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Tillverkad i Kina

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Teknisk Support och e-garanticertifikat

www.vevor.com/support