


MARONE ELITE

WITRYNA WĄSKA


PLMEL 01





- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |


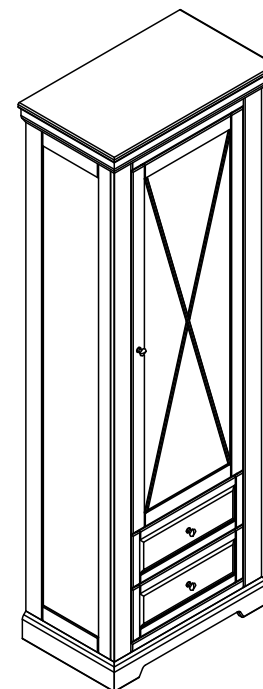


12.09.2022




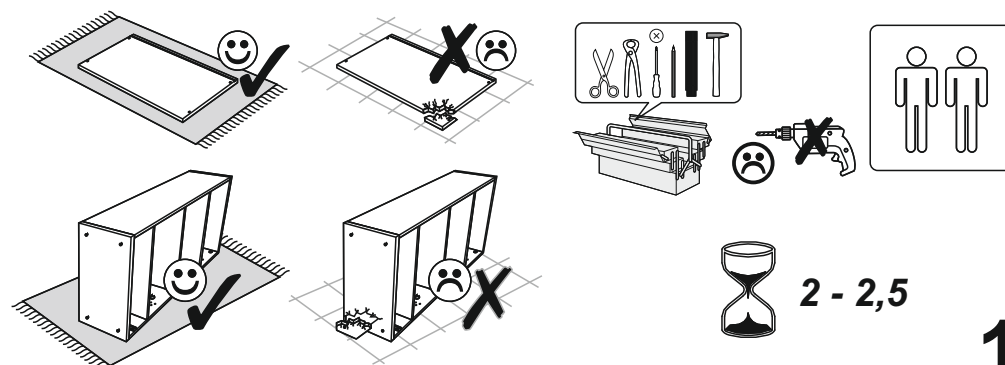




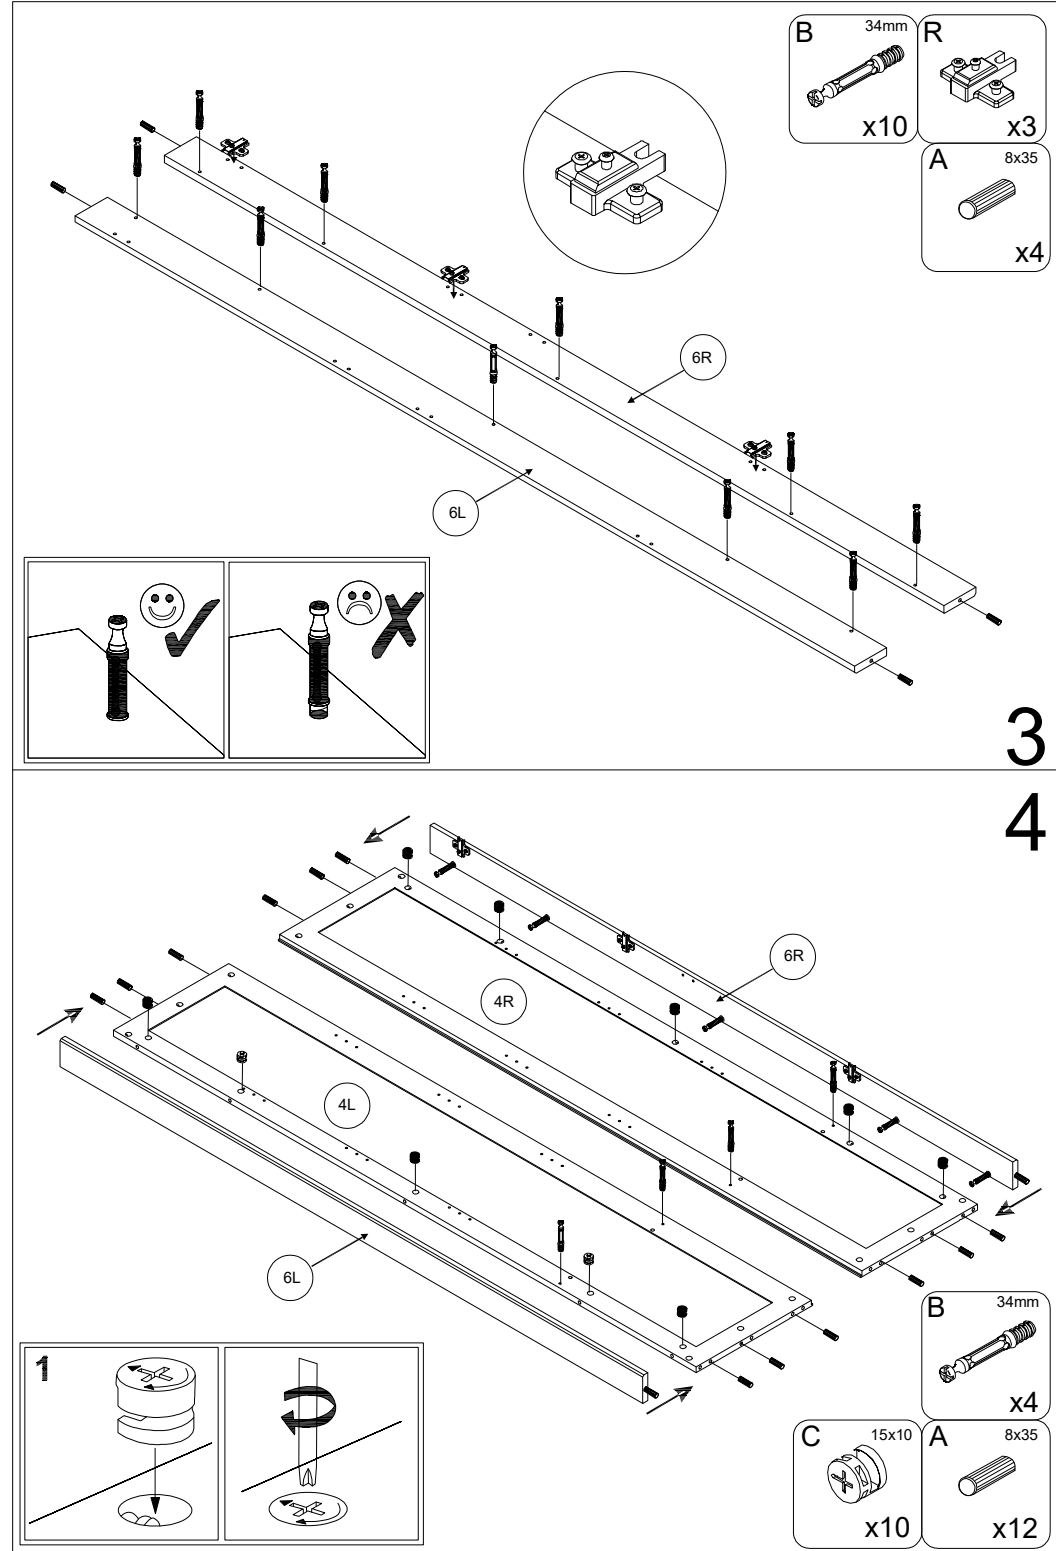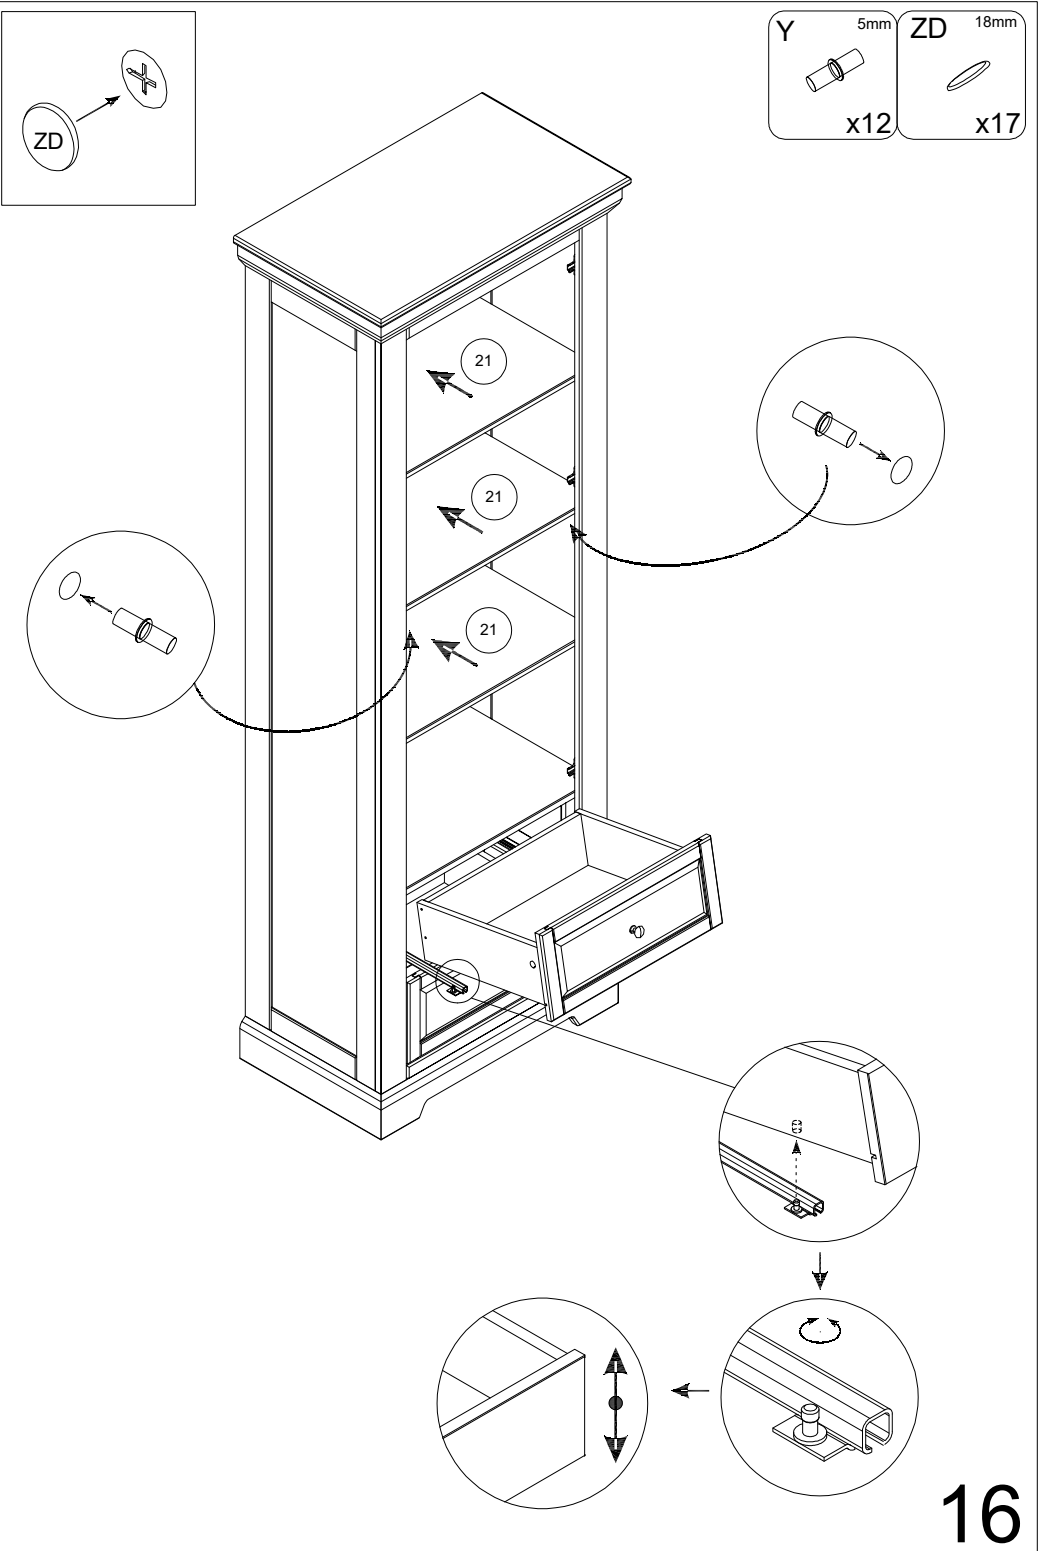

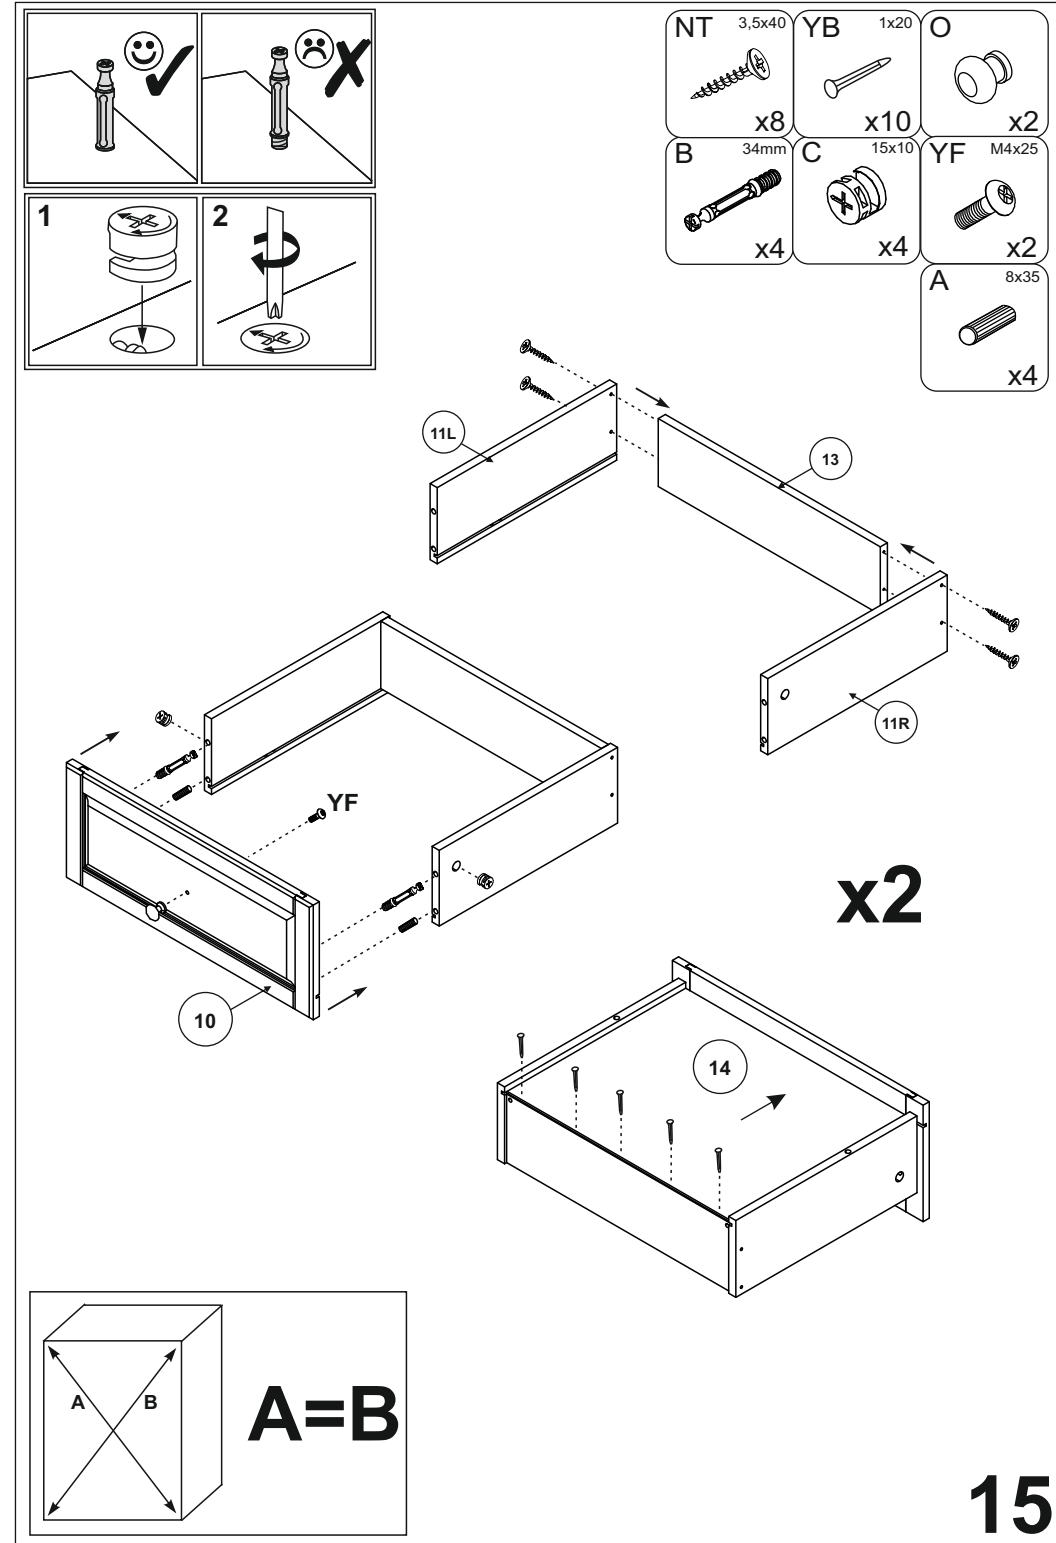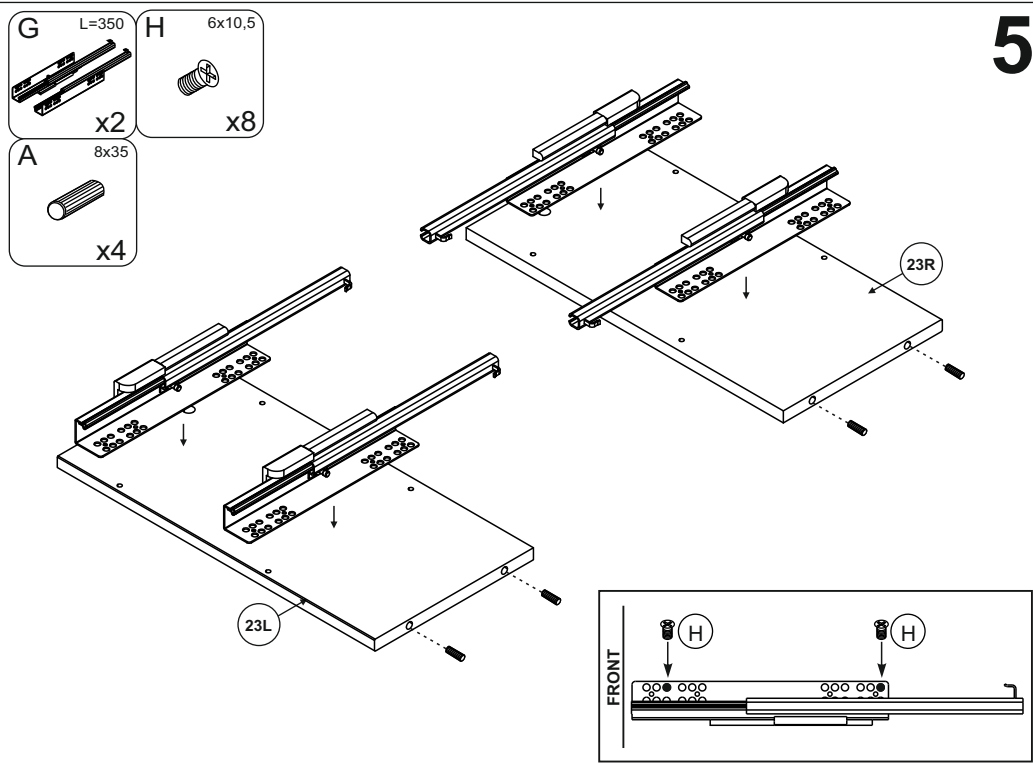


- MA x4
- YB 1x20 x43

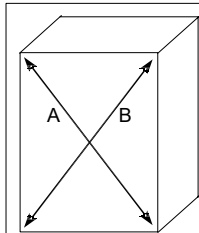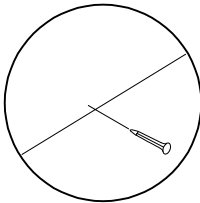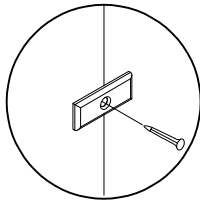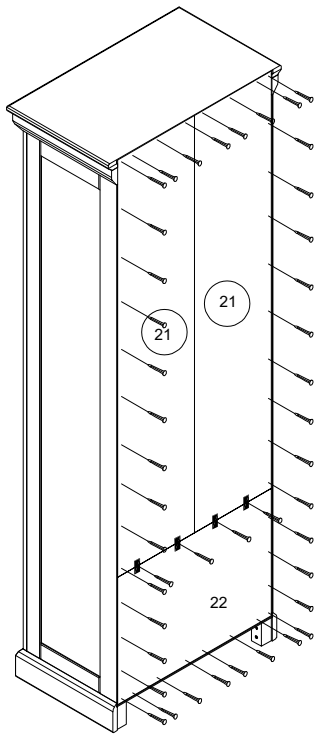


A=B


13

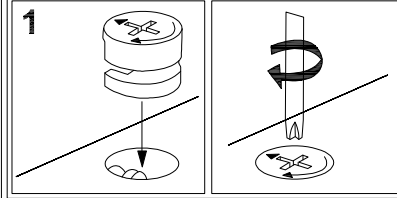

- C 15x10 x4

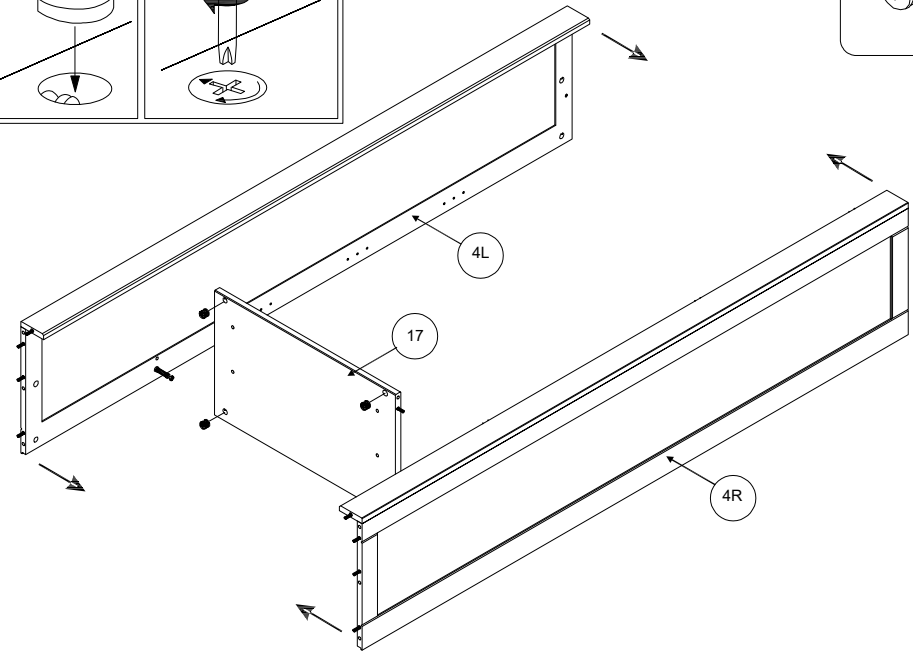


7

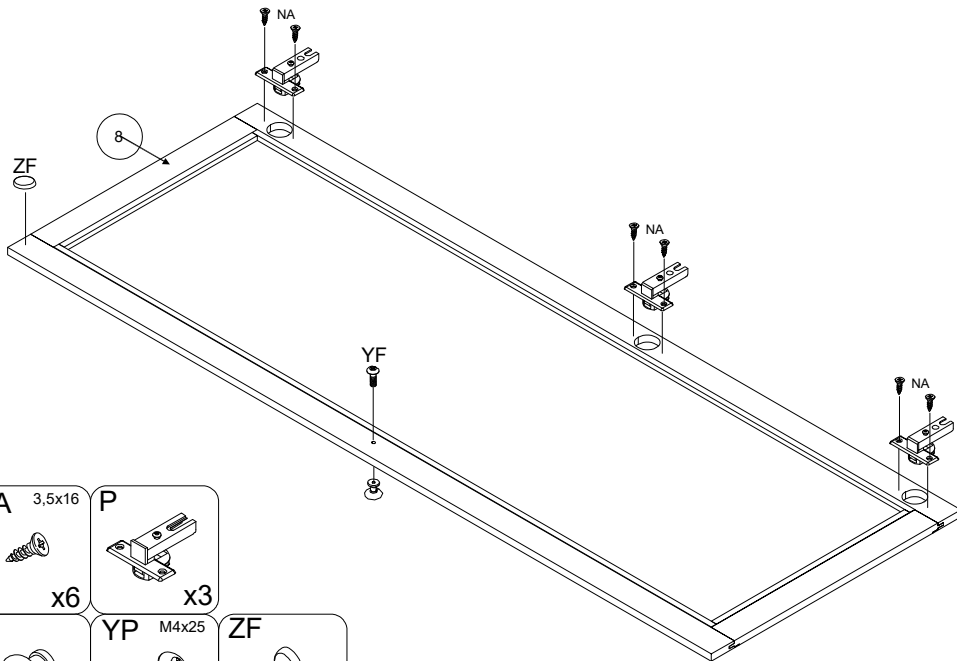

- NA 3,5x16 x6
- P x3
- O x1
- YP M4x25 x1
- ZF x1

14

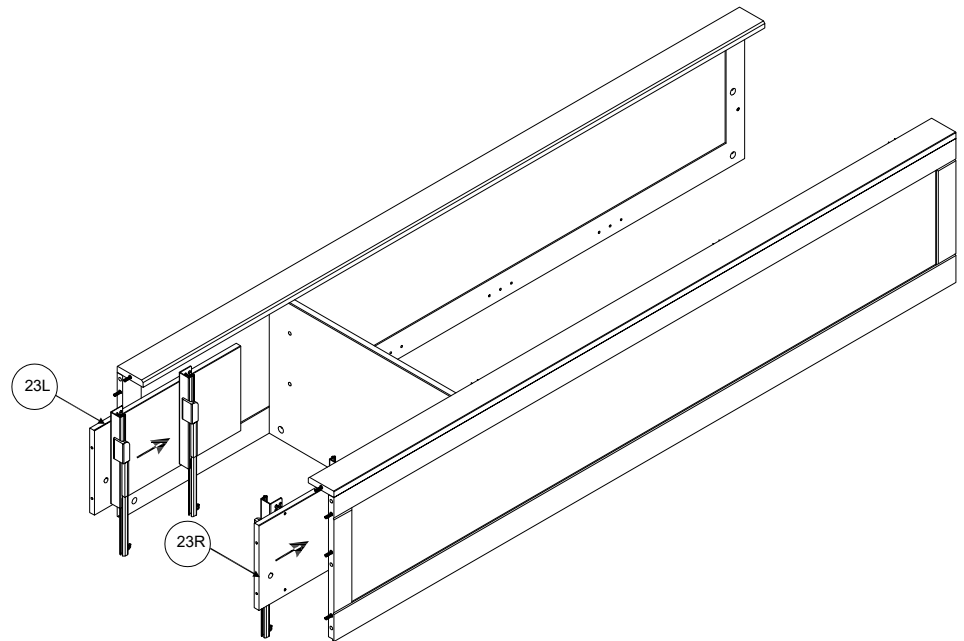

8

