



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Fiat Panda 2 II (2003-2012)

PANDA II BEZ KL

SOLARRIDE Zadonki, odrony przeciwsłoneczne do Fiat Panda II (2003-2012) BEZ KL 2lg.



5 904035 796882 >

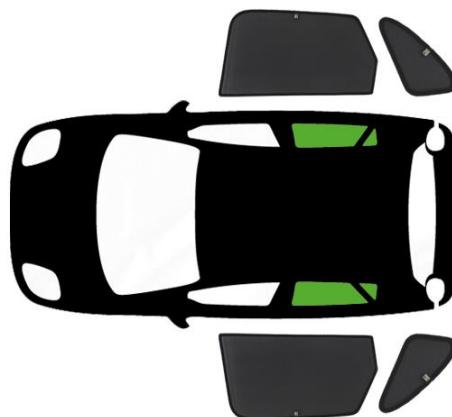

4 x



