



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**BMW 5 series E60 Sedan (2003-2010)**

**E60S DR**


SOLARRIDE Żadonki, osłony przeciwsłoneczne BMW serii 5 E60 (2003-2010) 2lg



5 904035 790156 >

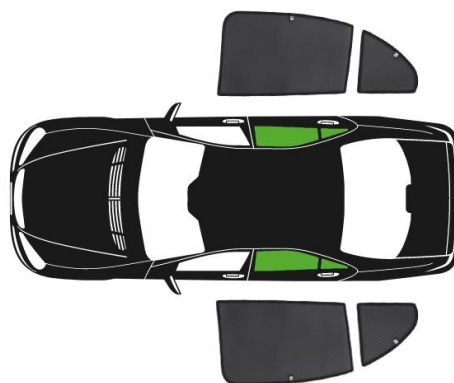

**4 x**

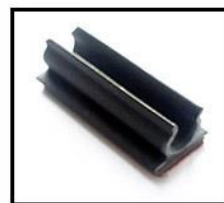

**2 x**



