


INSTRUCTIONS

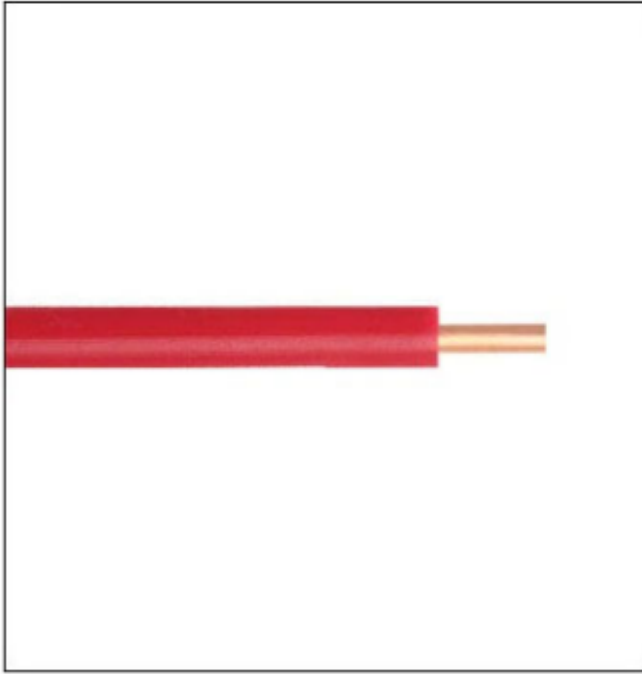

1.Strip the wire sheath about 10 cm



2.Turn the orange handle to 90 degrees, and put the stripped wire into the wiring hole



3.Put down the handle and complete the connection, the other two holes are the same



4.After the connection is completed, you can use a test pen to test the electricity