



# CROSSMEMBER DROP BRACKETS

## Installation Instructions

Part No. IDM009

### Suitable for: Suzuki

Jimny 2018+


#### Kit Contains:

- 4 x Drop Plates
- 4 x Spacer Tubes
- 8 x M10 x 90 1.25p 8.8 Bolts
- 8 x M10 Nyloc Nuts
- 16 x M10 Flat Washers

**Installation Time: 1/2 to 1 Hour**

1. Safely raise and support vehicle on hoist or jack stands.
2. Loosen and remove original crossmember mounting bolts (C).
3. Remove crossmember.
4. Install two (2) new drop brackets to each side of the crossmember using the new bolts, nuts and washers, leave nuts and bolts loose at this stage (A).
5. Lift crossmember up into its new position.
6. When new drop plates are in the chassis mount, insert crush tube between the plates and insert bolts, nuts and washers (B+C).
7. Once all bolts, nuts, washers crush tubes and plate have been installed, tighten all nuts and bolts to 50Nm.
8. Check all fasteners and ensure clearance around all components.

Fig 1

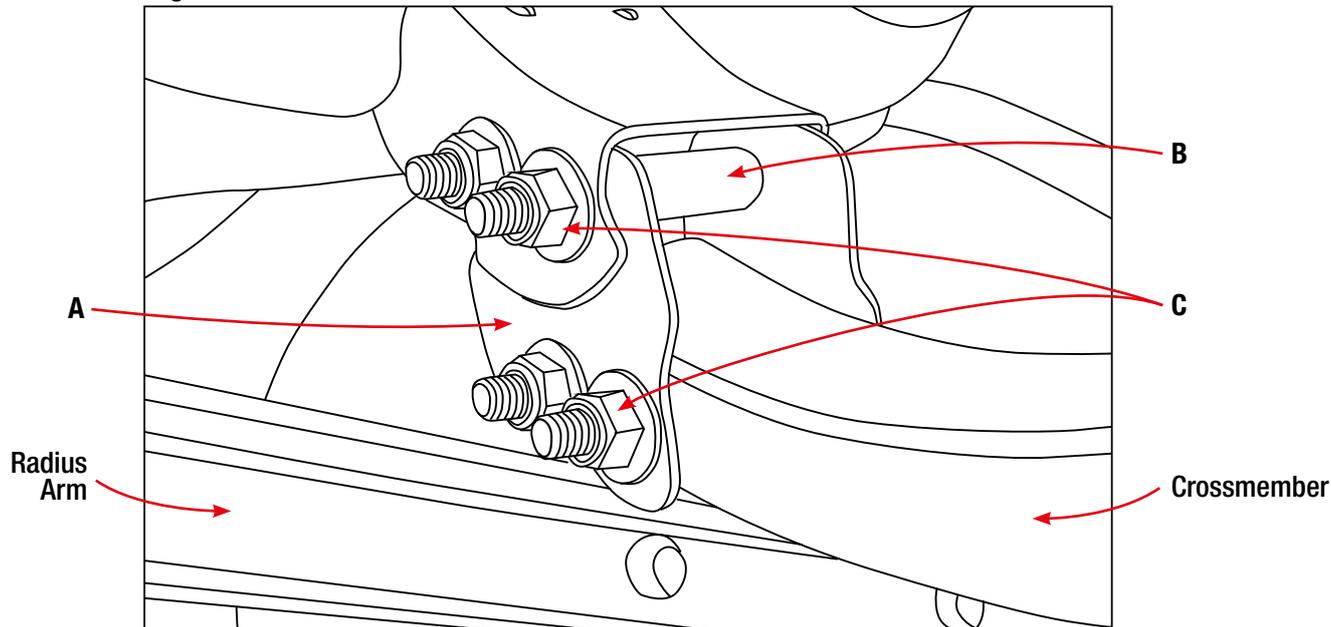

**Warranty will be voided by damage or failure caused by incorrect procedure.**

**Before proceeding to install Crossmember Drop Brackets, please fully read instructions and ensure that necessary tools are on hand.**

**Always wear personal safety protection ie. Safety Glasses and Gloves to prevent injury.**