



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Toyota C-HR (2016-2023)

CHR I KPL


SOLARRIDE Zaslونki, osłony przeciwsłoneczne do Toyota C-HR (2016-) KPL 2lg



5 904035 792389 >

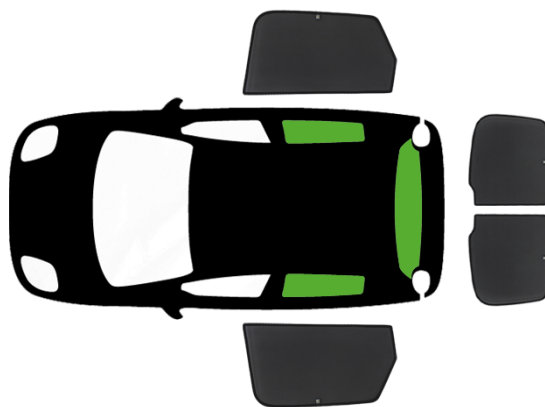

2 x

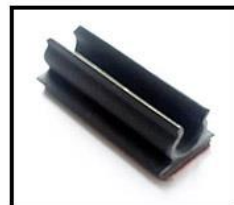

4 x





