



Sauna BARREL model 3,4QR




Instructions for installation

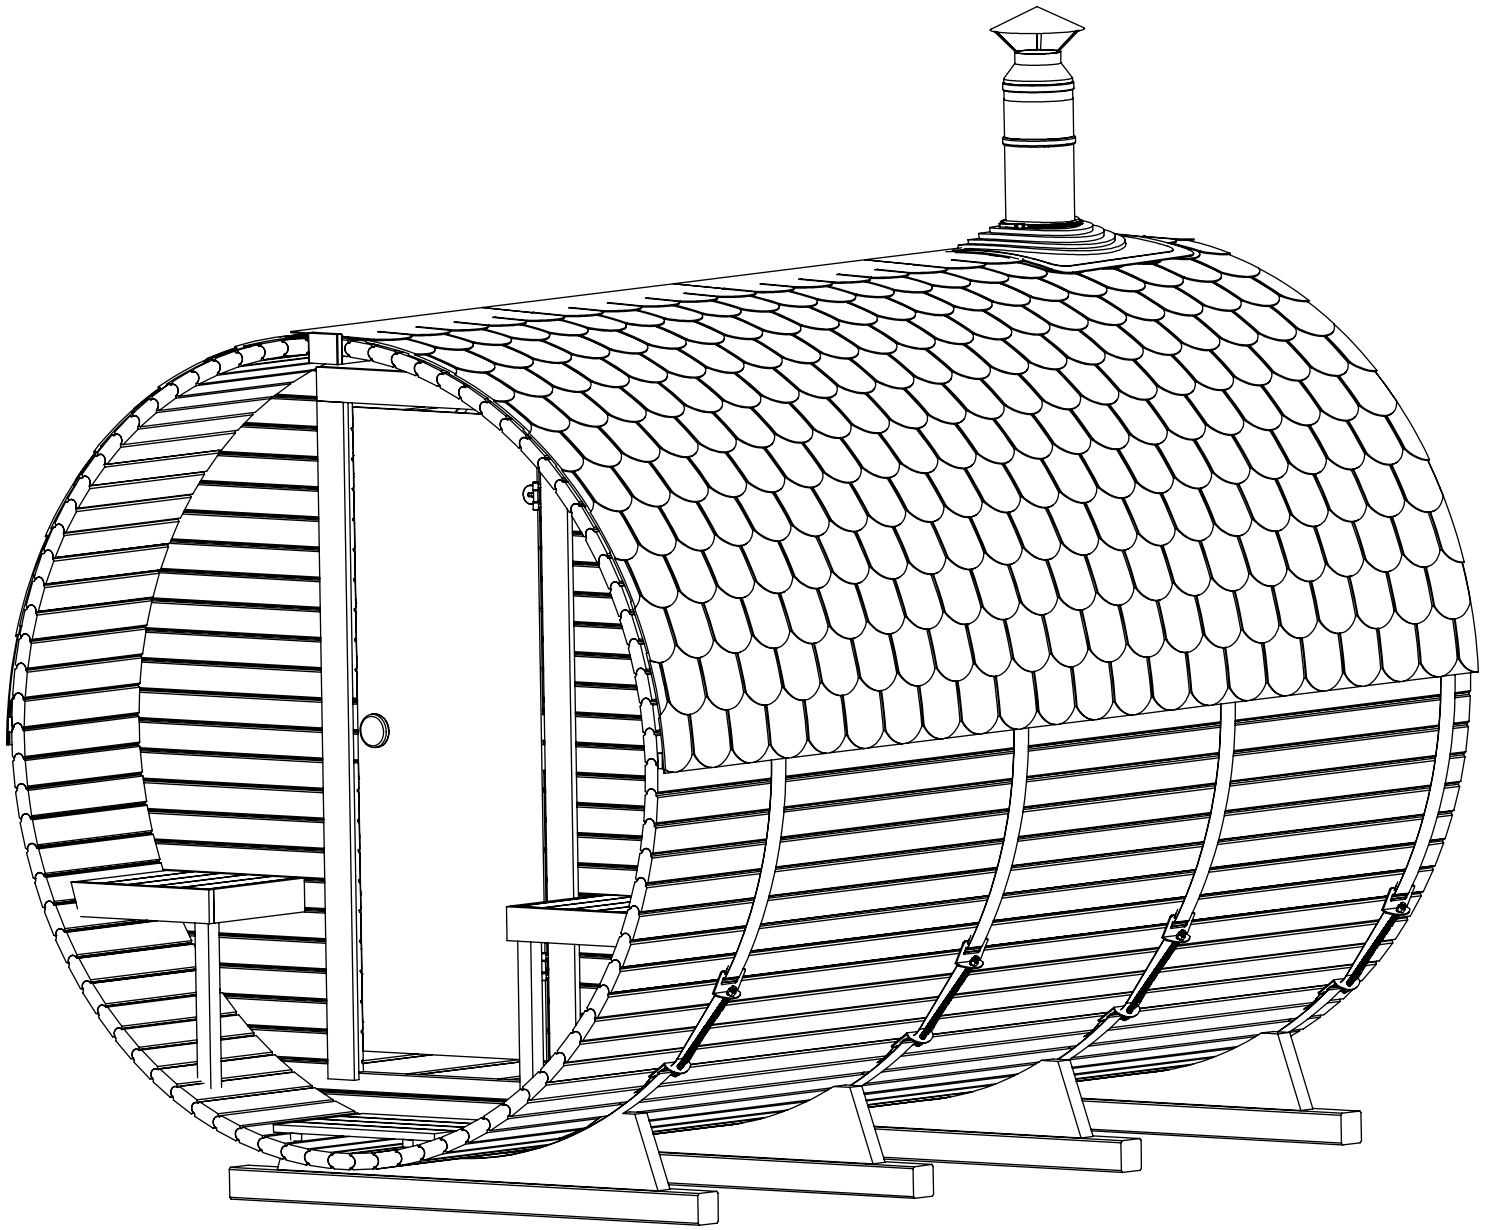


SaunaWoods

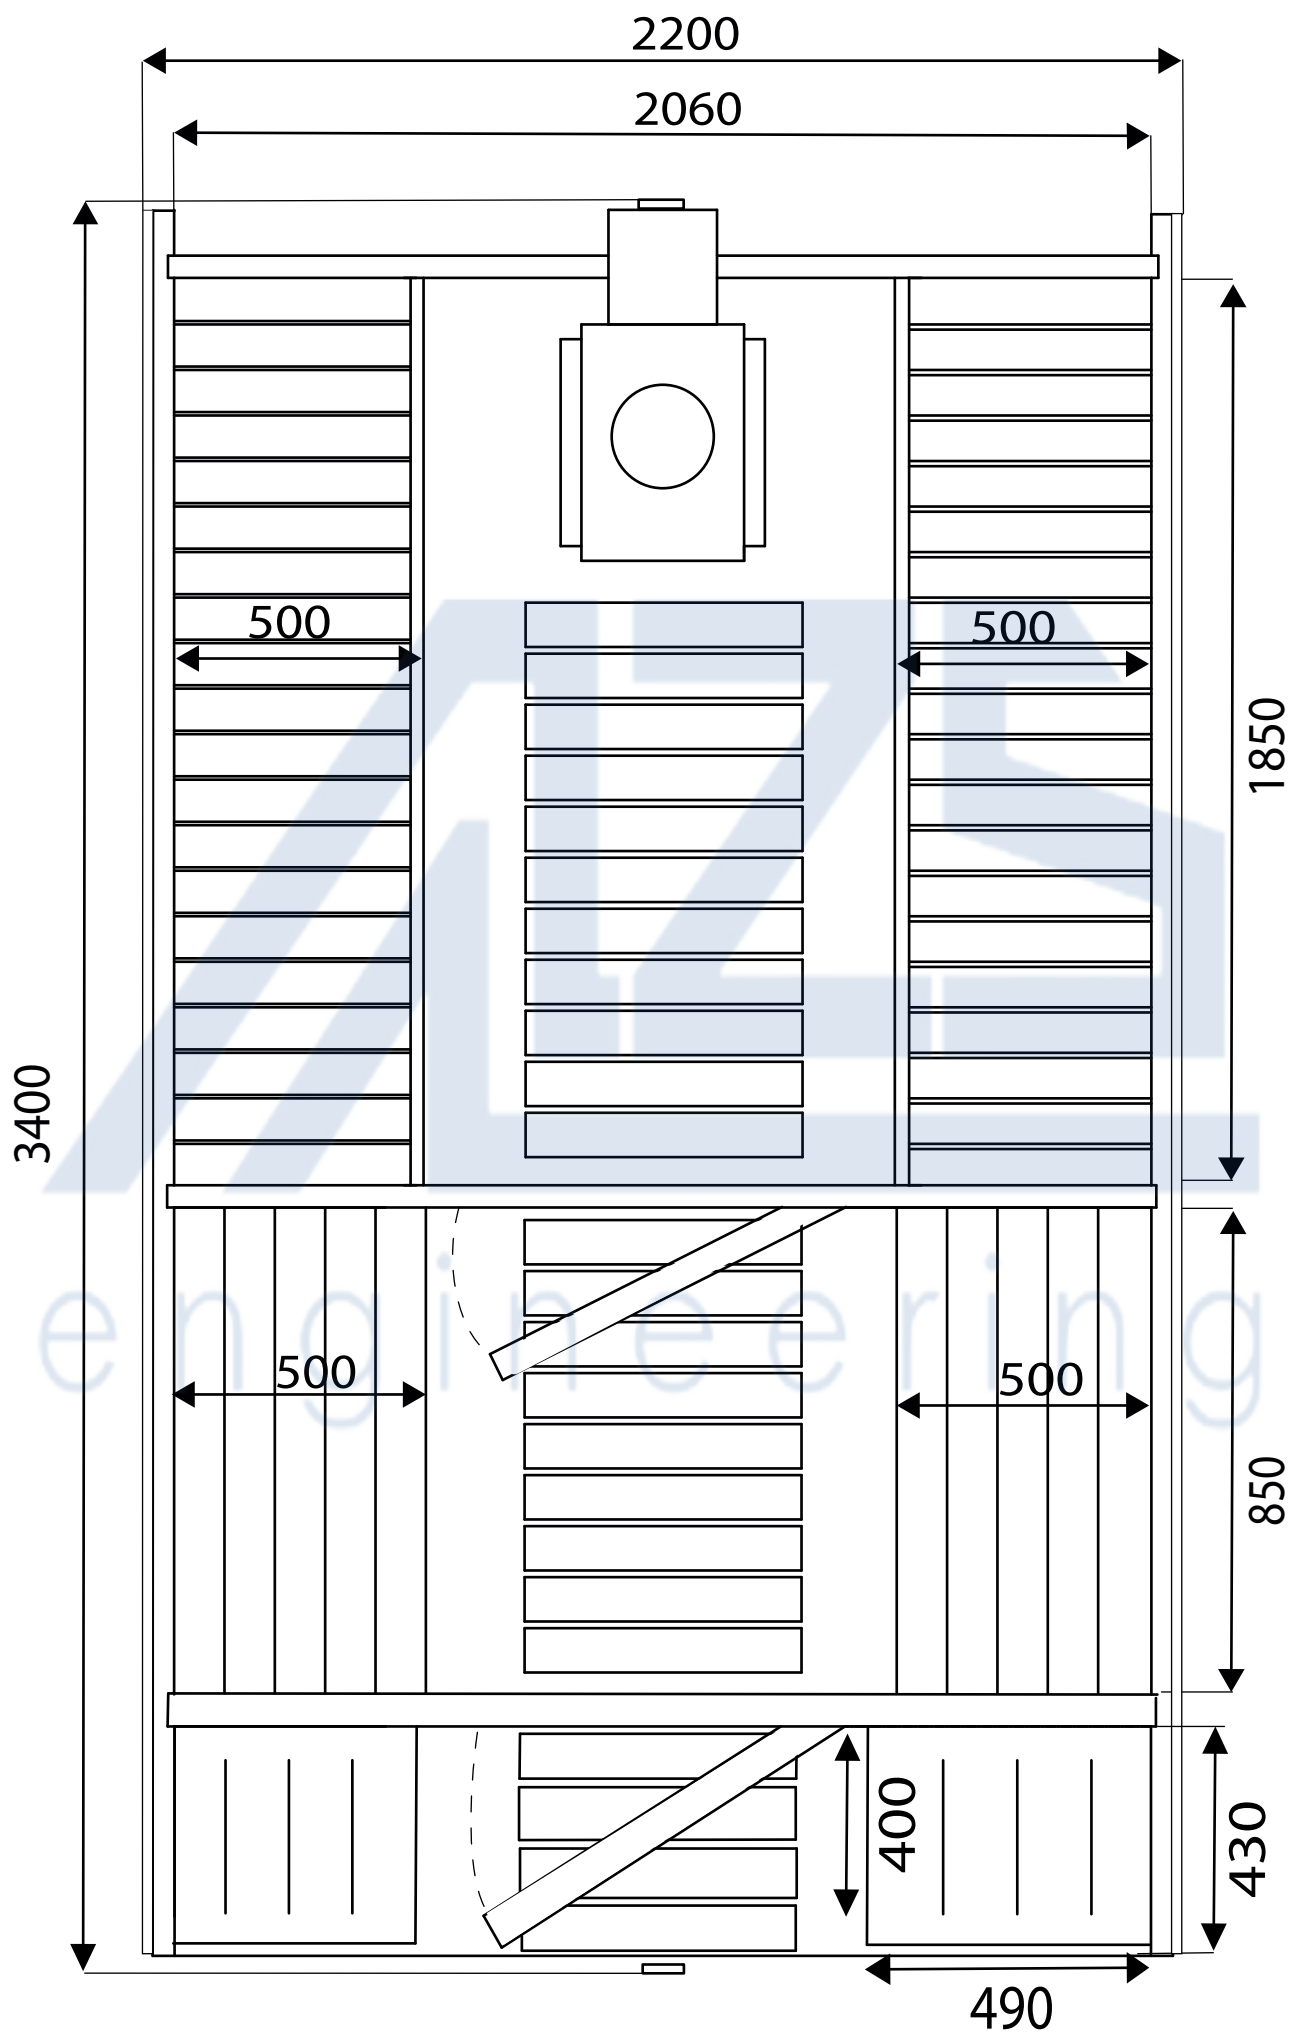



necessary tools

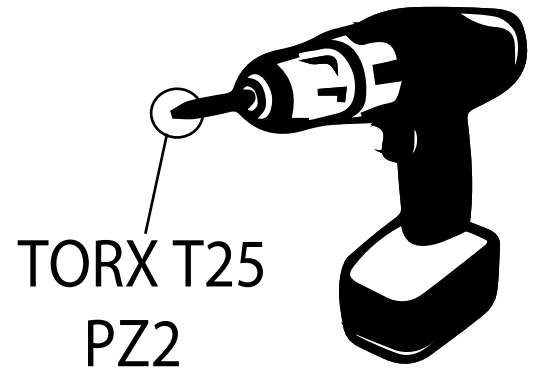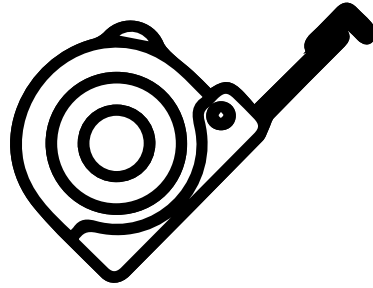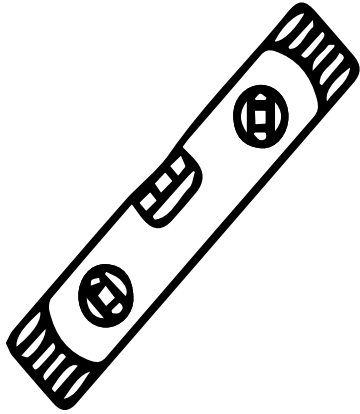


TORX T25
PZ2

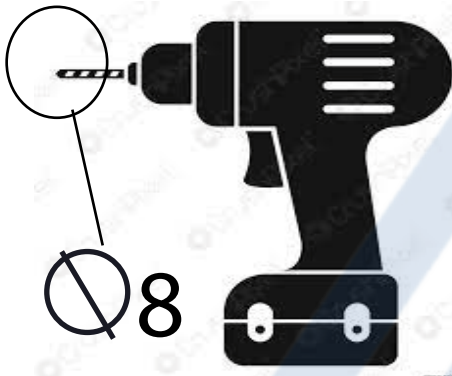

8

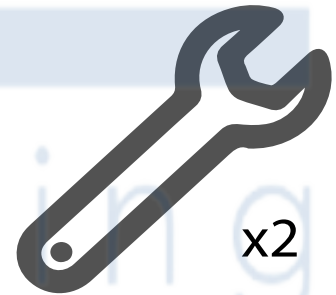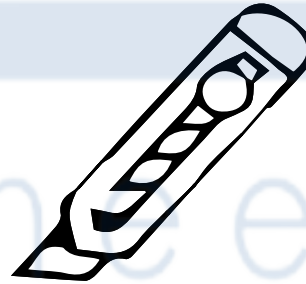


x2

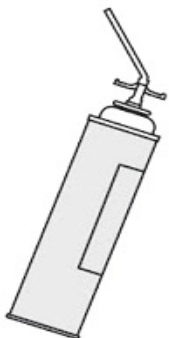


impregnation

+

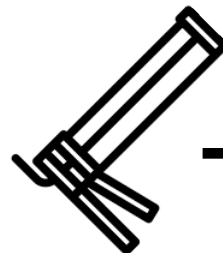

+

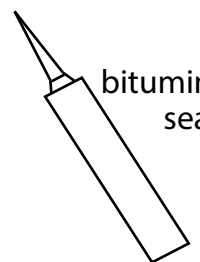

bituminous
sealant

NOT INCLUDED!

9325
805x

45120
500x

4570
340x

4460
120x

4216
60x

4345
70x

J
16x

2012
8x

L60
4x













K60
8x


732012
4x

SET2
2x


SET3
2x

Q1
1x

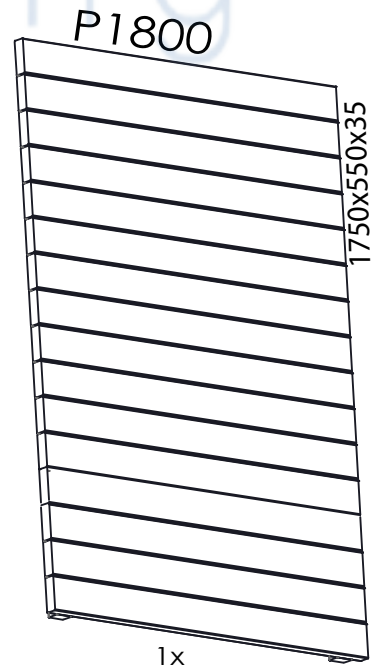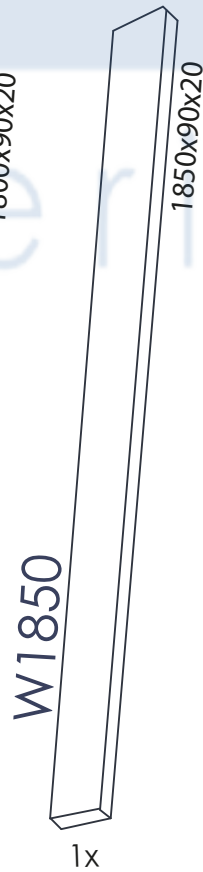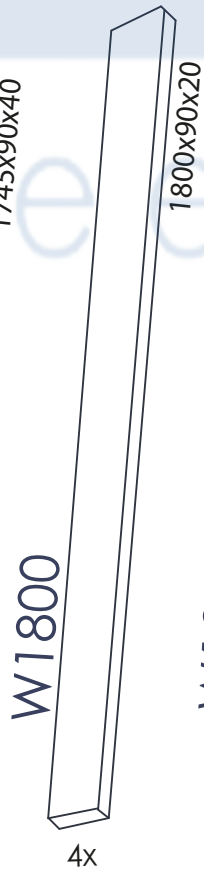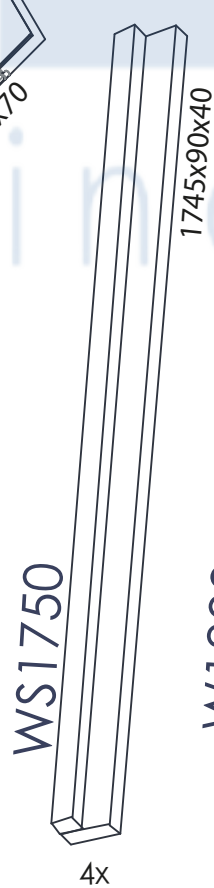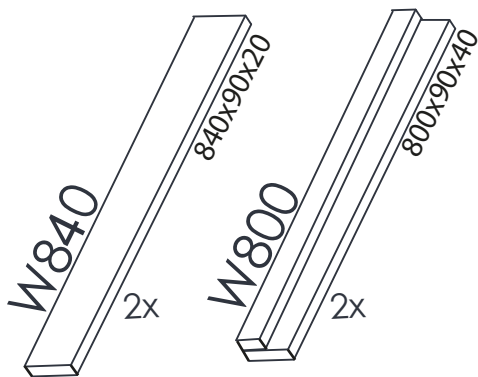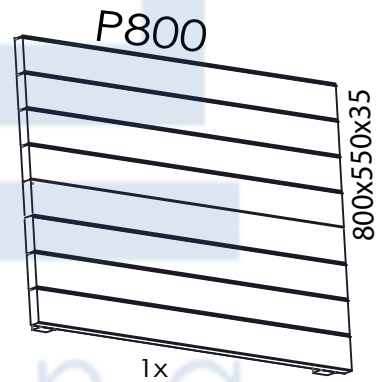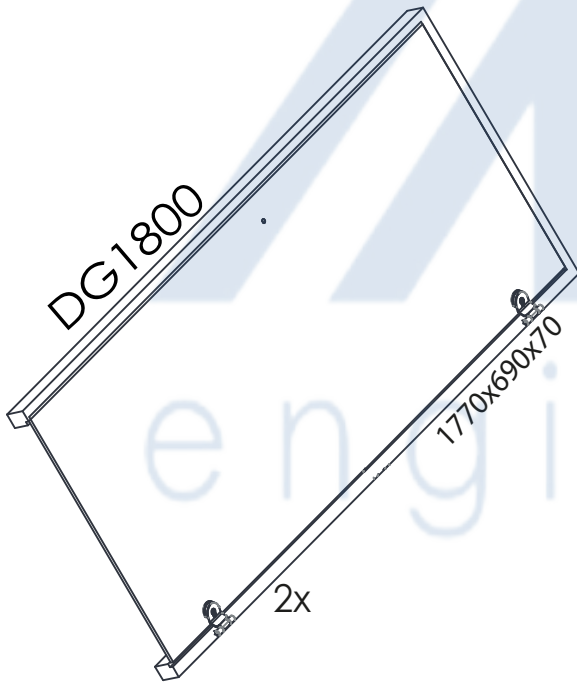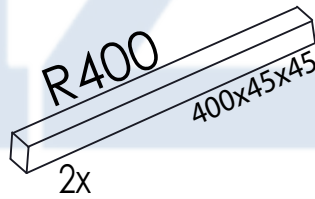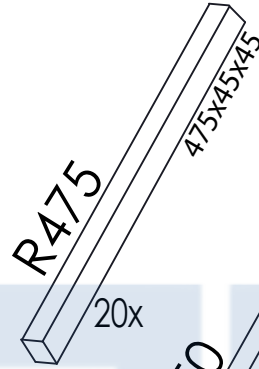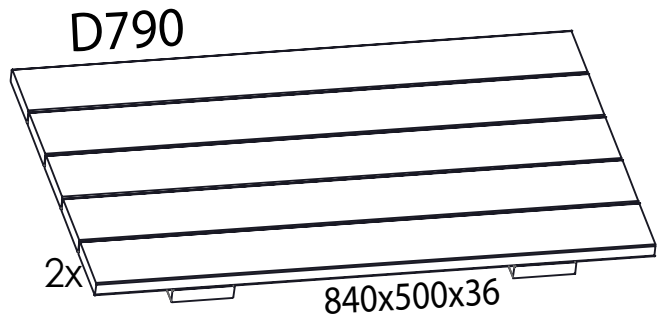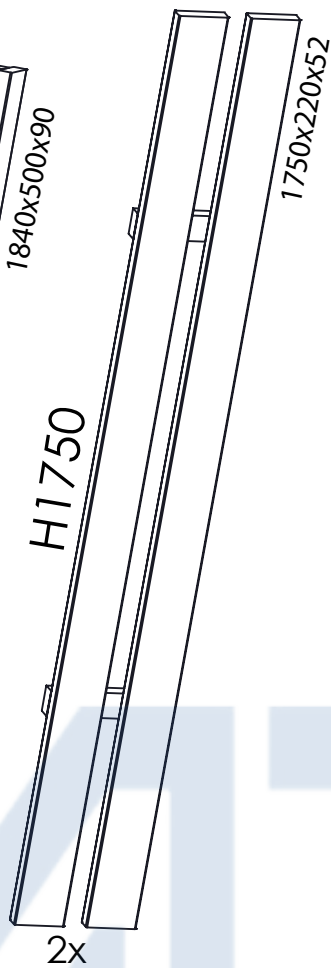
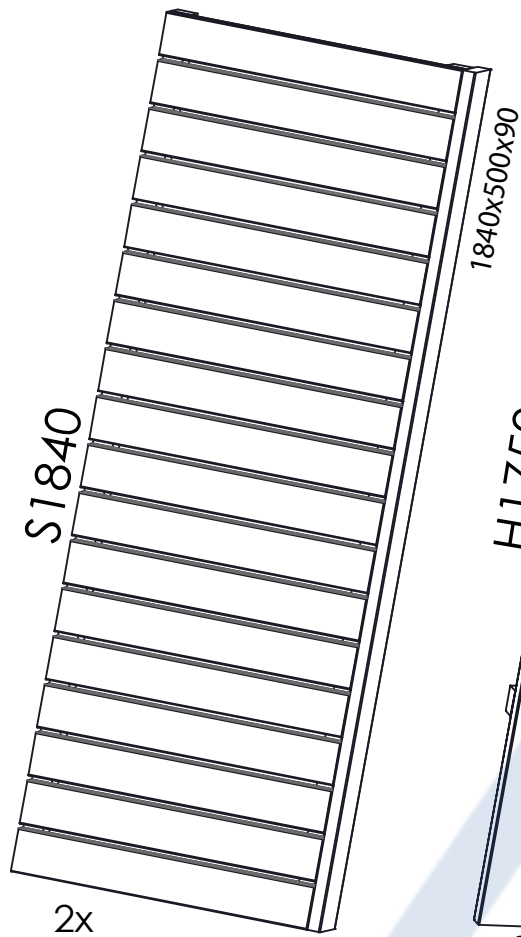


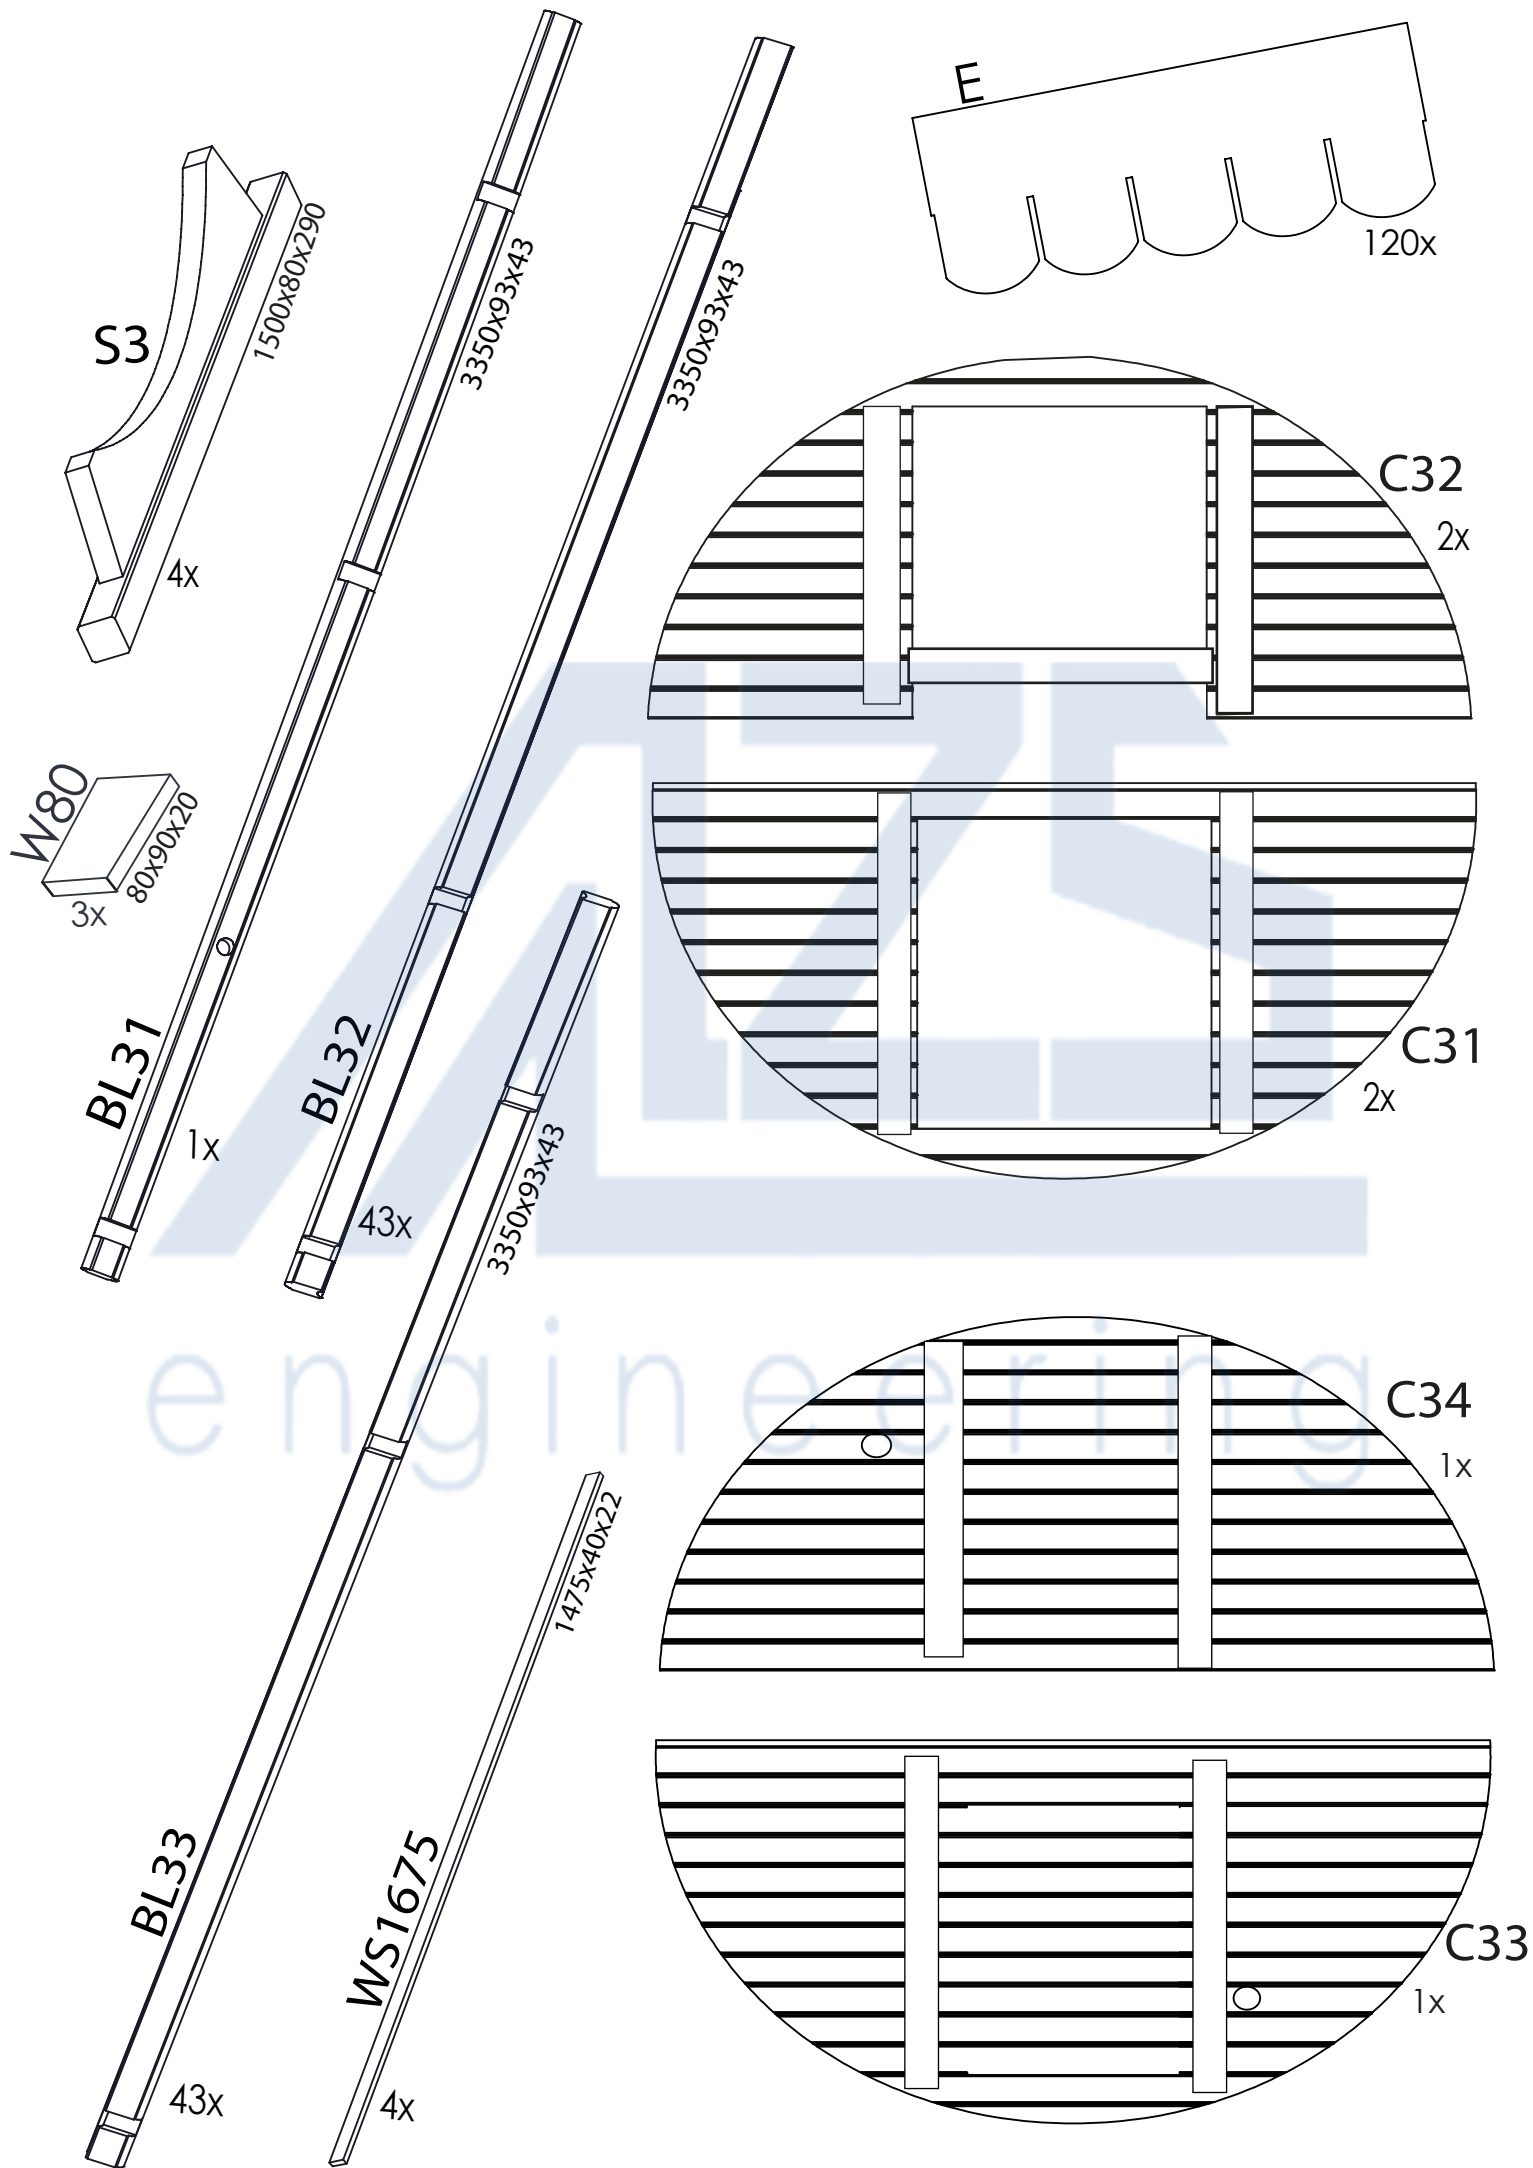



A SET FOR INSTALLING WOOD-BURNING STOVE (NOT INCLUDED).
PURCHASED SEPARATELY

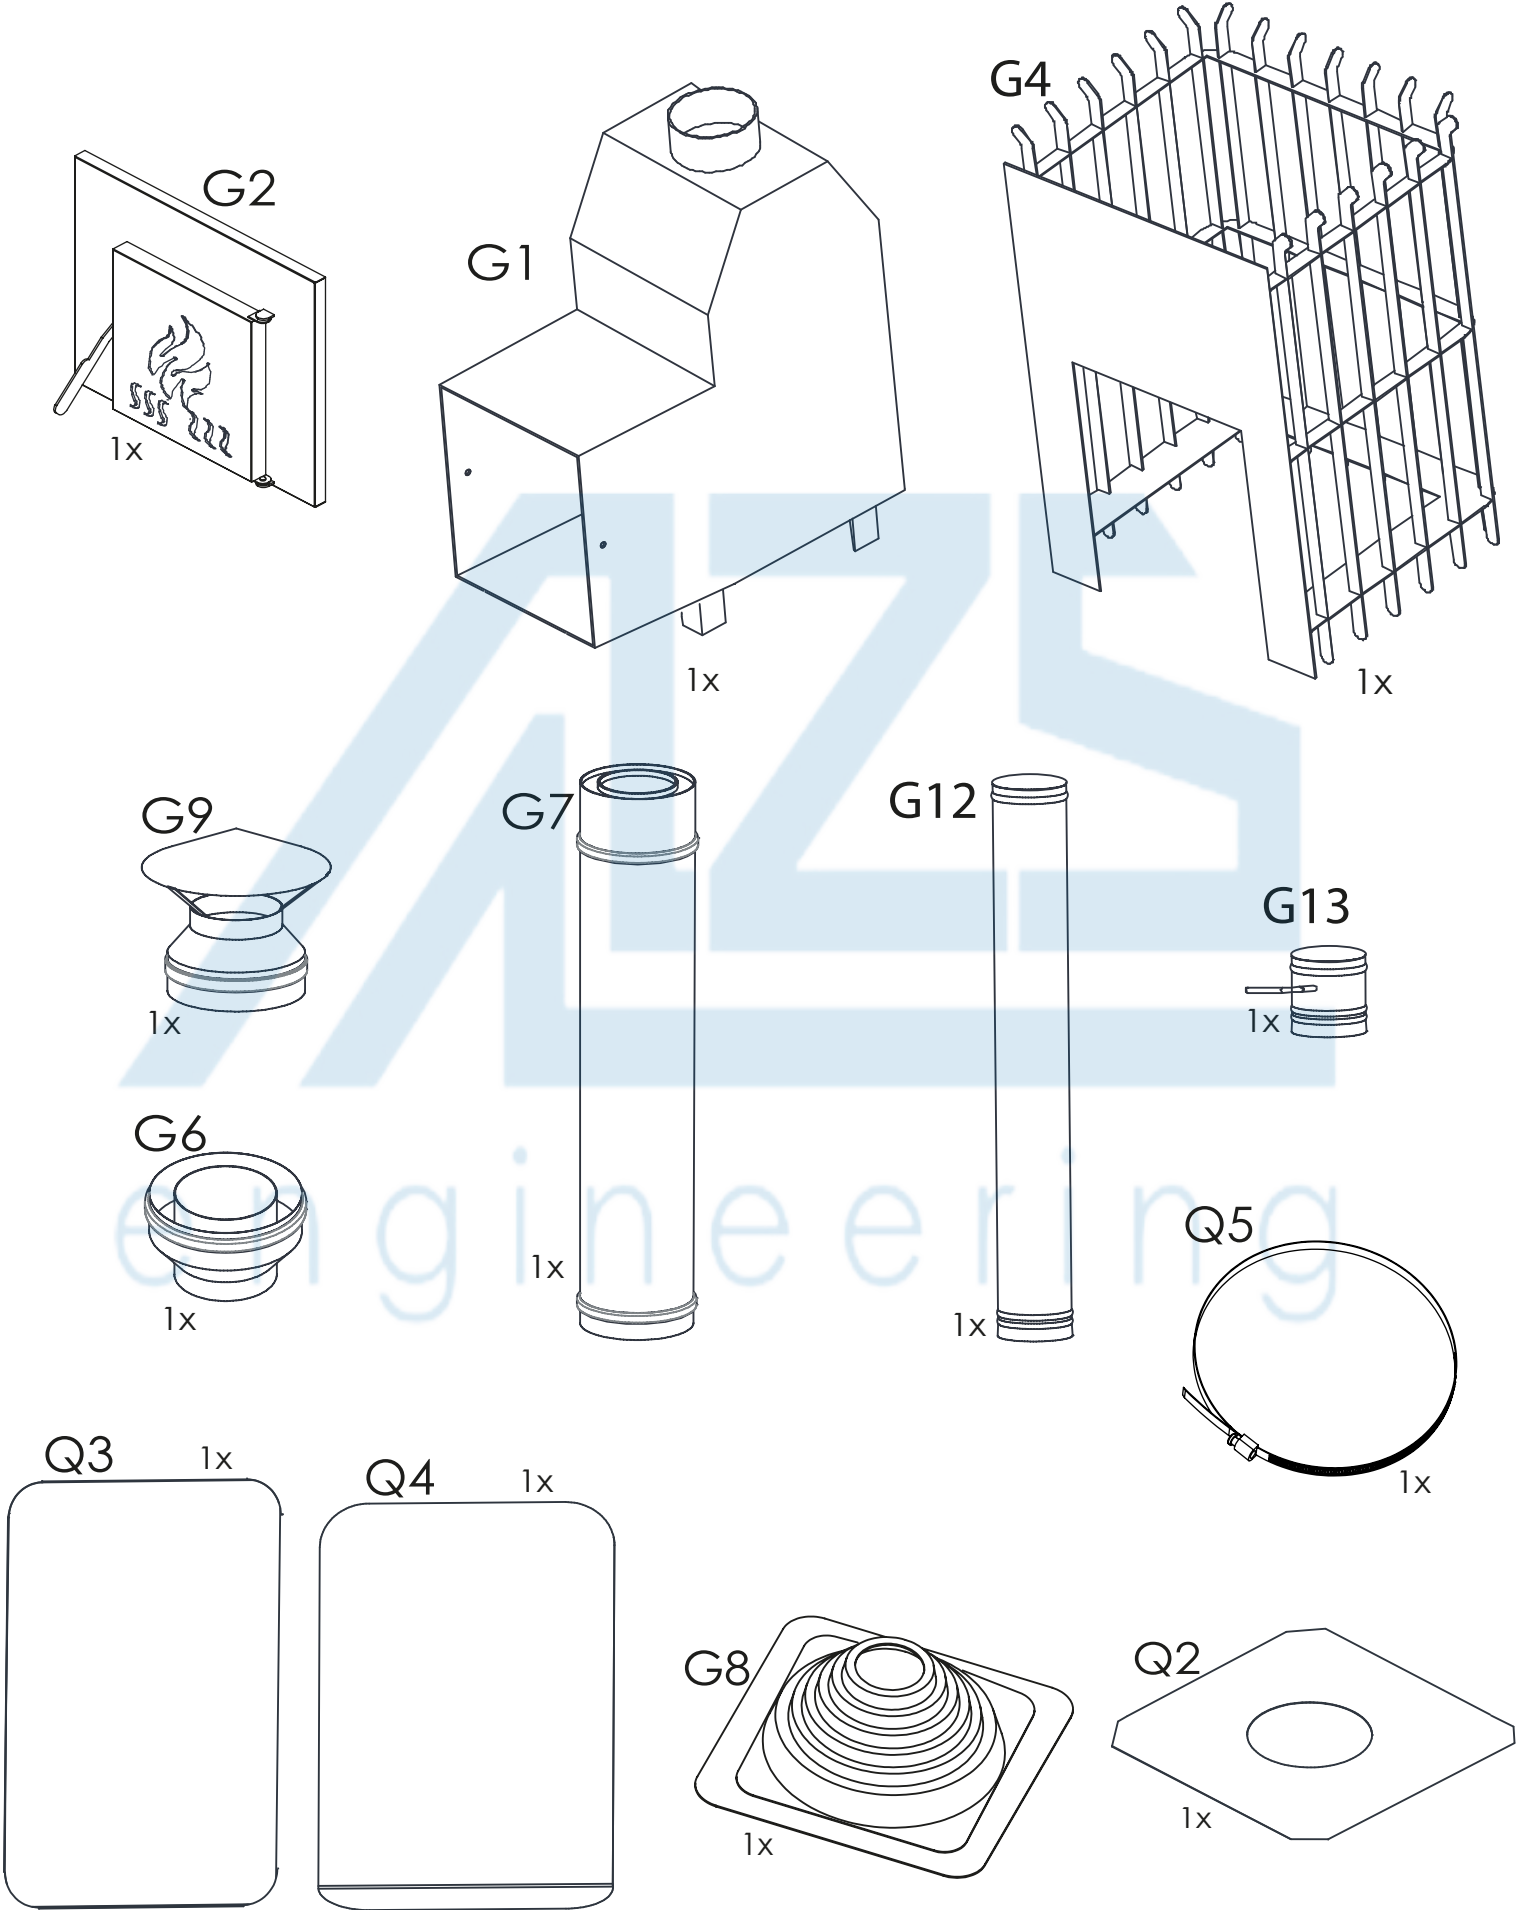


S3 - 4



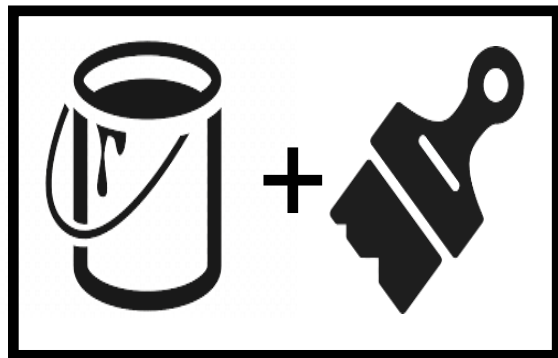
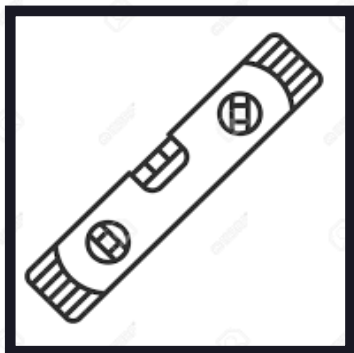




S3x4

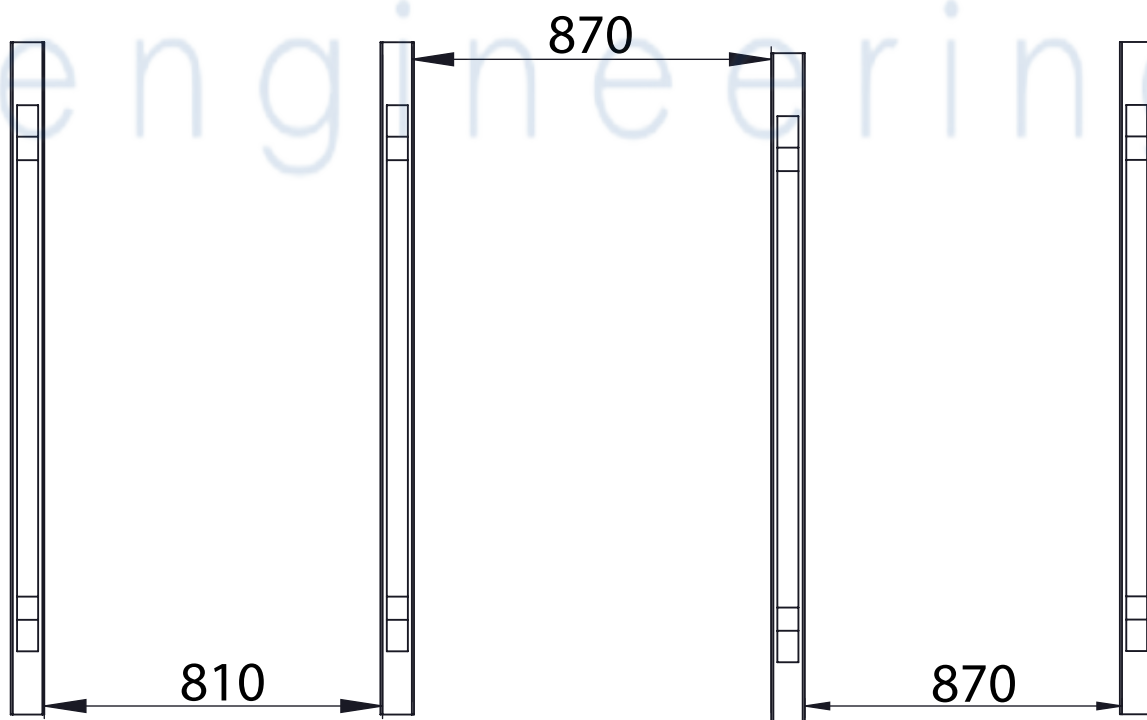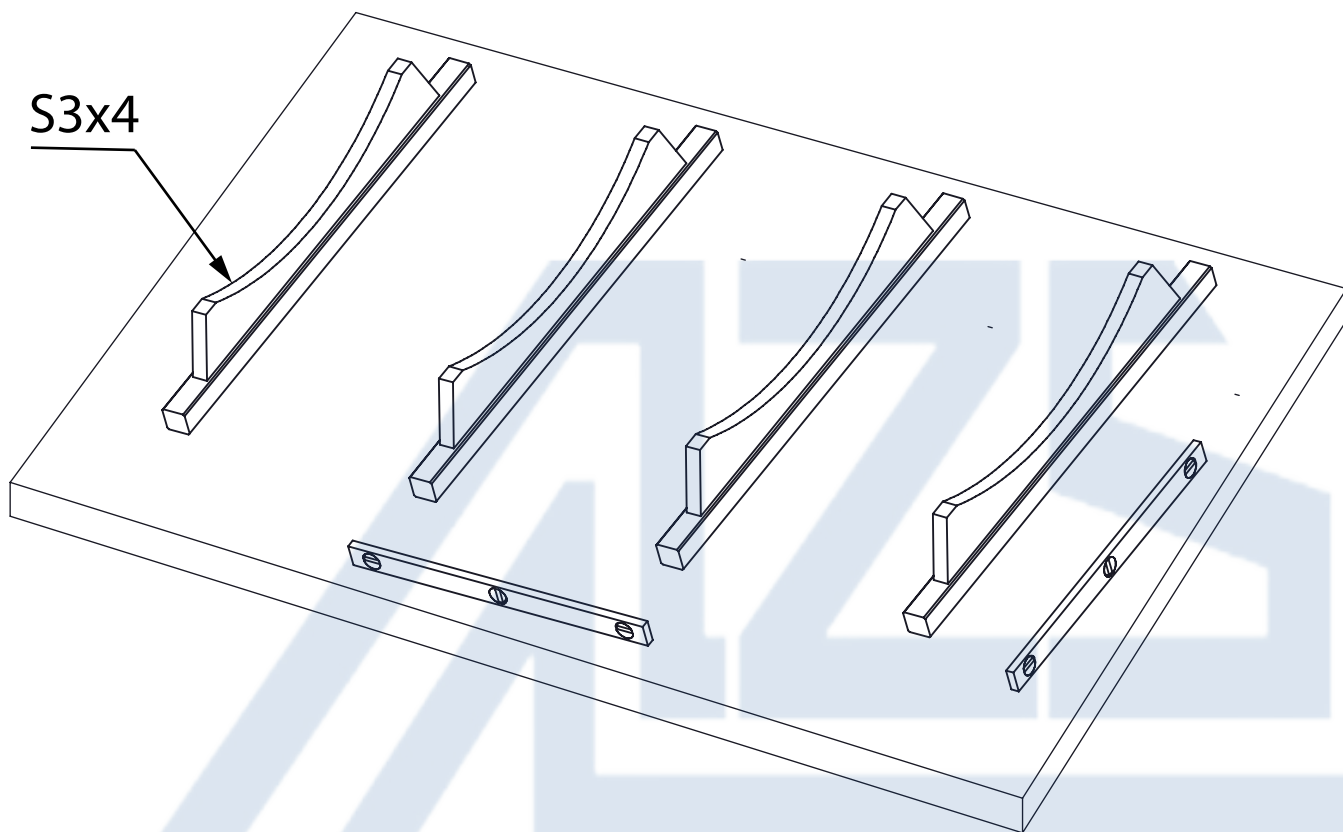





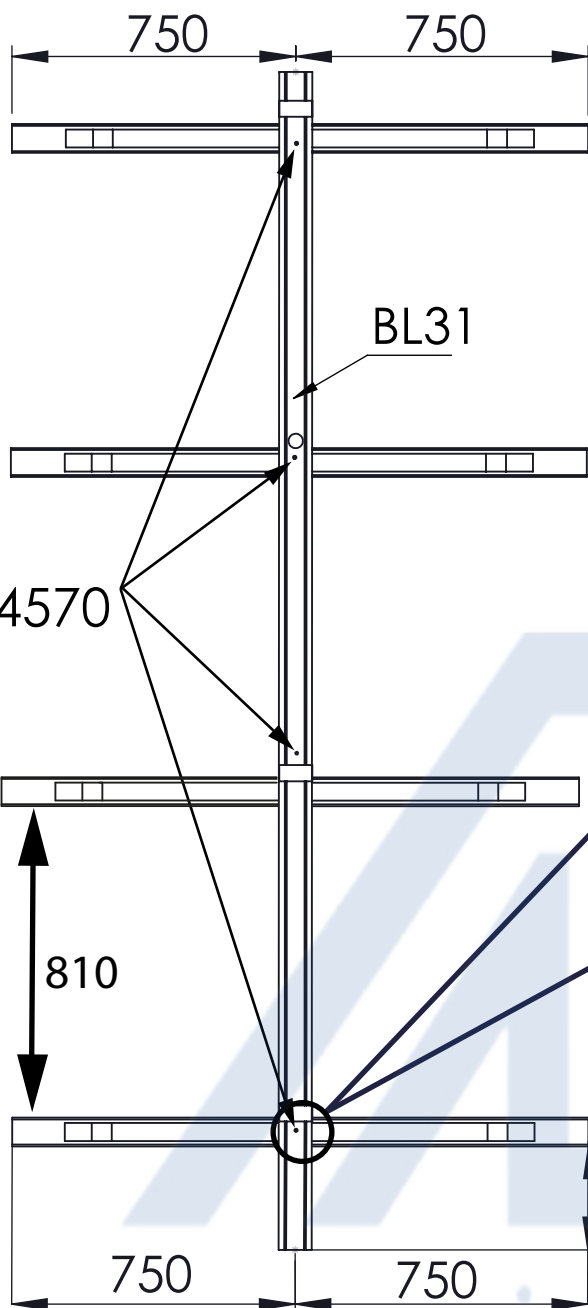


BL31 - 1
 BL32 - 2
 BL33 - 2
 4570 - 20
 45120 - 16

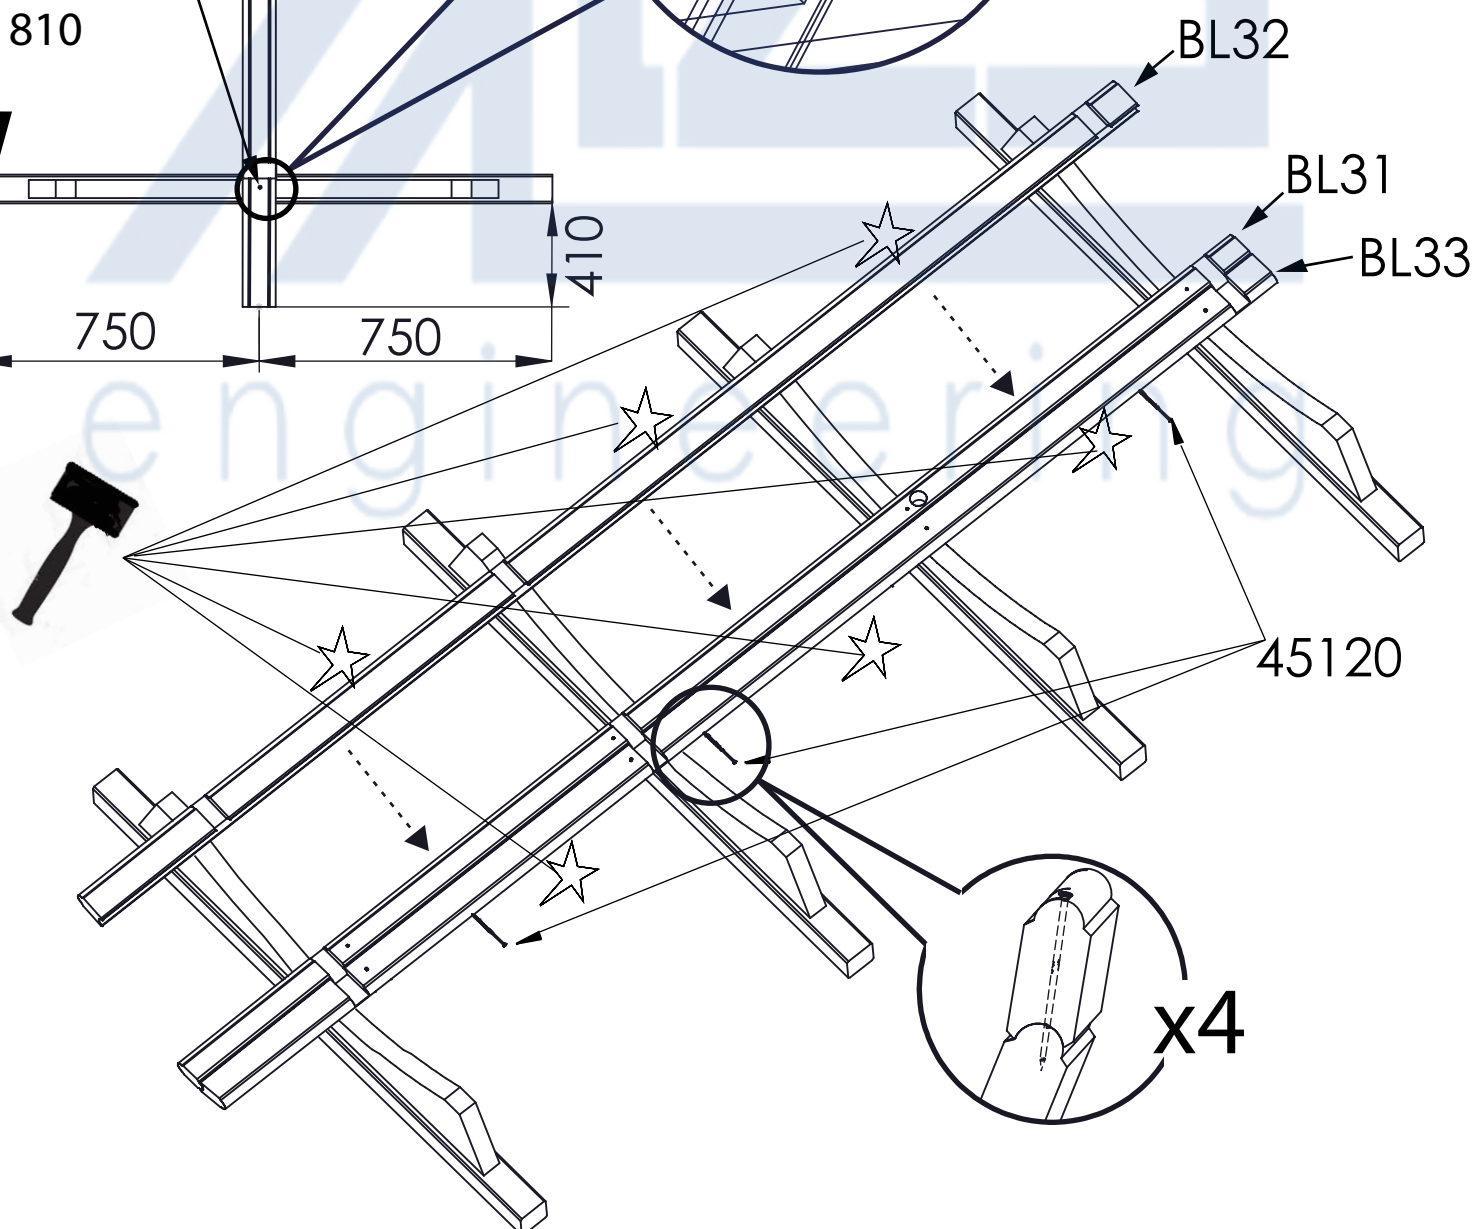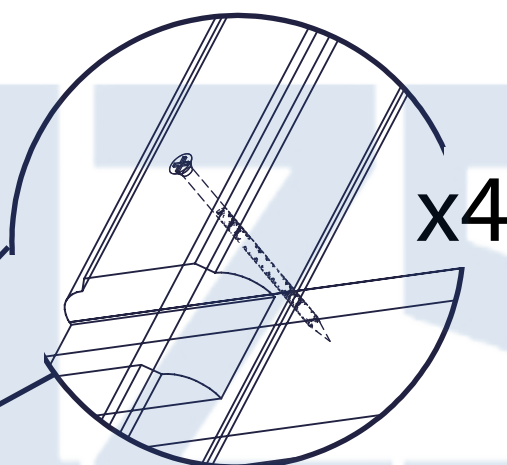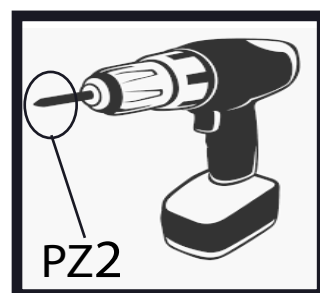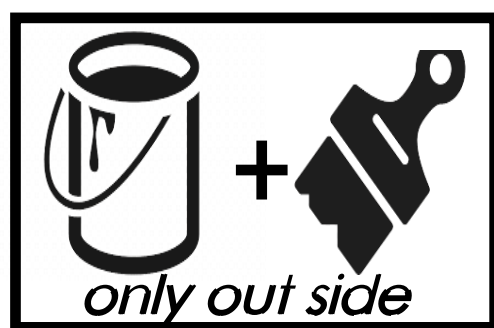

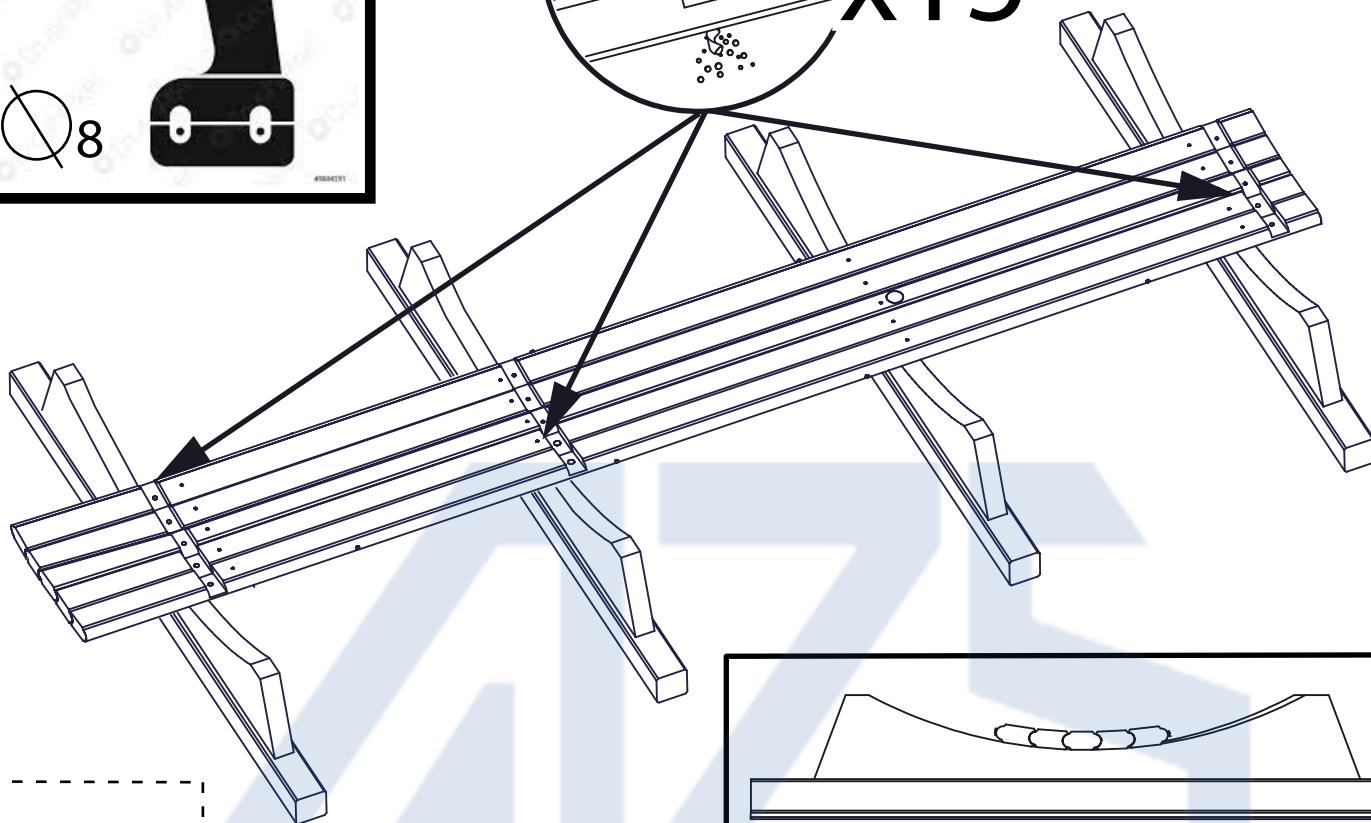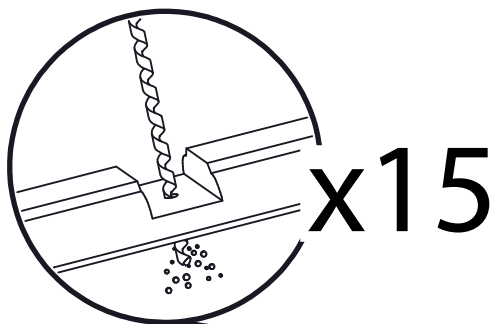

C31 - 2
C33 - 1
BL32 - 5
BL33 - 5
4570 - 46
45120 - 40

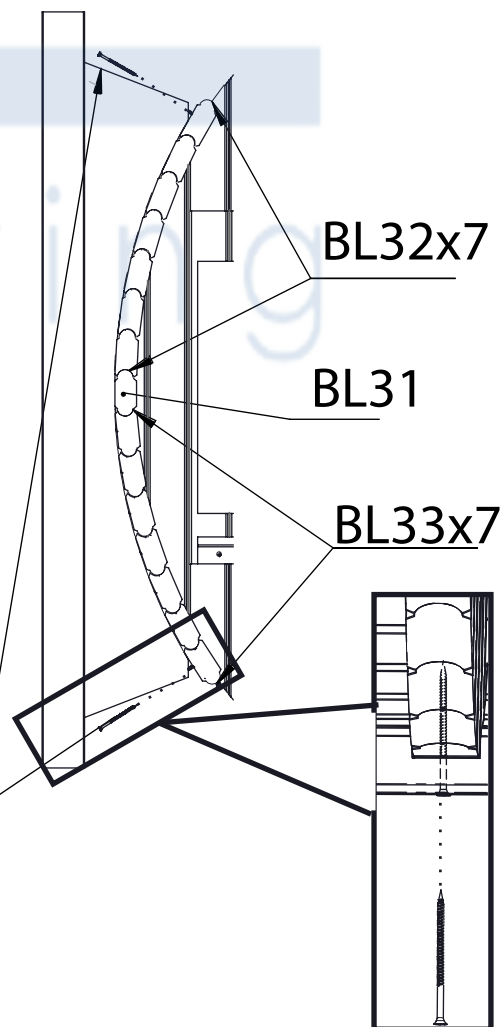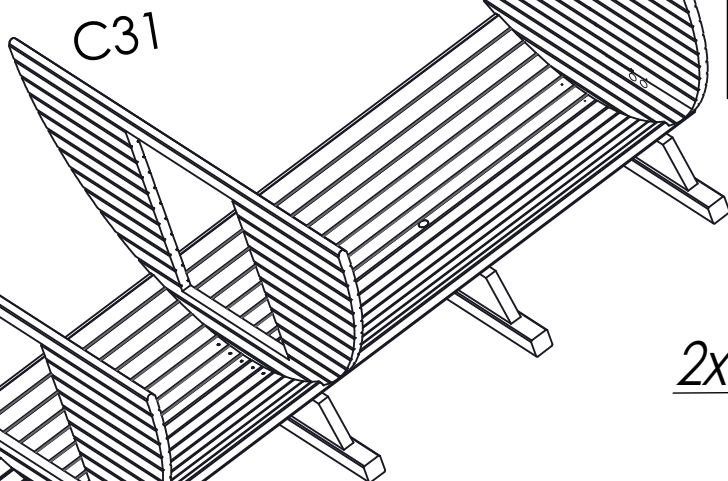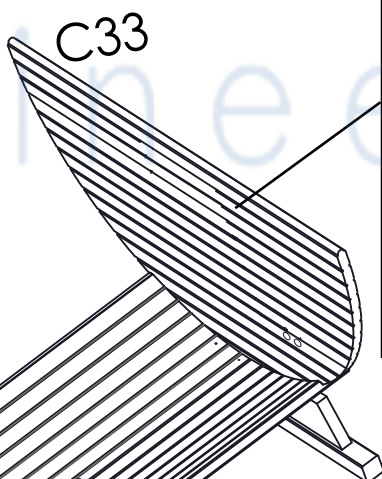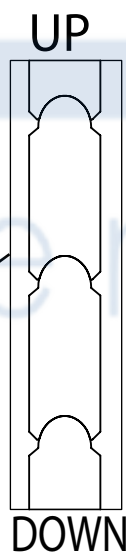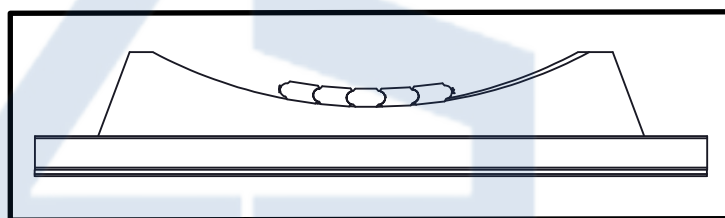

BL32 - 14


BL33 - 14






C32 - 2

C34 - 1

4570 - 90


45120 - 126

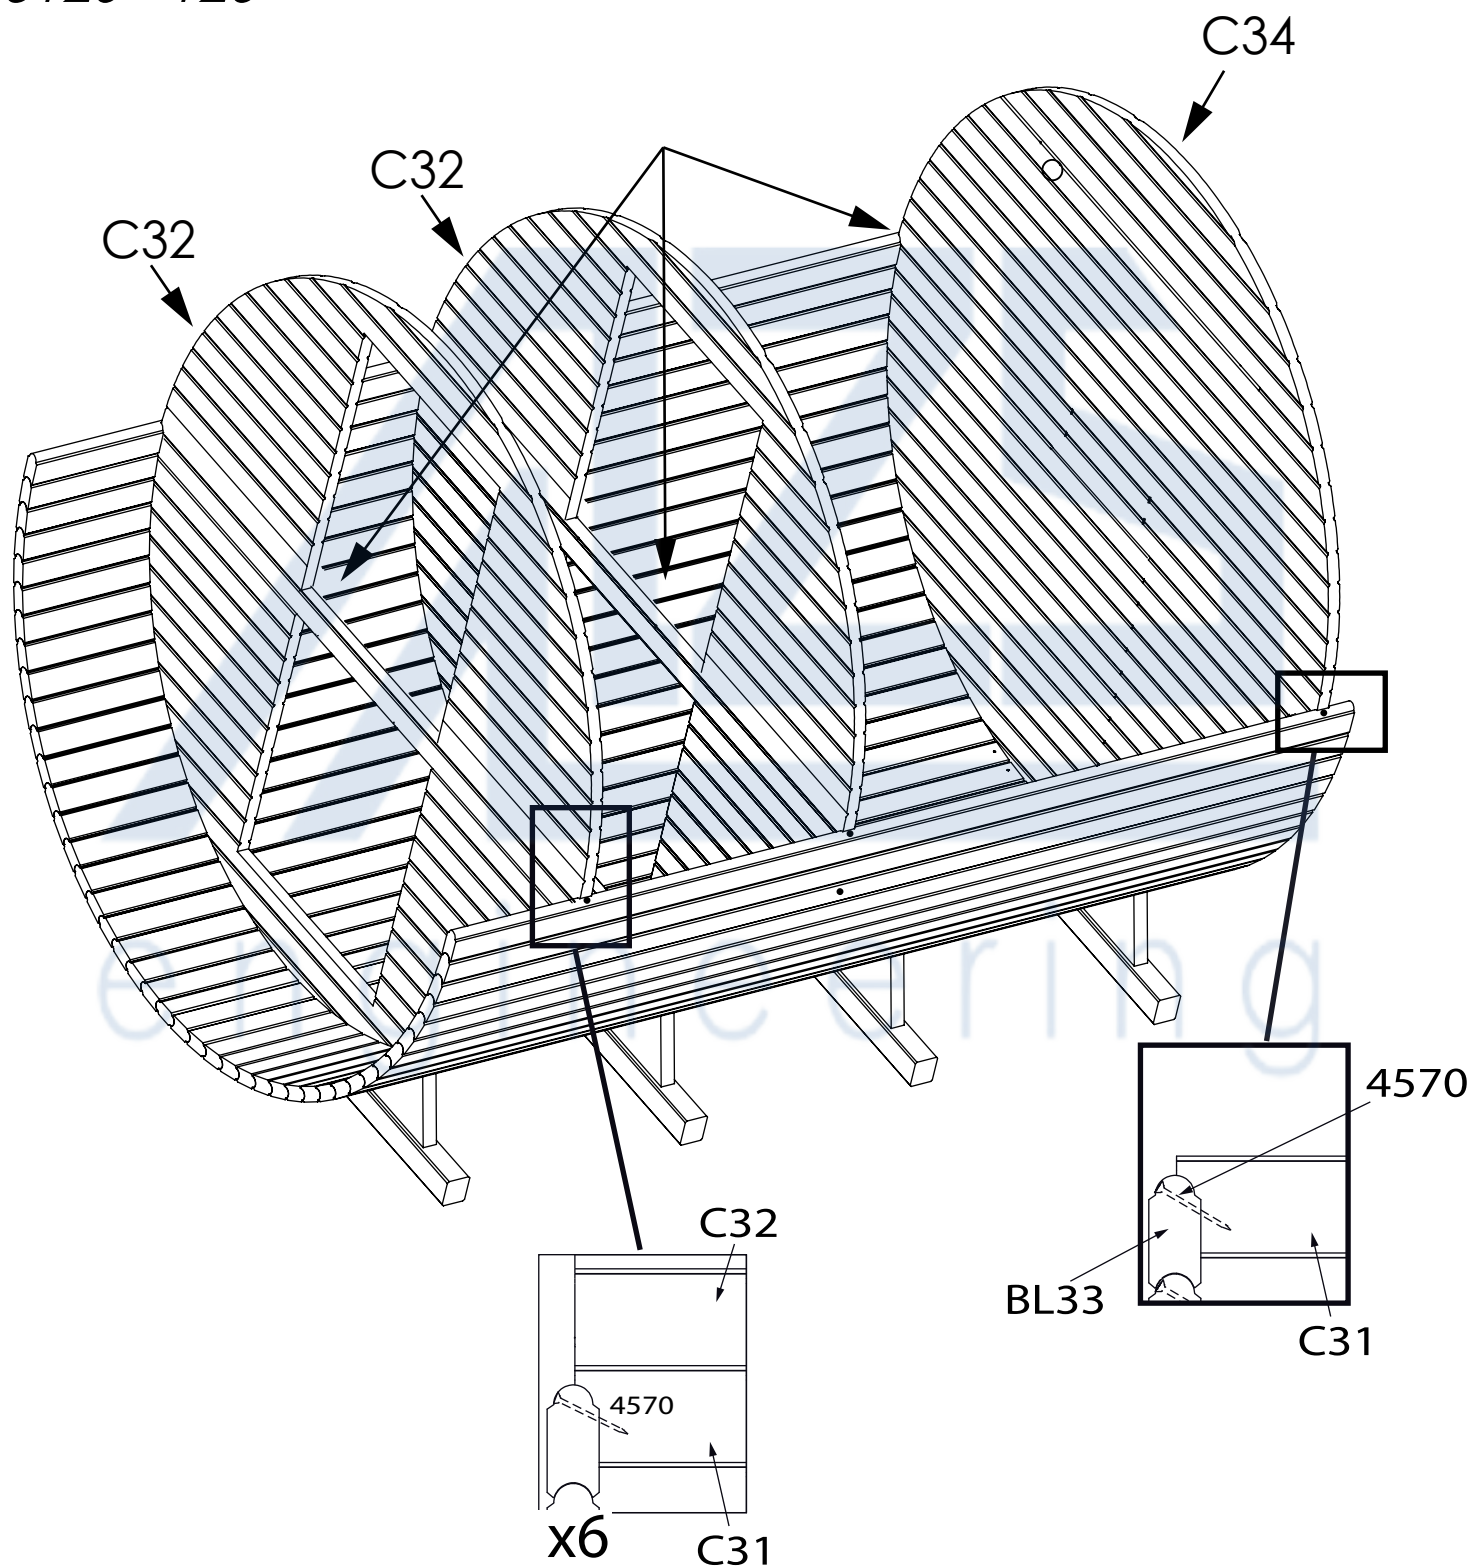


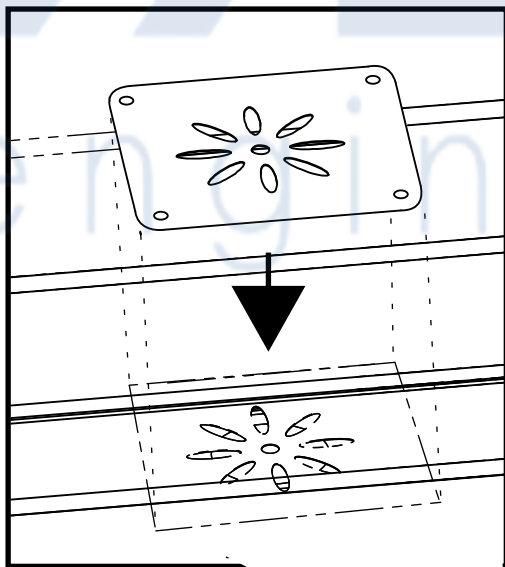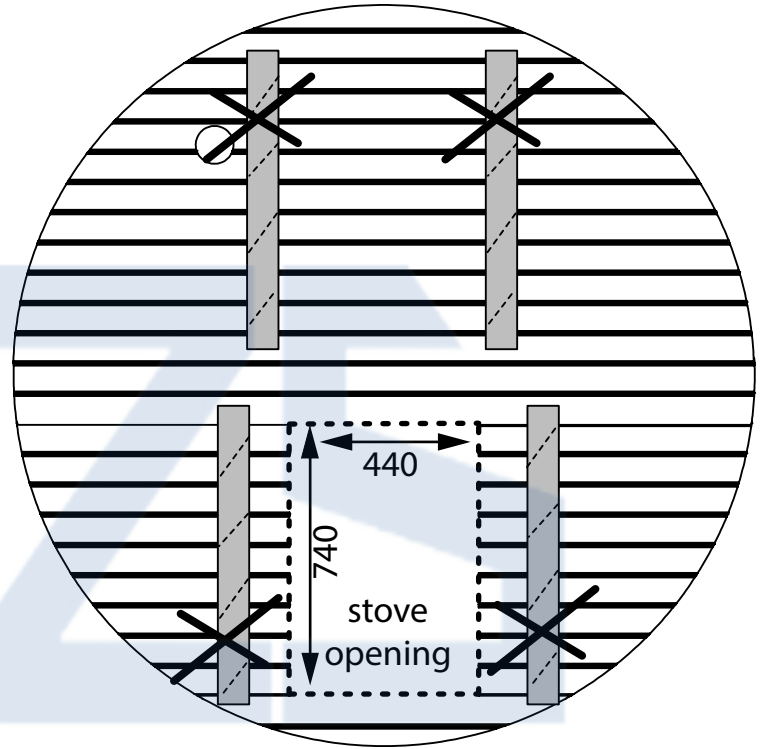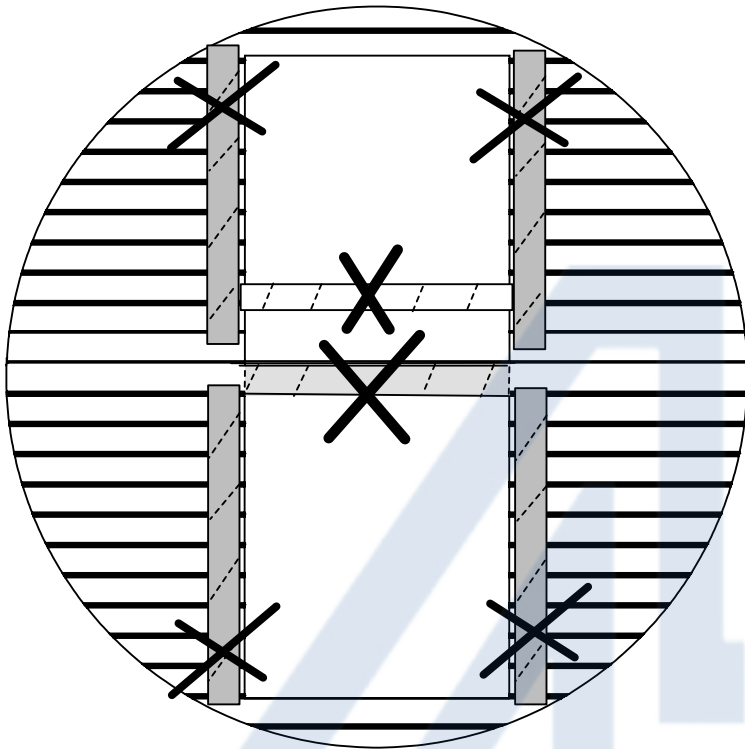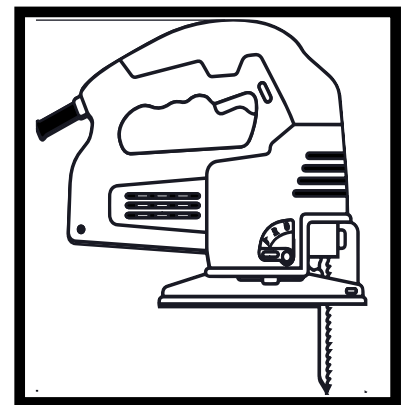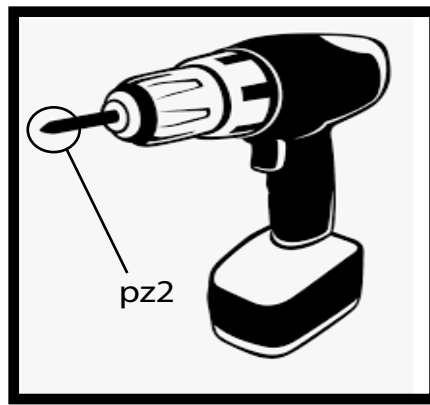


Q1 - 1
4345 - 4



BL31



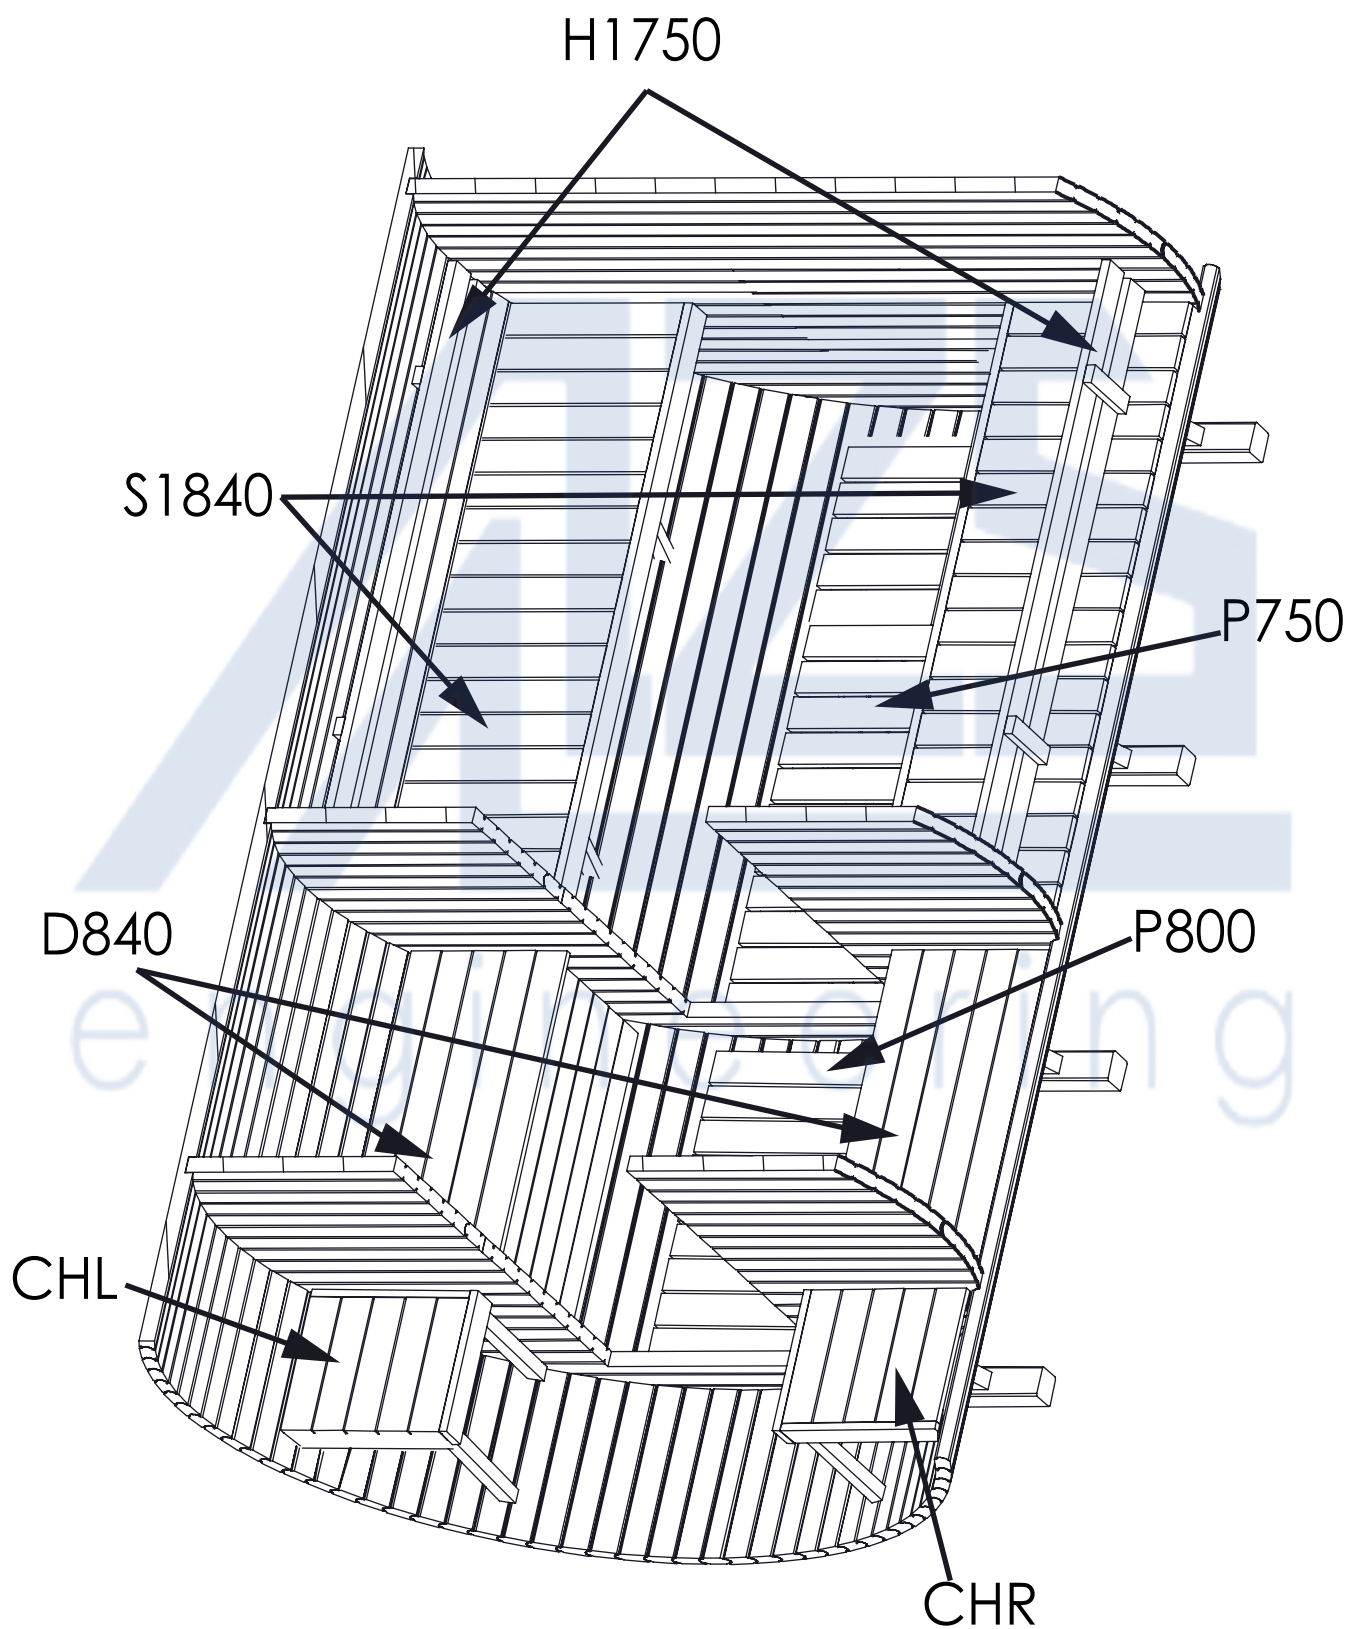


CHL - 1
CHR - 1
R475 - 4
4570 - 16
4460 - 6




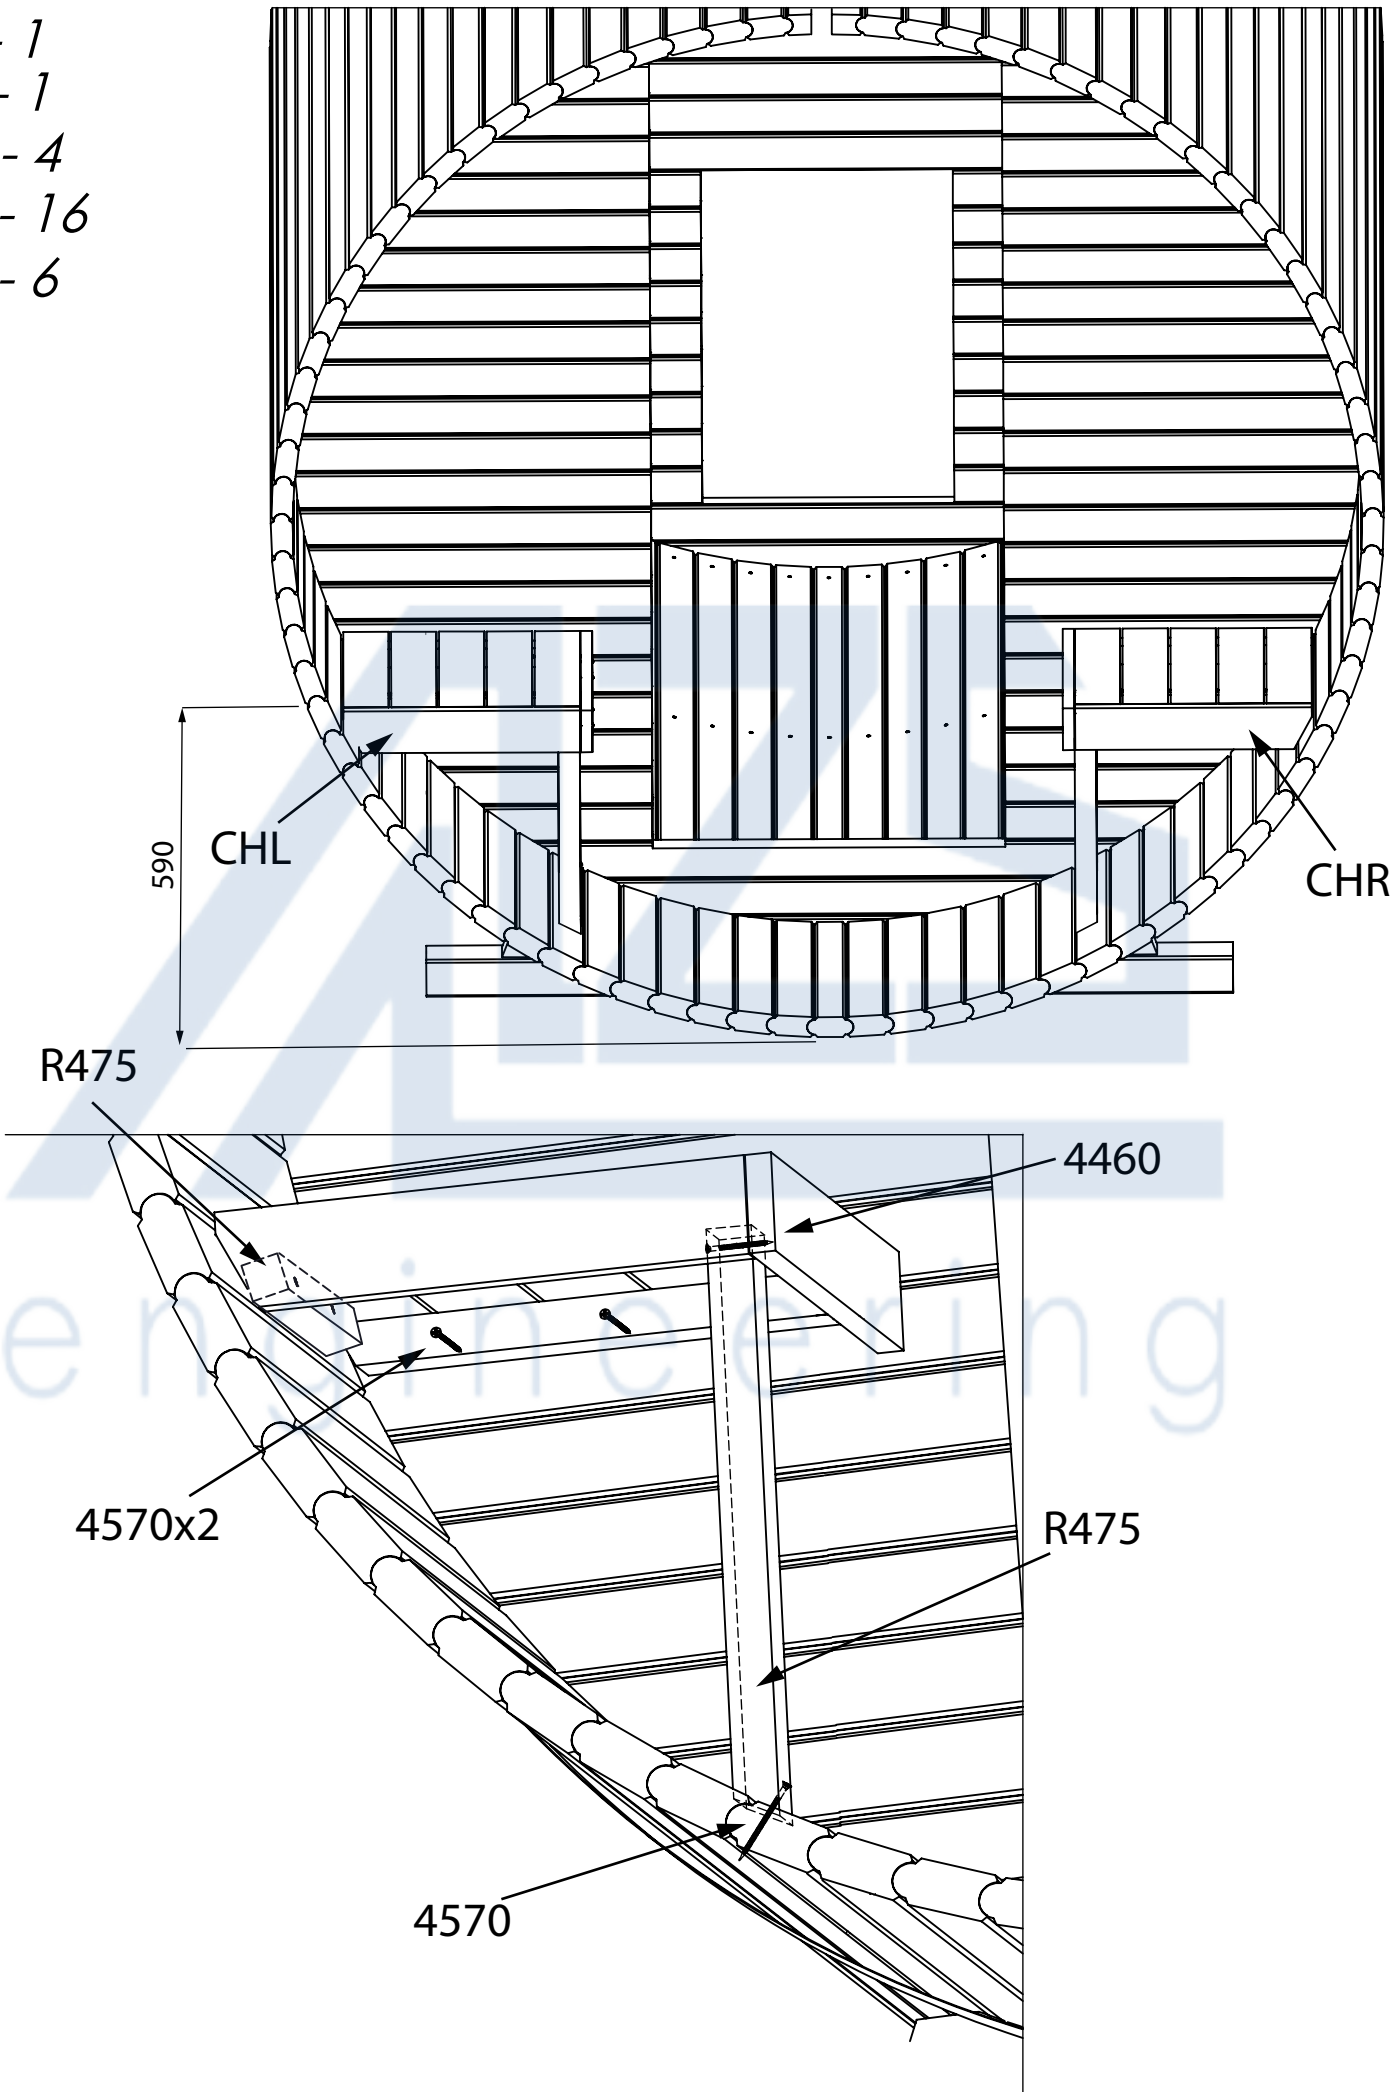


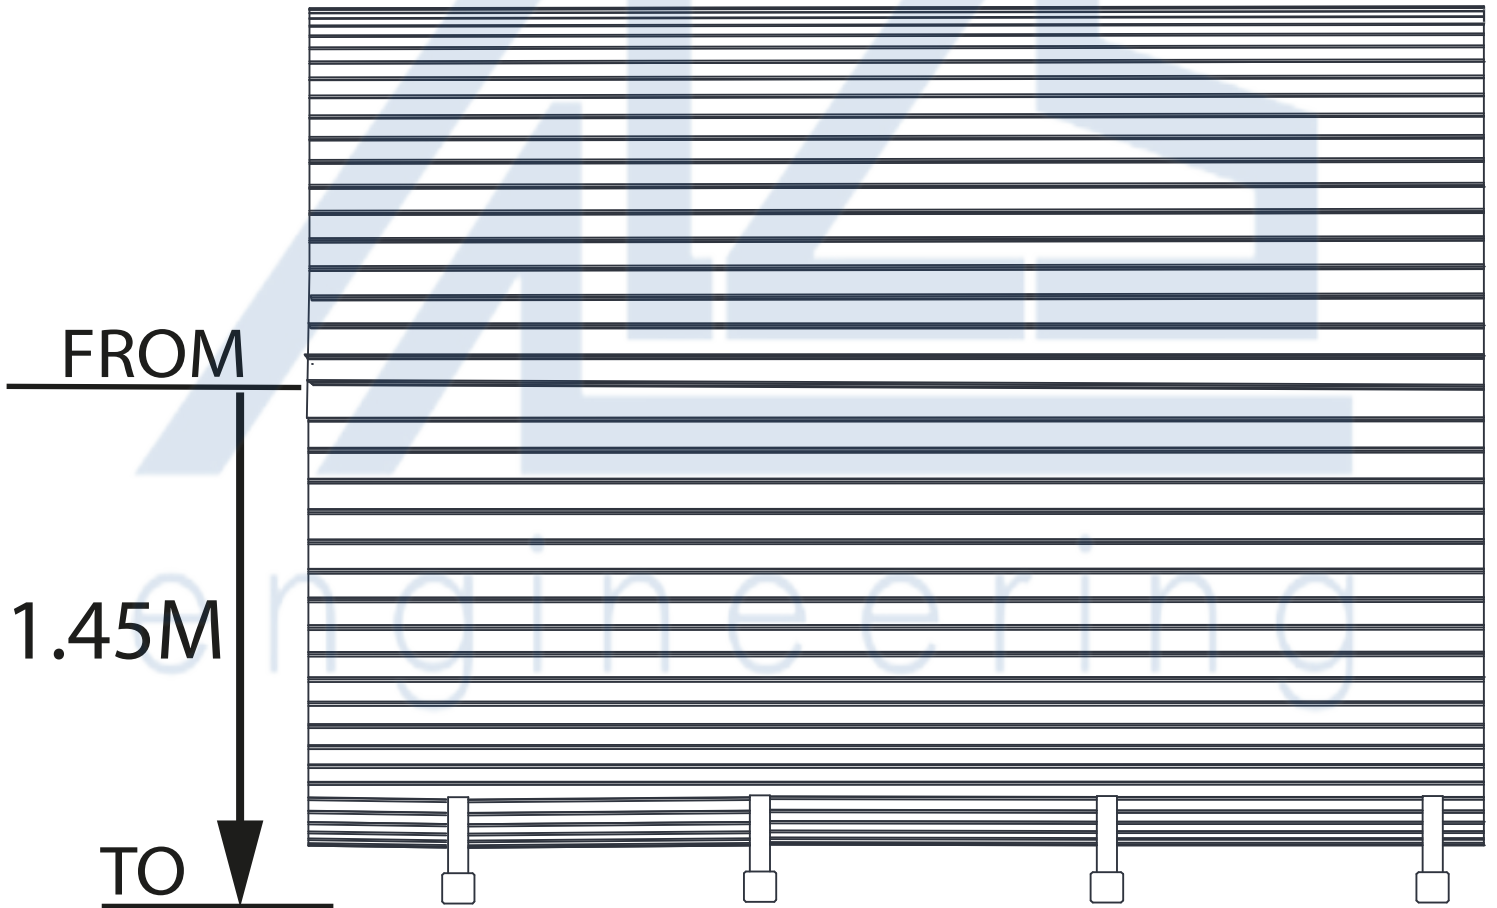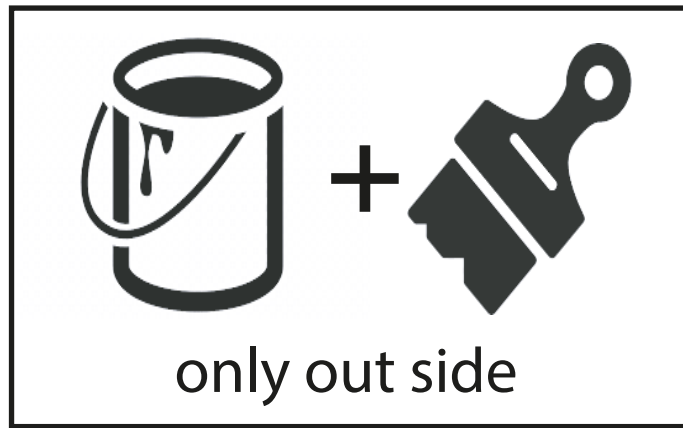


L60 - 4
K60 - 8
2012 - 8
732012 - 4

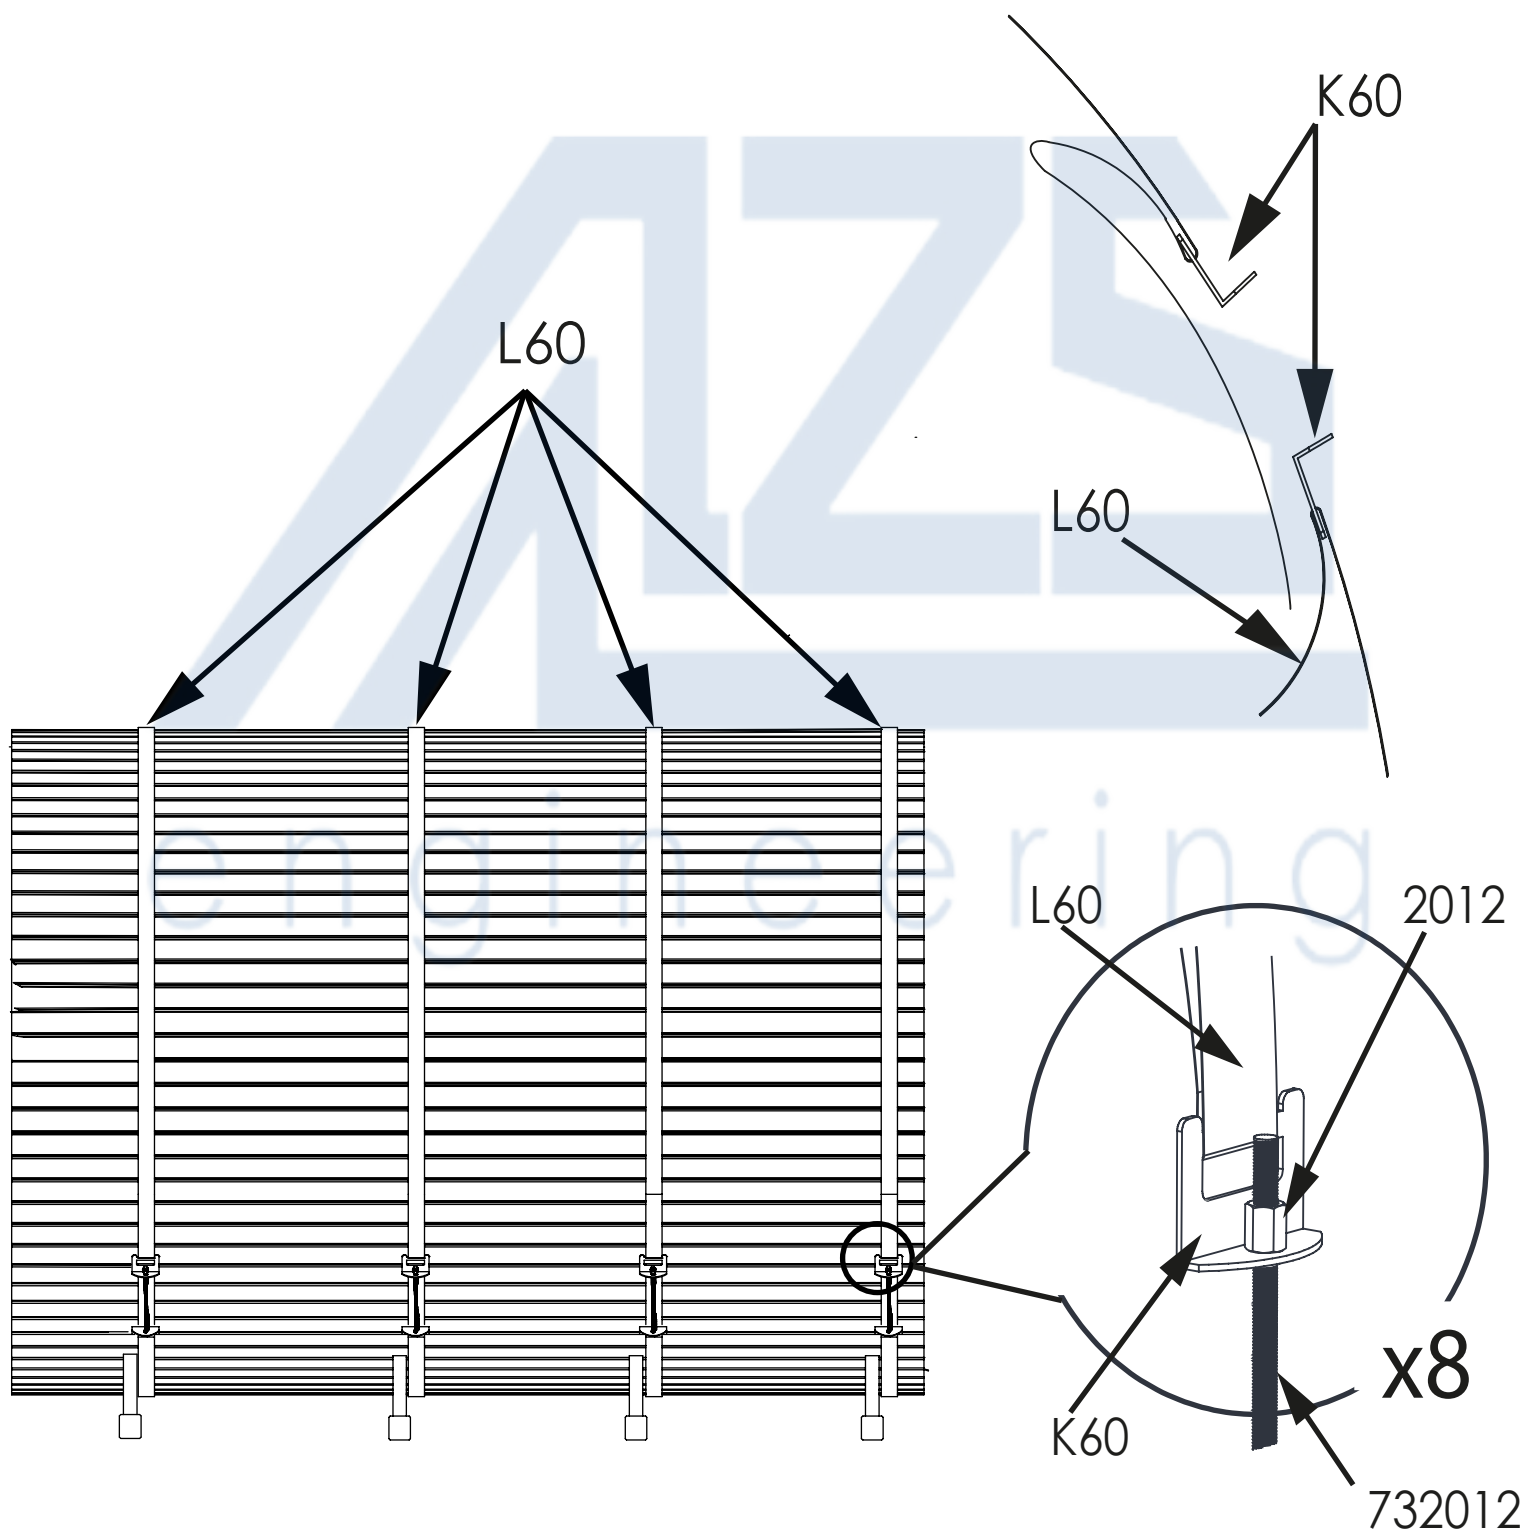


H1750 - 2
S1840 - 2
R475 - 12
4570 - 36

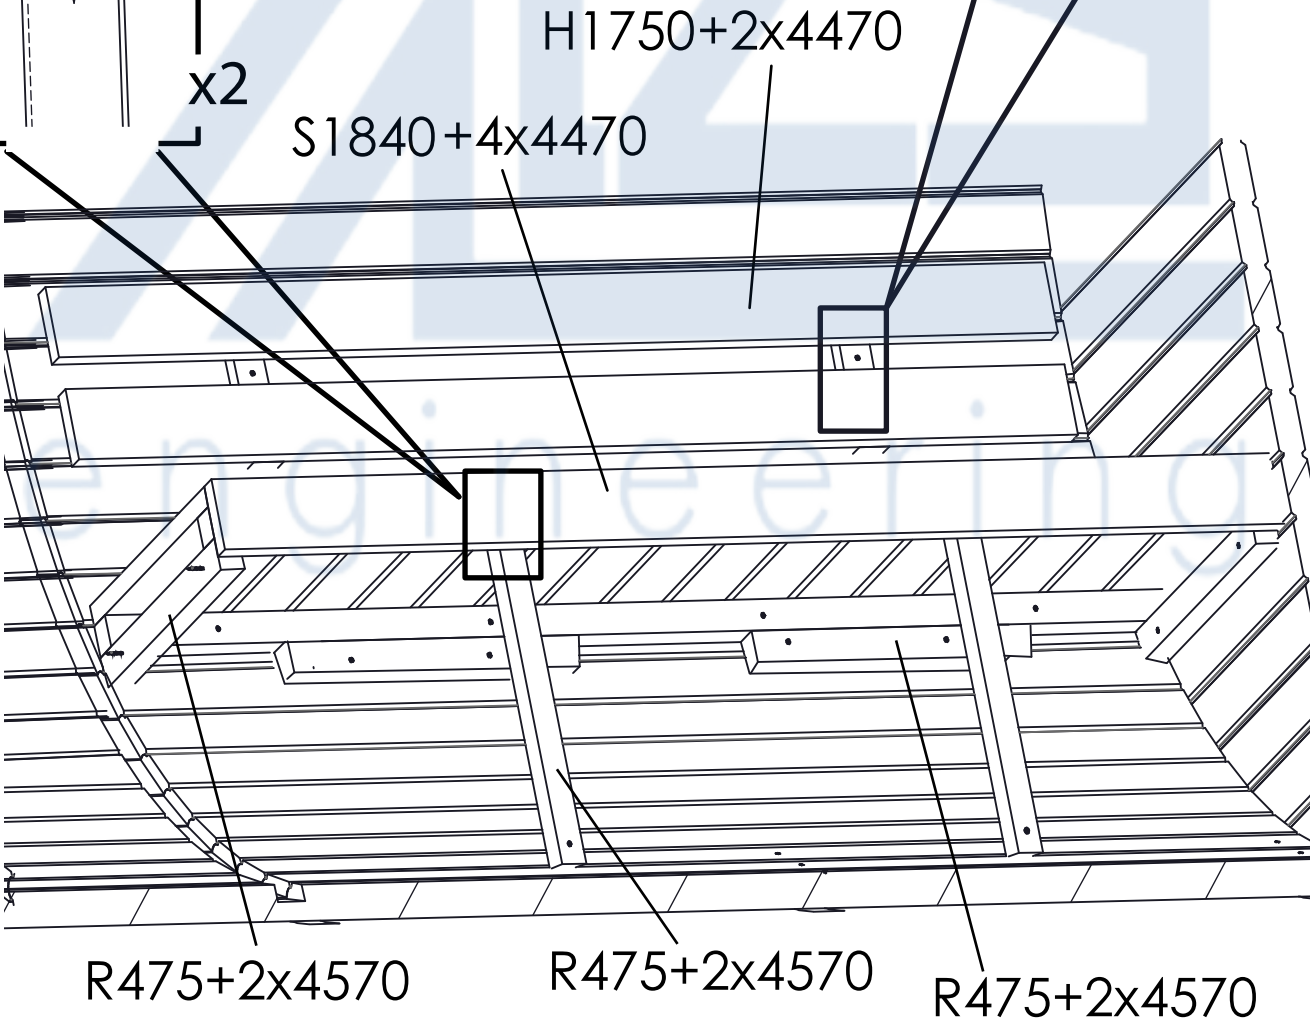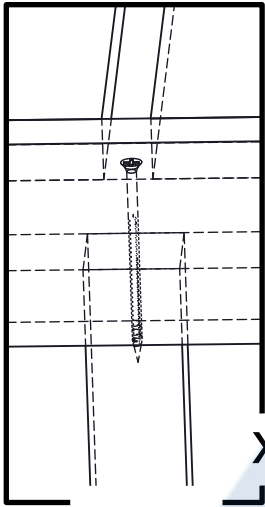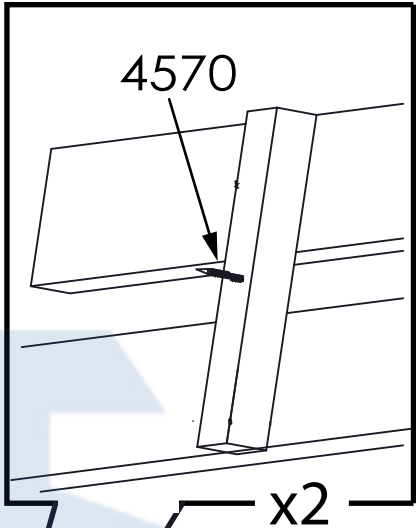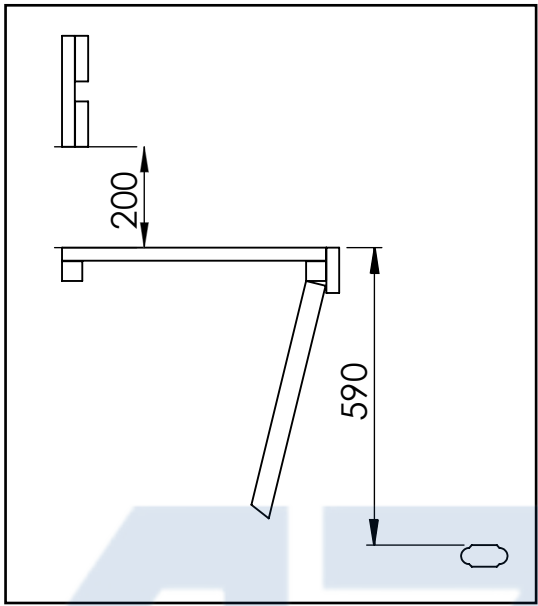



D840 - 2
R750 - 2
R475 - 8
W850 - 10
80401 - 4
4570 - 24
4460 - 48
4216 - 16

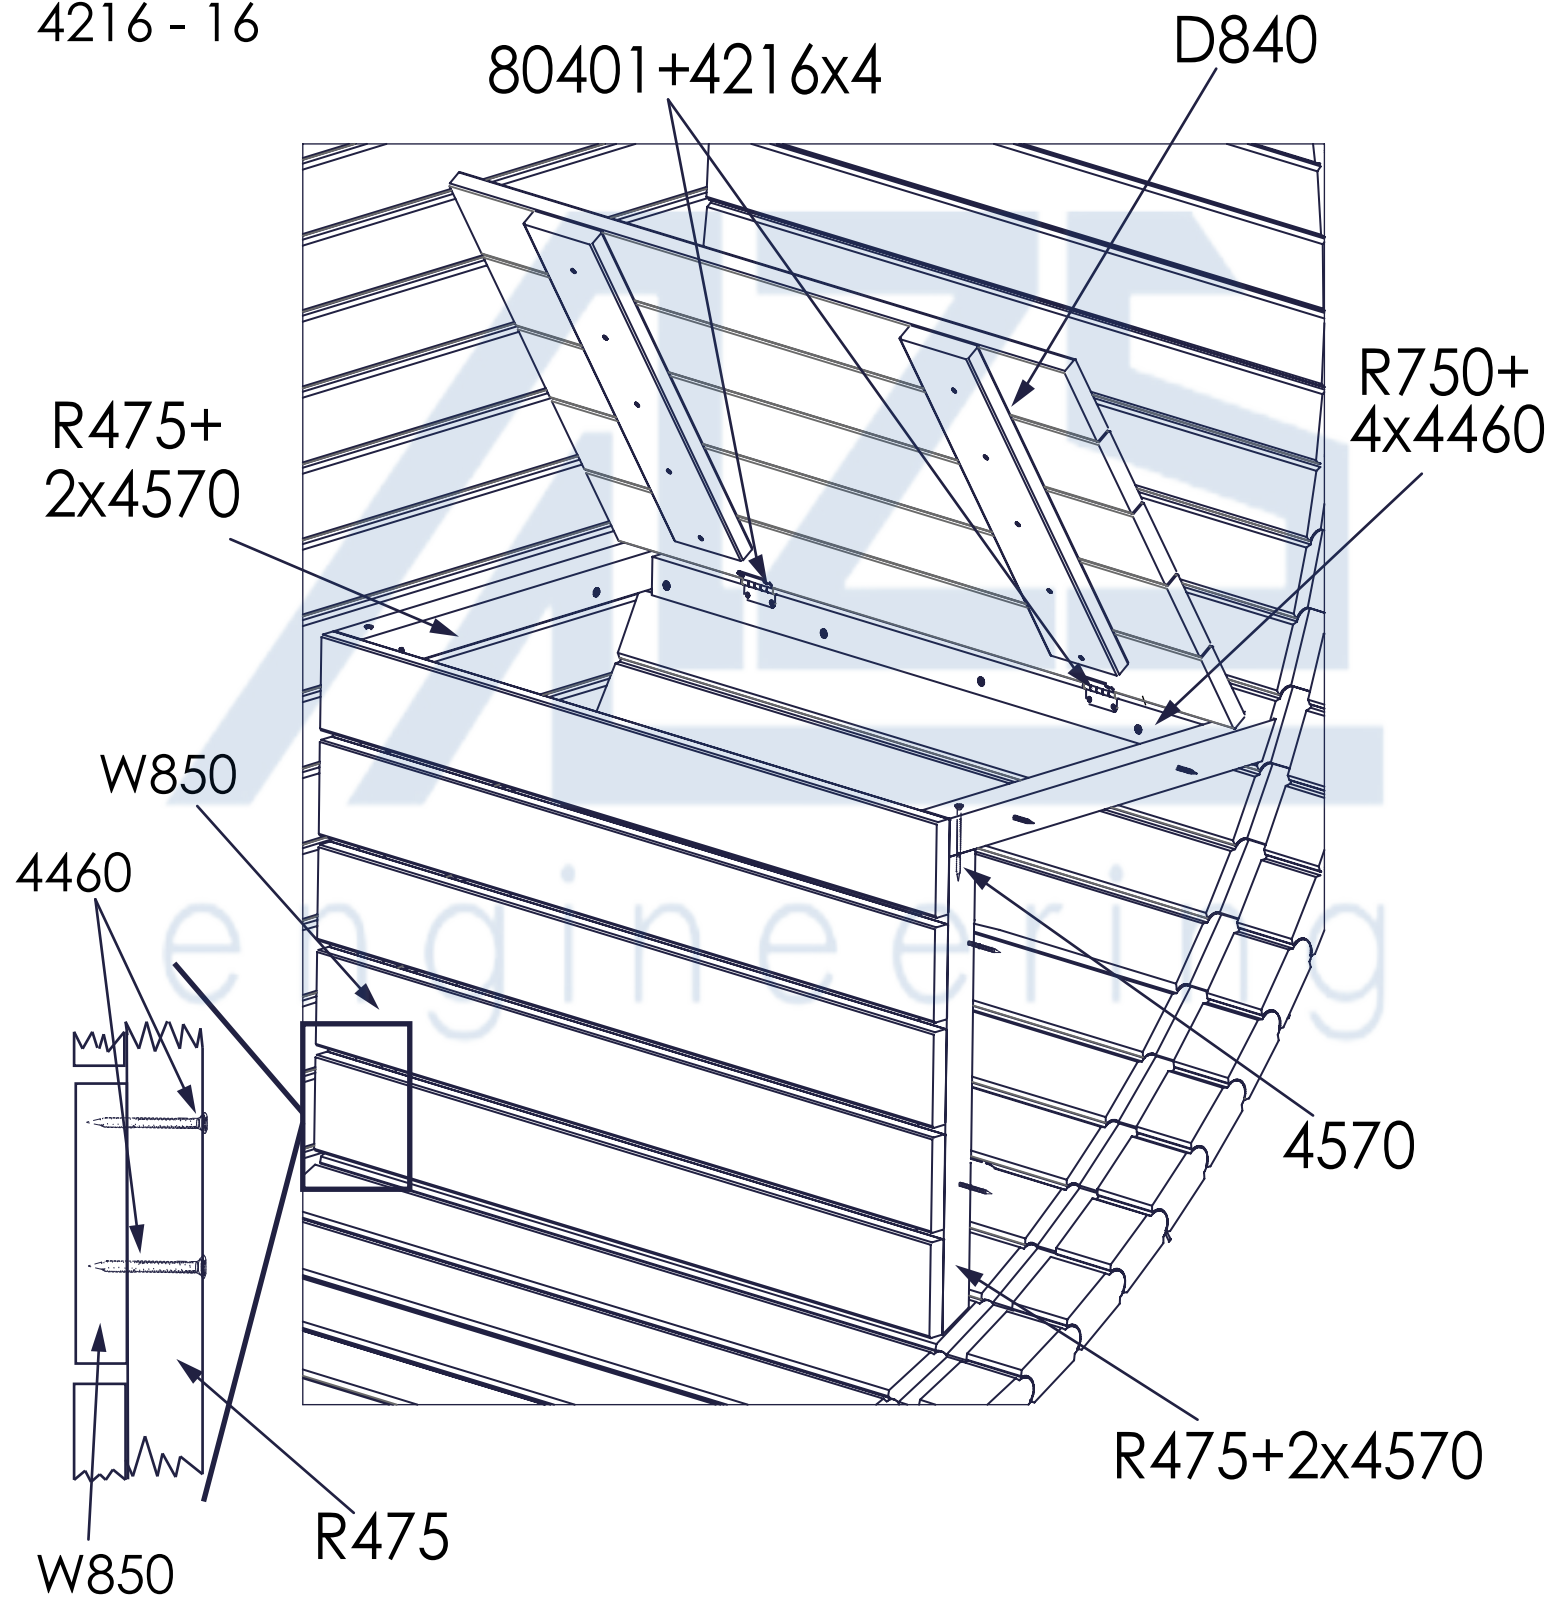


Q2 - 1
4216 - 8

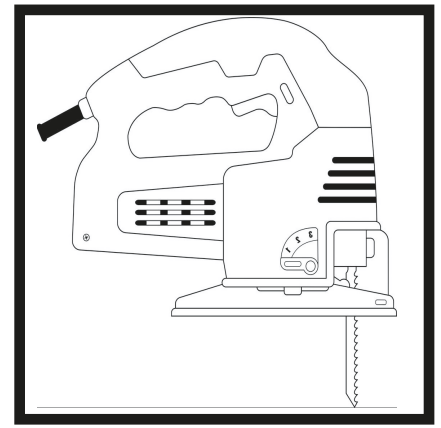






pipe hole

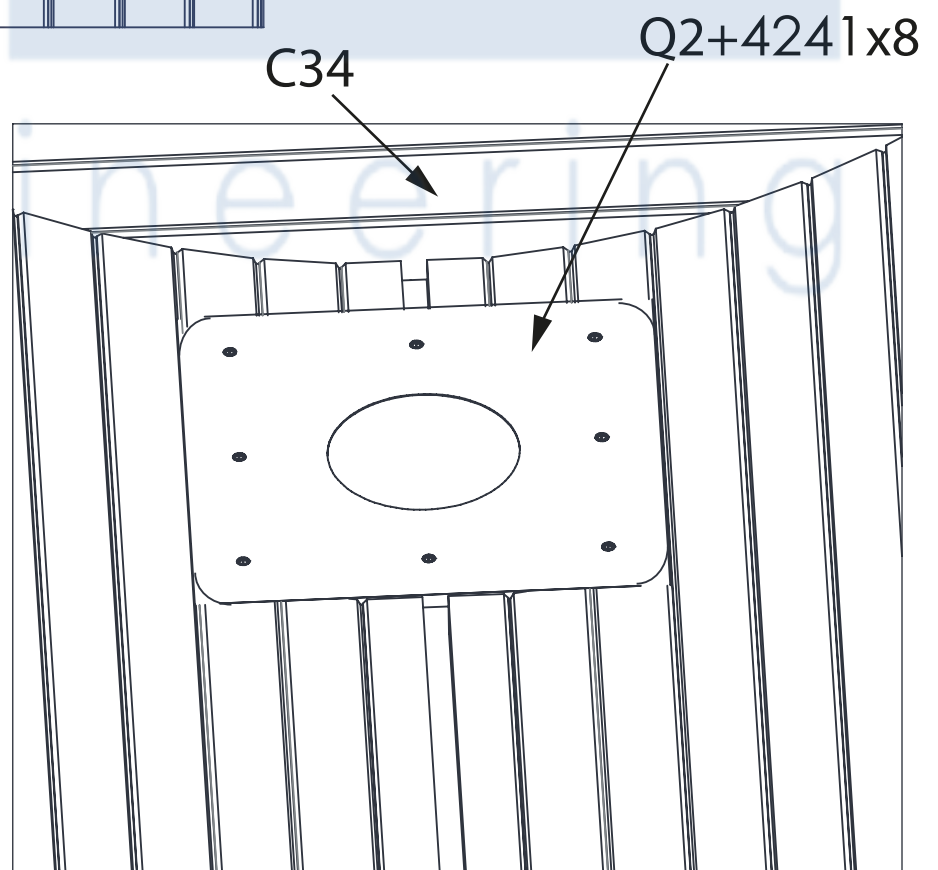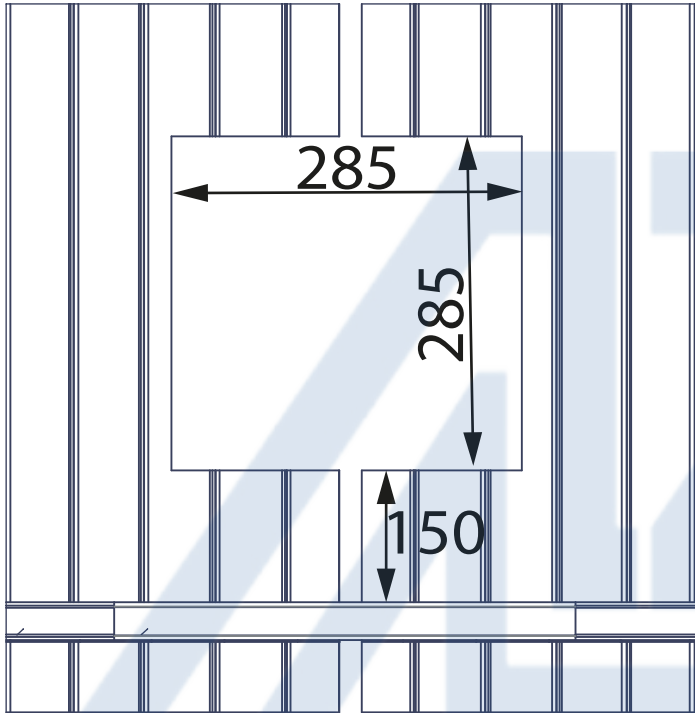




ONLY FOR G1!

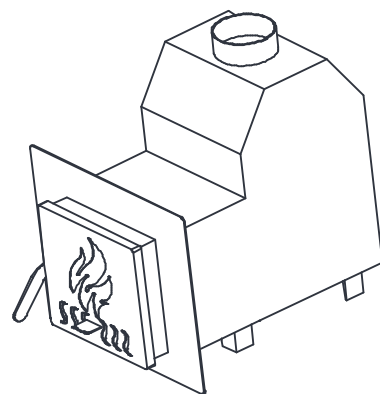






P1800

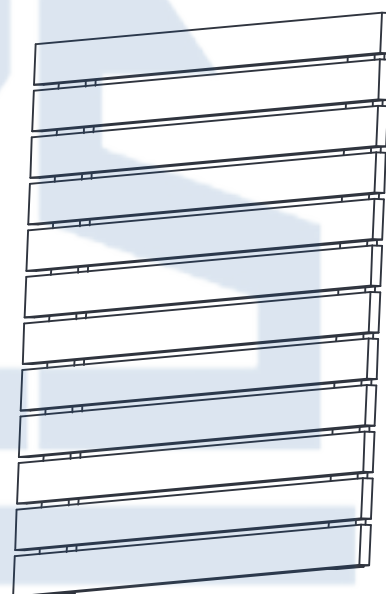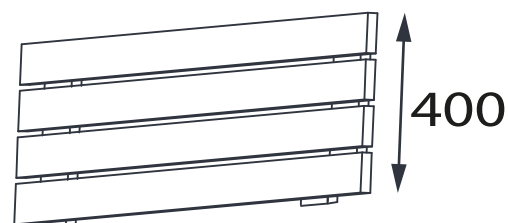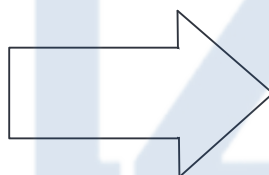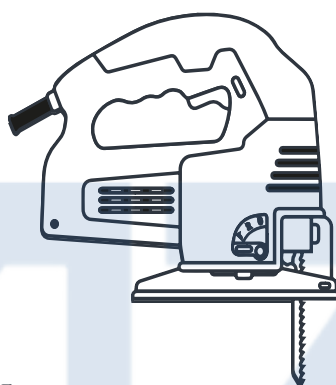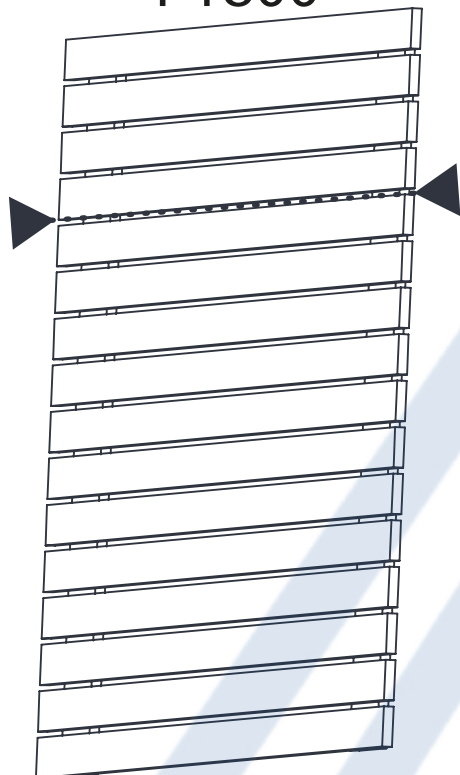

R400 - 2
4570 - 6

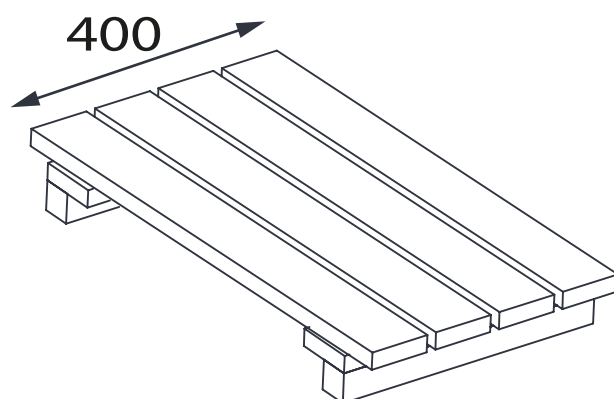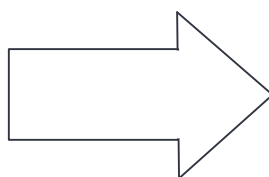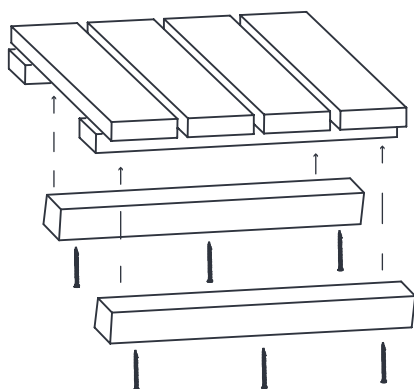


STOVE INSTALLATION

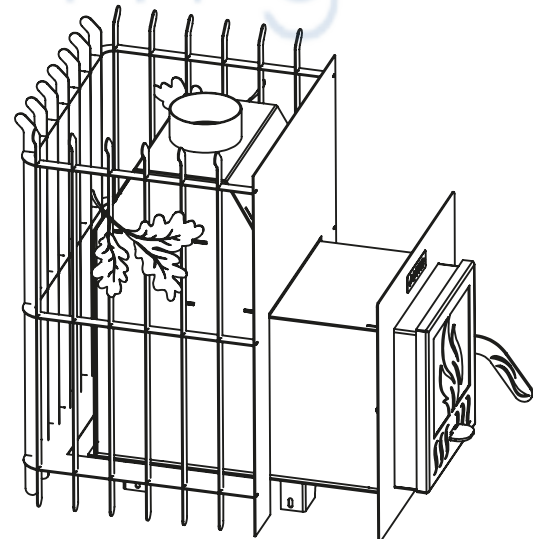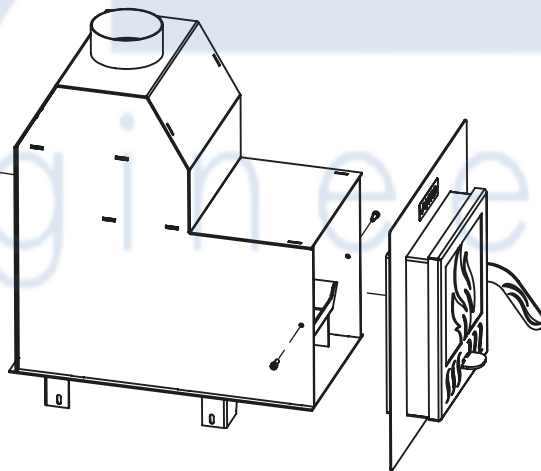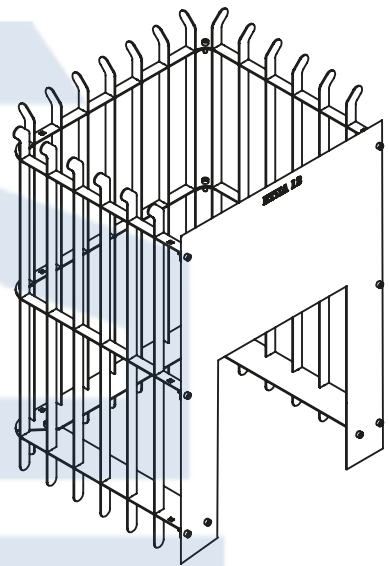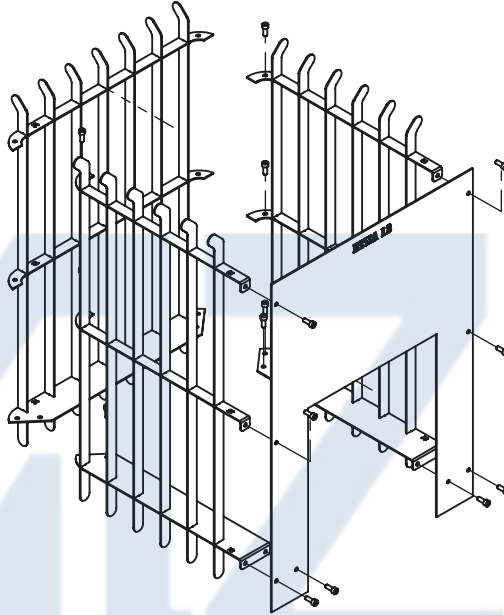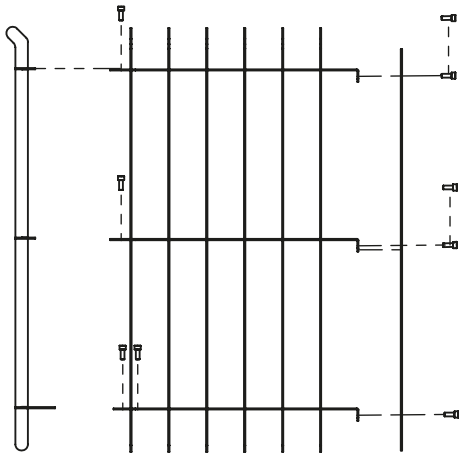



inside view

G1 - 1 | Q3 - 1
G2 - 1 | 4216 - 22
G4 - 1 |

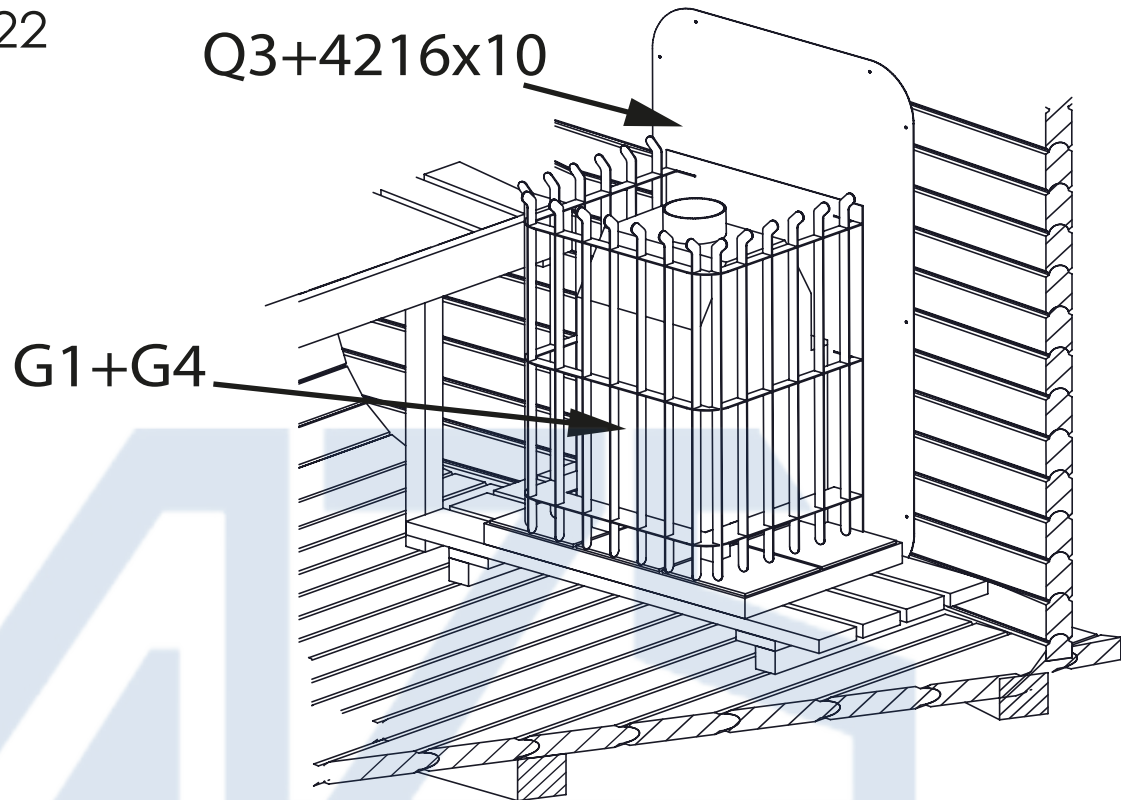


outside view


Q4 - 1
4216 - 12

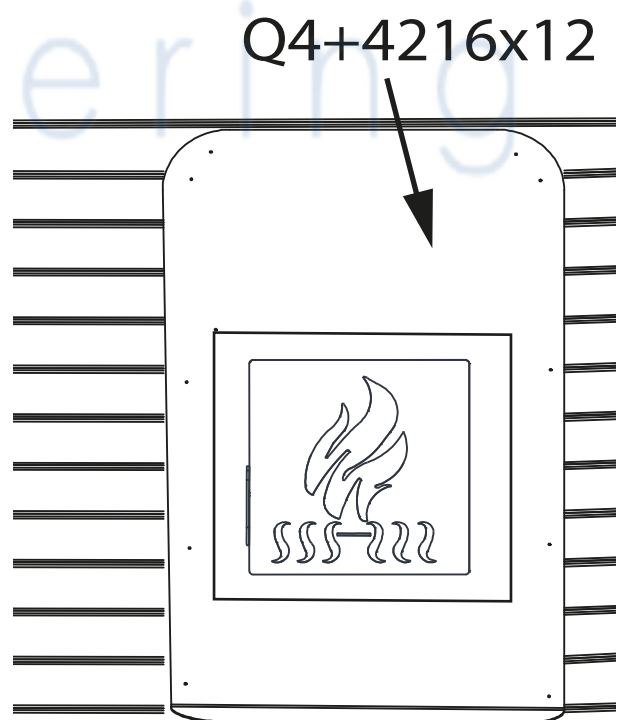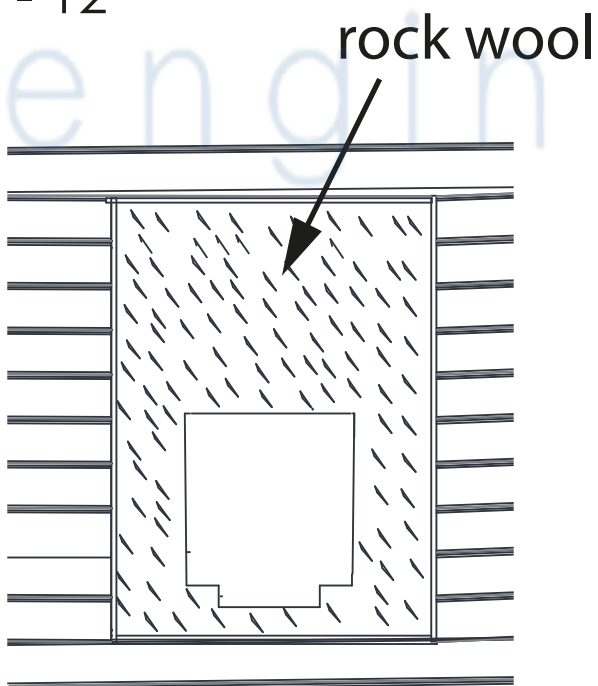

G6 - 1
G7 - 1
G12 - 1
G13 - 1

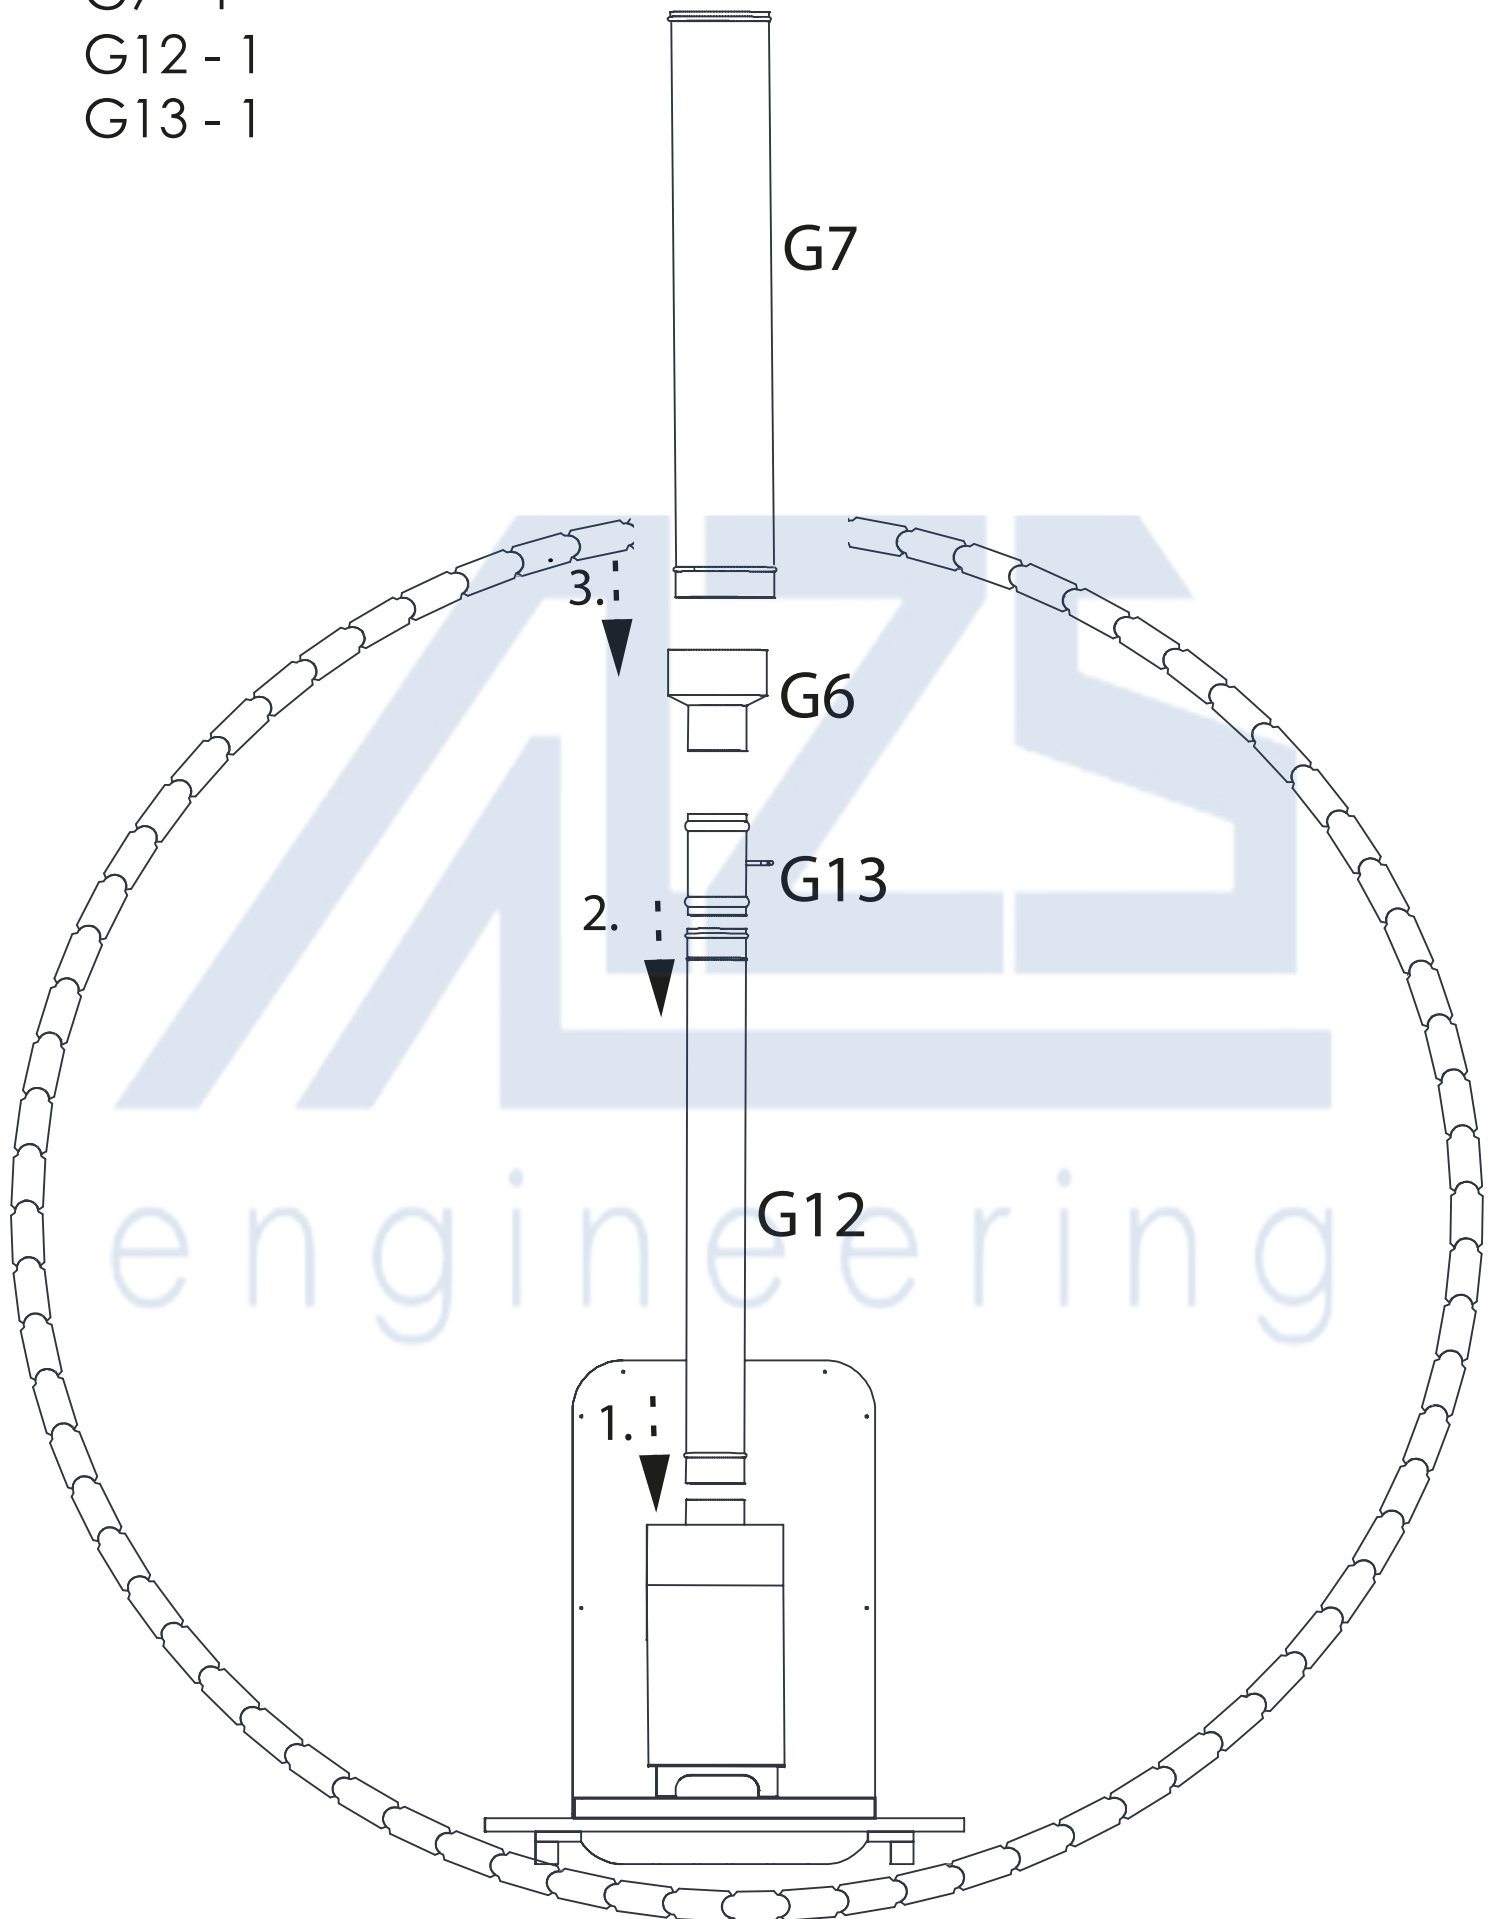


SET3


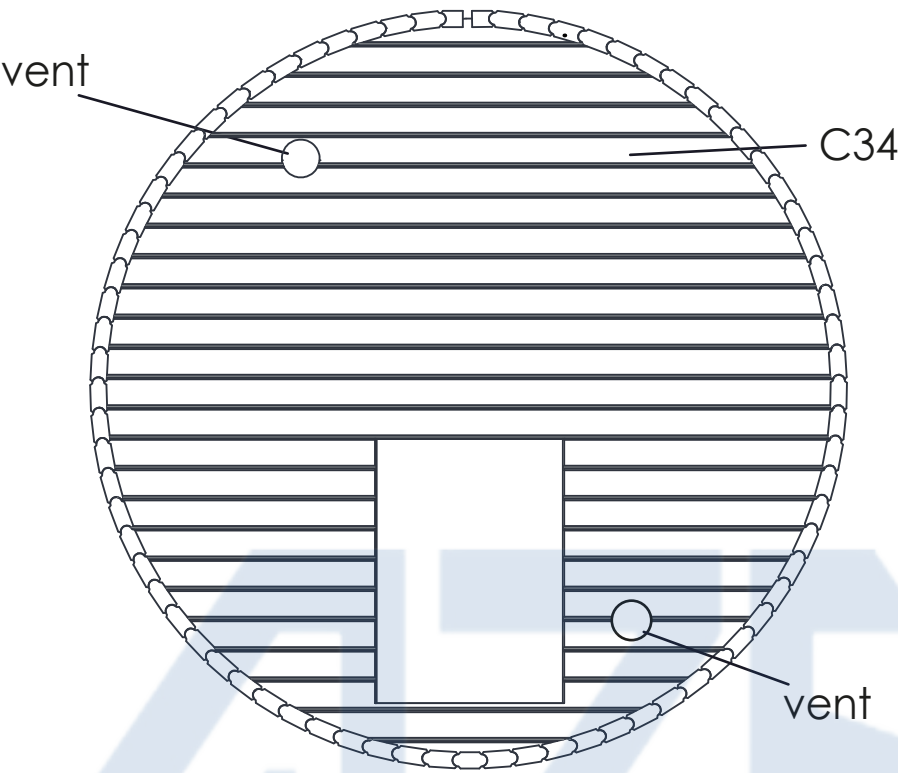


IN

OUT

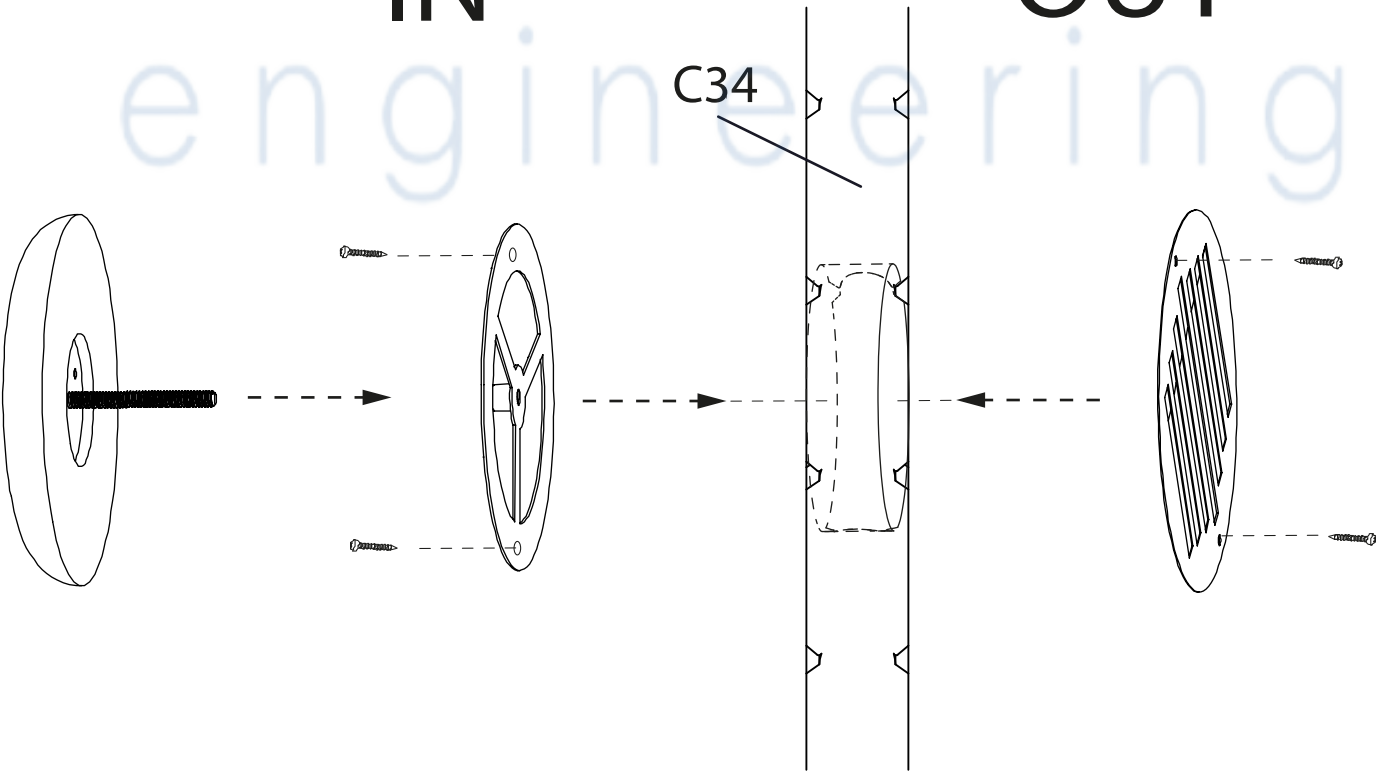


W1850 - 1
W800 - 1
W80 - 4
4345 - 22

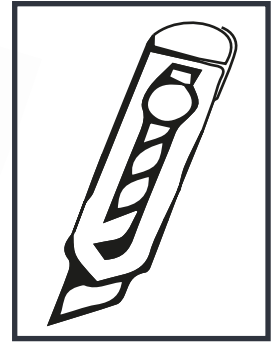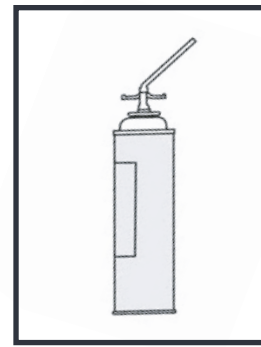


ROOF (inside view)

W850+4345x6


W1850+4345x8

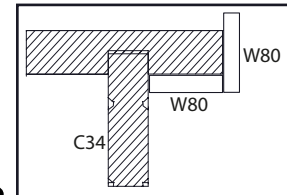



W80x2+
+4345x4

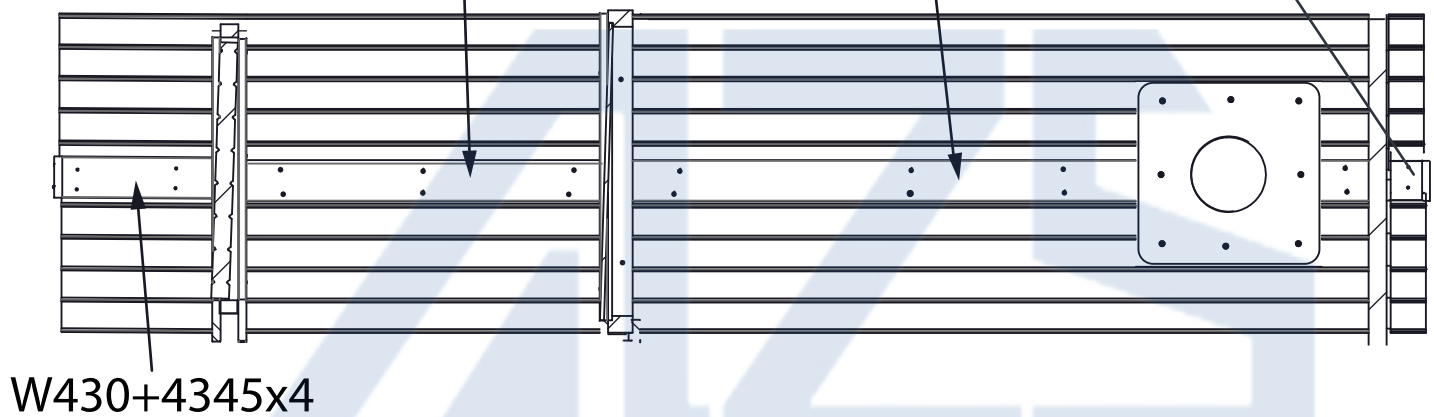

rock wool



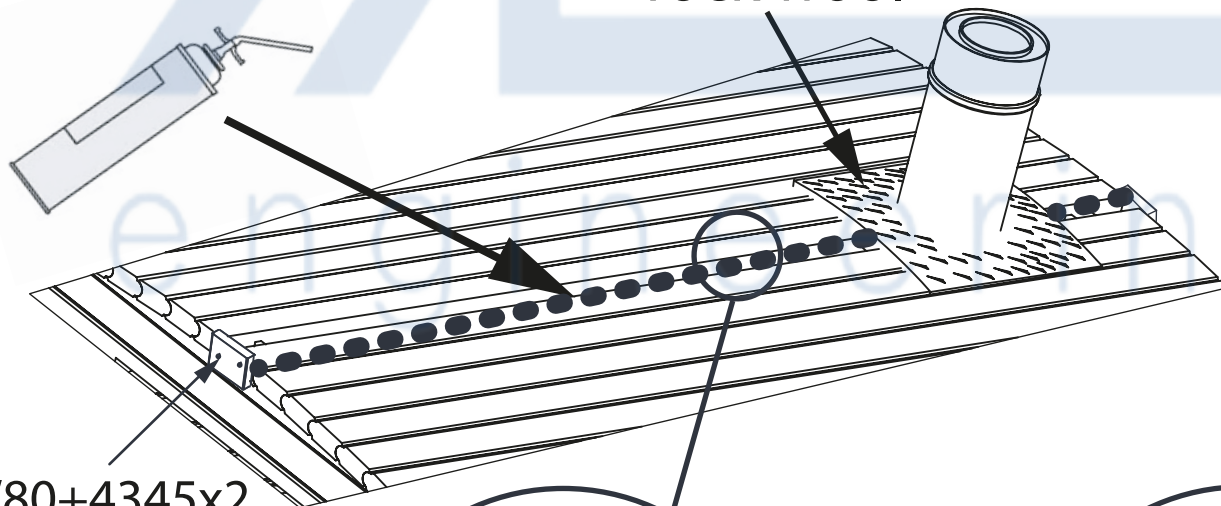


W80+4345x2


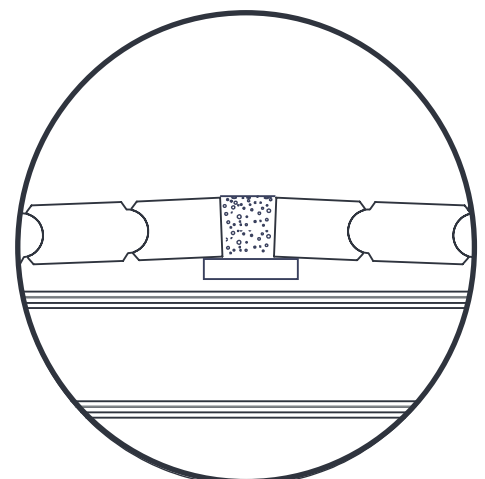
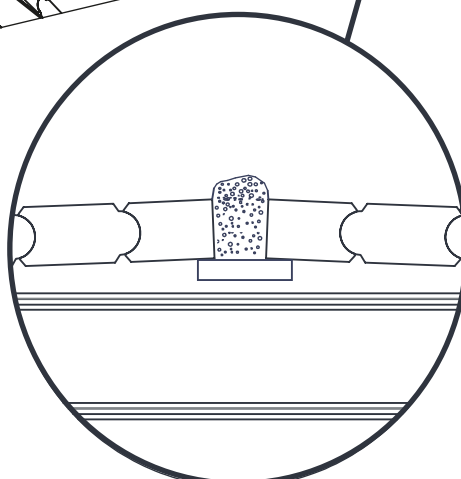


DG1800 - 1
4570 - 8
J- 8

DOOR INSTALATION outside view

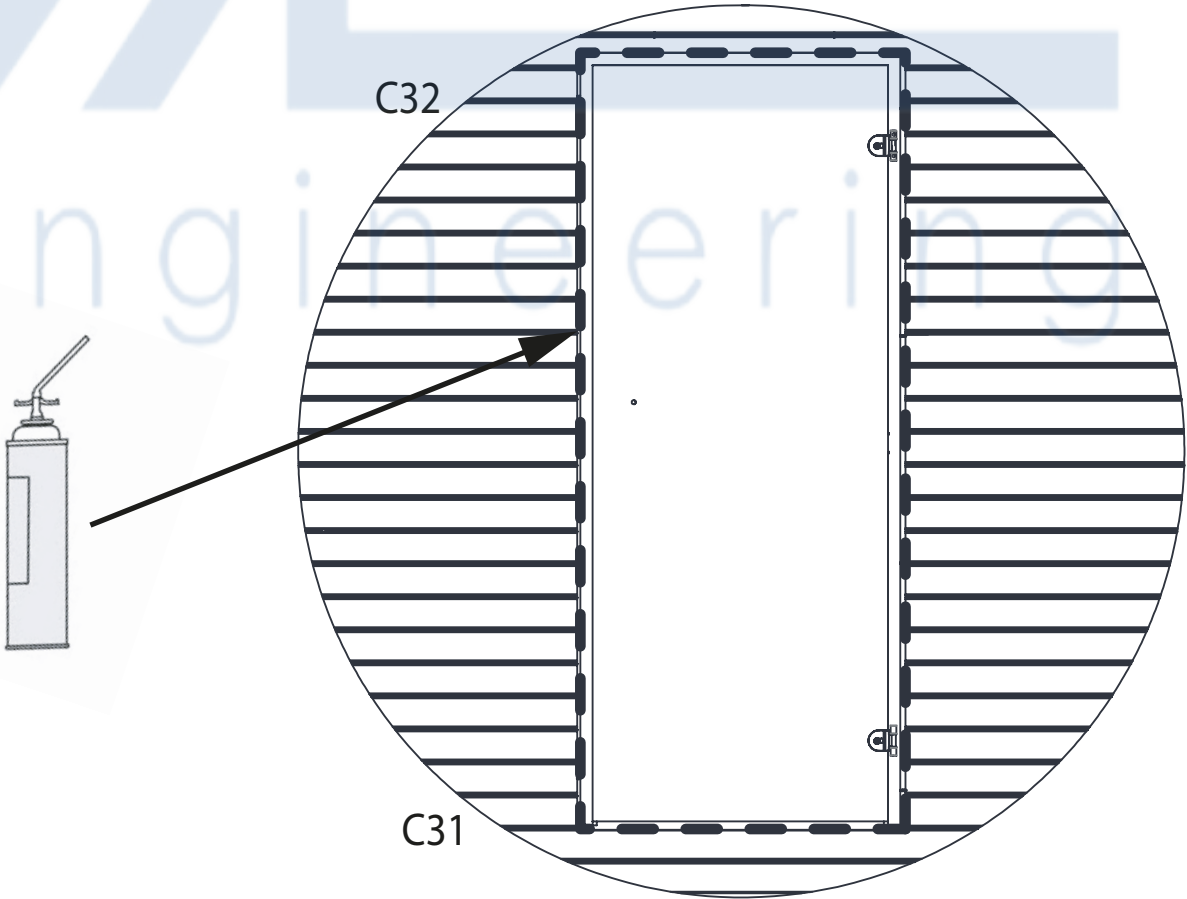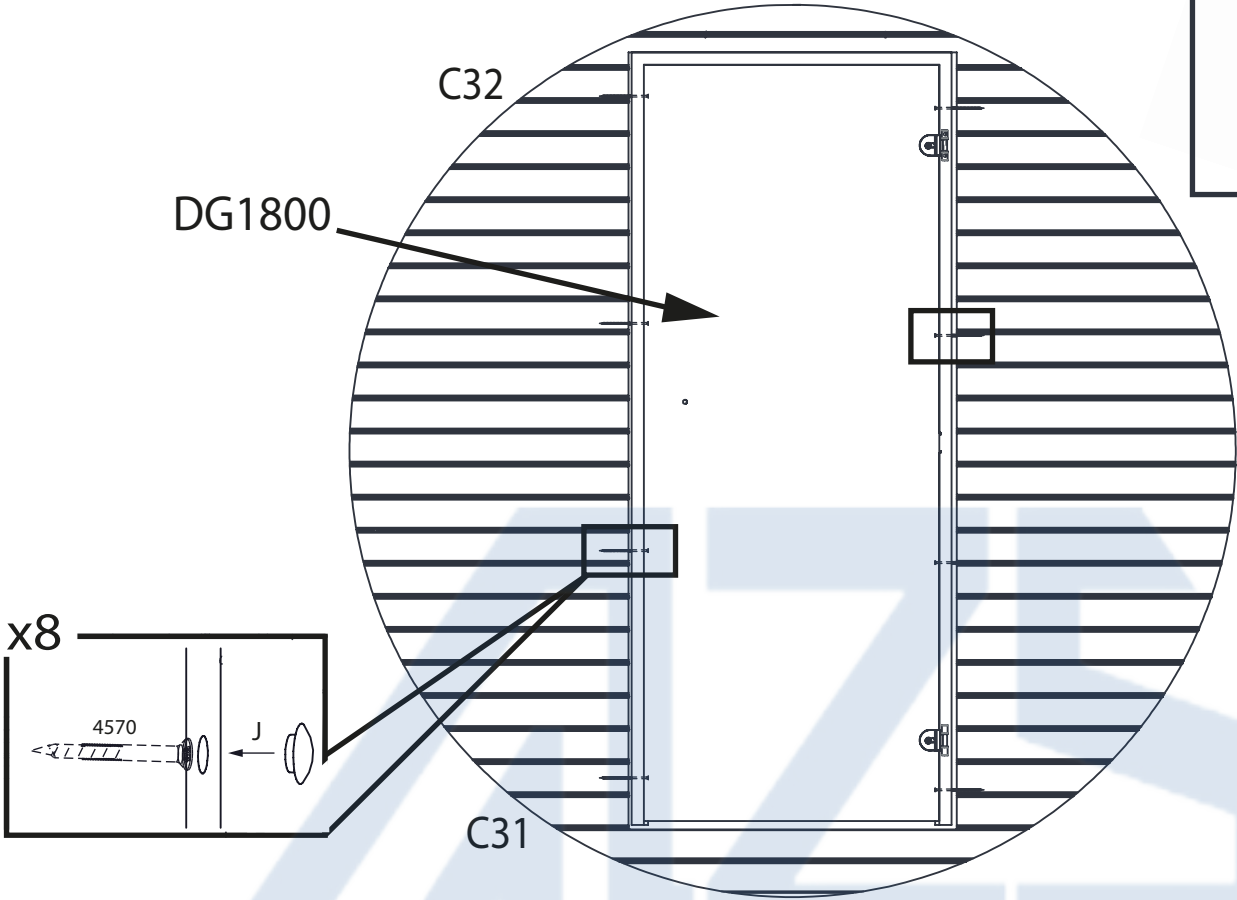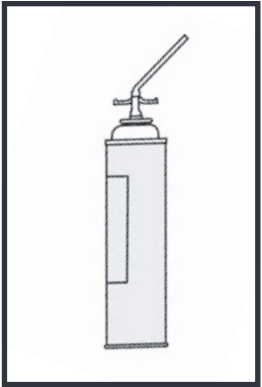


W1800 - 2
W840 - 1
4345- 16

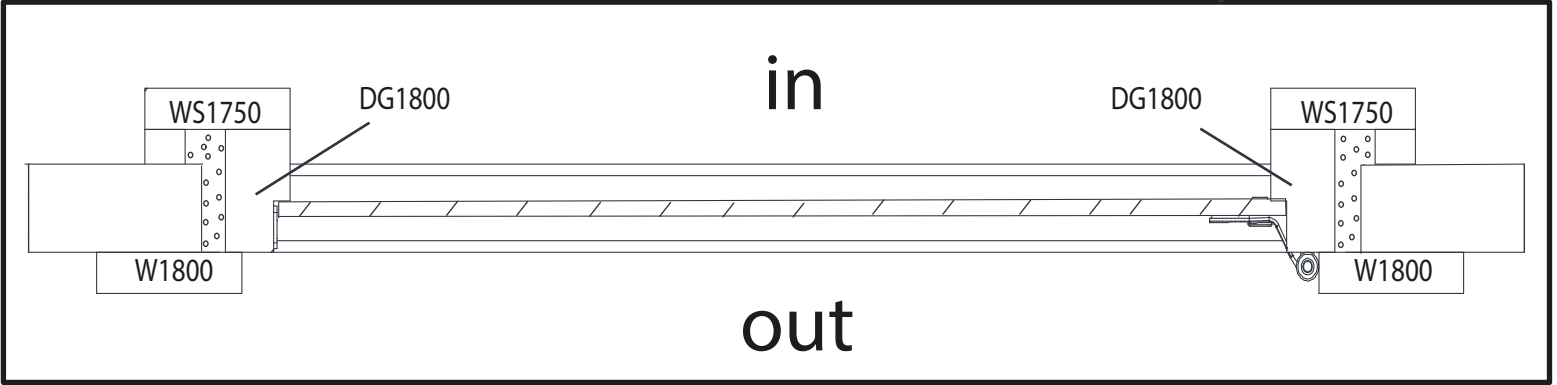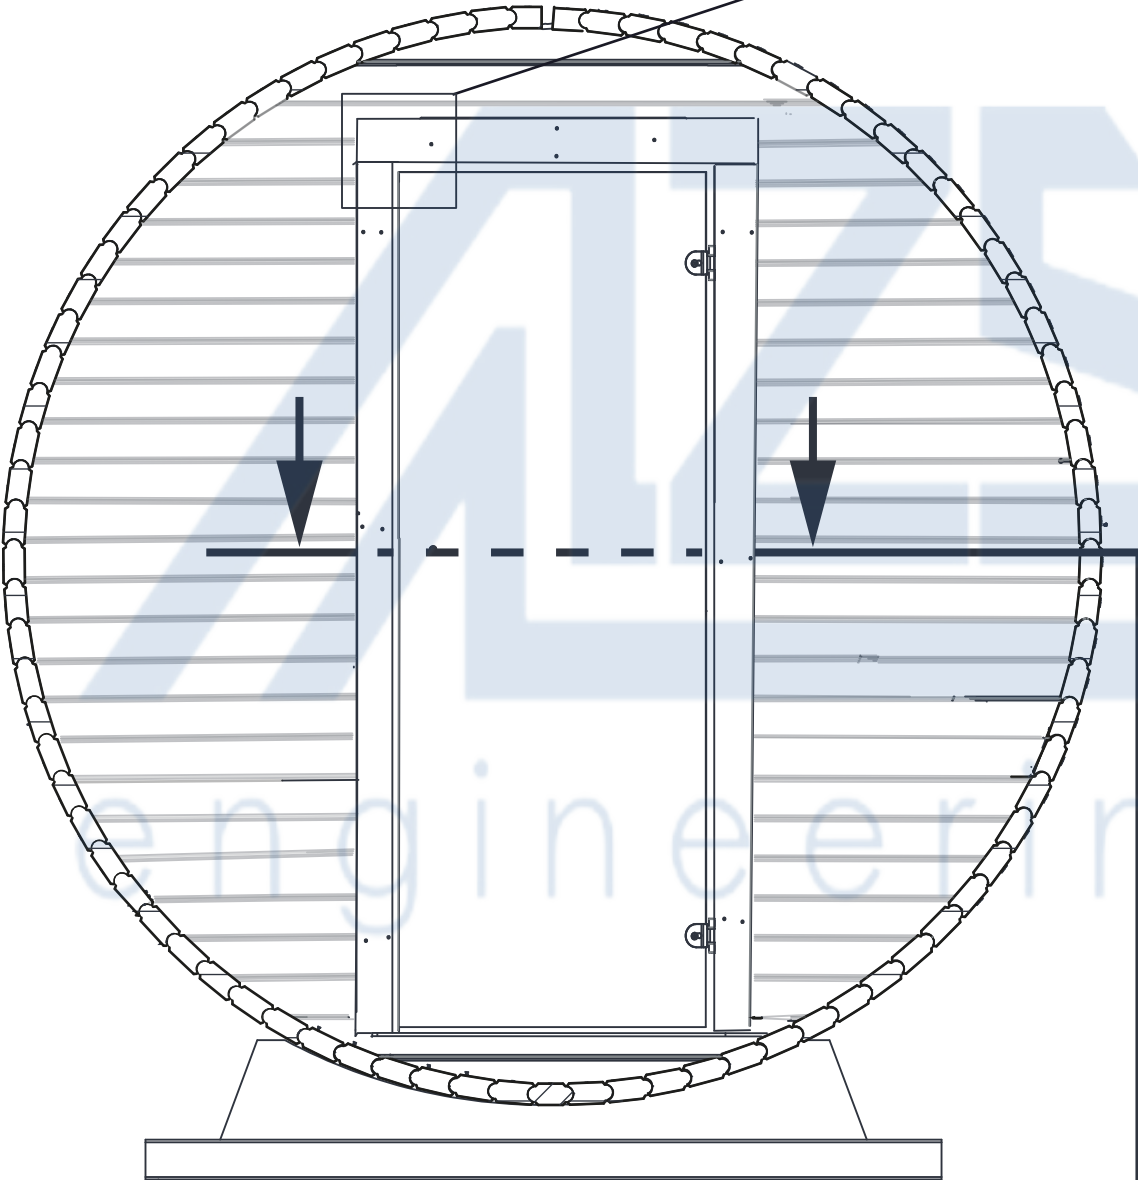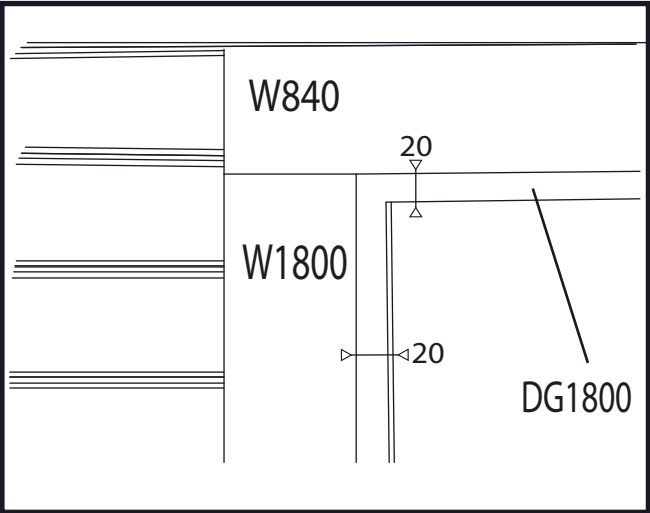


W800 - 1
WS1750 - 2
SET2 - 1
4345- 16

DOOR INSTALLATION inside view

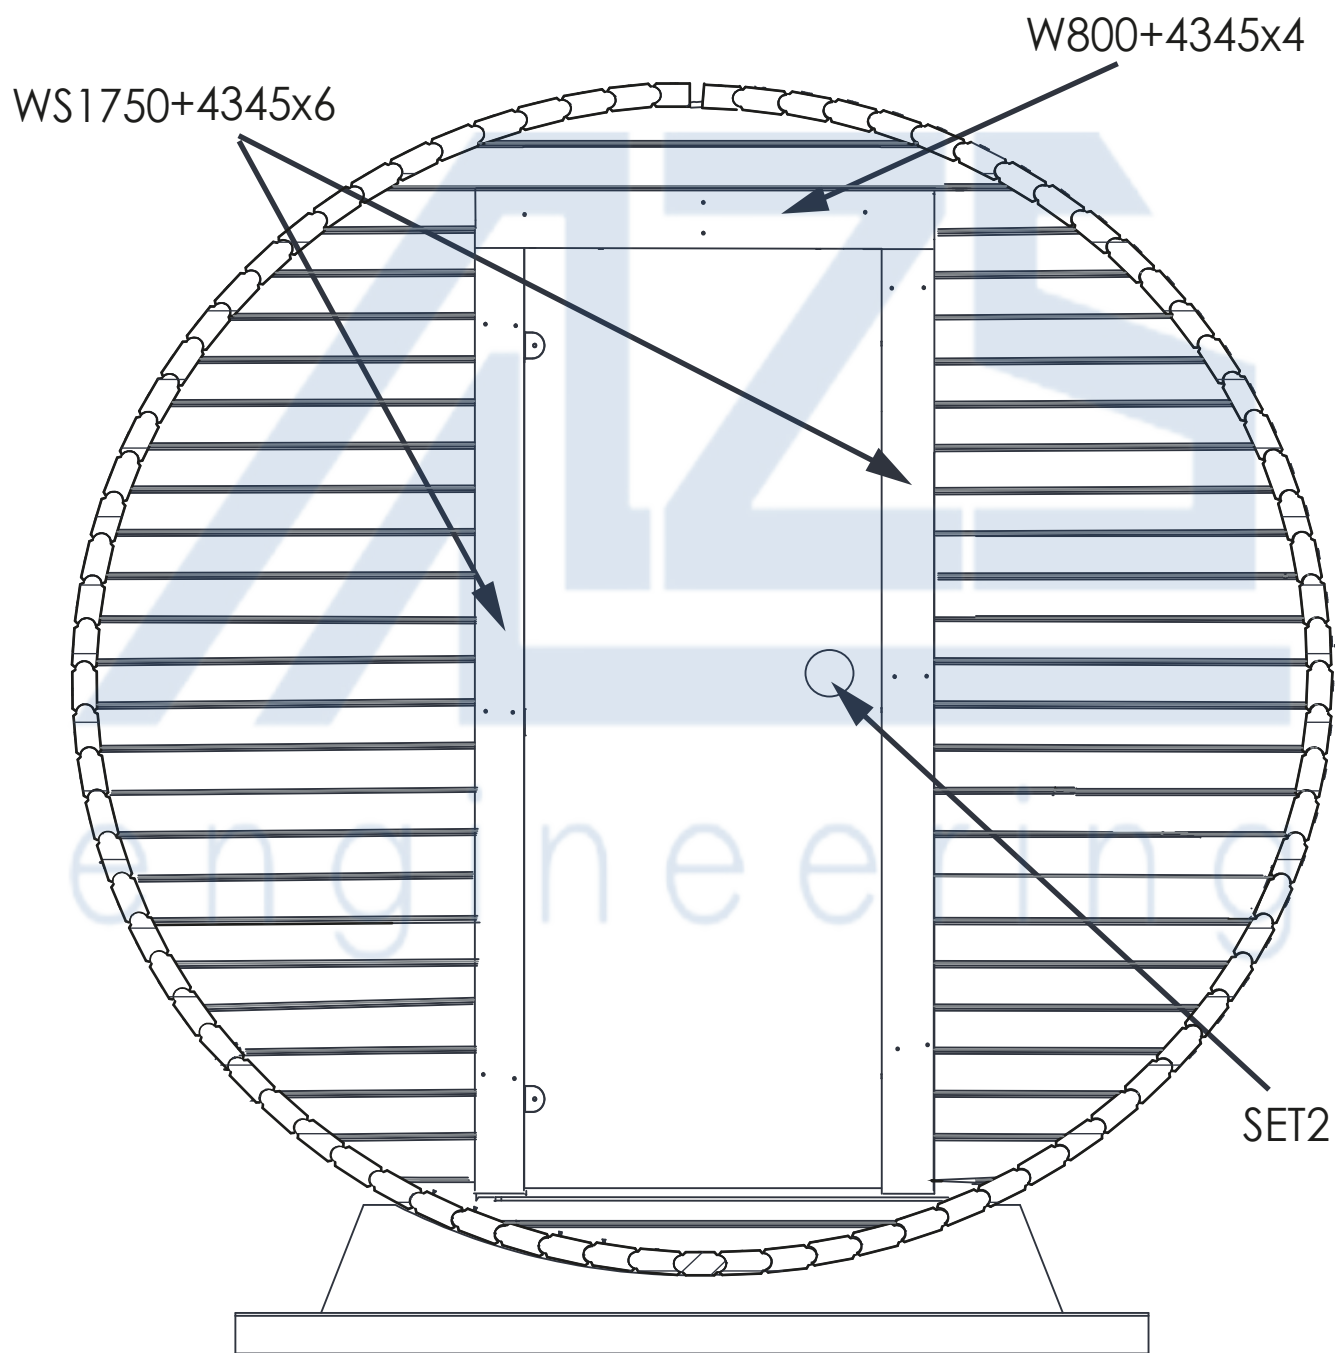


SET 2

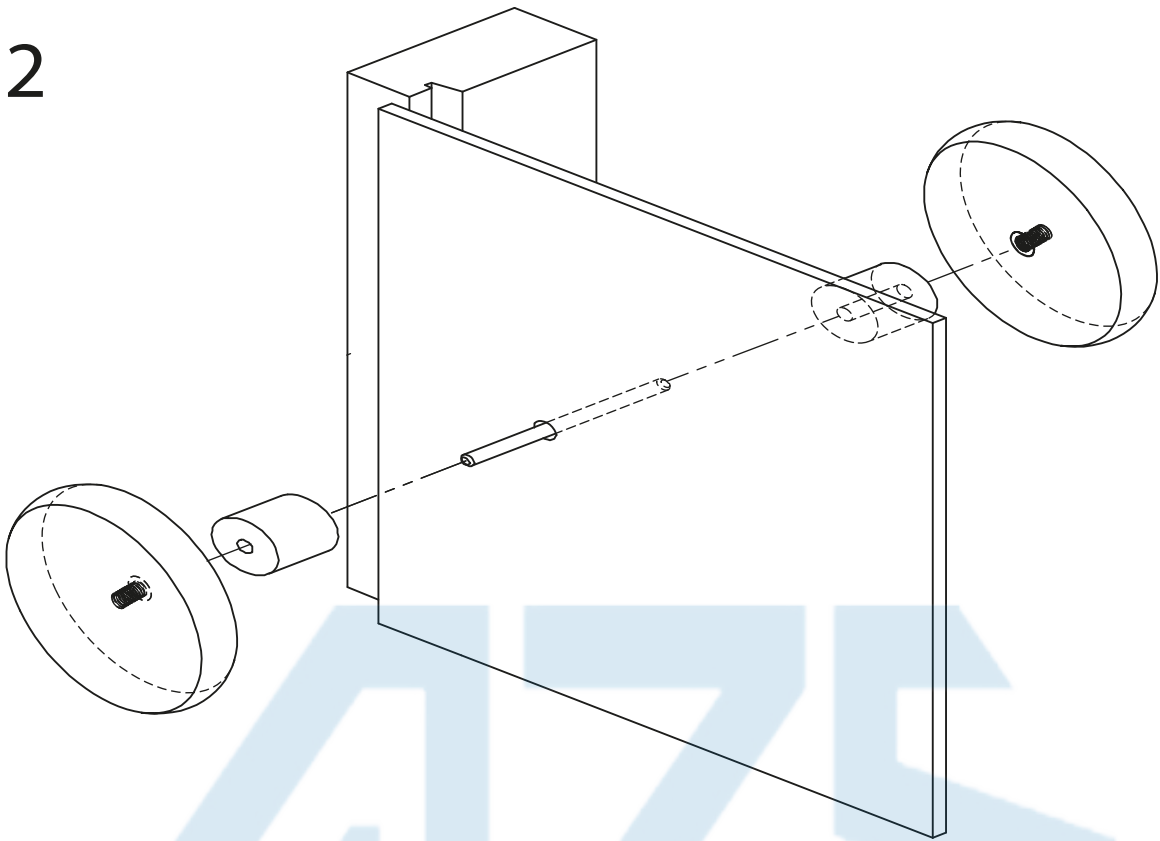


DG1800

DOOR LOCK

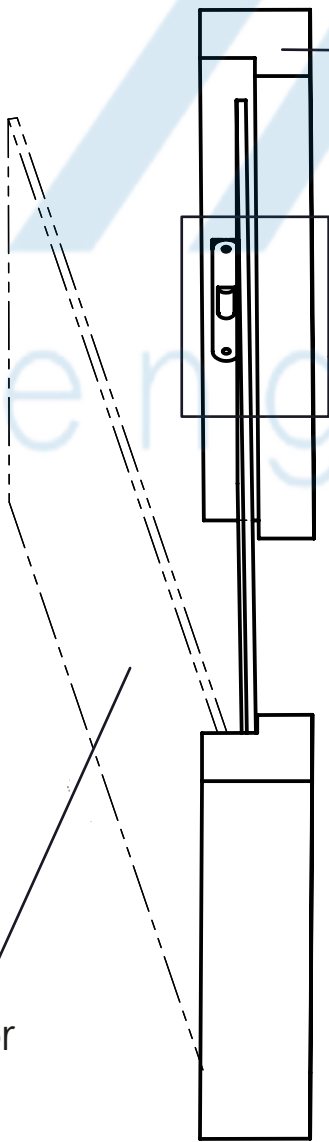

door


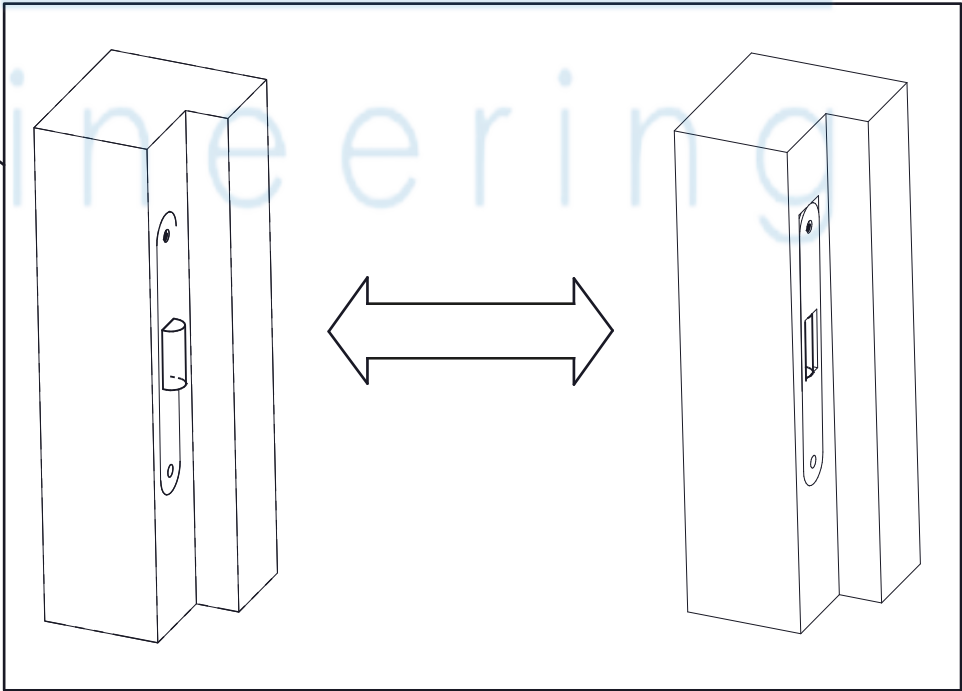


WS1675 - 4


4345 - 8

9325 - 527


E - 120

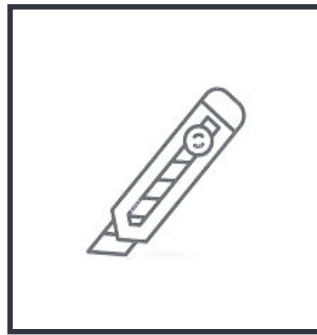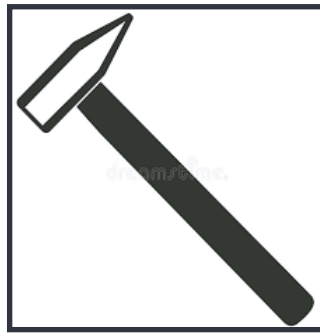

WS1675+4x4345

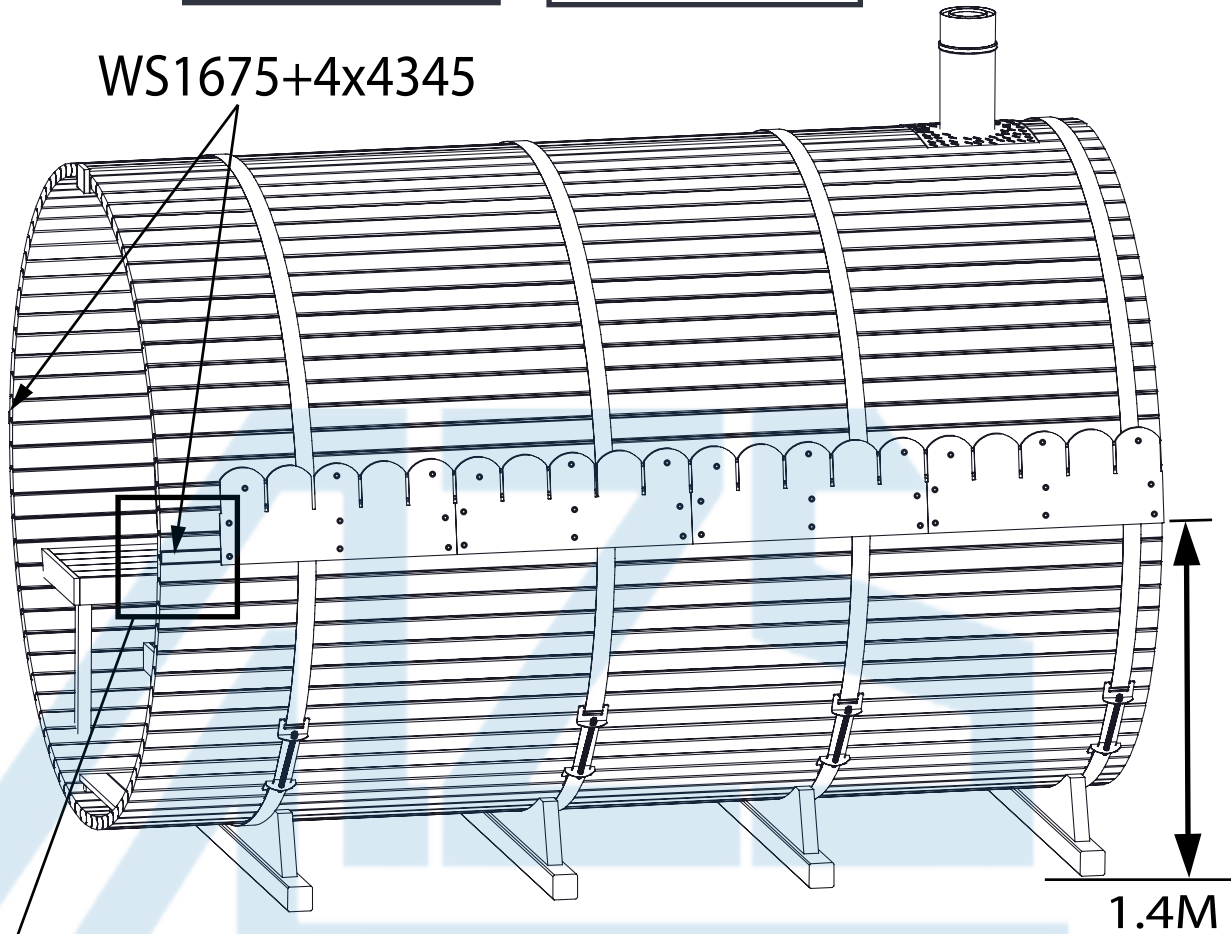


BL33

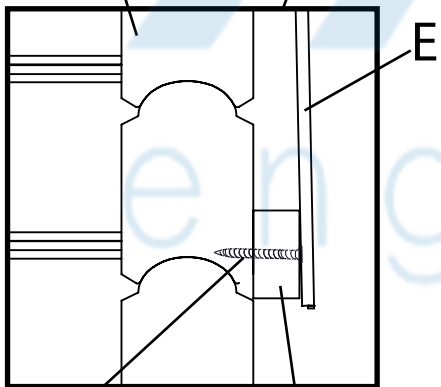

4345

WS1475

9325x6

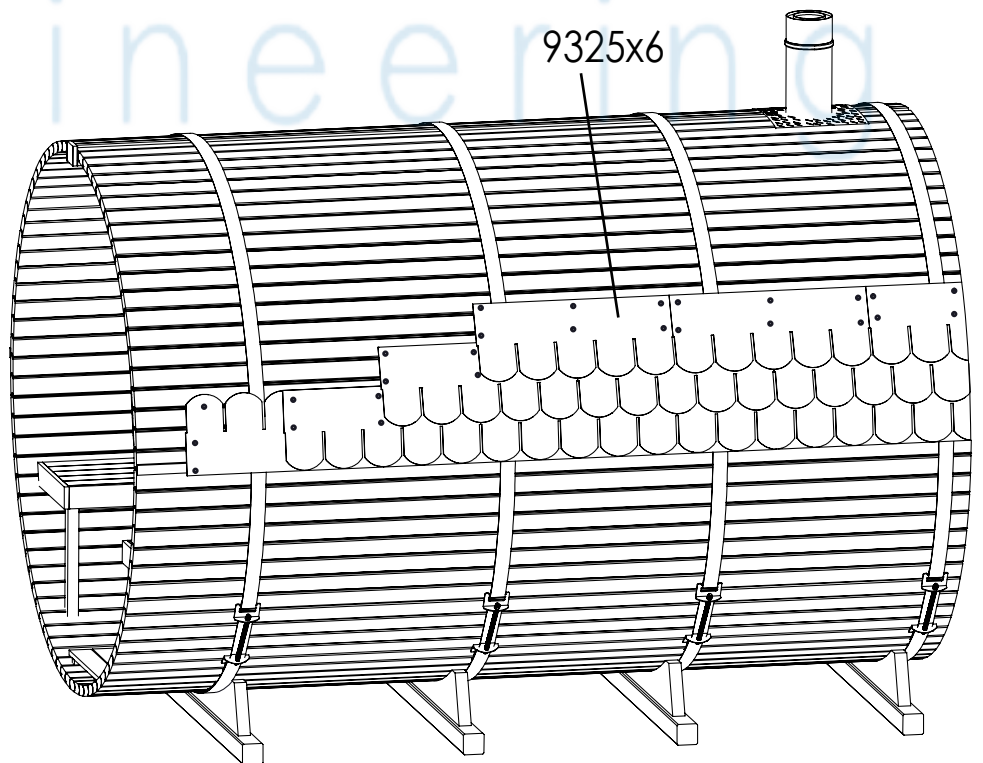

G8 - 1
G9 - 1
Q5 - 1
9325 -12

