



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Skoda Octavia III Kombi (2013-2016)




Skoda Octavia III Kombi (2016-2020)

O3K DR

SOLARRIDE Zastávka roštiny presvetkovane do Skoda Octavia III Kombi (2013-2020) DRZM 1kg



5 904035 793782 >

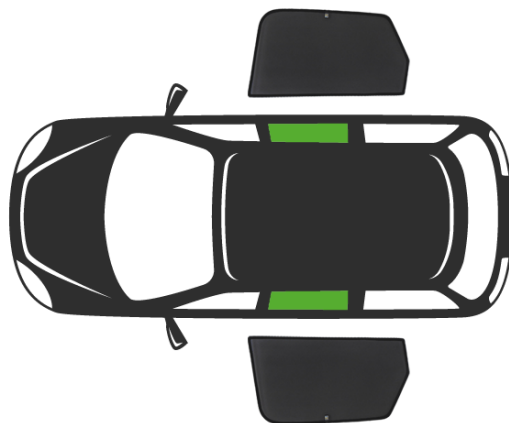

6 x



