



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



**Mercedes-Benz E-CLASS S210 Estate
(1996-2003)**


W210K DR

SOLARRIDE S210K DR / návod / οδηγος εγκαταστασης / Mercedes-Benz W210K E-Class Estate / 1996-2003 / 1kg

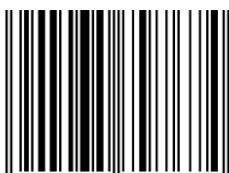


5 904035 797674 >


SOLARRIDE S210K DR / návod / οδηγος εγκαταστασης / Mercedes-Benz W210K E-Class Estate / 1996-2003 / 1kg

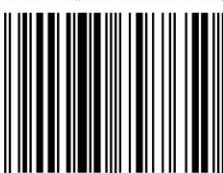


5 904035 797650 >

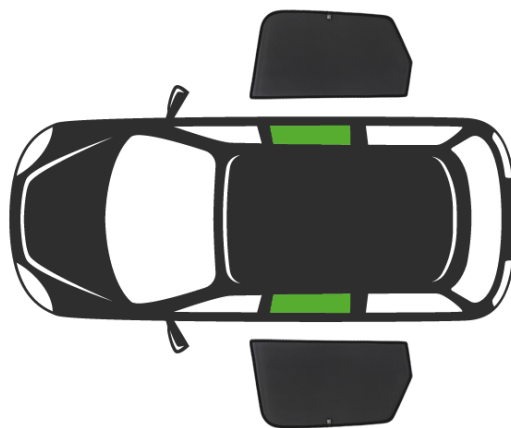

4 x

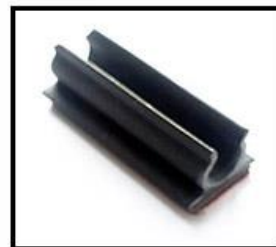

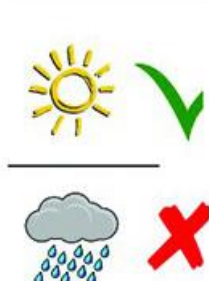

DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h