


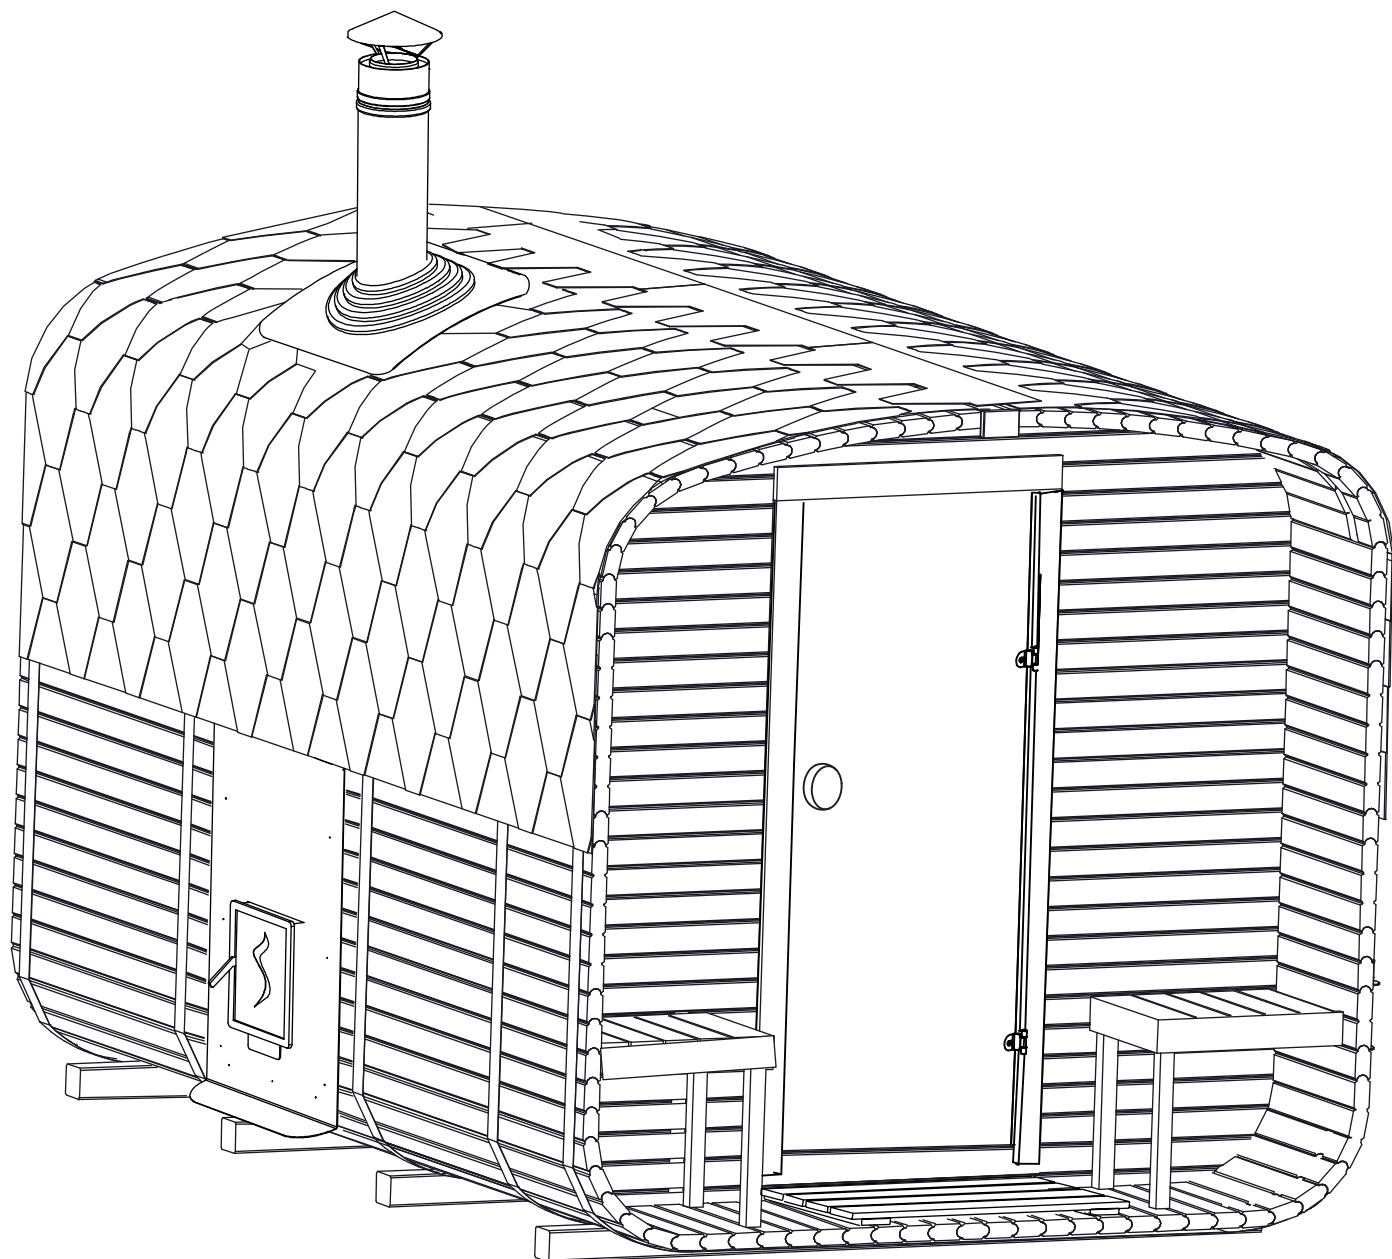
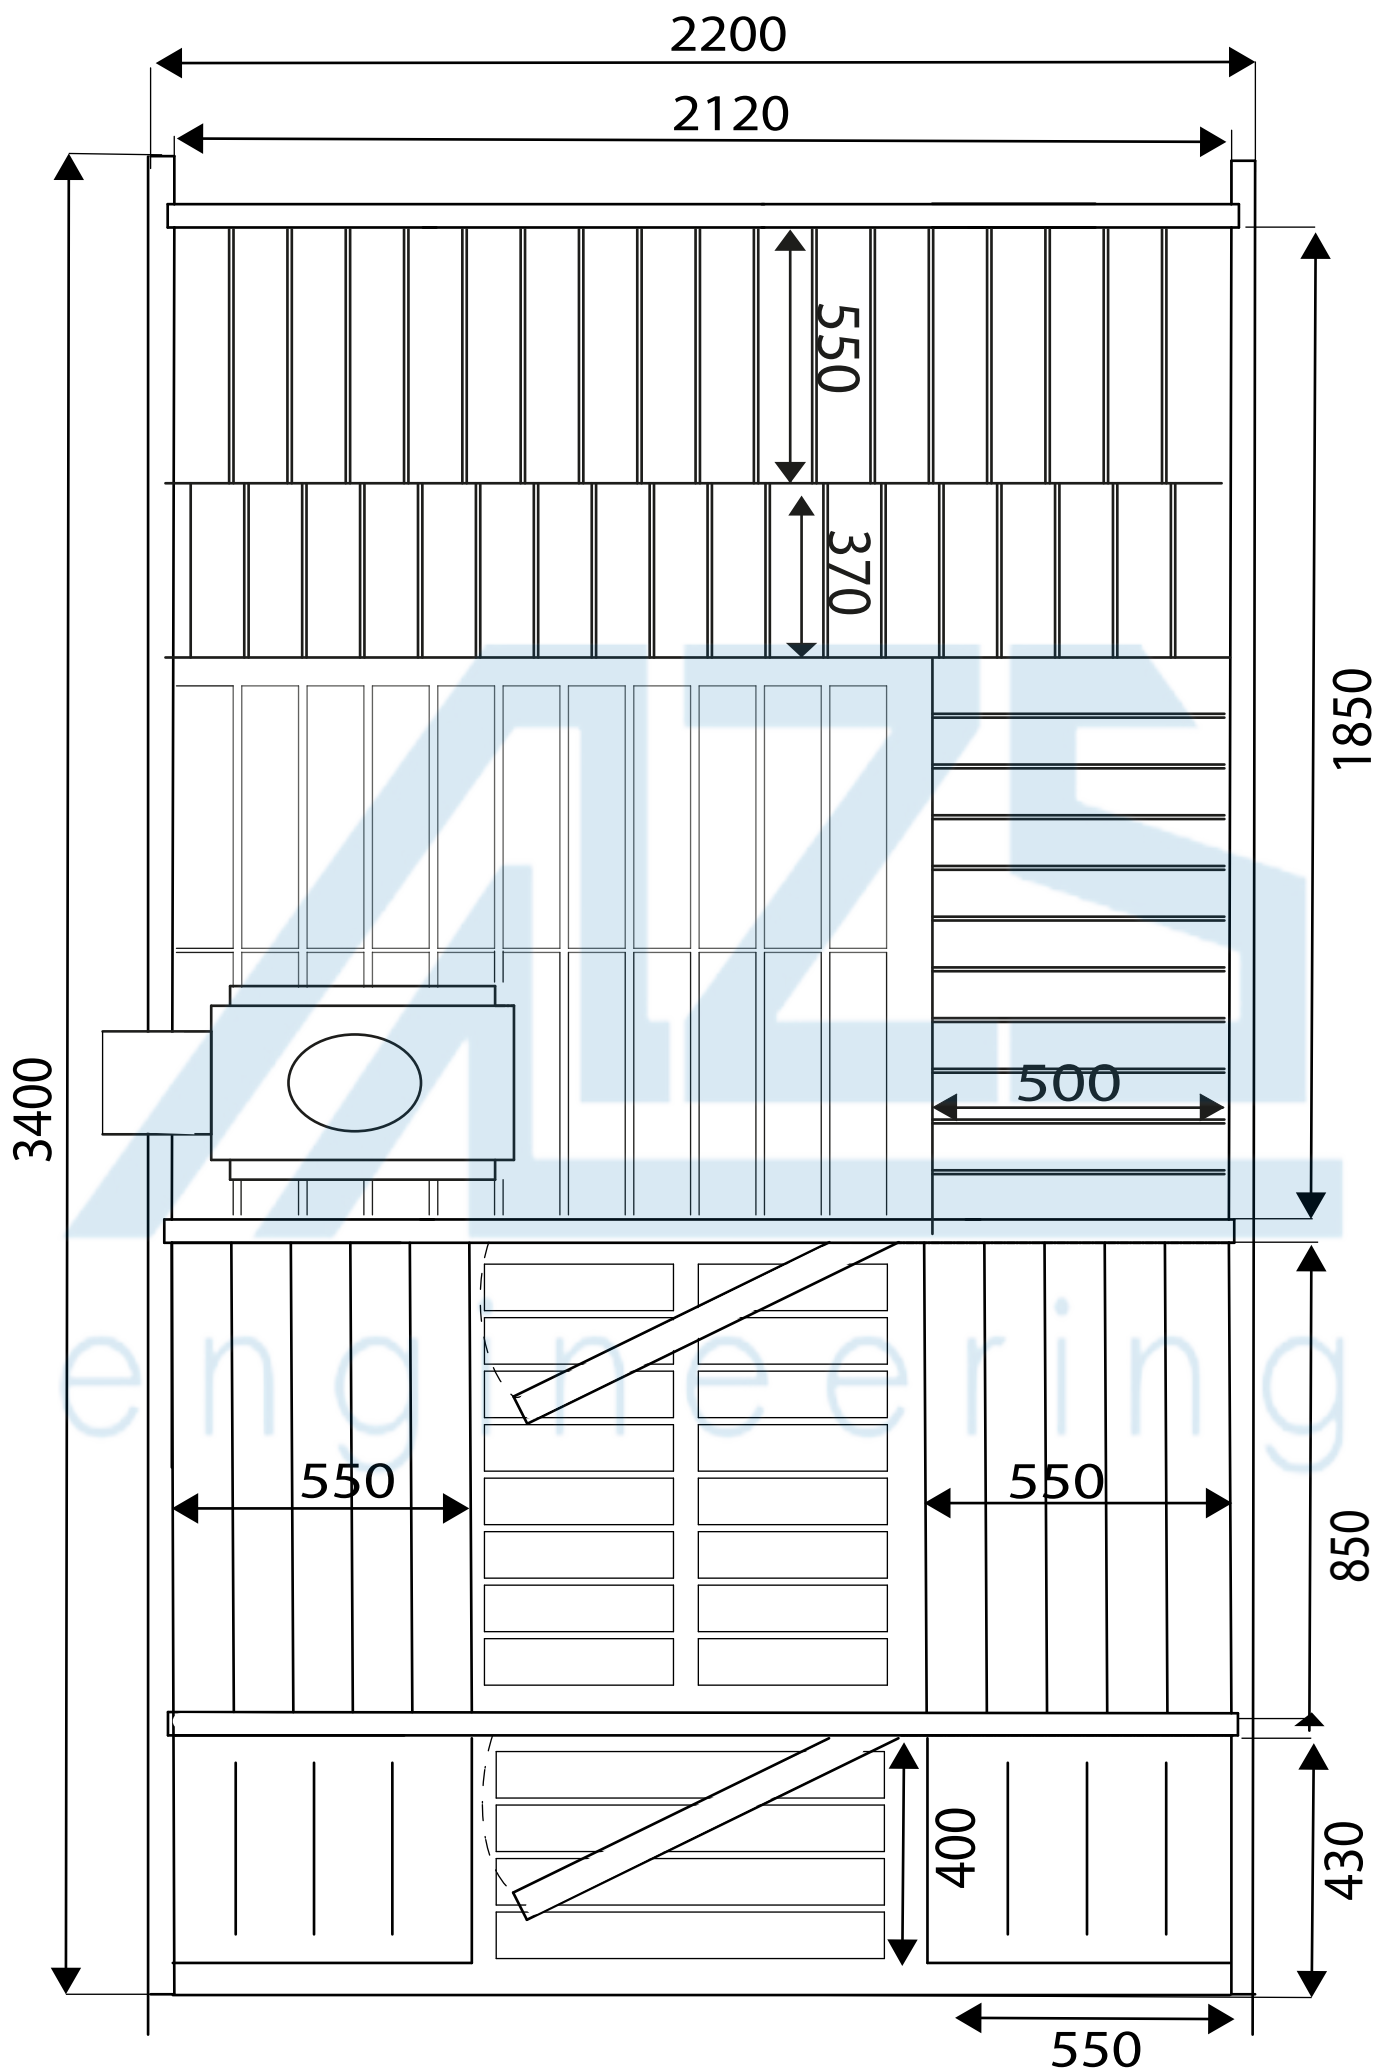
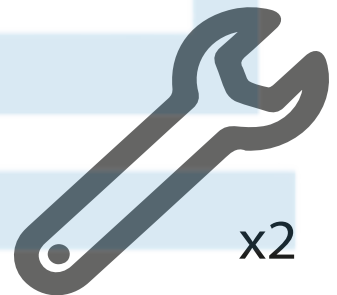
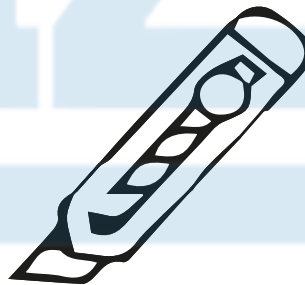
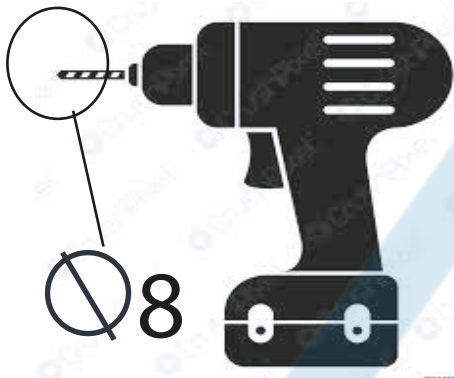


WOODDEN SQUARE SAUNA COMFORTPROM 3m WITH PORCH

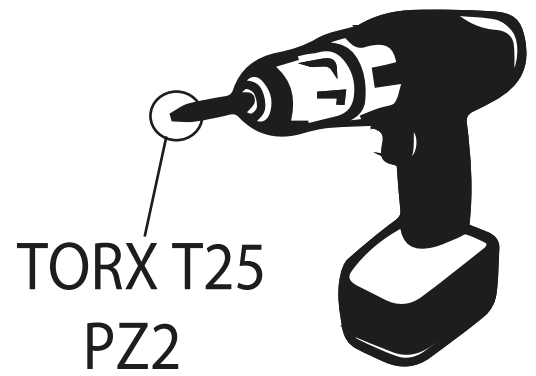


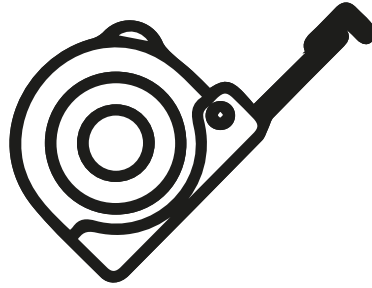

necessary tools

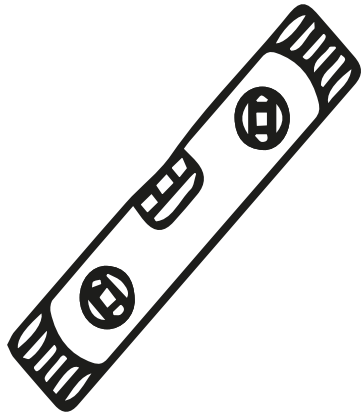


+

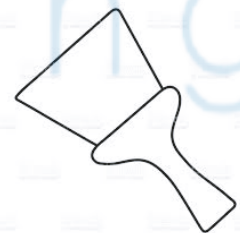


impregnation













+












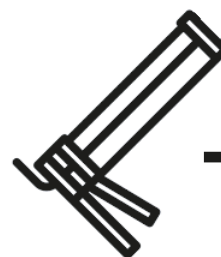








+

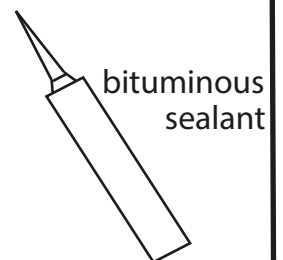


NOT INCLUDED!

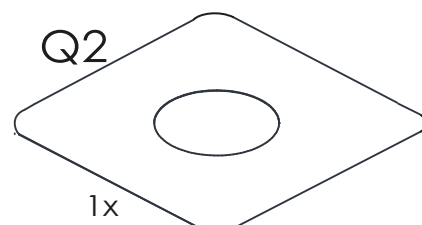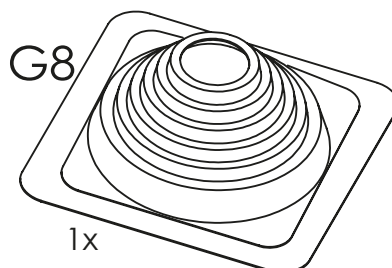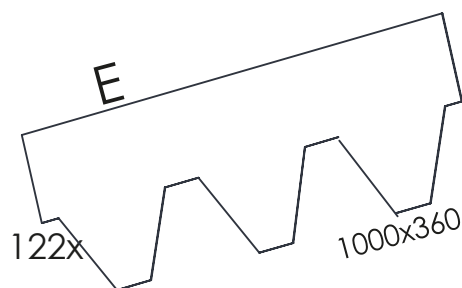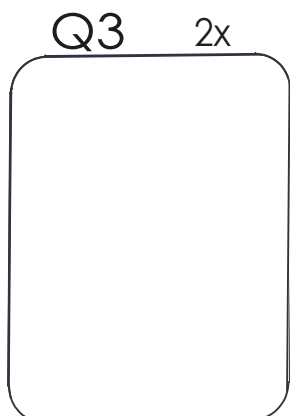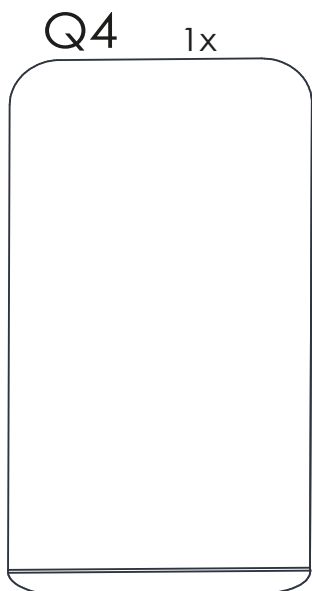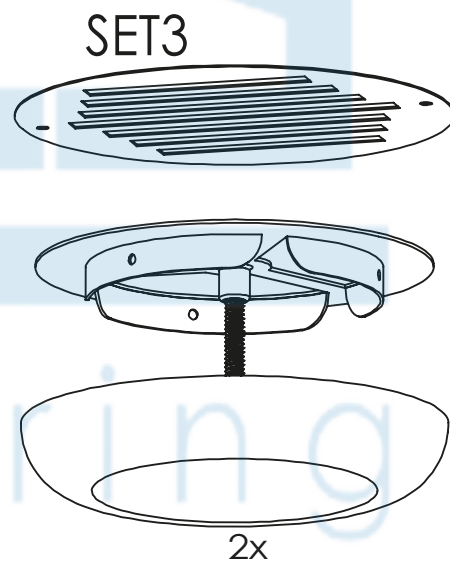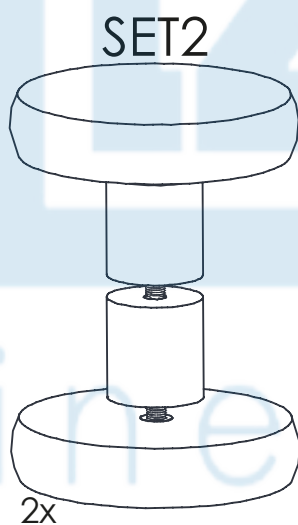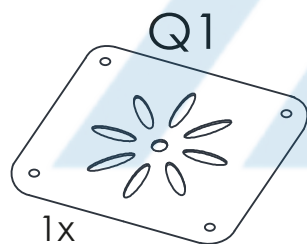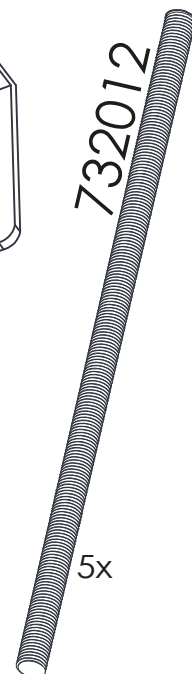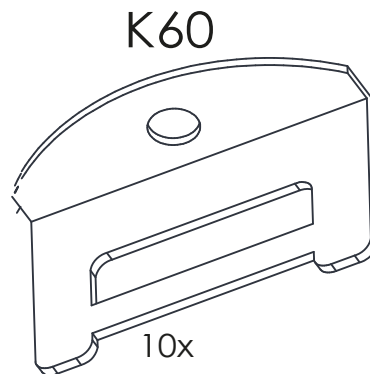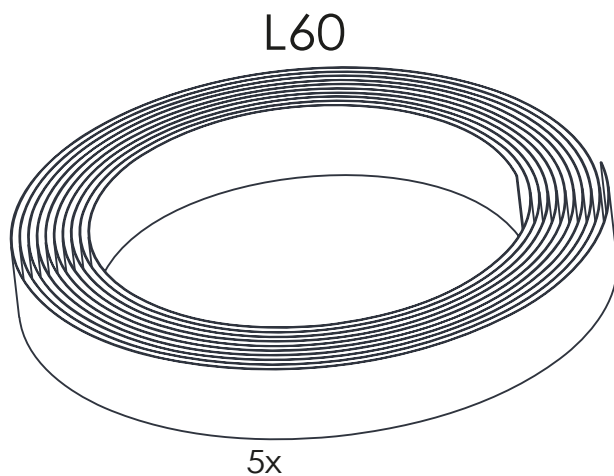
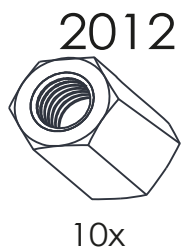


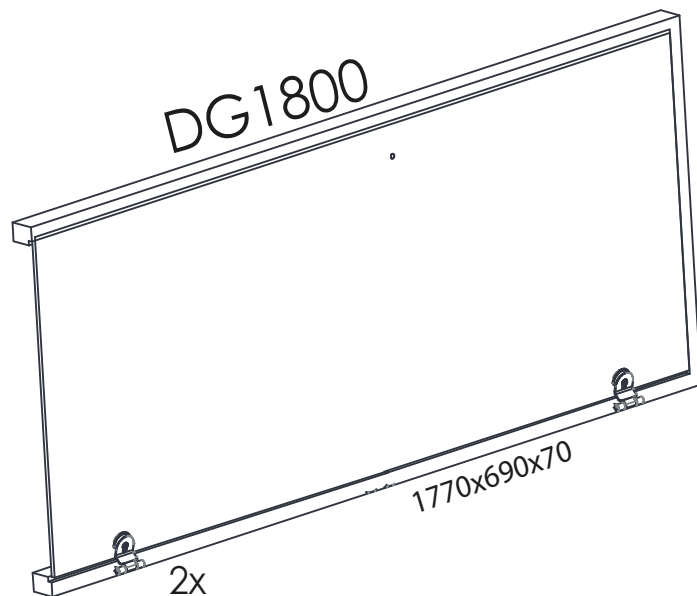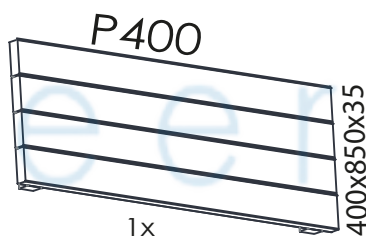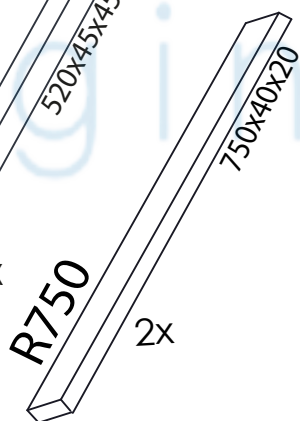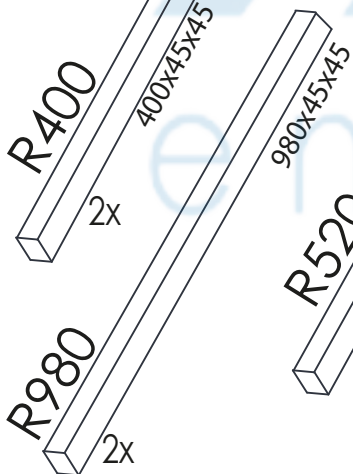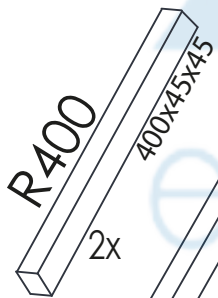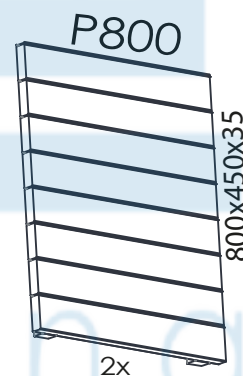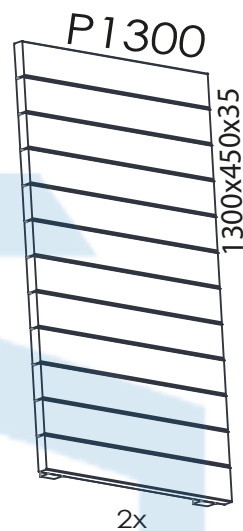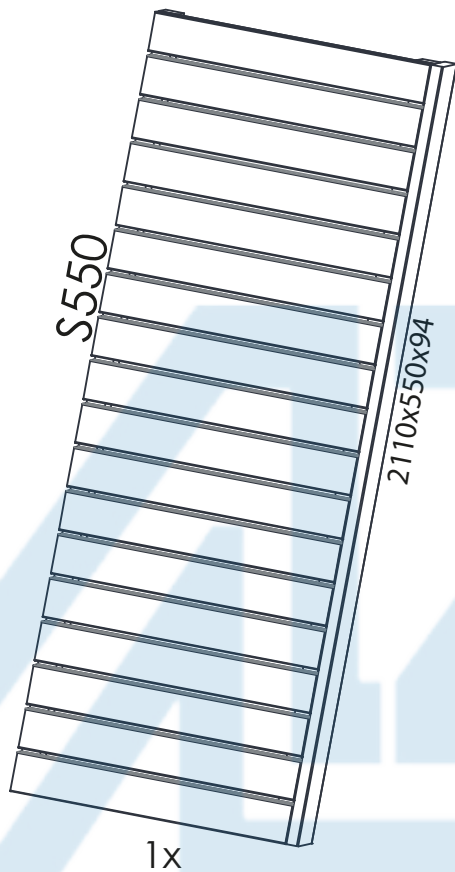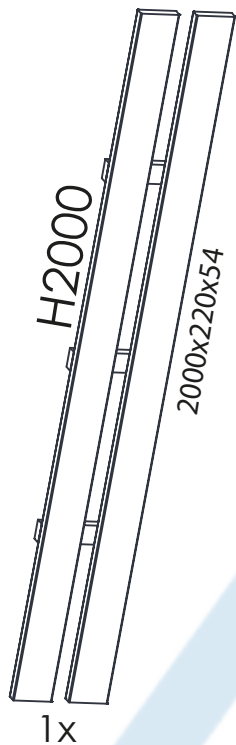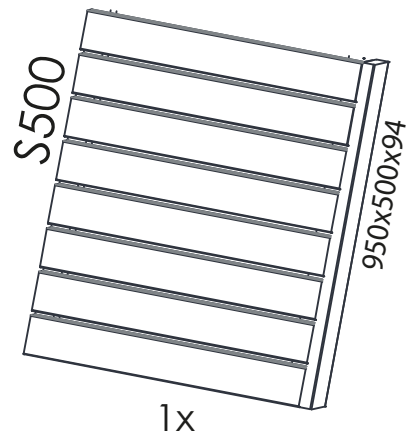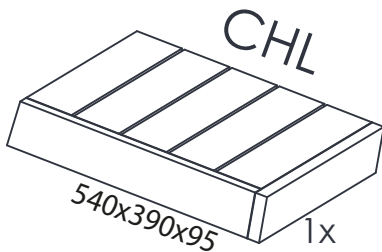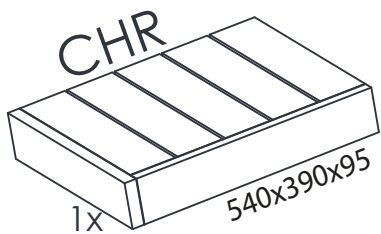

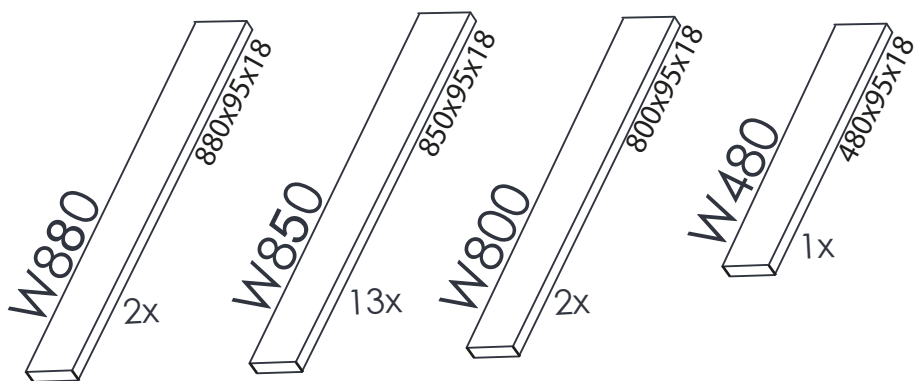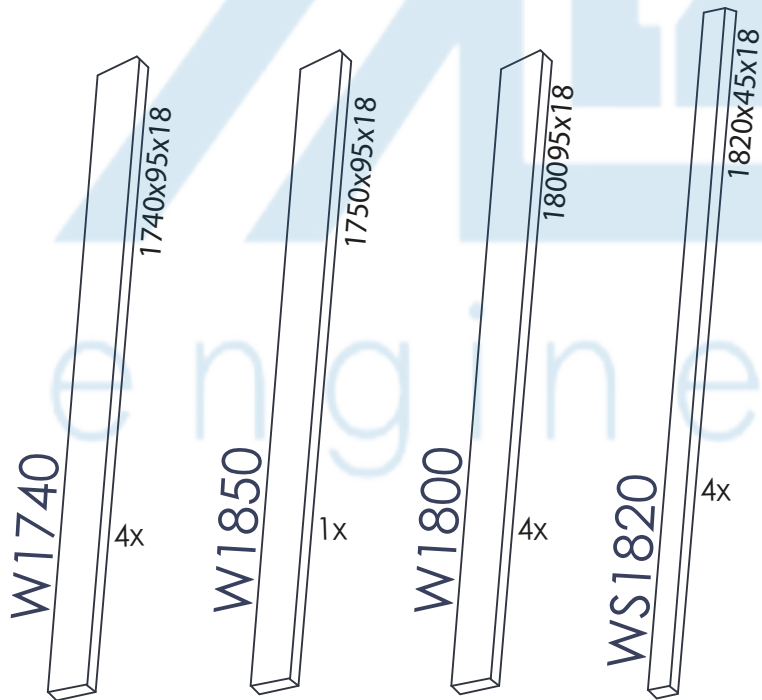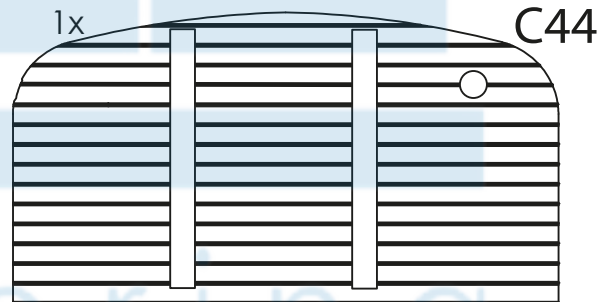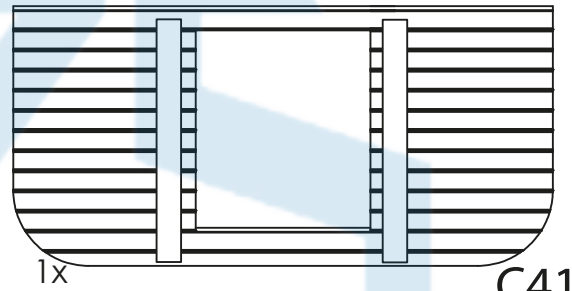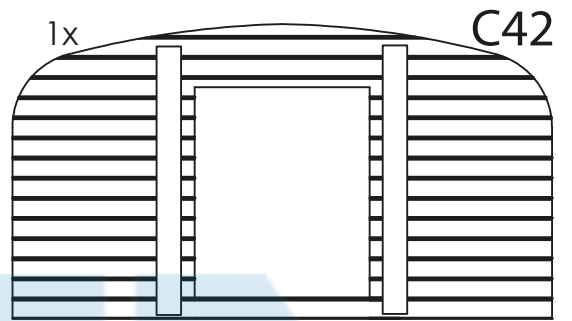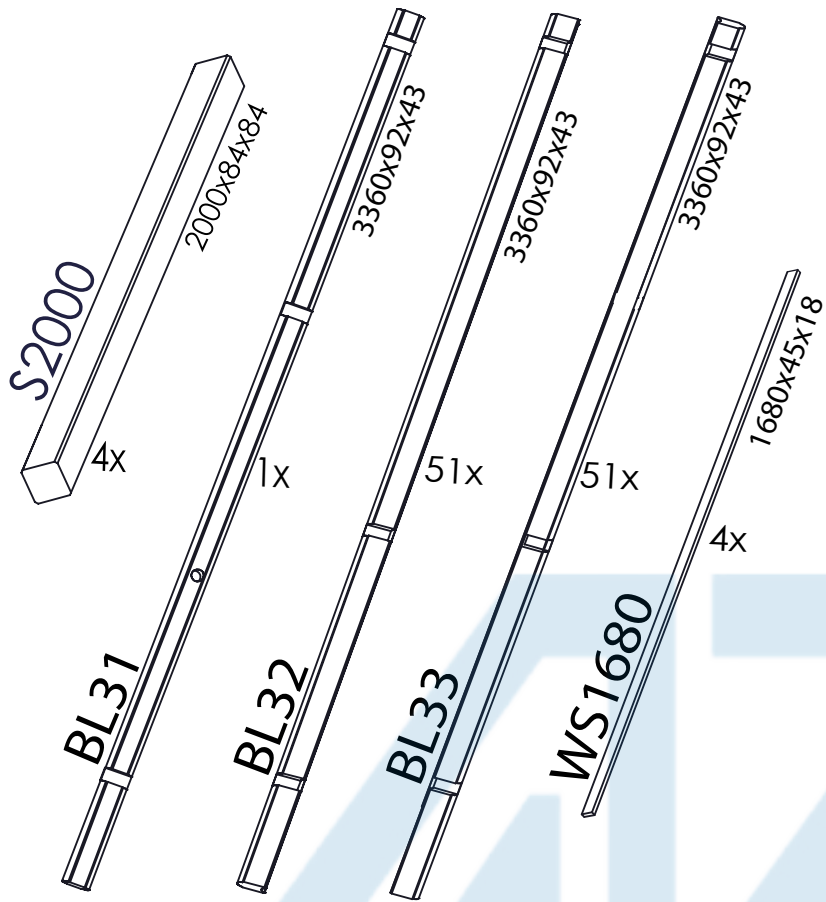



A SET FOR INSTALLING WOOD-BURNING STOVE (NOT INCLUDED).
PURCHASED SEPARATELY

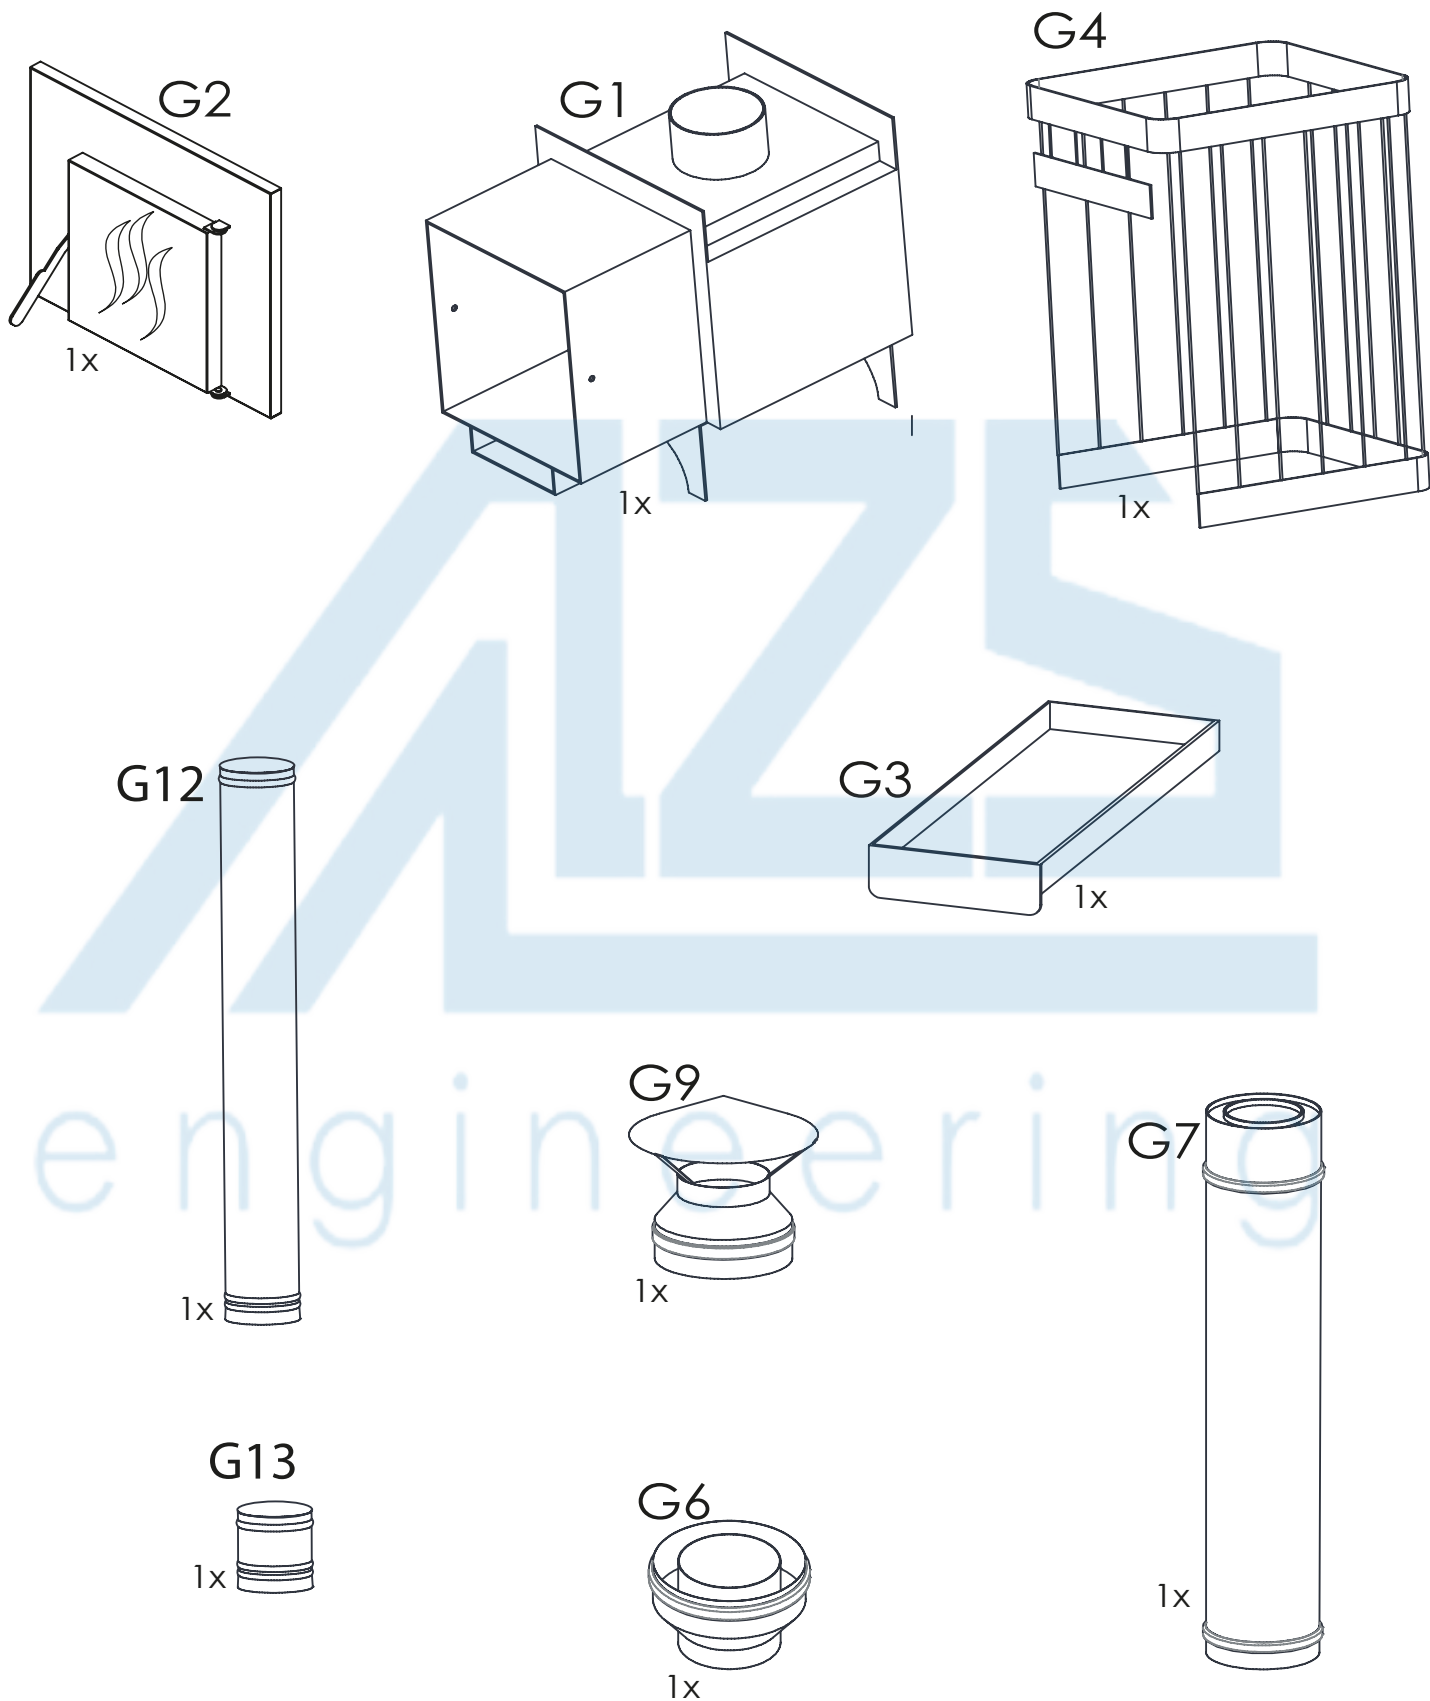



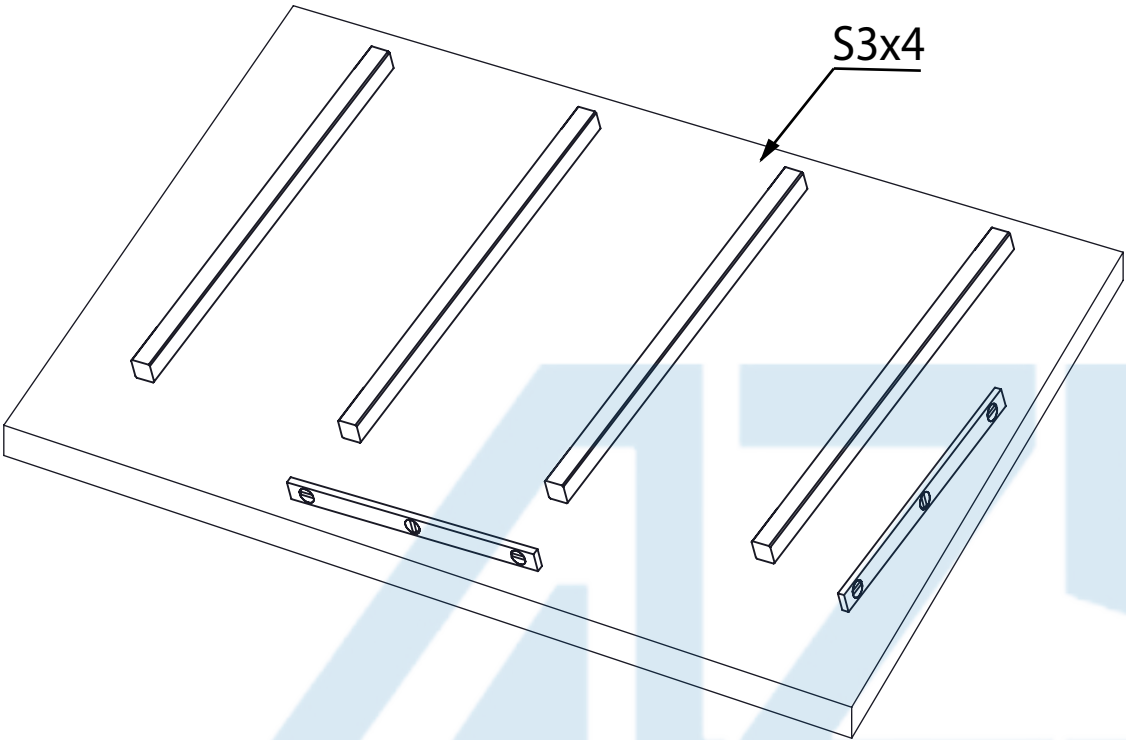
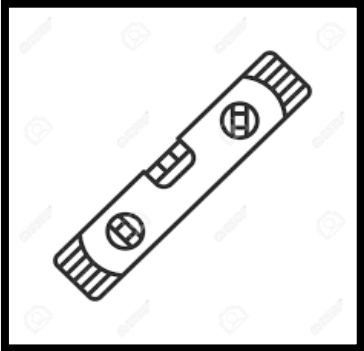



ENTER

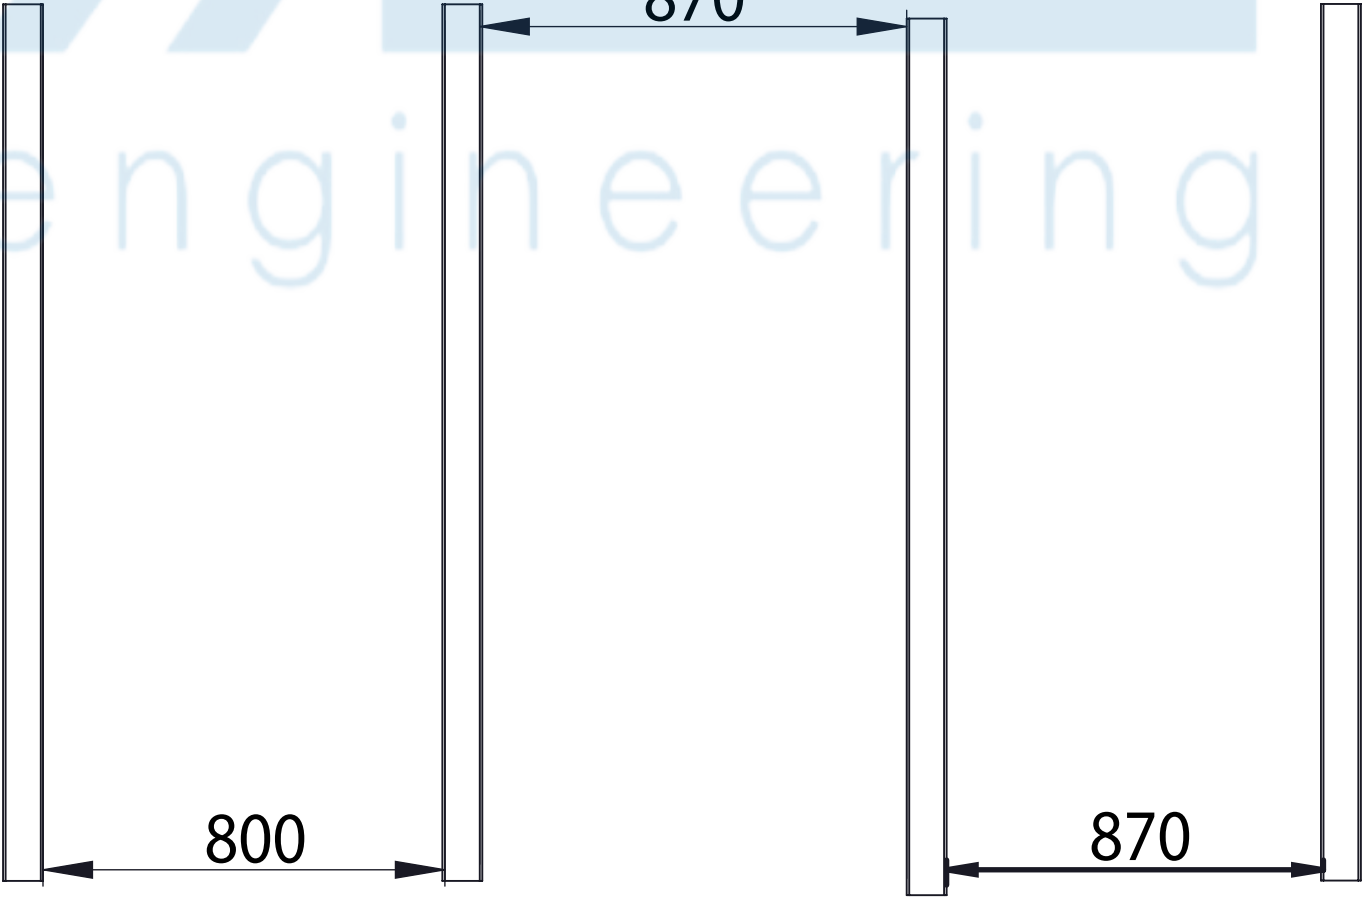



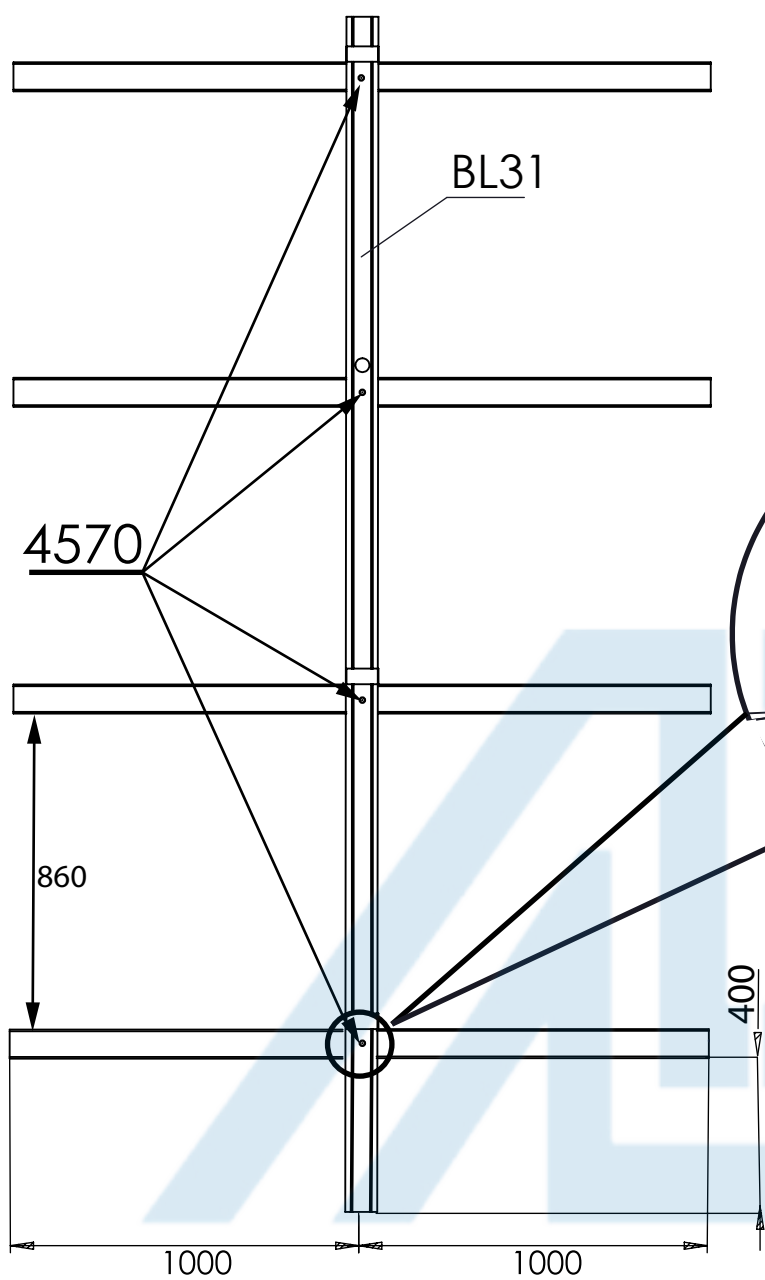


BL31 - 1
BL32 - 9
BL33 - 9
4570 - 76
45120 - 90

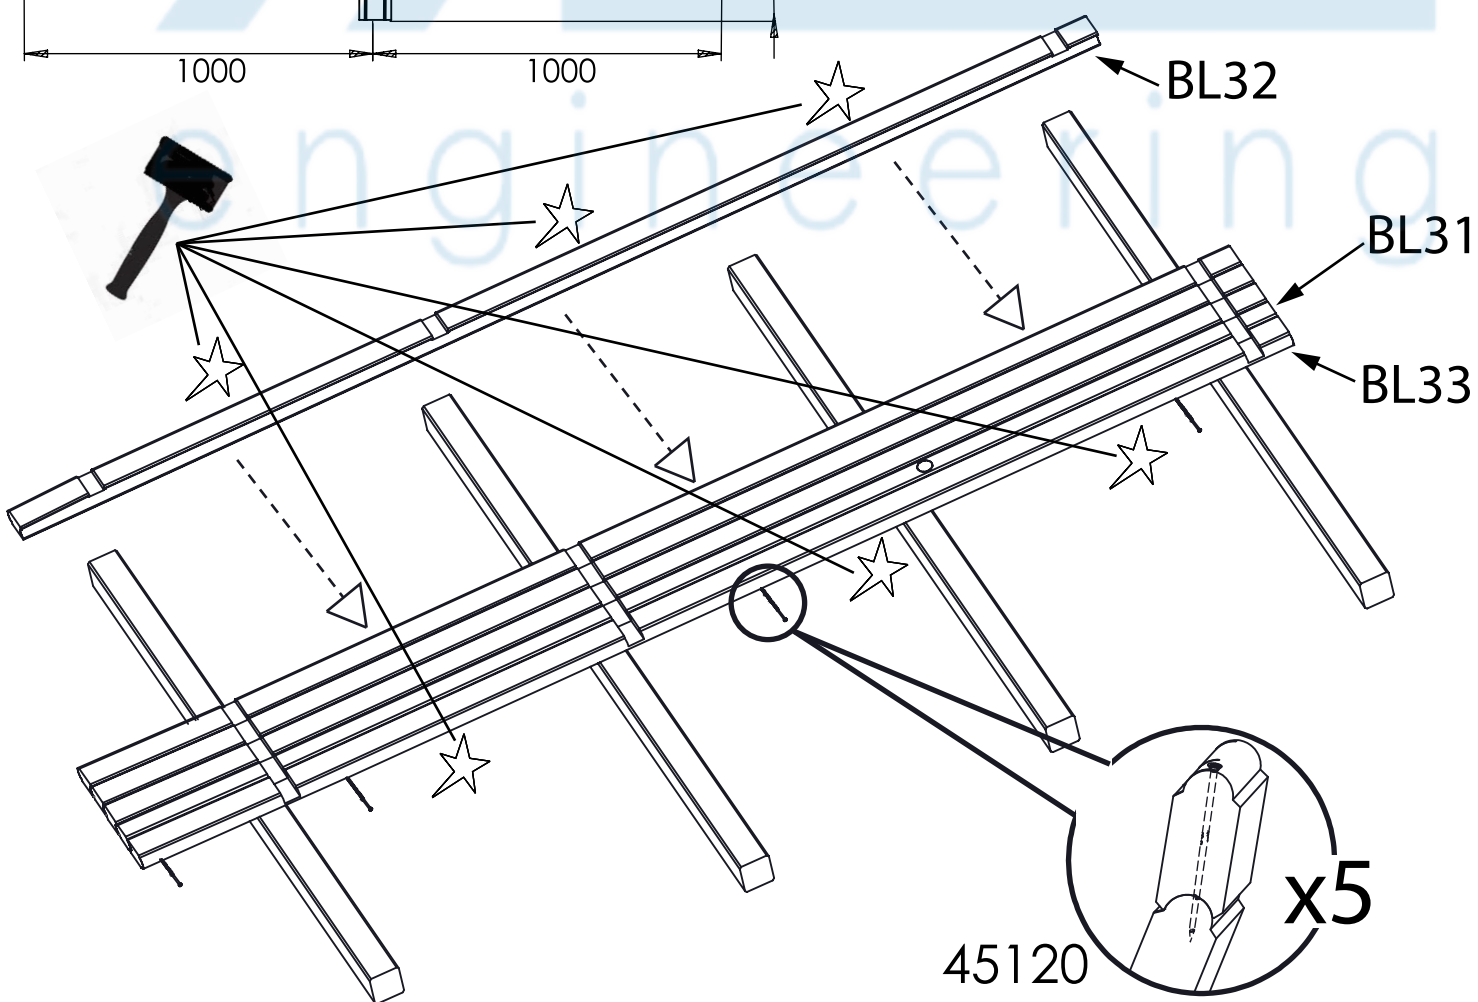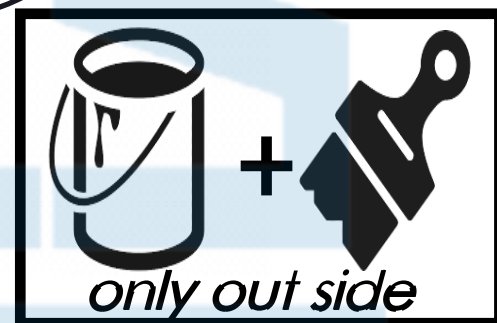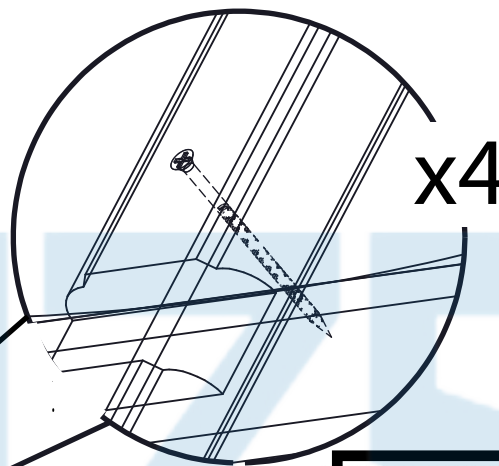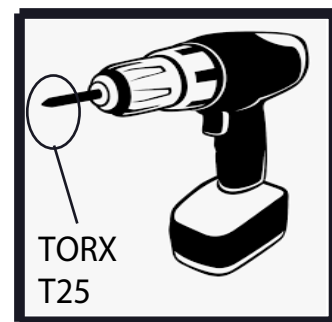


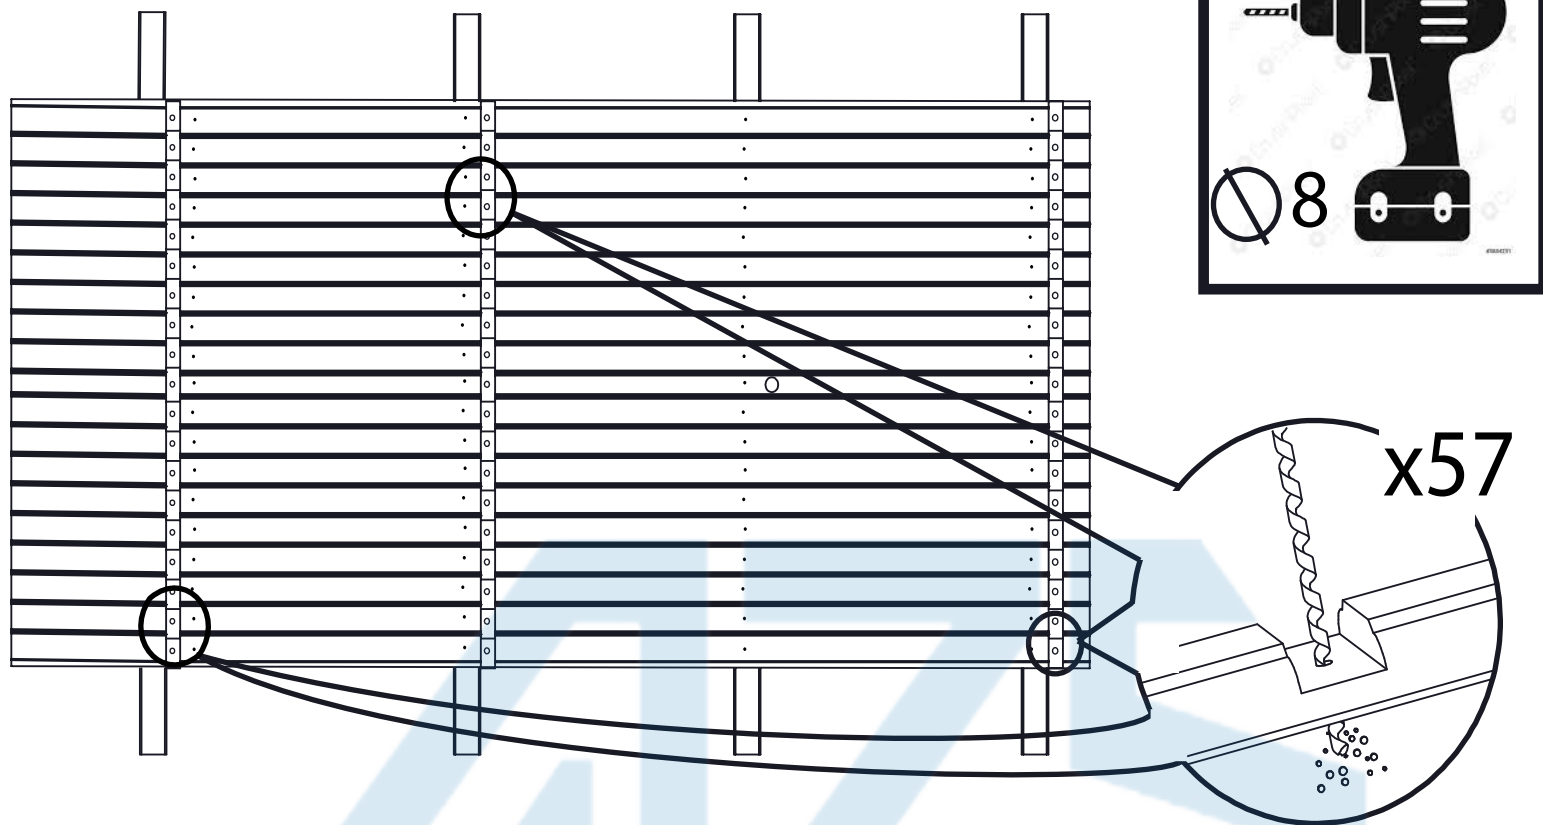


C41 - 2
C42 - 1
4570 - 6

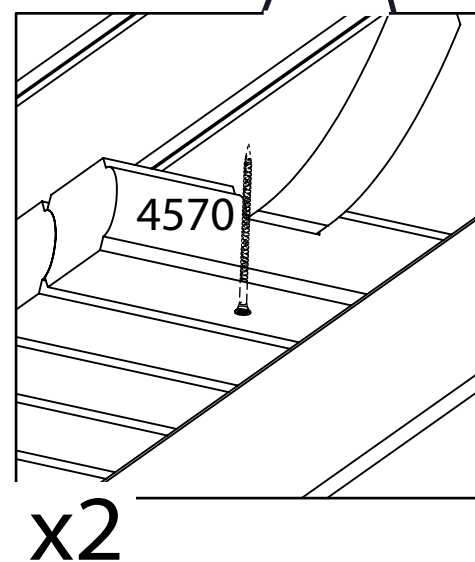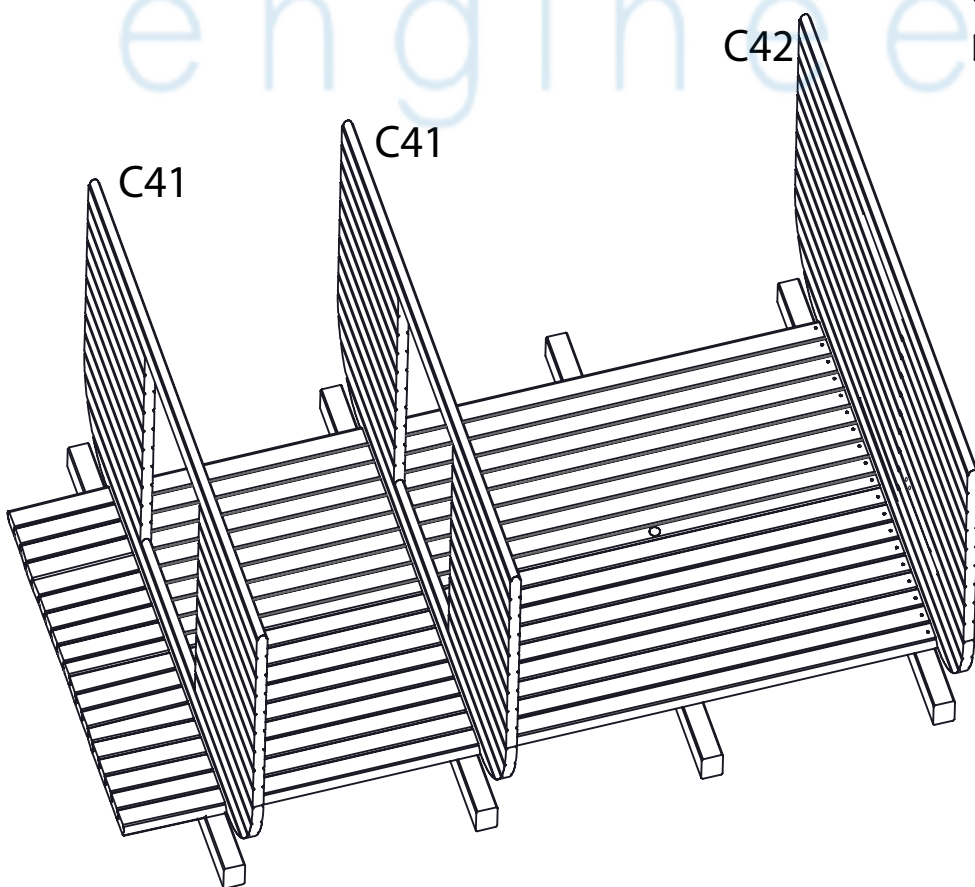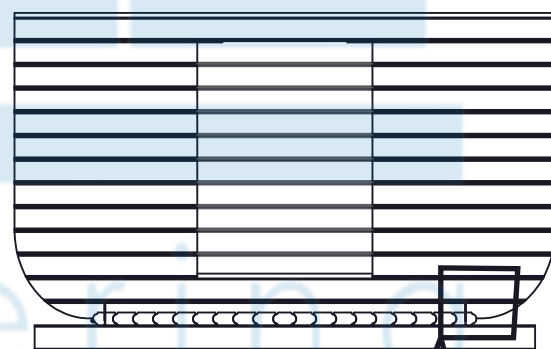







B32 - 16
B33 - 16
4570 - 96
45120 - 160


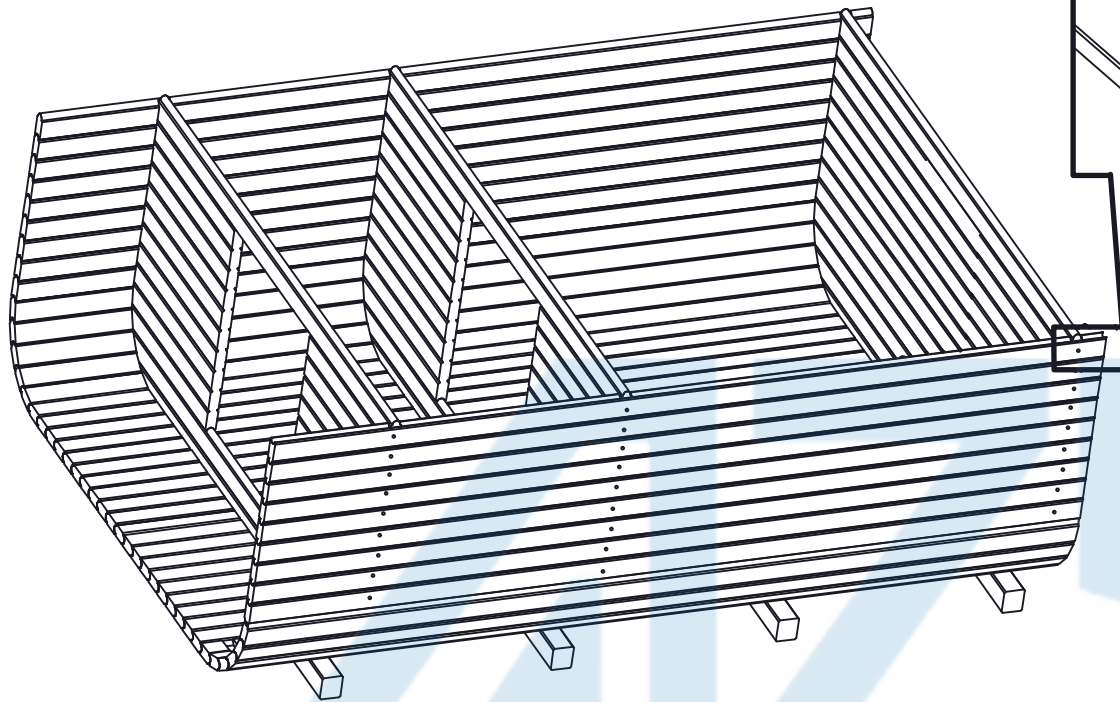


C43 - 2
C44 - 1
45120- 6


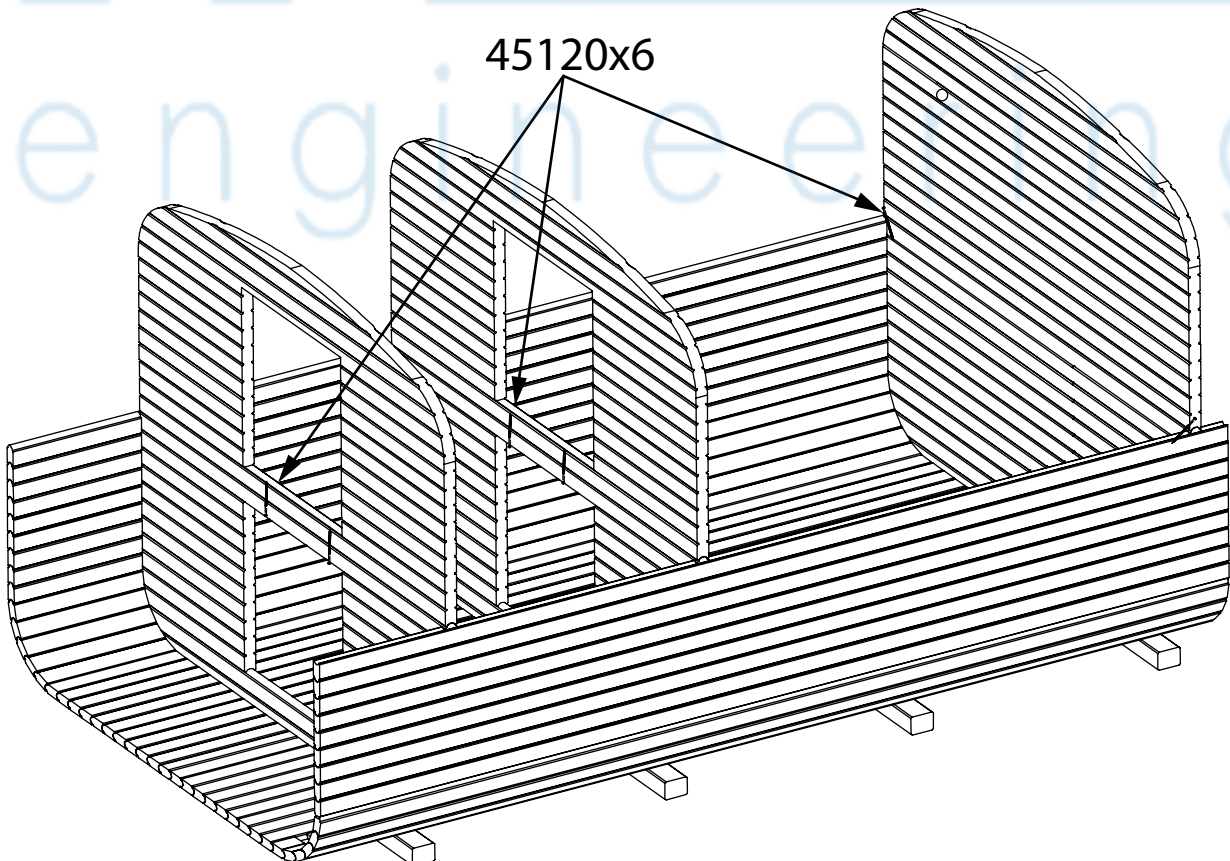


B32 - 24
B33 - 24
4570 - 144
45120 - 240

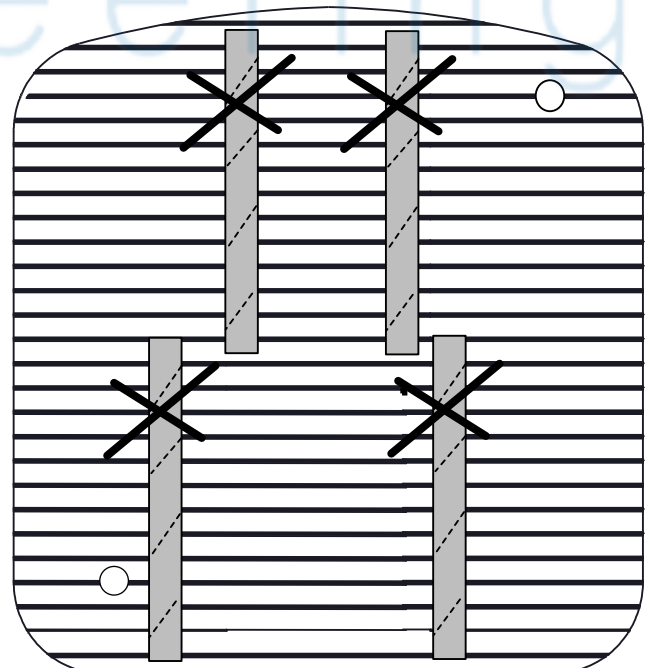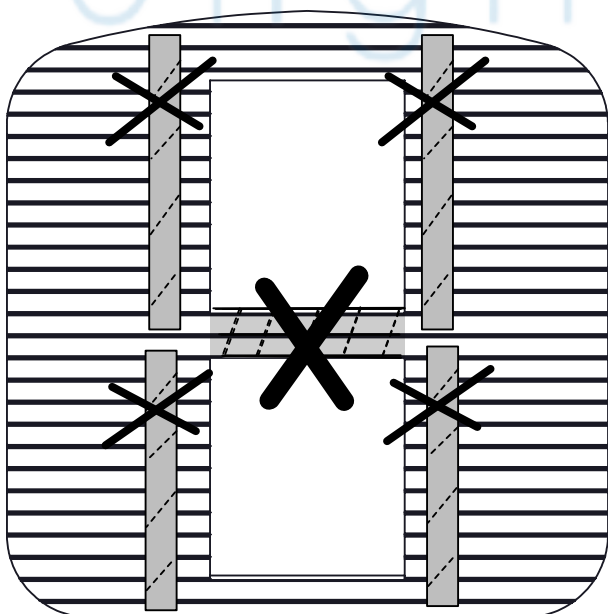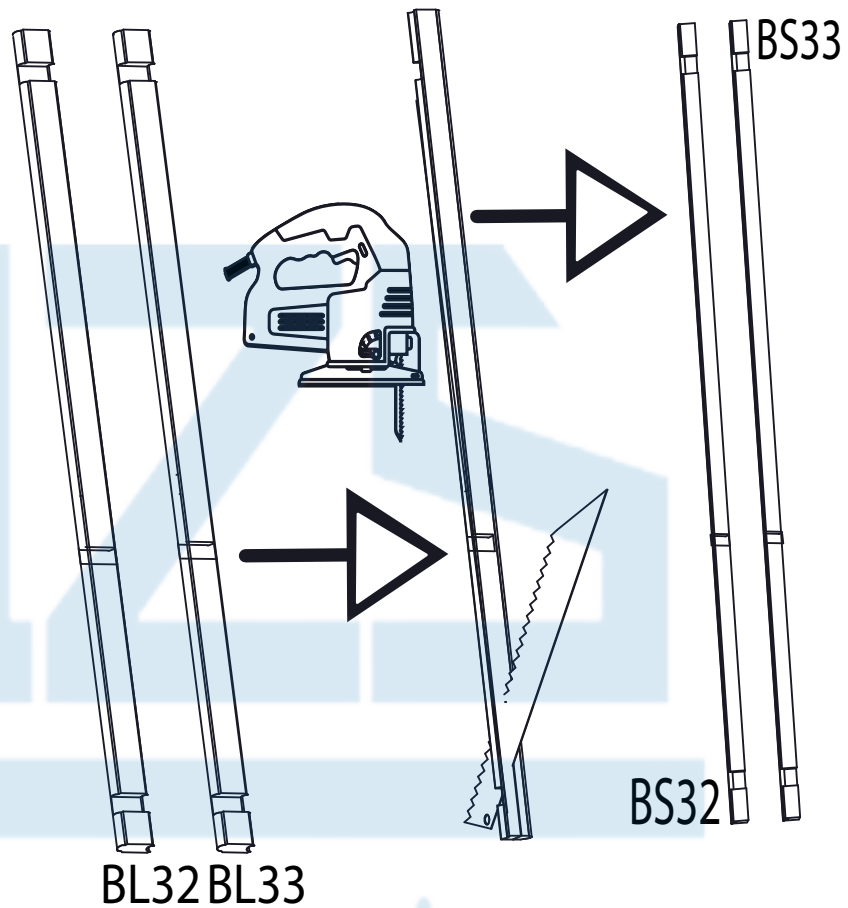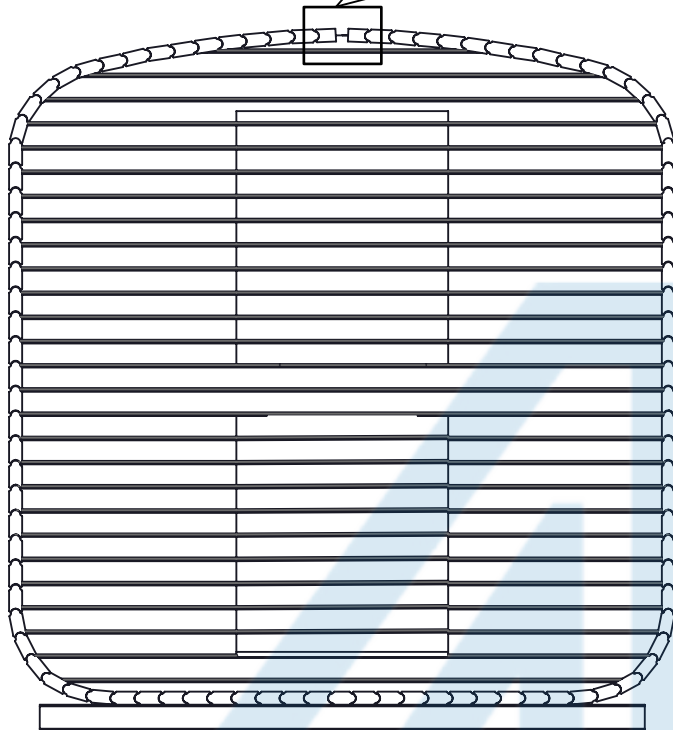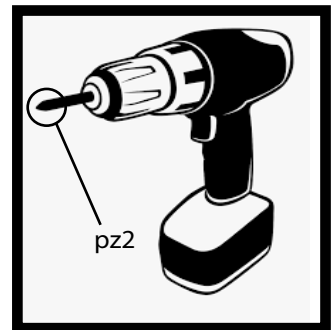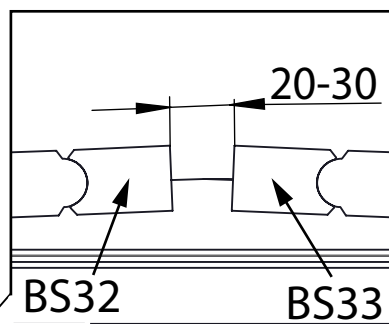


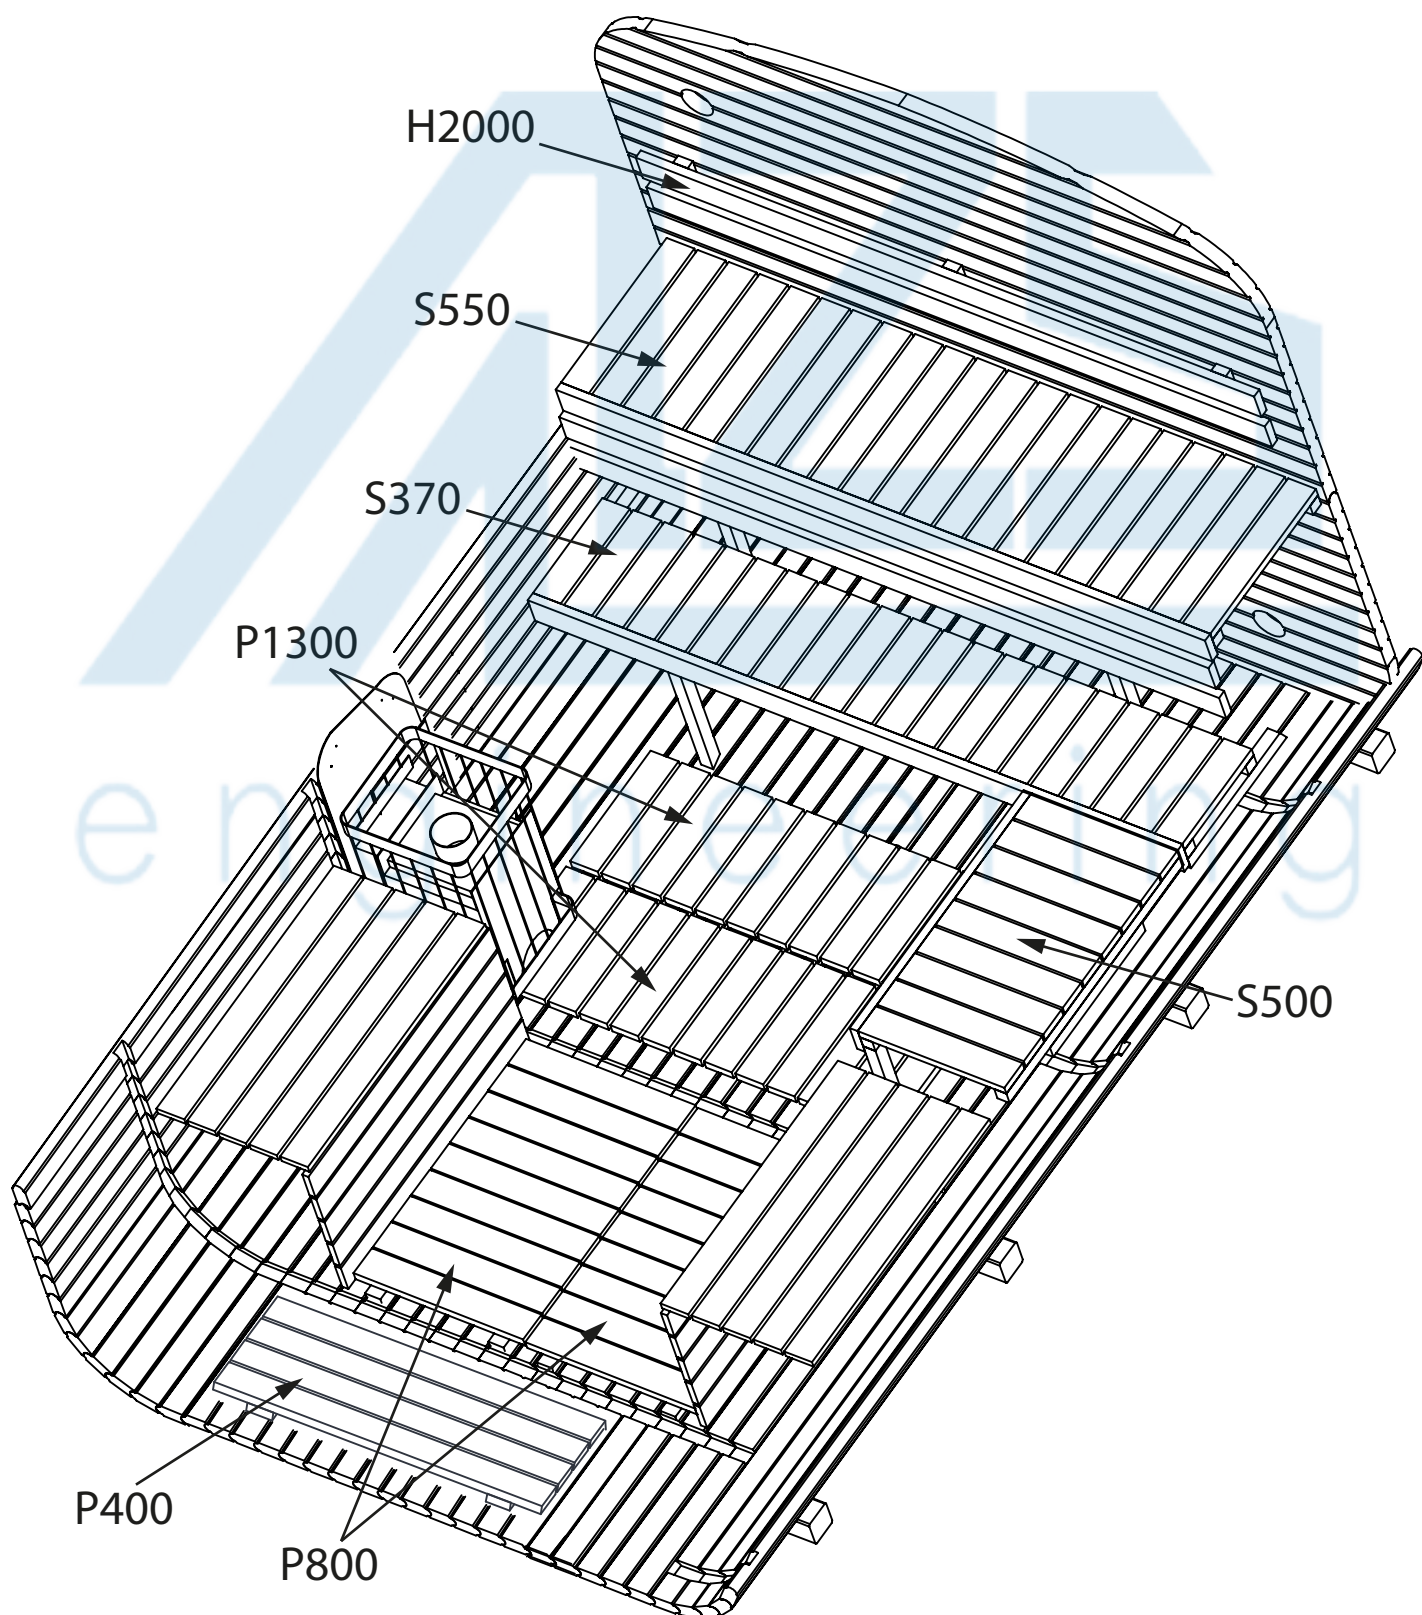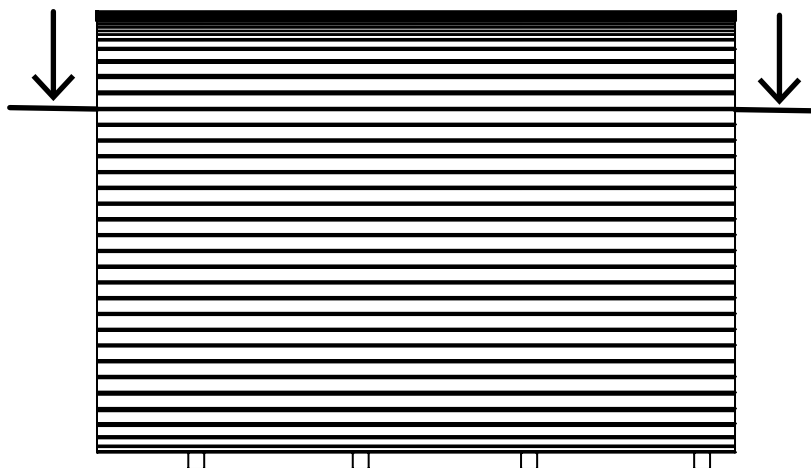


CHL - 1
CHR - 1
R520 - 4
4570 - 16
4460 - 6

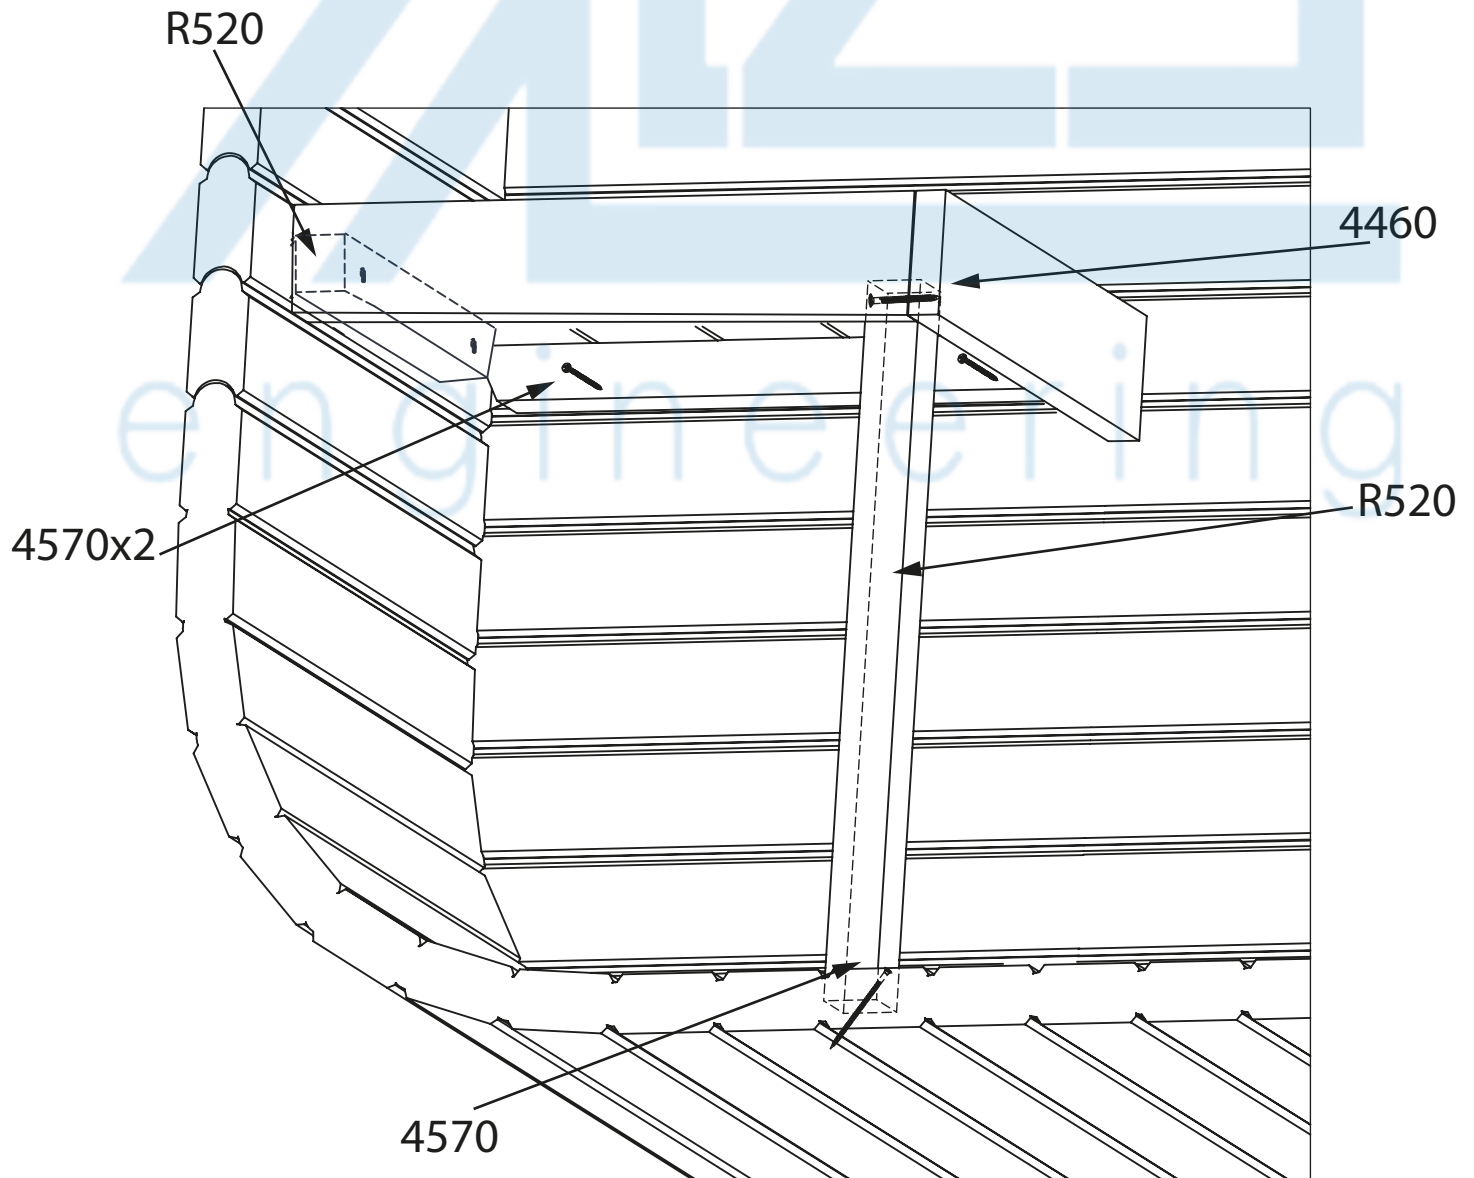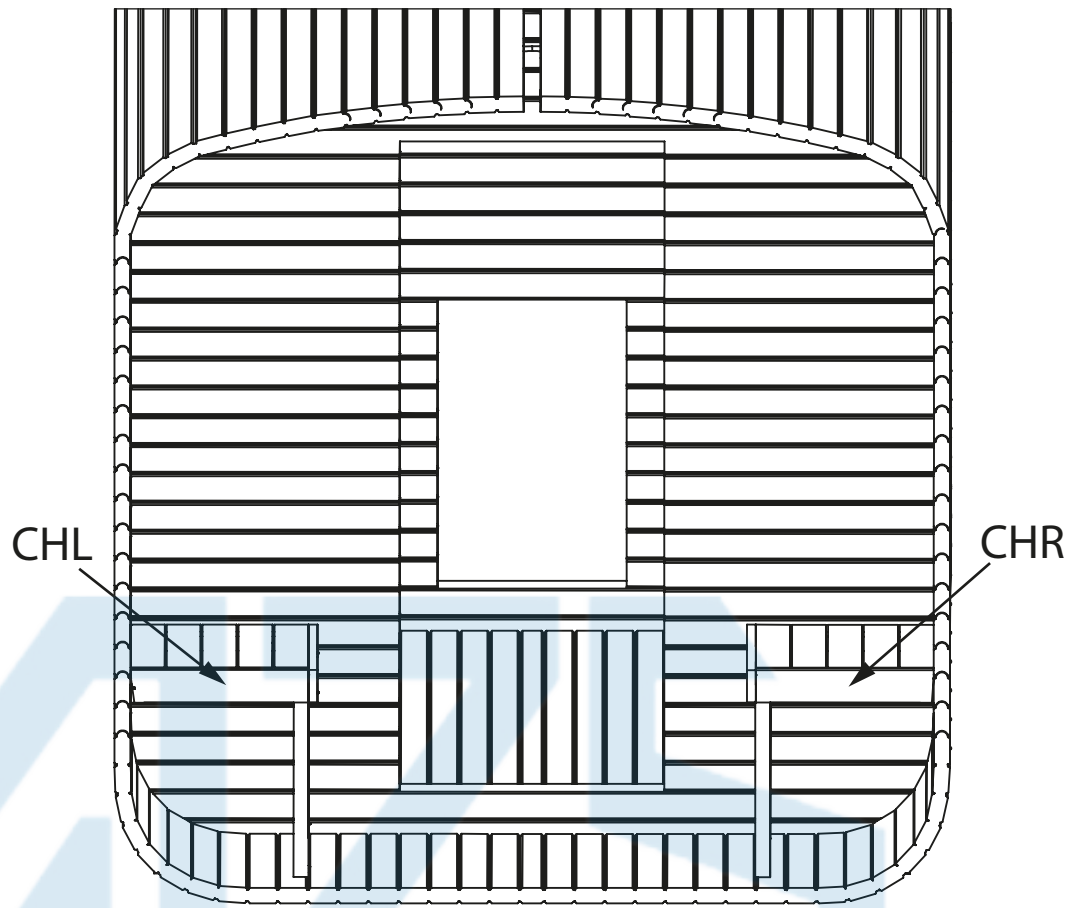


H2000 - 1
S550 - 1
R520 - 2
R980 - 2
4460 - 16

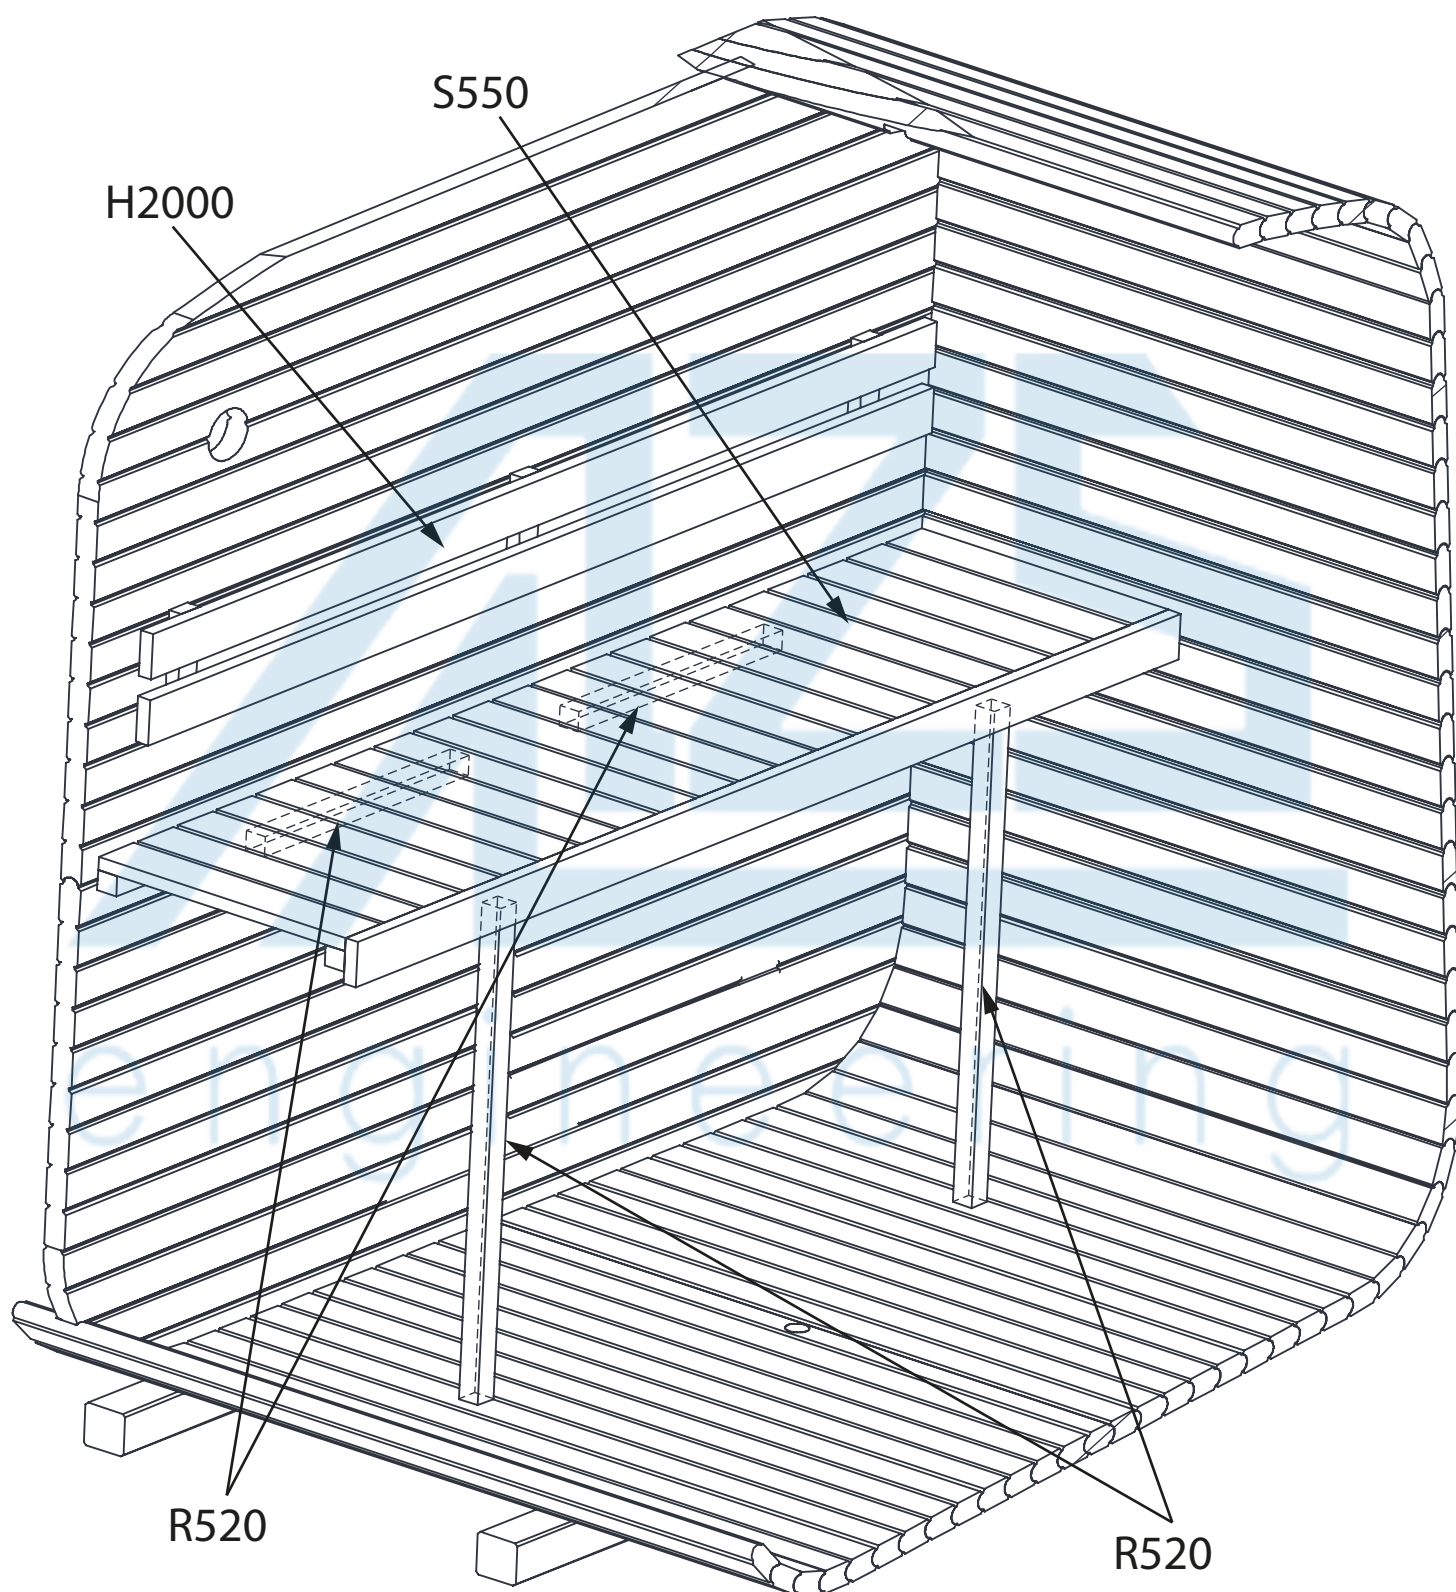


S370 - 1
W2100 - 3
R520 - 4
4460 - 24



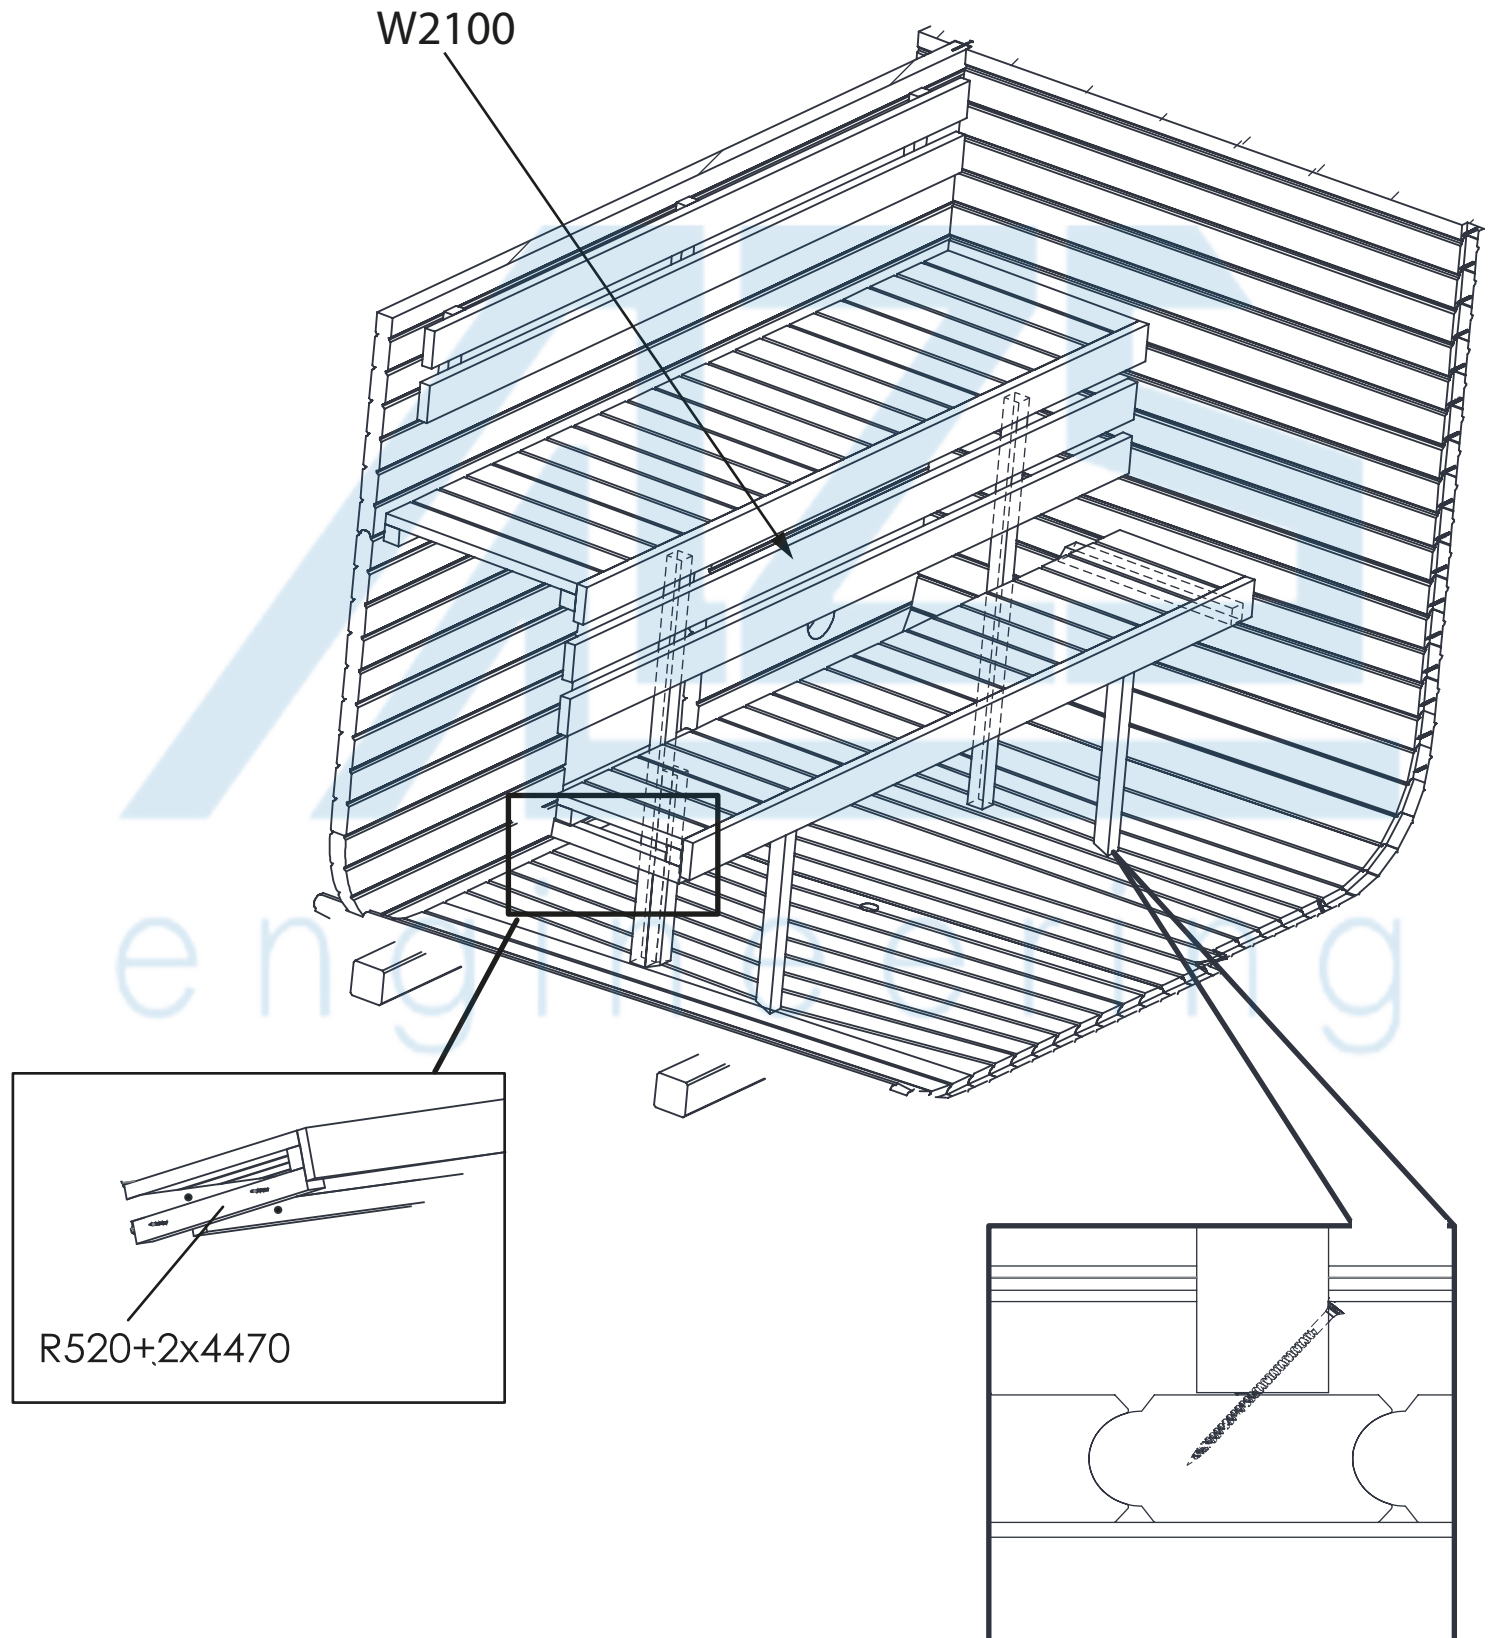


S500 - 1
R520 - 3
4460 - 8

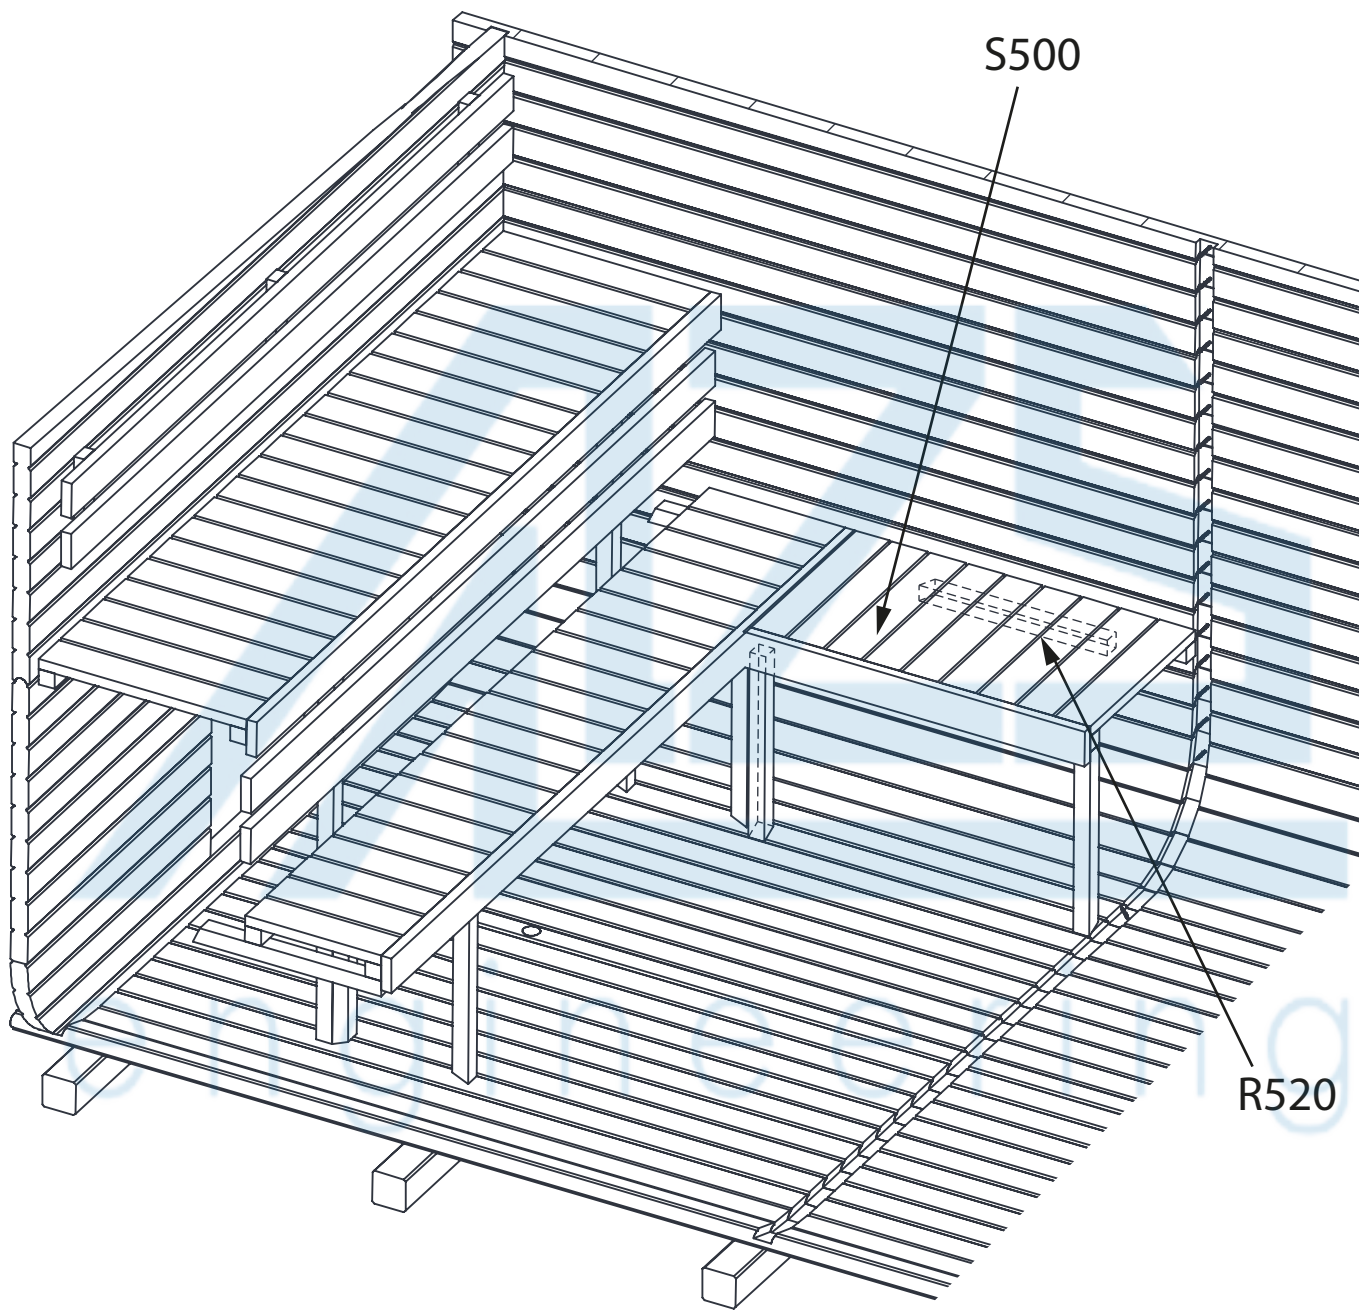


- D840 - 2
- R750 - 2
- R520 - 8
- W850 - 12
- 80401 - 4
- 4470 - 20
- 4460 - 56
- 4216 - 16

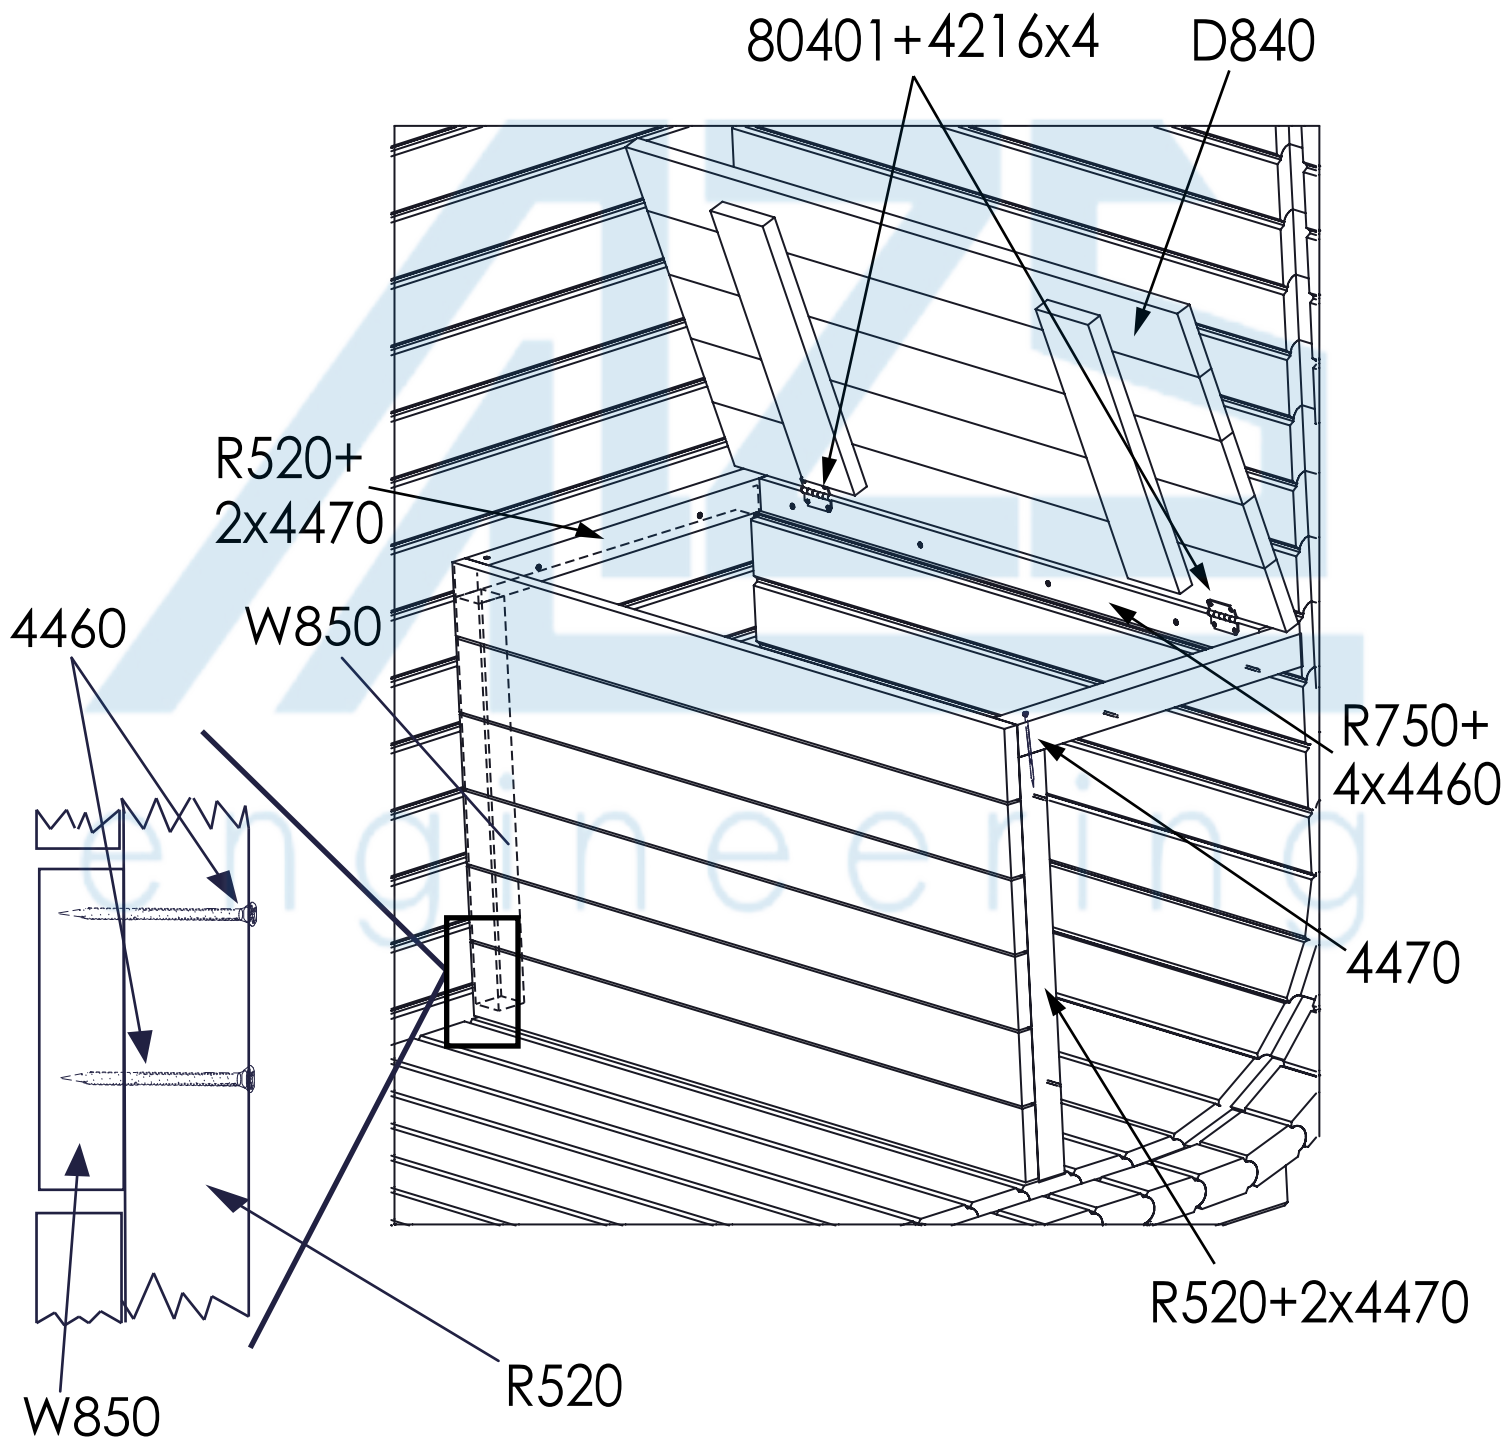


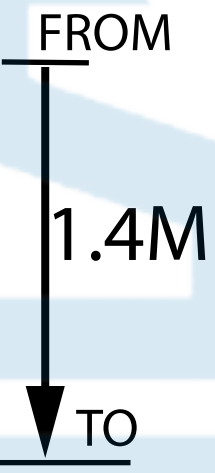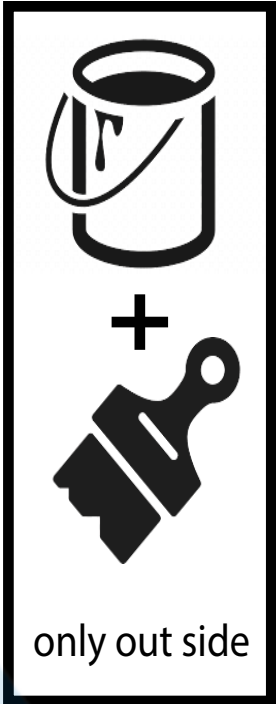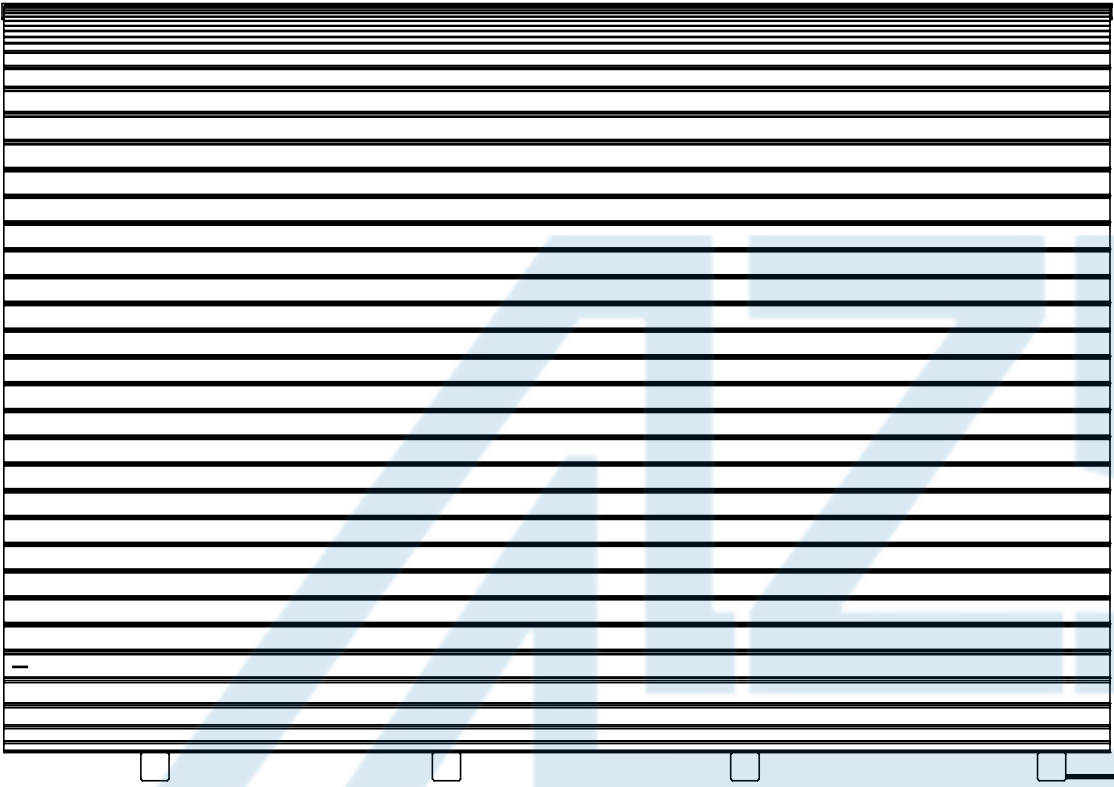





Q1 - 1

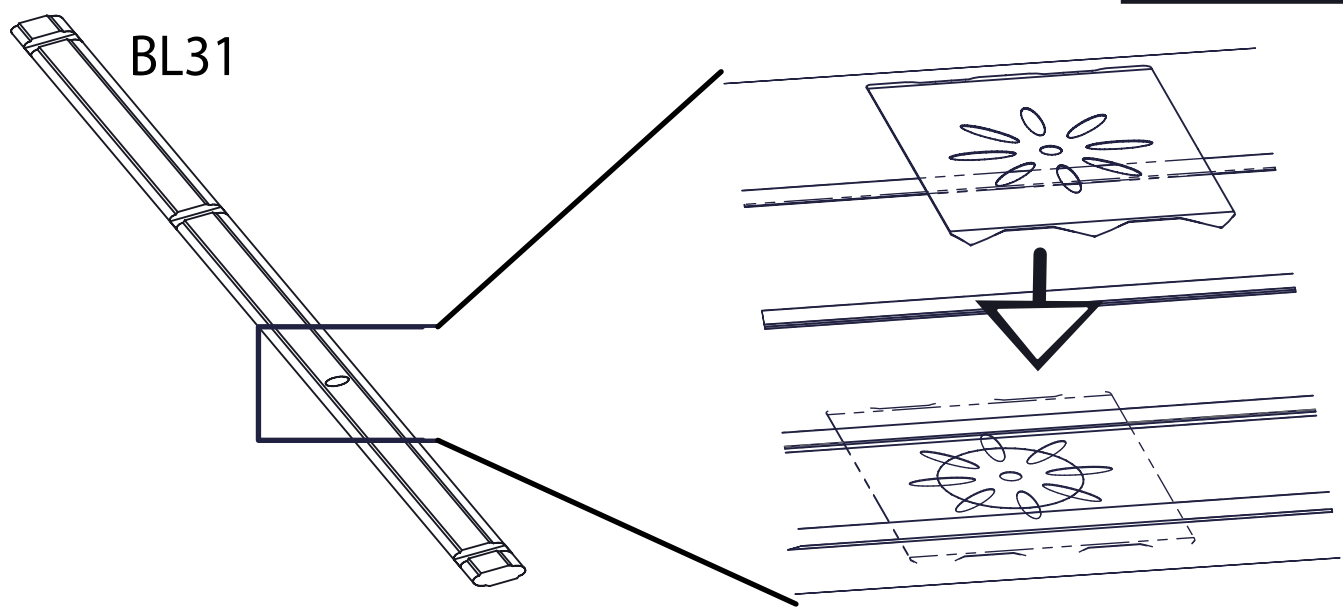




ONLY FOR G1!


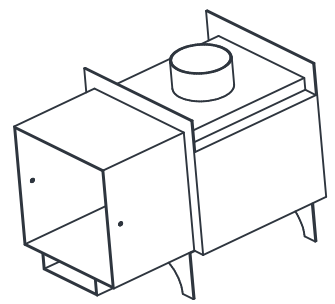


P1300

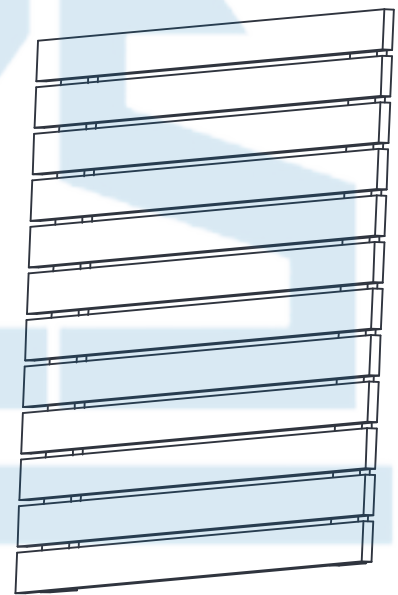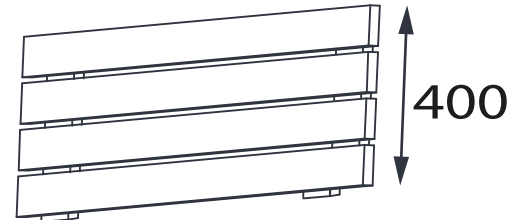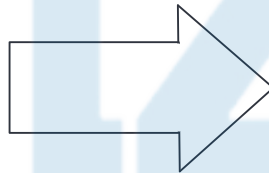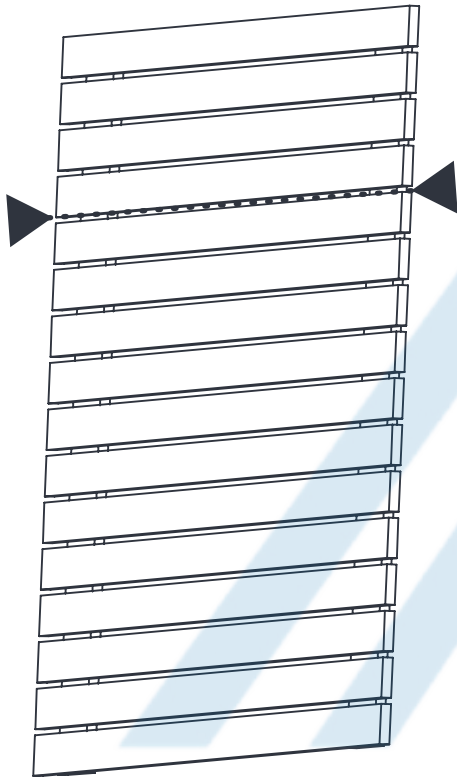


R400 - 2
4460 - 6

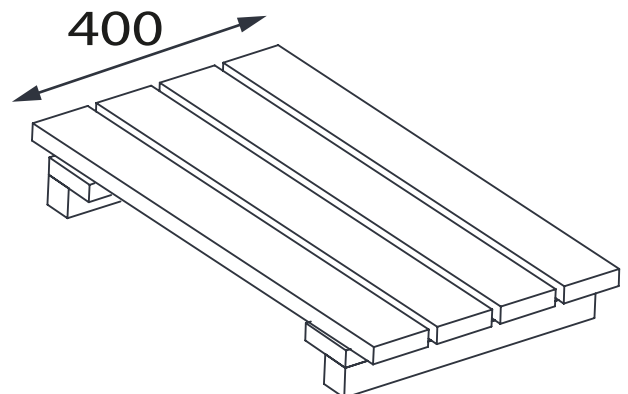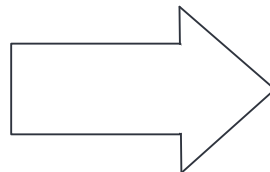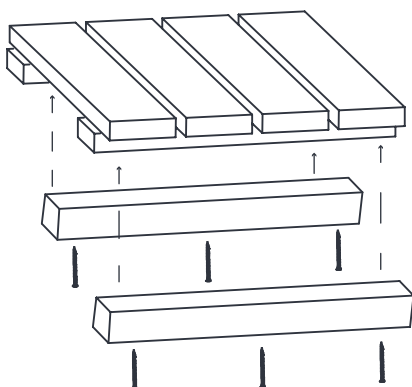



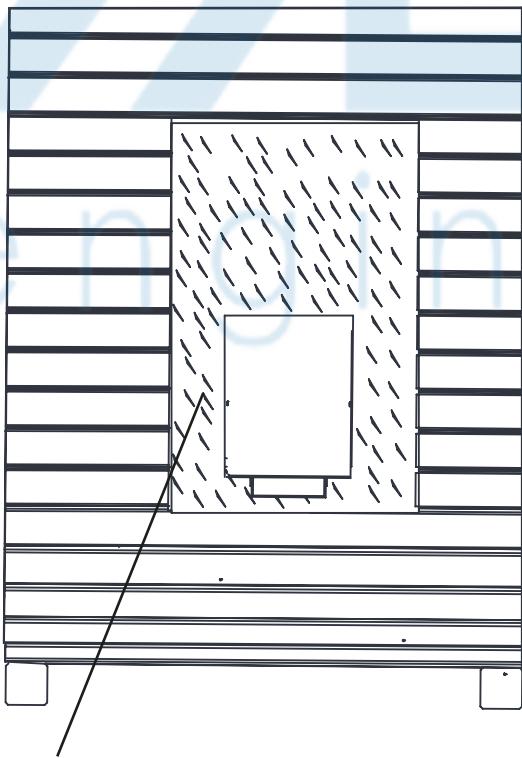
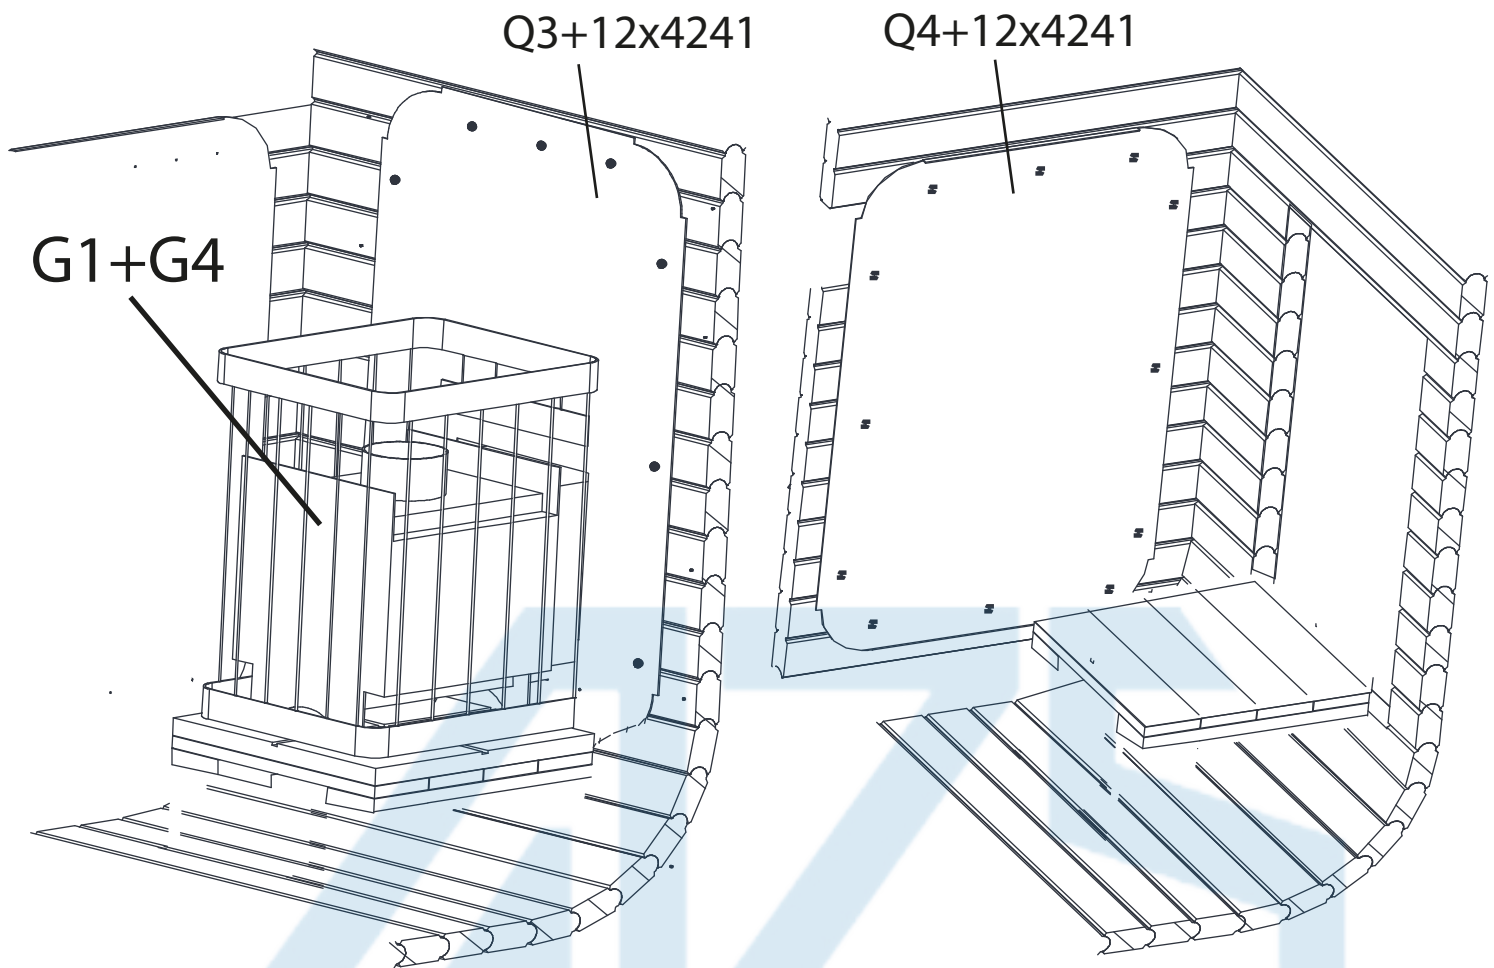


ROCK WOOL

Q4+12x4241




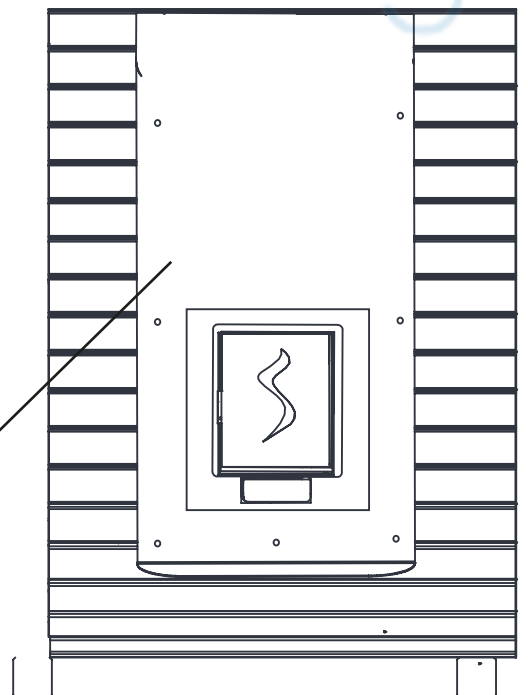


G6 - 1
G7 - 1
G12 - 1
G13 - 1
Q2 - 1
4241 - 8

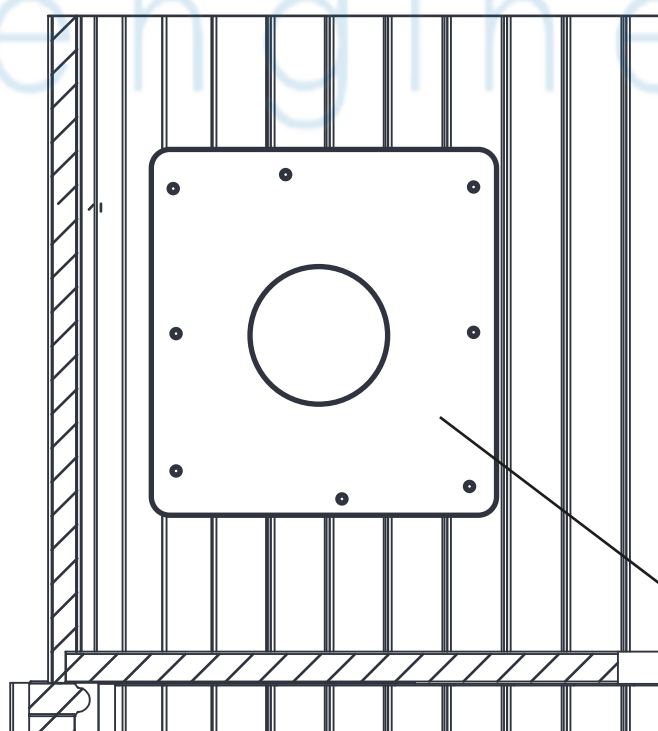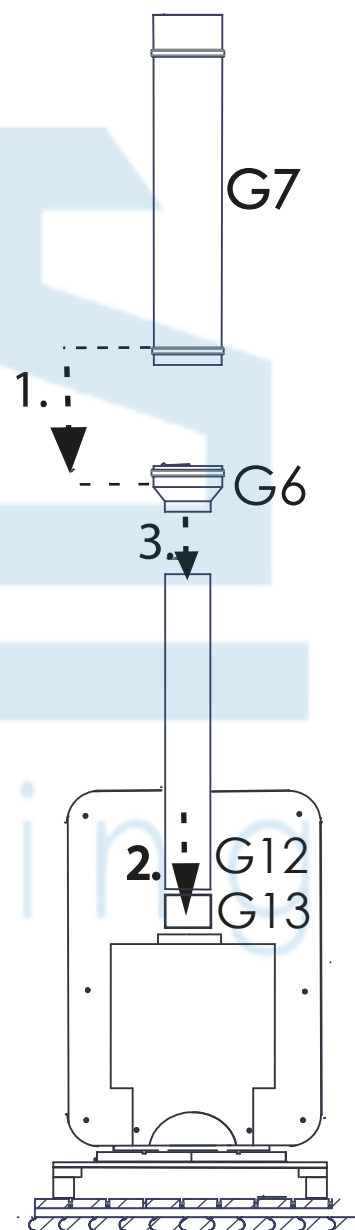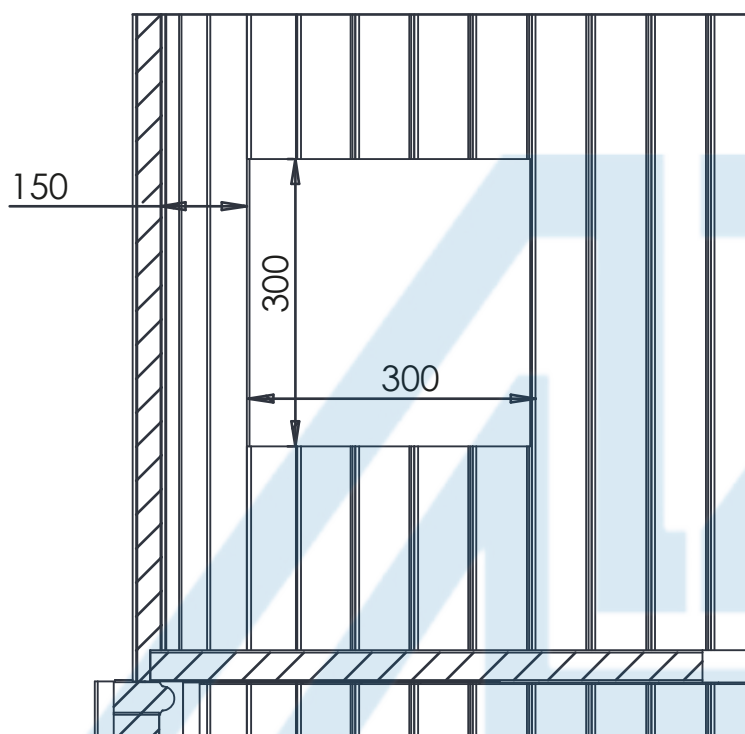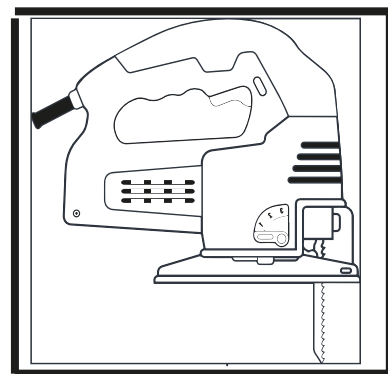

Q2+4241x8


L60 - 5
K60 - 10
2012 - 10
732012 - 5

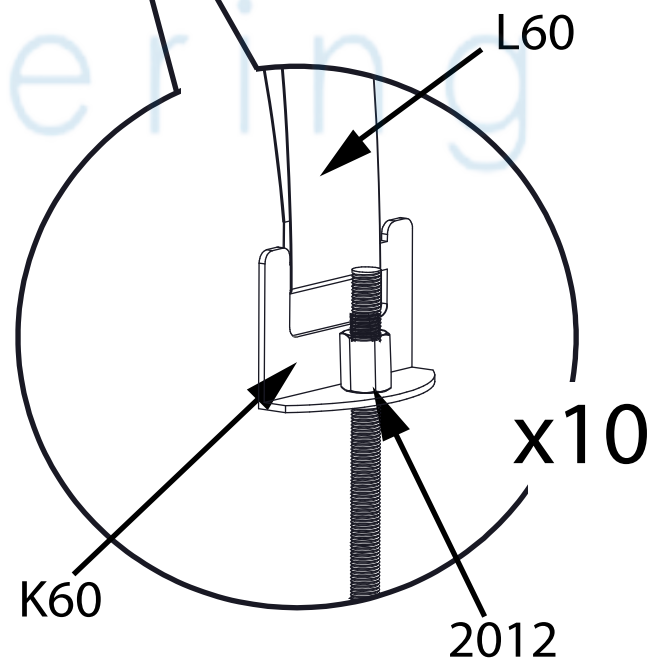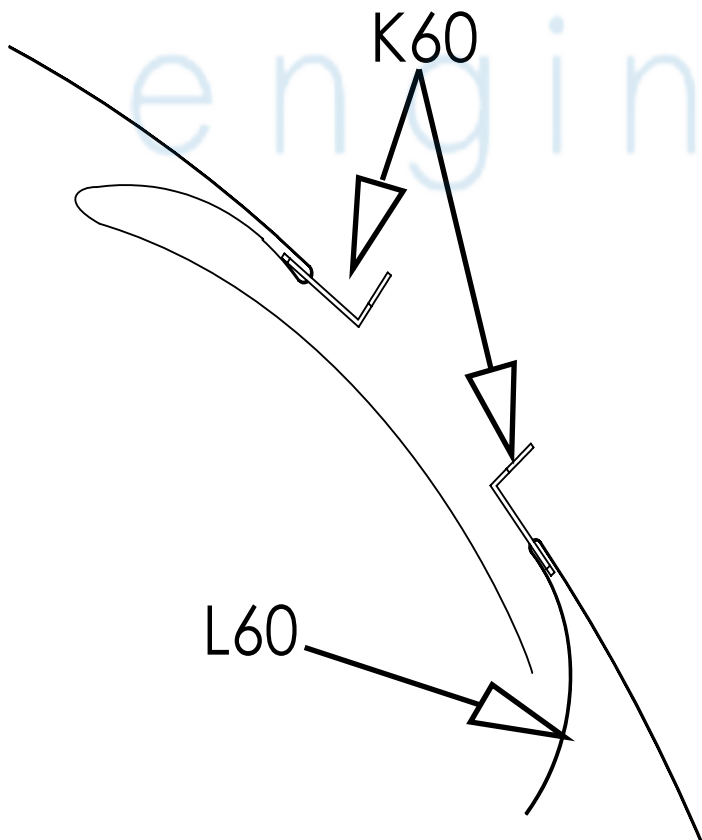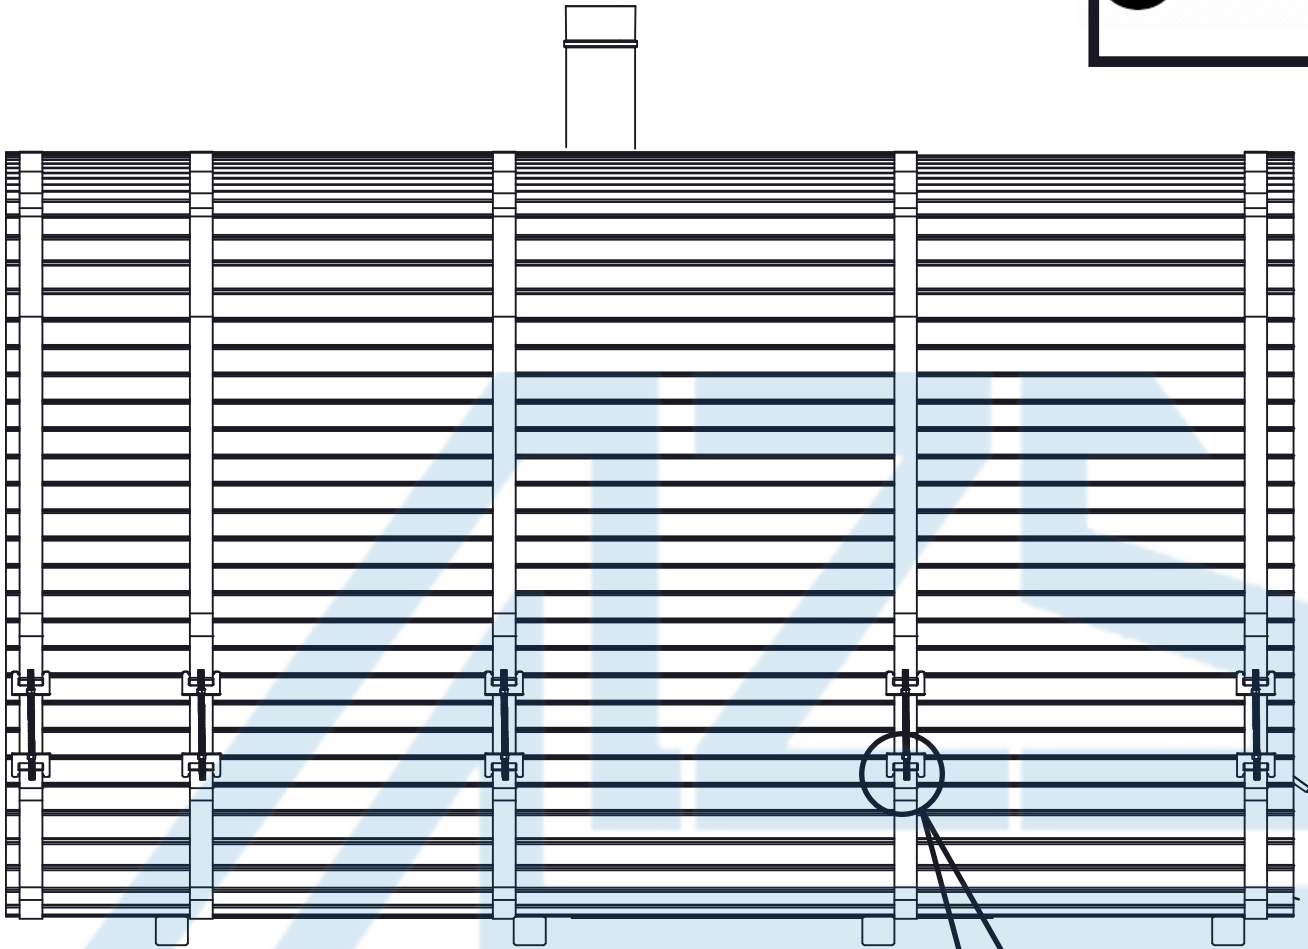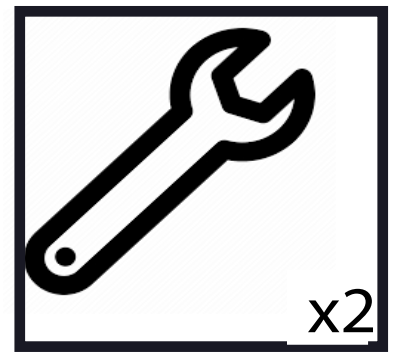


SET3

IN

OUT

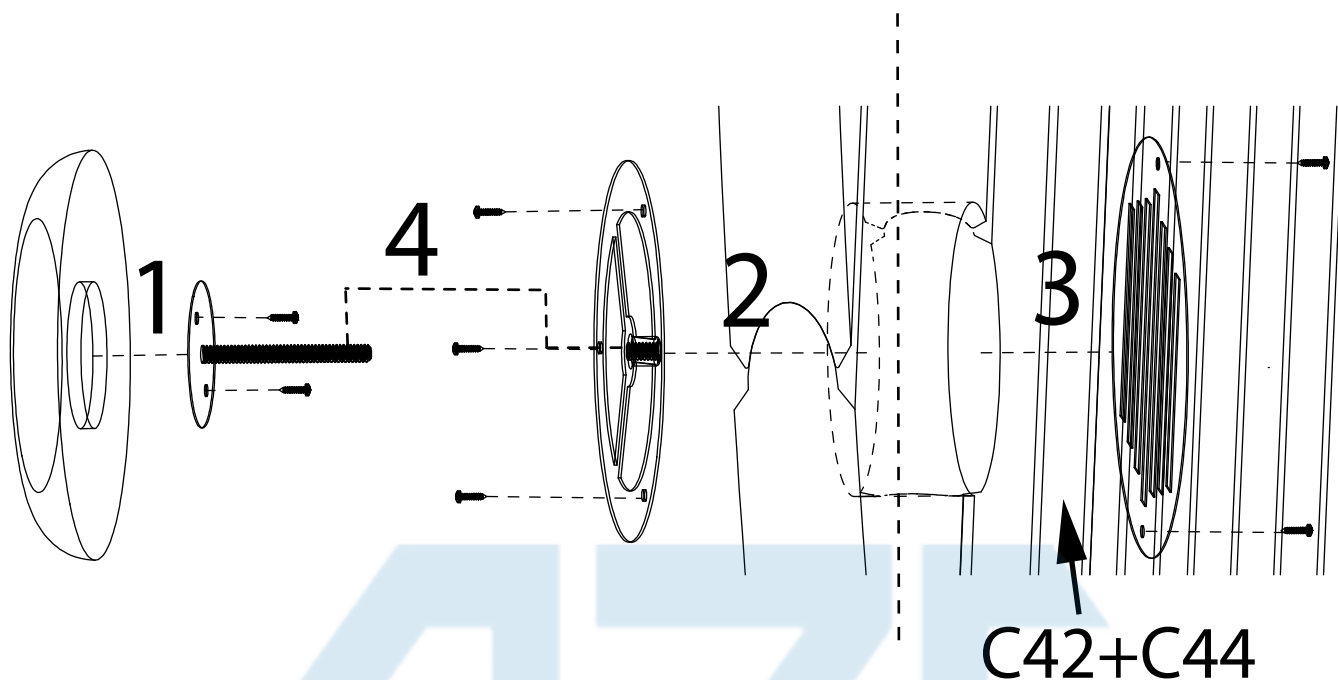


W1800 - 1
W900 - 1
W480 - 1
W80 - 1
W70 - 2
4345 - 24
G10

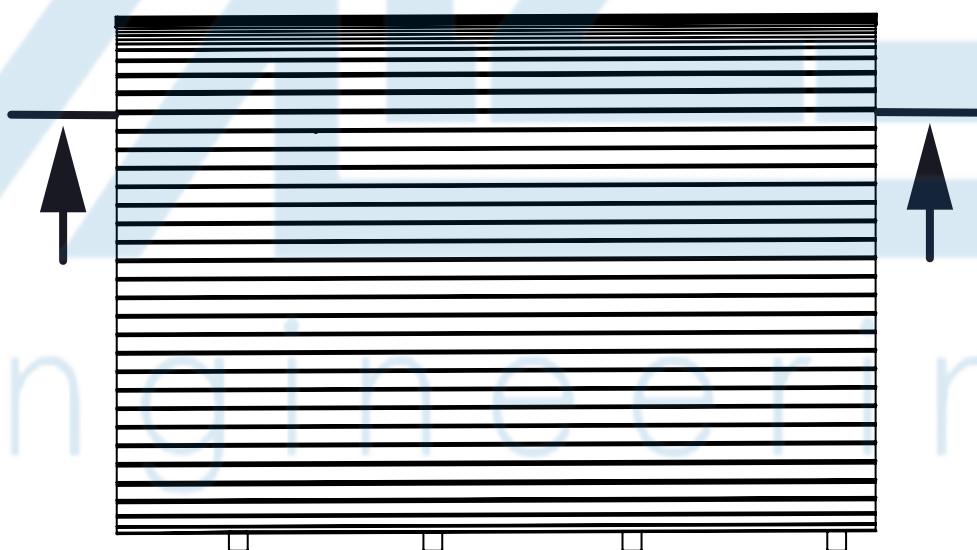

W850+4345x6



W1850+4345x8

W80+4345x2

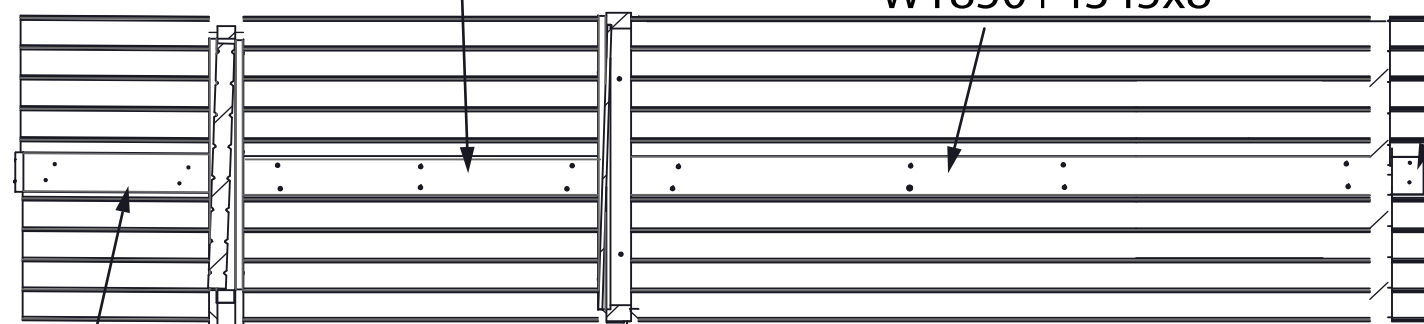

W480+4345x4


W70 - 2
4345 - 4

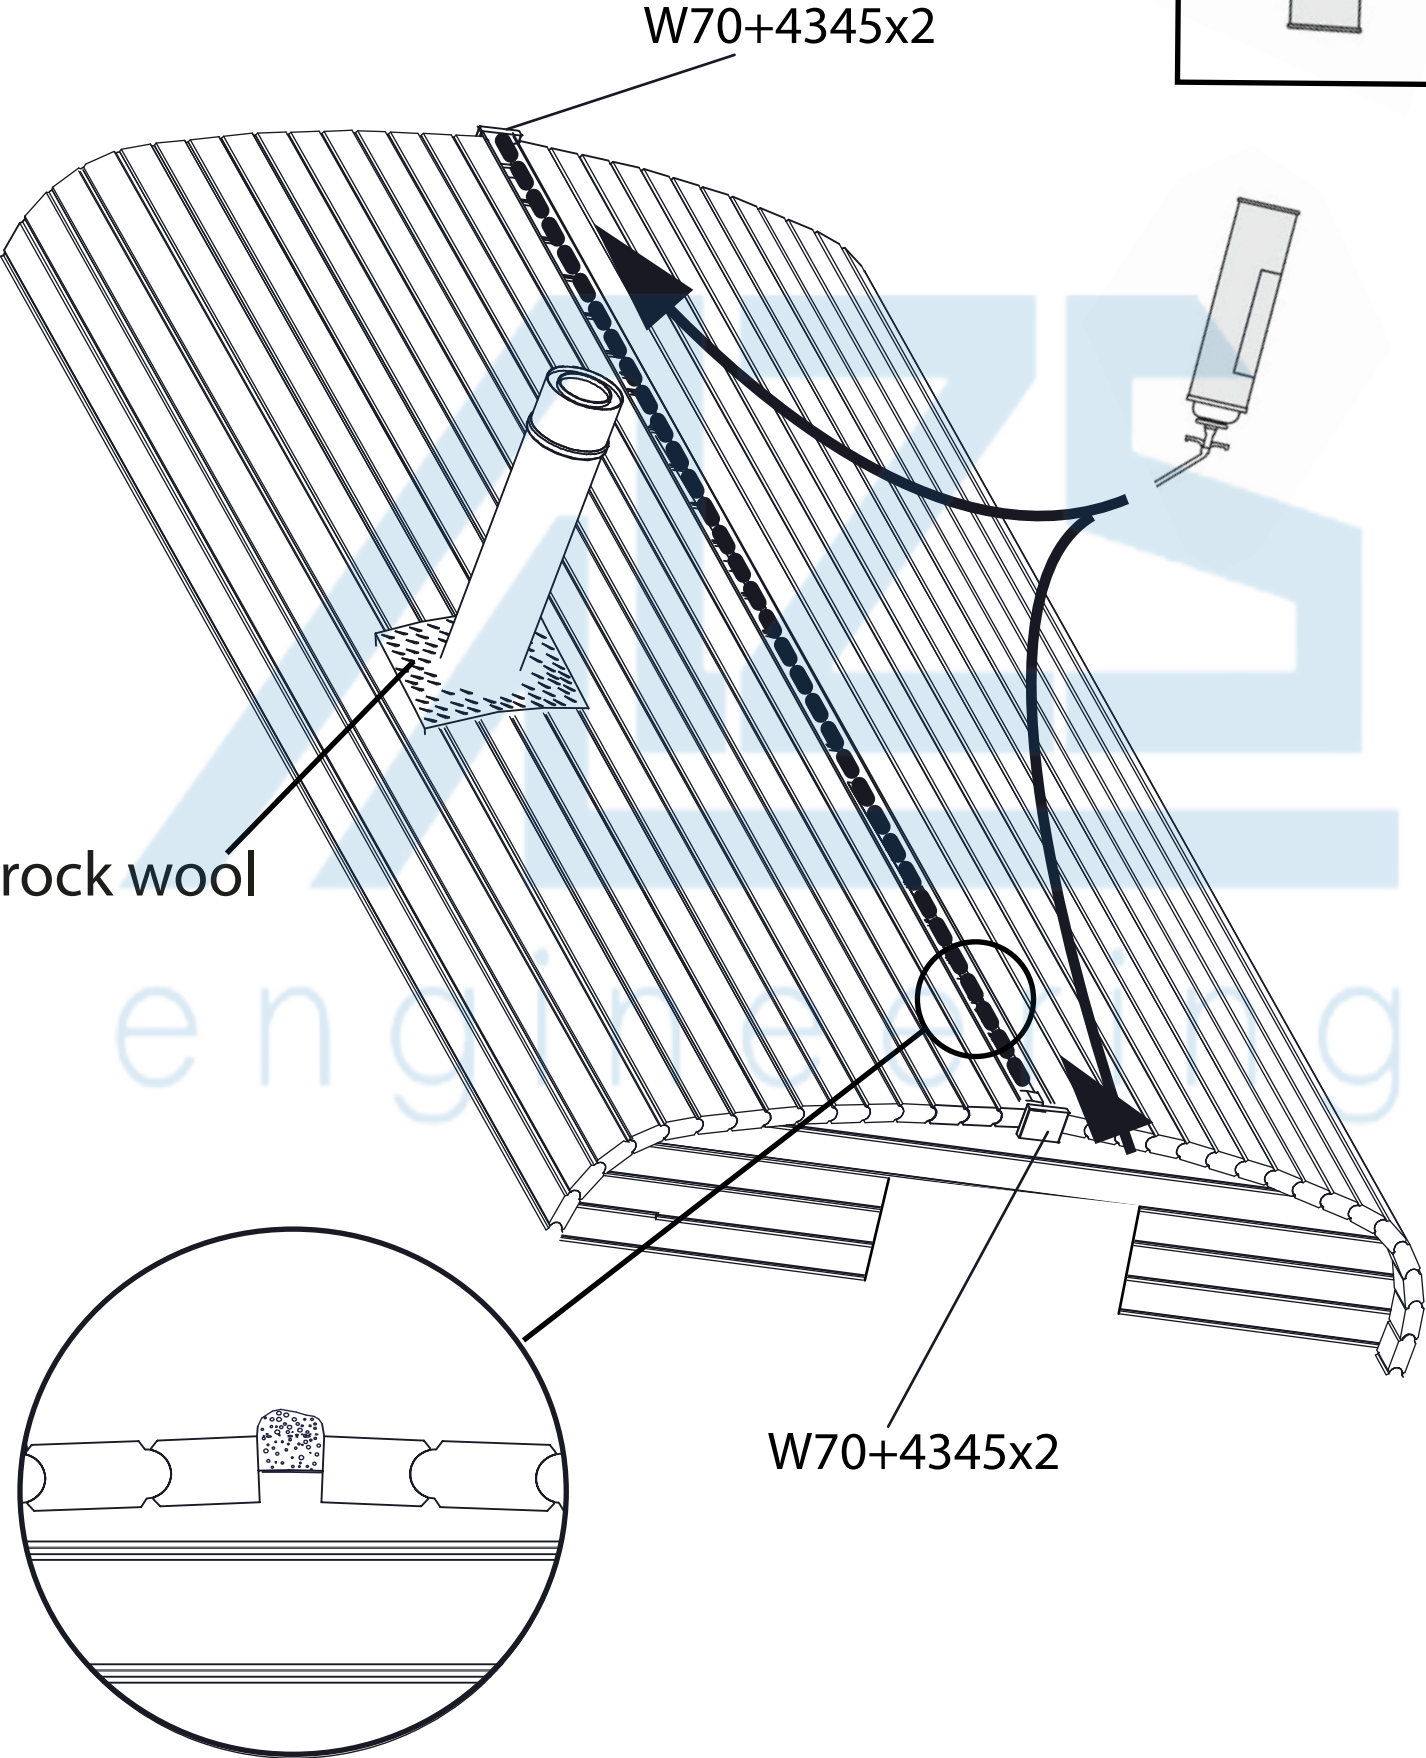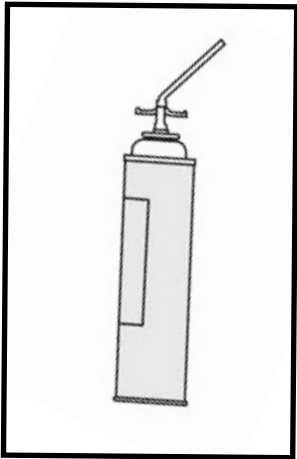

DG1800 - 2
4570 - 20


DG1800

x10

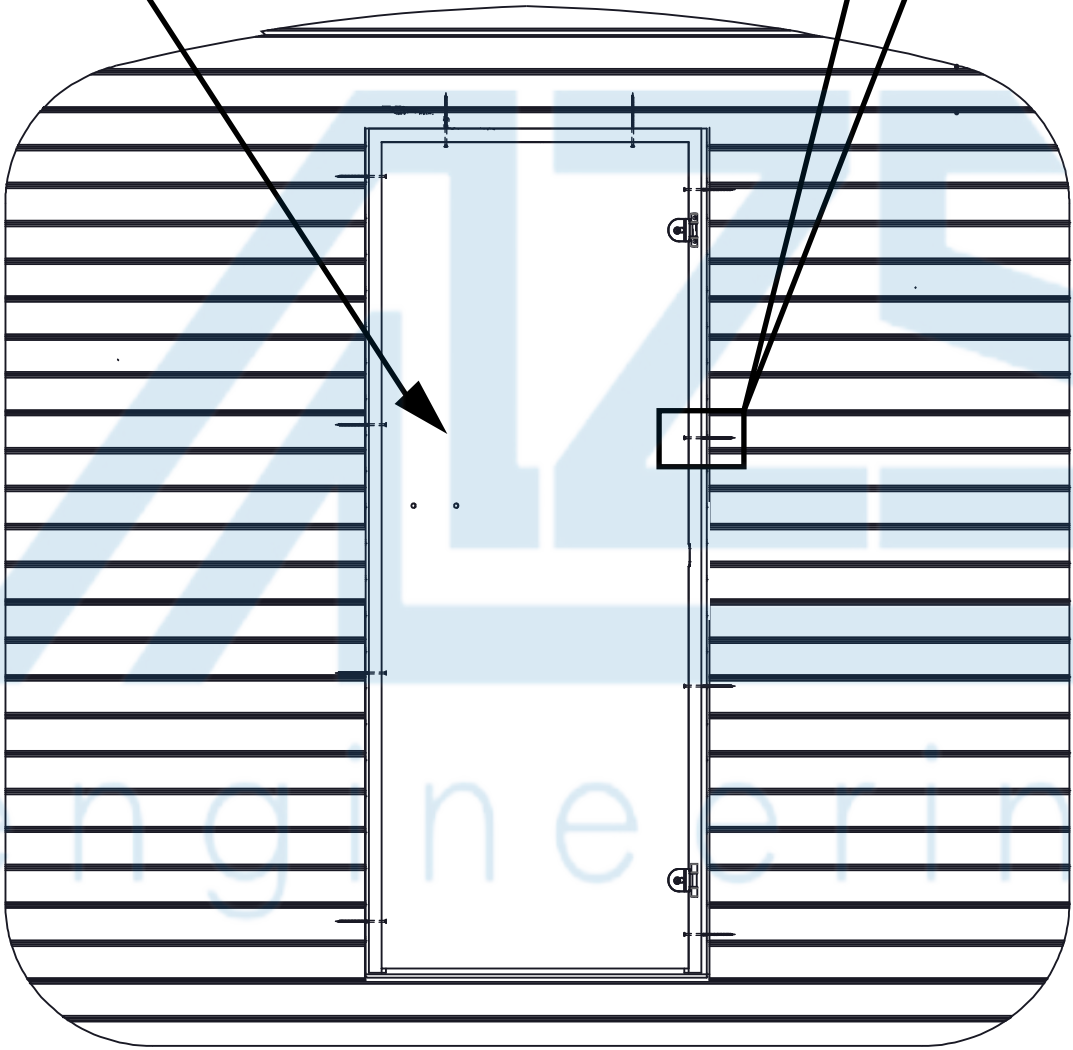


W1820 - 4
W880 - 2
4345- 32

OUTSIDE

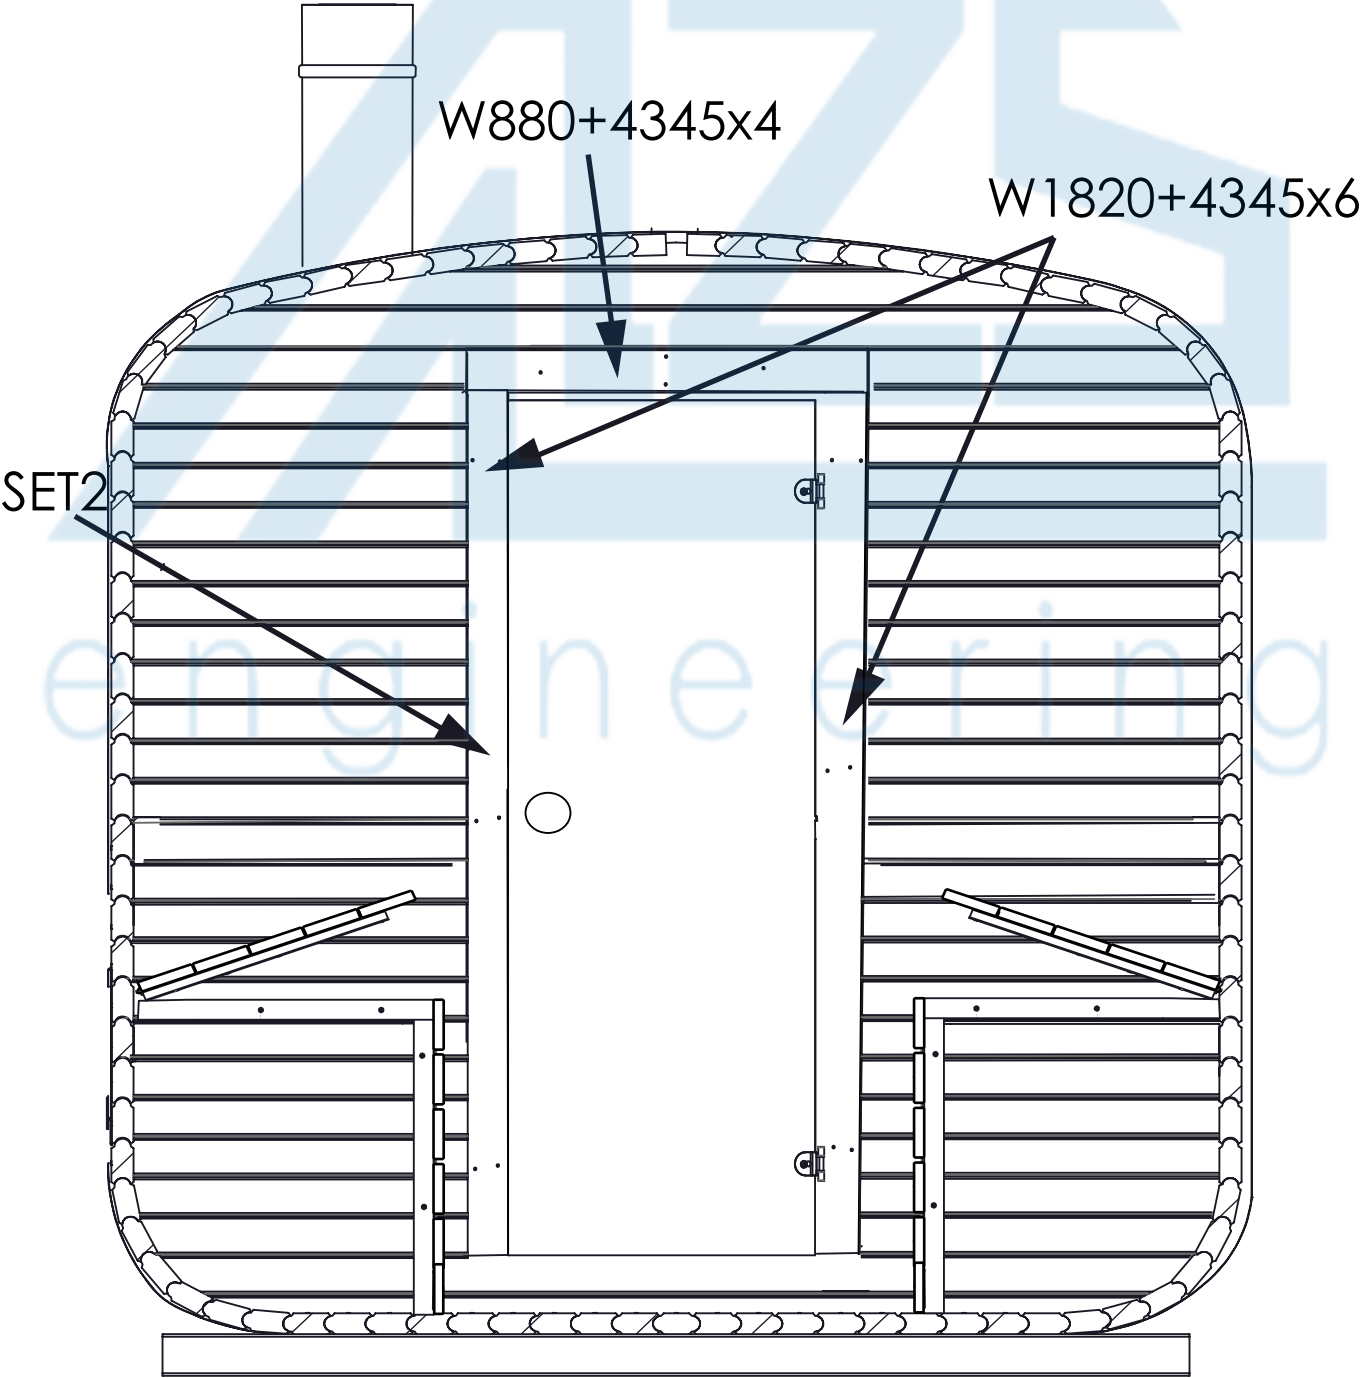


W1820 - 4
W800 - 2
WS1820 - 4
SET2 - 2
4345- 44



INSIDE

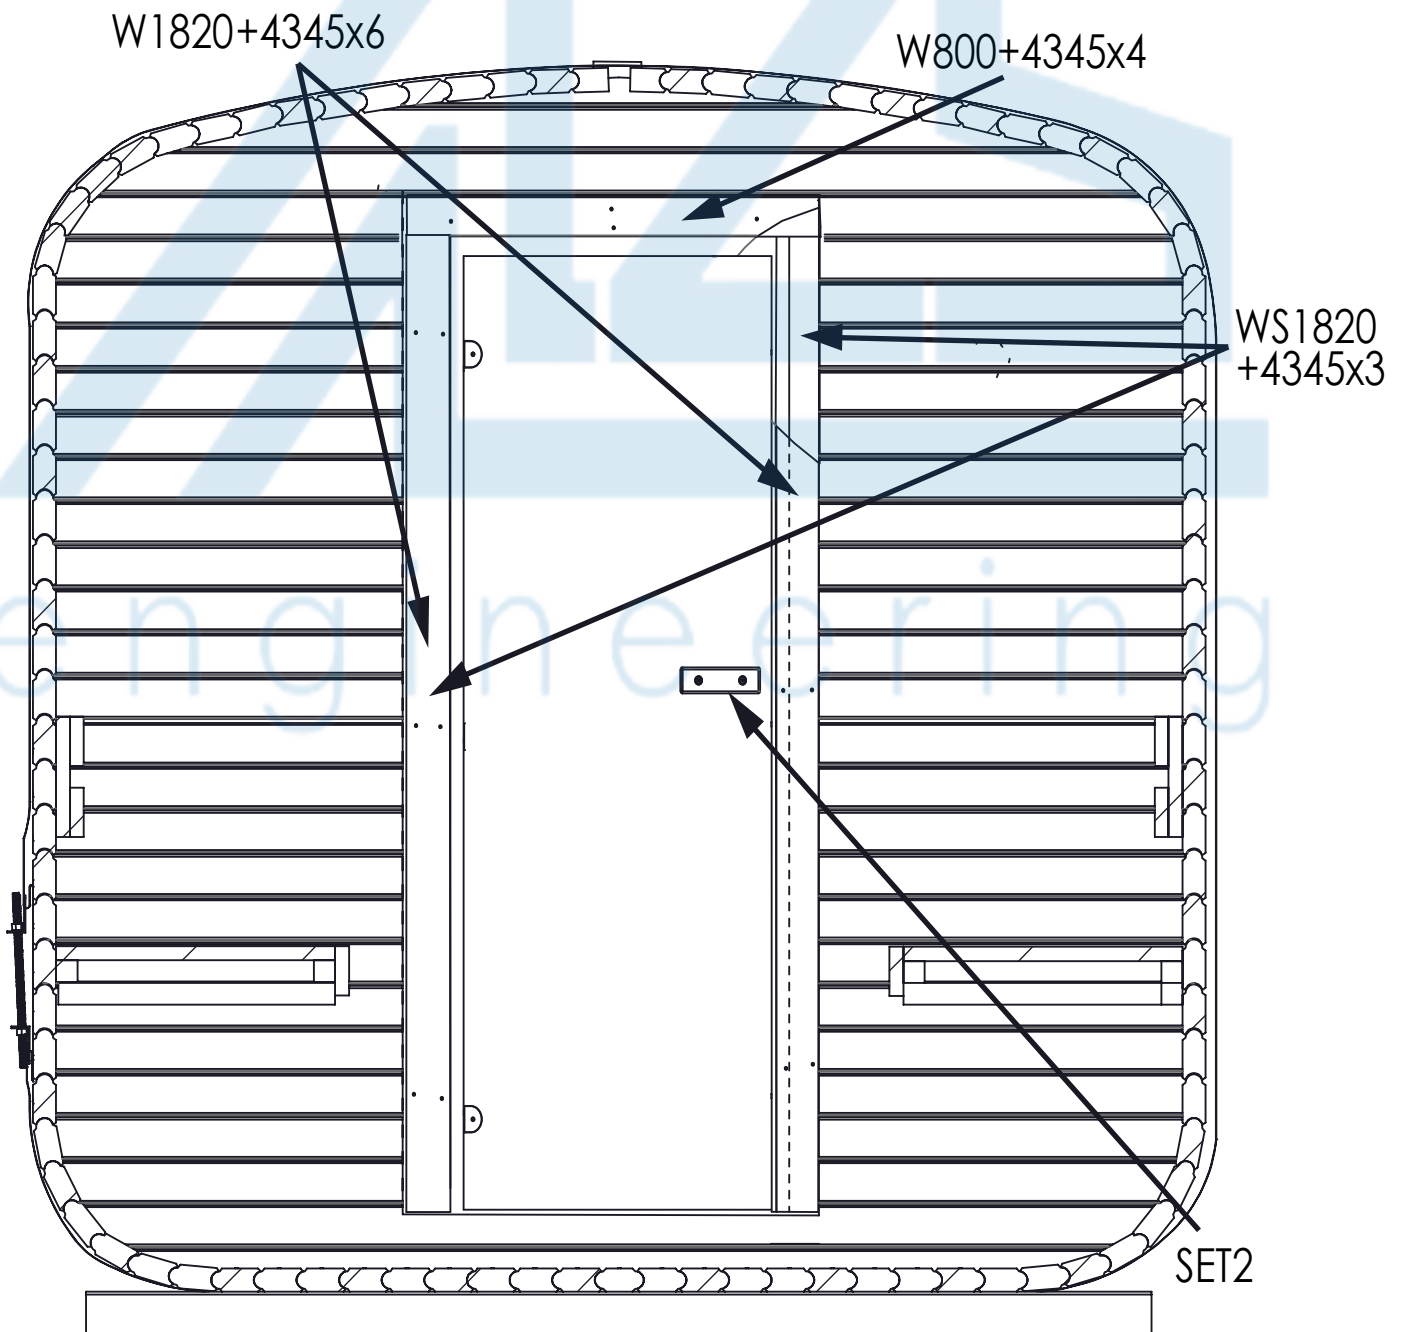

SET2

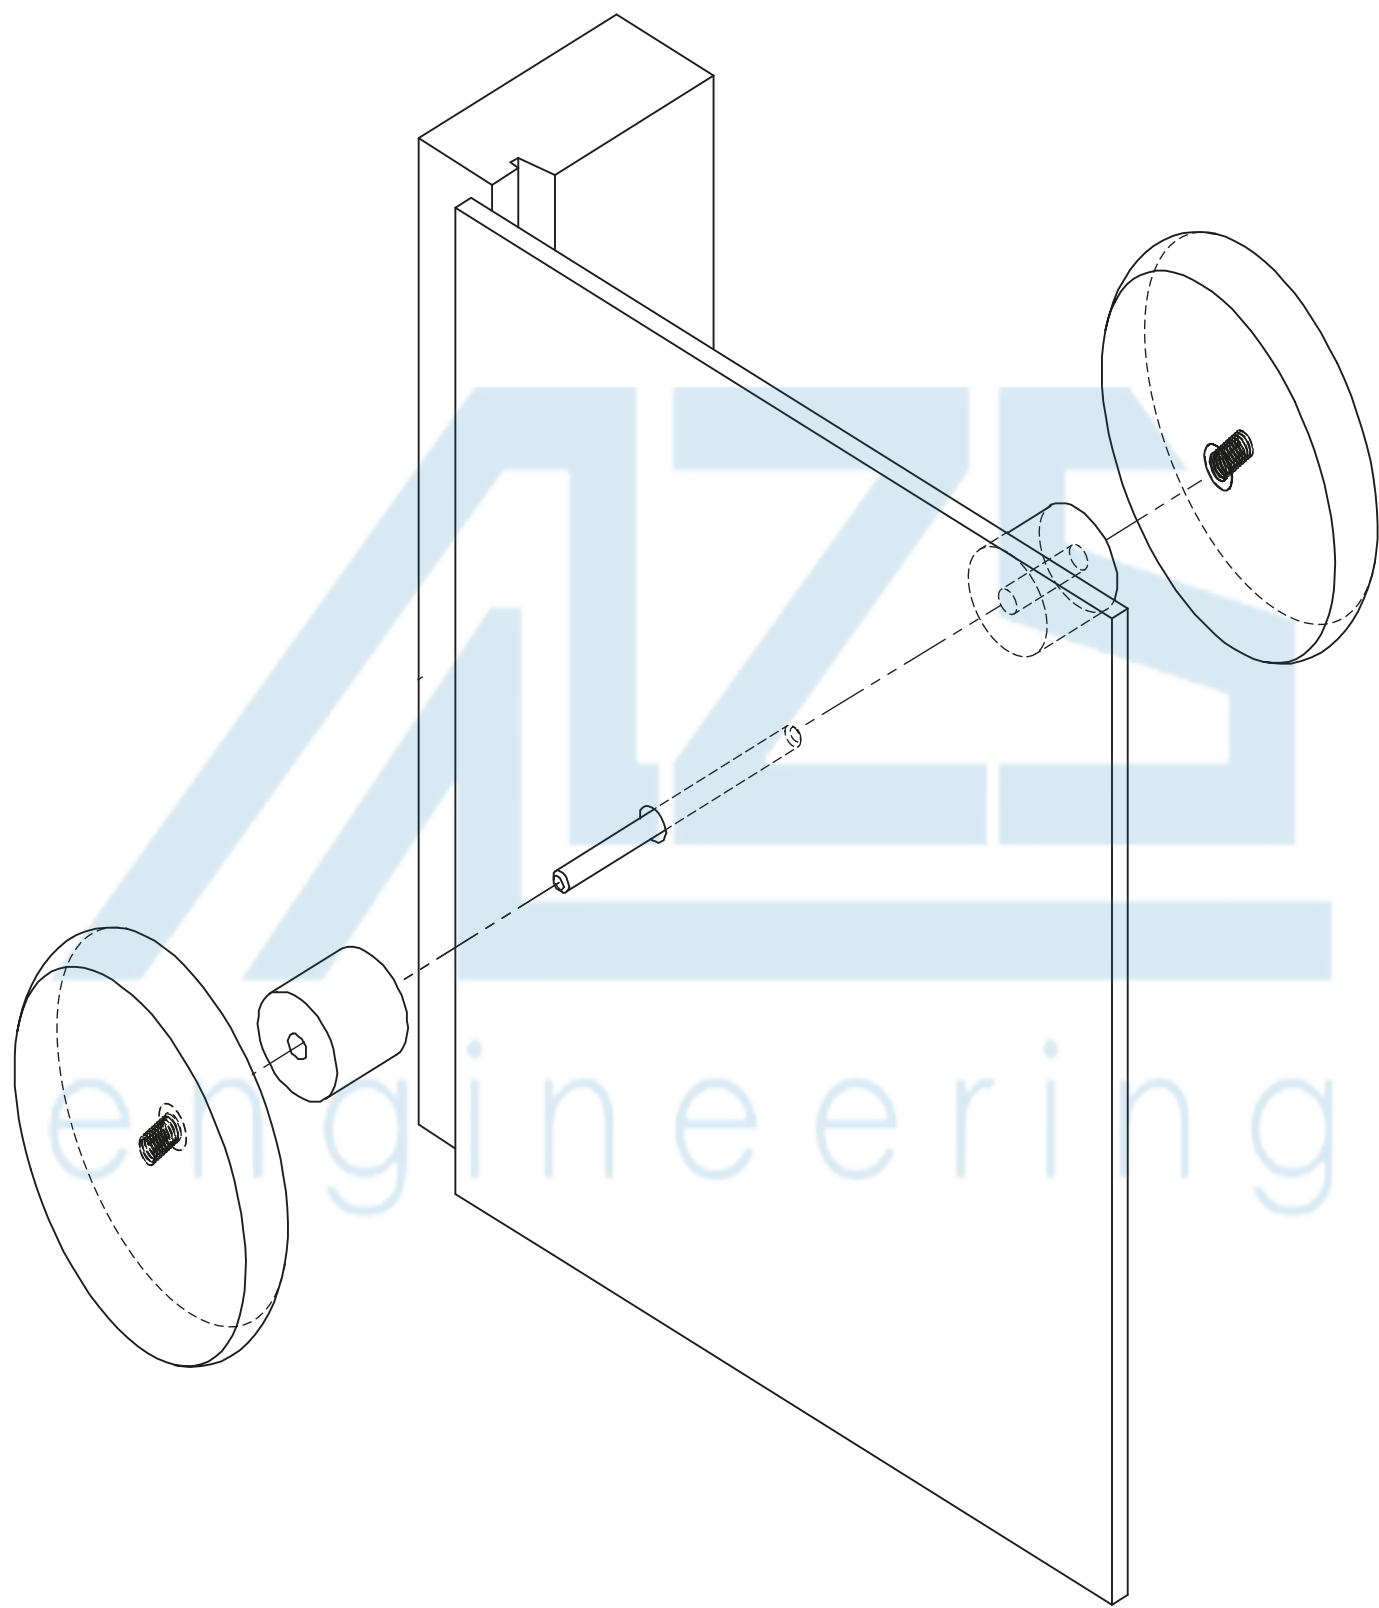


WS1680 - 4
E - 116
4345 - 12
9325 - 789

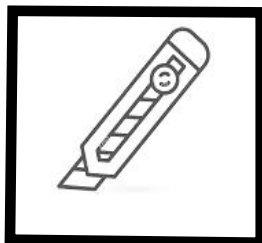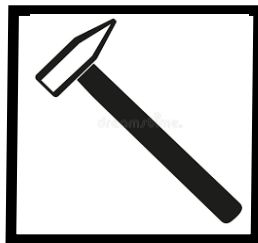

WS1680+4345x3


9325

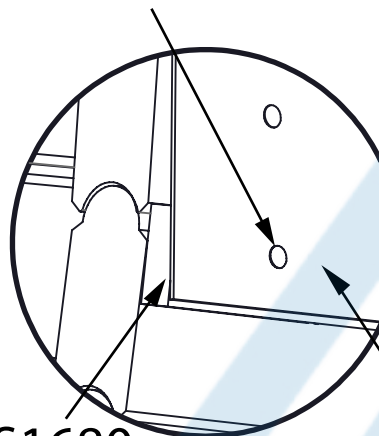

WS1680


E

E+9325x9

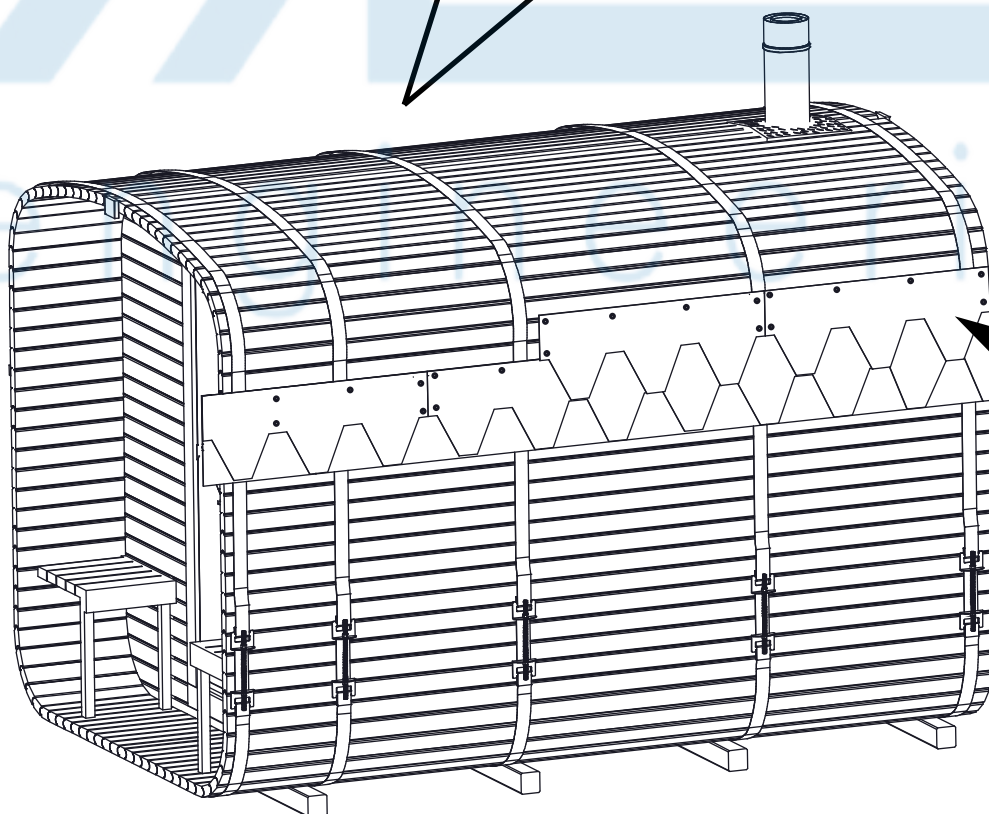

E+9325x6

G8 - 1
G9 - 1
9325 -12

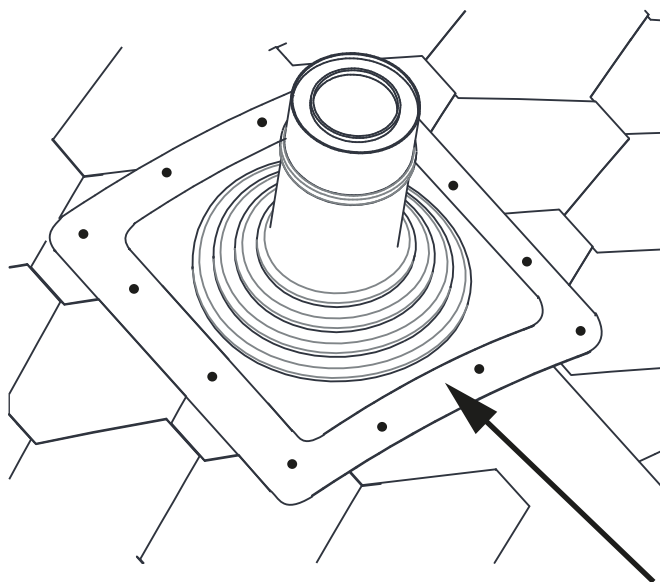

G8 + 12x9325

