



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X1 F48 (2015-2022)

X1 F48 KPL

SOLARRIDE Zaskloni dedykowane do BMW X1 F48 (2015-2022) KPL 3kg

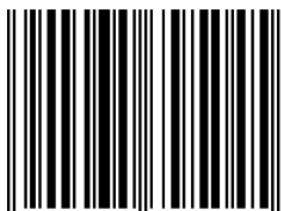

5 904035 795045 >

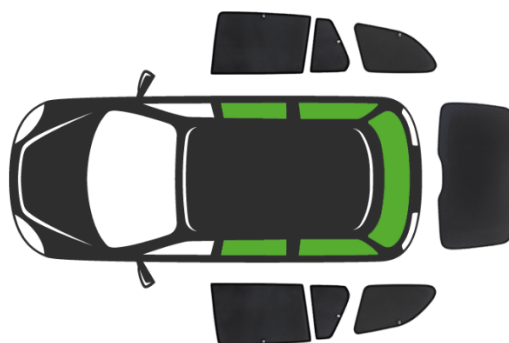

6 x







