


# USE AND CARE GUIDE

---

## ARBOR POINT COMMERCIAL DAY BED

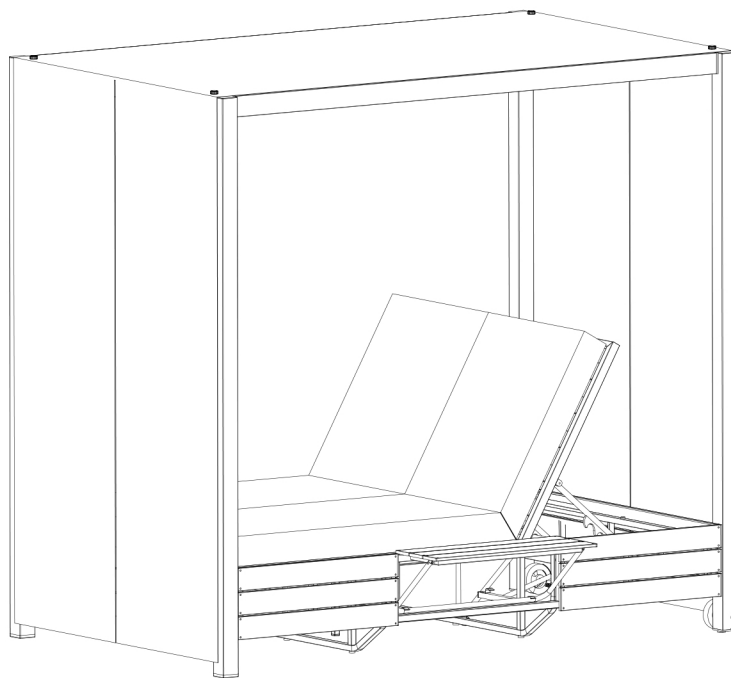


# Pre-Assembly

## PLANNING ASSEMBLY


Please read this entire instruction manual prior to assembly.

Verify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



**NOTE:** More than one person may be required to complete the assembly of this product.

## HARDWARE INCLUDED




**NOTE:** Hardware not shown to actual size.



Part	Description	Quantity
AA	M6 x 30 mm bolt	9
BB	M6 x 50 mm bolt	8
CC	M6 x 35 mm bolt	13
DD	M6 x 20 mm bolt	8
EE	M6 wrench	2
FF	M6 washer	38
GG	M6 spring washer	38
HH	Adjustable foot	4

PACKAGE CONTENTS

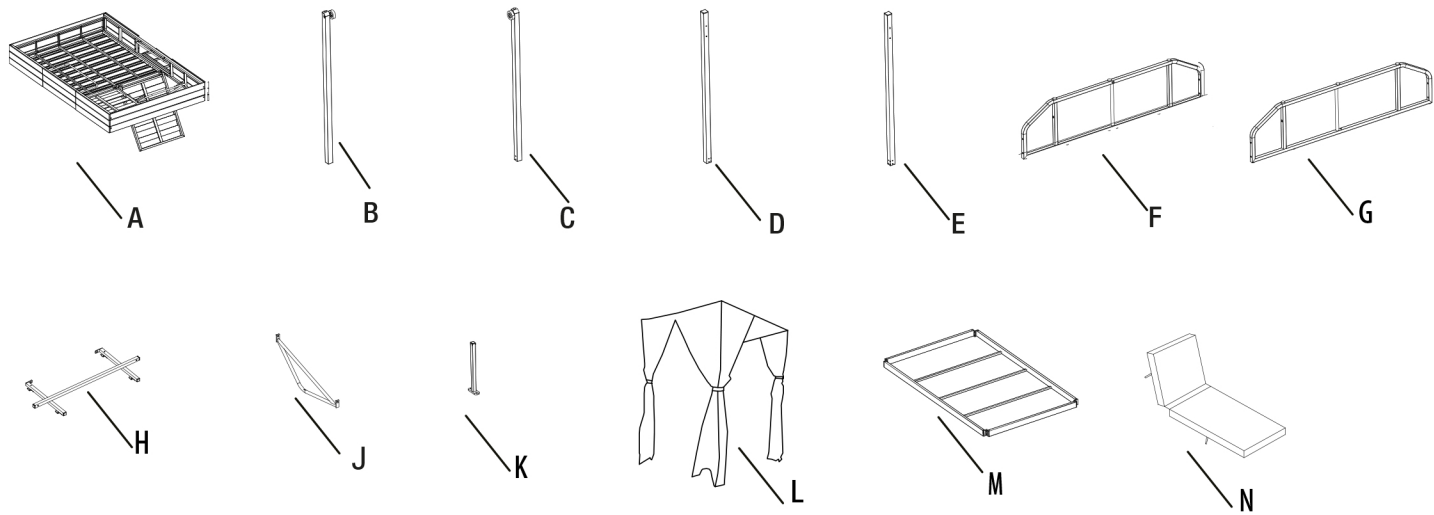

Part	Description	Quantity
A	Bay bed base	1
B	Back right leg	1
C	Back left leg	1
D	Front right leg	1
E	Front left leg	1
F	Back apron	1
G	Front apron	1
H	Support bar	2
J	Back support frame	1
K	Middle leg	1
L	Canopy cover	1
M	Top frame	1
N	Cushion	2


# Assembly

## 1 Attaching the back support frame to the back apron

- Attach the back support frame (J) to the back apron (F) with M6 washers (FF), M6 spring washers (GG) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).




**NOTE:** Please ensure all bolts are aligned and assembled correctly. Do not tighten all the bolts until Step 10.

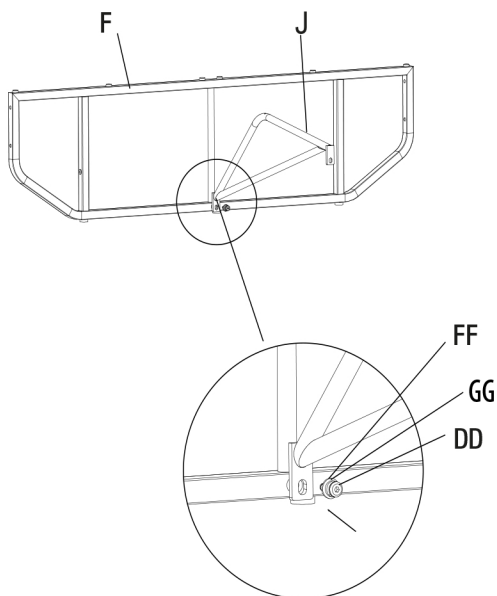


## 2 Attaching one support bar to the front and back aprons

- Attach the support bar (H) to the front and back aprons (G and F) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).

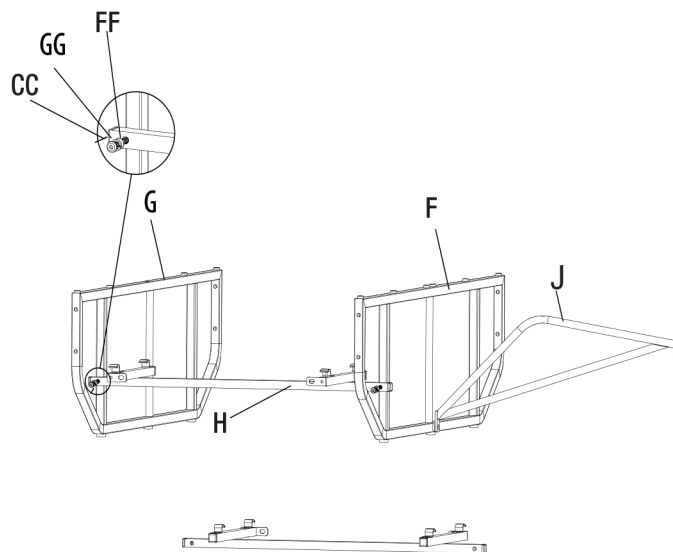


## 3 Attaching another support bar to the front and back aprons

- Attach another support bar (H) to the front and back aprons (G and F) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).

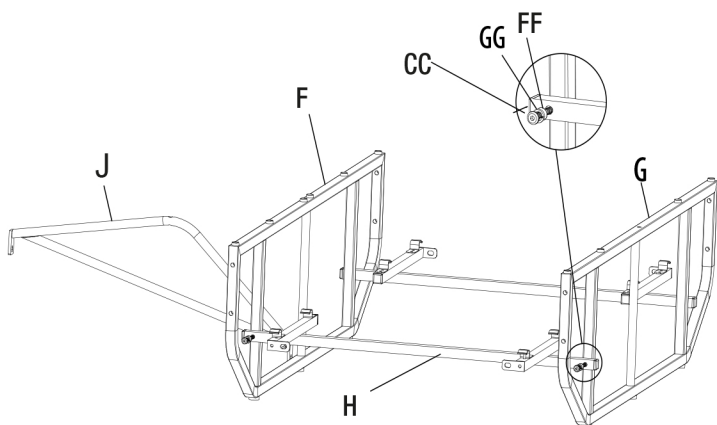

## 4 Attaching the middle leg and support bars to the day bed base

- Attach the middle leg (K) and the support bars (H) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).

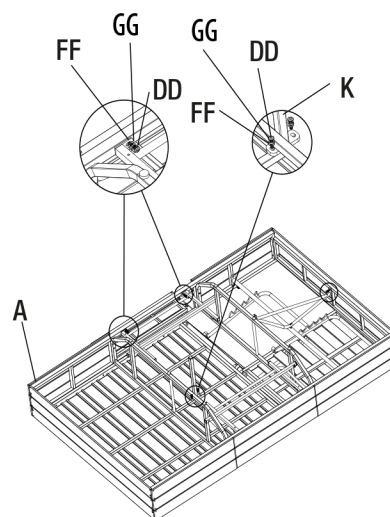




## Assembly (continued)


### 5 Attaching the front and back aprons to the day bed base

- Attach the front apron (G) and back apron (F) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).
- Attach the back support frame (J) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG), M6 x 30 bolts (AA) and M6 x 20 mm bolts (DD) using the M6 wrench (EE).

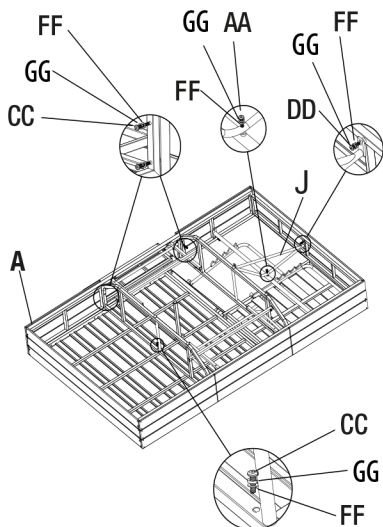


### 6 Attaching the back left leg to the day bed base

- Attach the back left leg (C) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

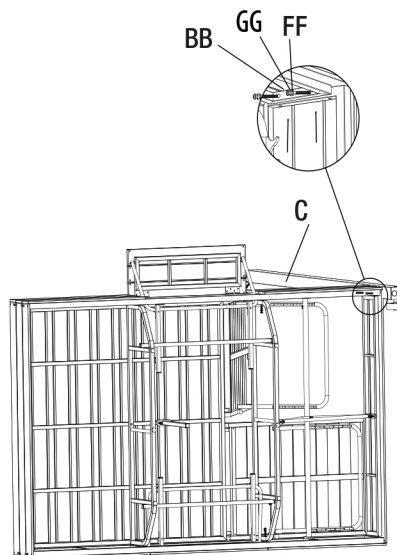


### 7 Attaching the back right leg to the day bed base

- Attach the back right leg (B) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

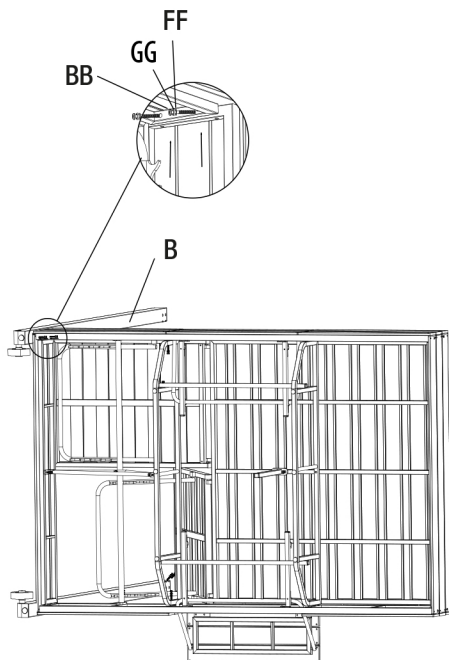

### 8 Attaching the front left leg to the day bed base


- Attach the front left leg (E) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

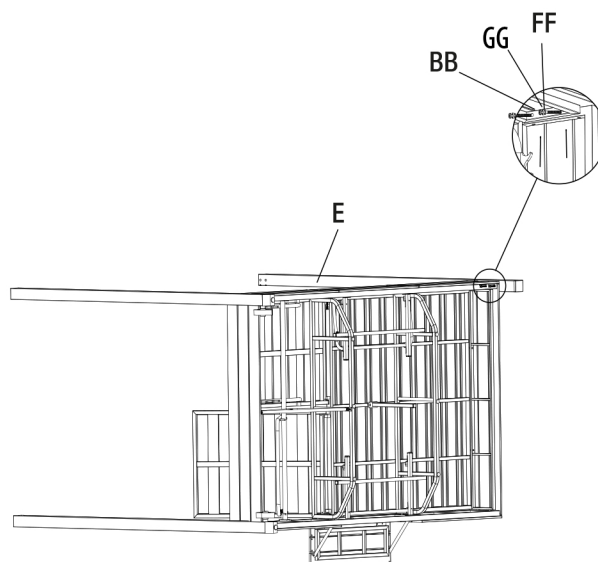

## Assembly (continued)


### 9 Attaching the front right leg to the day bed base

- Attach the front right leg (D) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 50 mm bolts (BB) using the M6 wrench (EE).

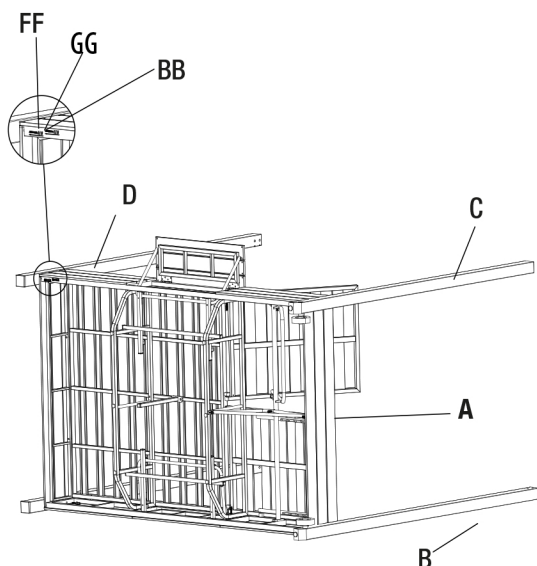


### 10 Attaching the top frame to the day bed base

- Attach the top frame (M) to the day bed base (A) with M6 washers (FF), M6 spring washers (GG) and M6 x 35 mm bolts (CC) using the M6 wrench (EE).
- Tighten all the bolts with the wrench (EE).

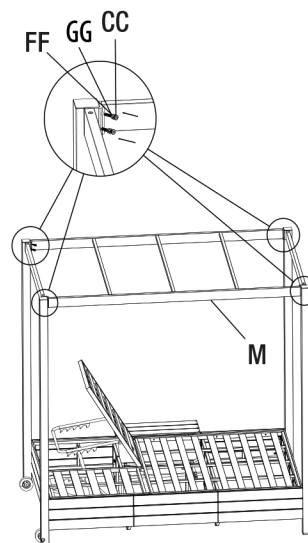

### 11 Adding the cushions

- Place the cushions (N) on the day bed.

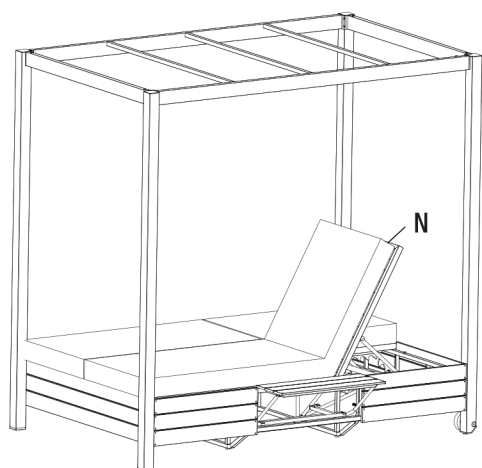

### 12 Attaching the canopy cover to the day bed base

- Attach the canopy cover (L) to the finished frame with adjustable feet (HH).
- The day bed now is ready for use.

