



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Renault Captur I (2013-2019)

CAPTUR 1 KPL

SOLARRIDE Zaskonki, osłony przeciwsłoneczne do Renault Captur I (2013-2019) KPL 3kg

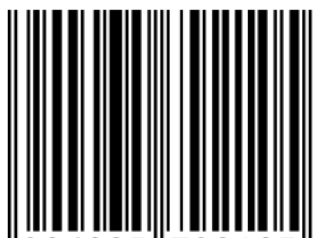

5 904035 792105 >

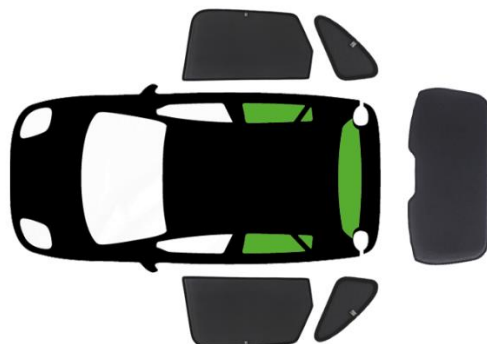


4 x



4 x



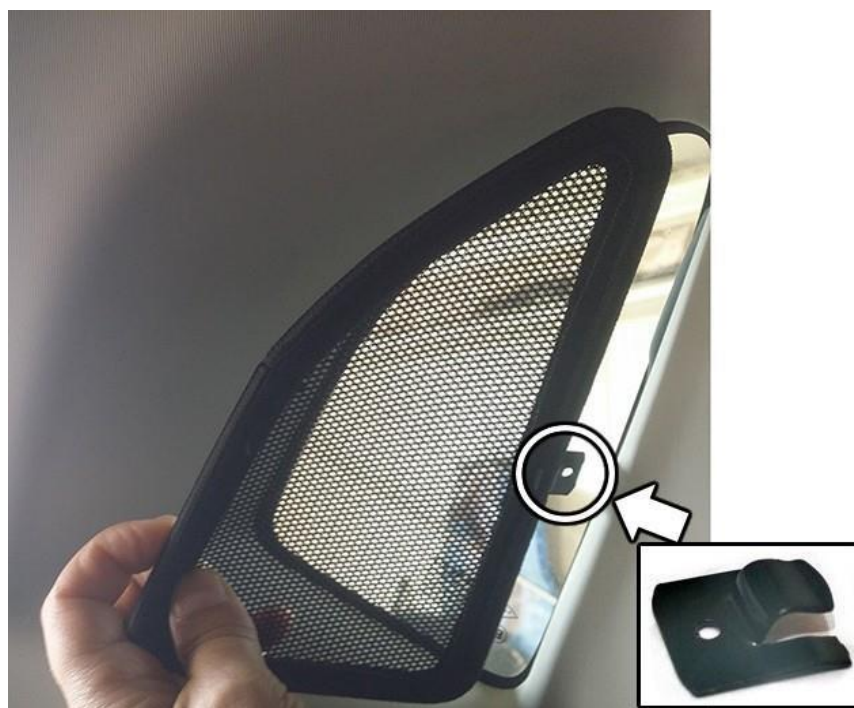



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



