



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



VW Volkswagen Golf 4 IV Variant (1997-2003)

G4K DR



VW Volkswagen Bora Variant (1998-2005)

BORA K DR

SOLARRIDE Zakazník do VW Volkswagen Golf IV Kombi (1997-2003) (420W 1kg)




5 904035 794383 >

SOLARRIDE Zakazník od výrobce pro instalaci do VW Volkswagen Bora Kombi (1998-2005) (300W 1kg)



5 904035 794406 >

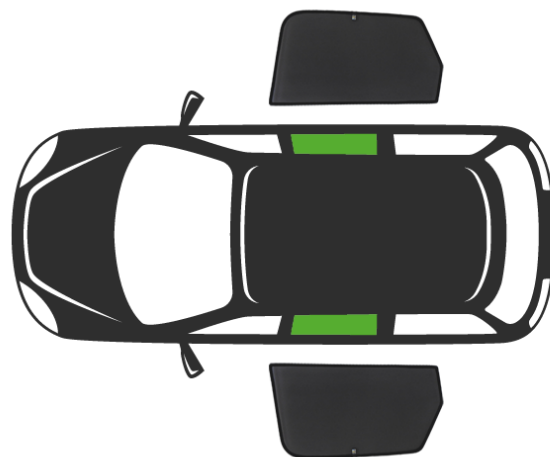

4 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

