


ASSEMBLY INSTRUCTION

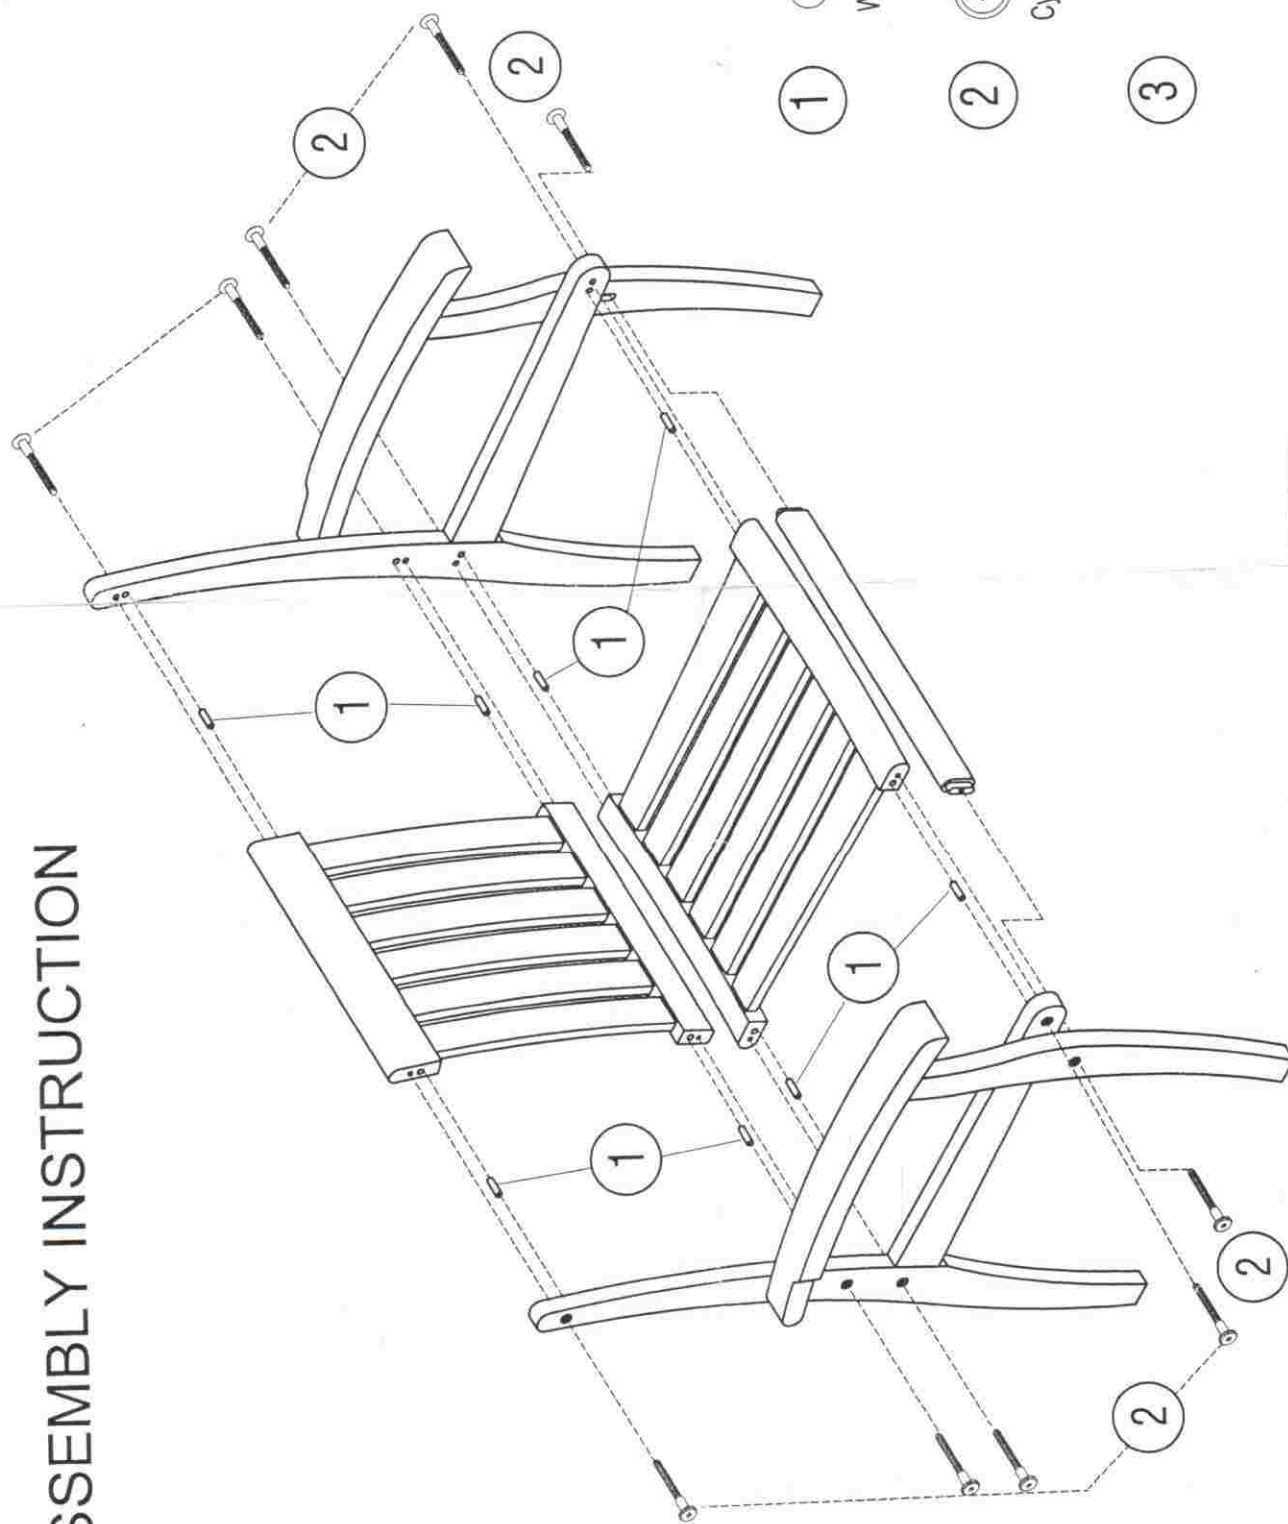

1




Wooden Dowel Ø10 x 30 mm x 8 Pcs

2



Cylinder Head Bolt (7 x 90)mm x 10 PCS

3



ALLENKEY 1 PCE

FOTEL FLORENCE