

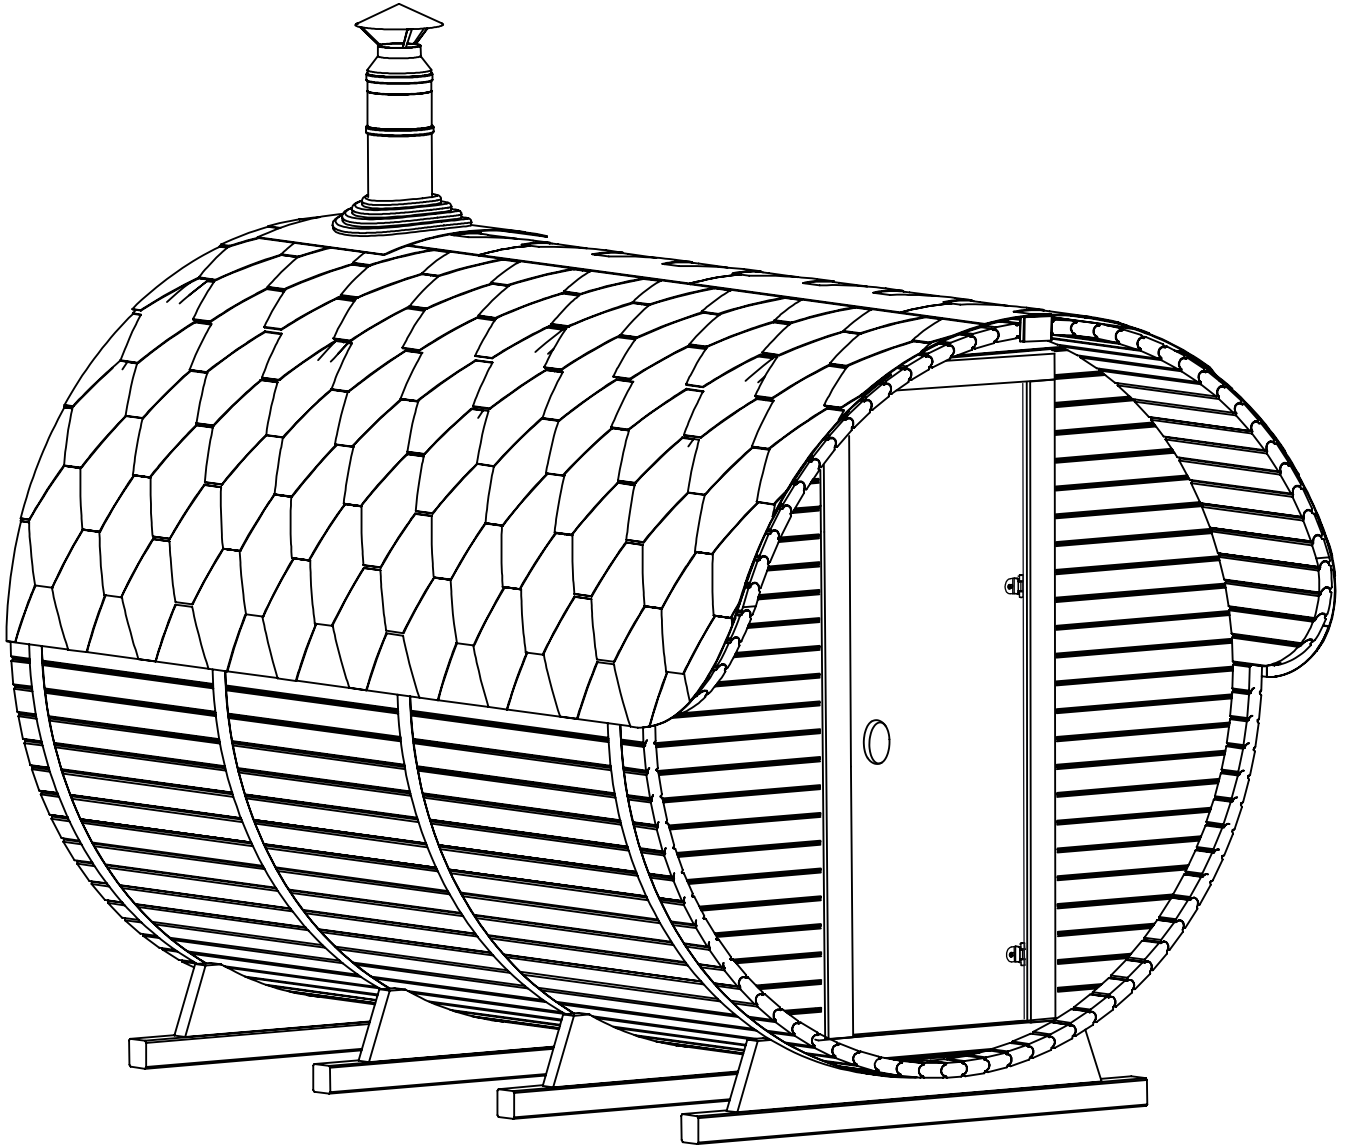
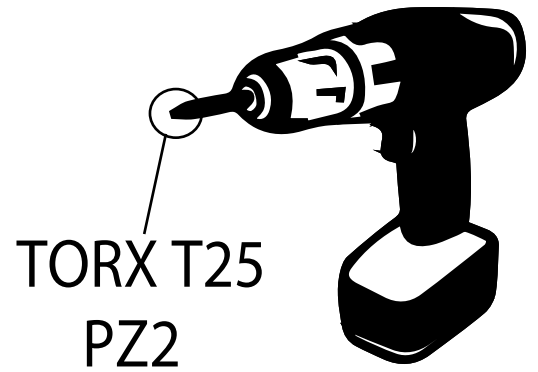



WOODDEN BARREL SAUNA COMFORTPROM 3m WITH VISOR

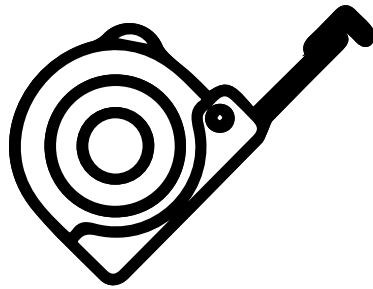


necessary tools

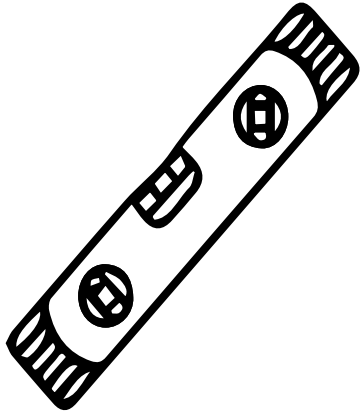



TORX T25
PZ2

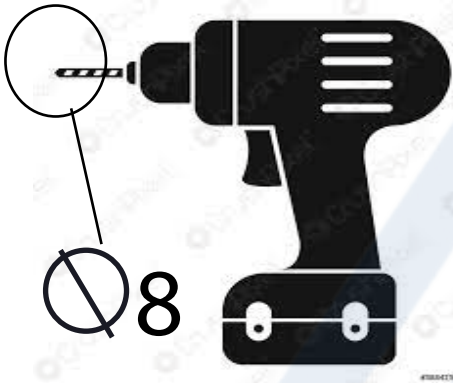

8

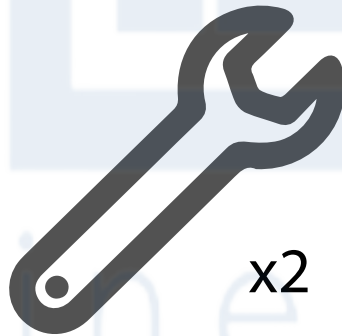


x2

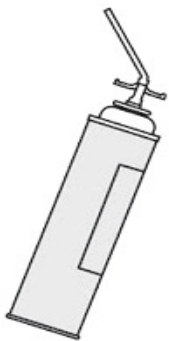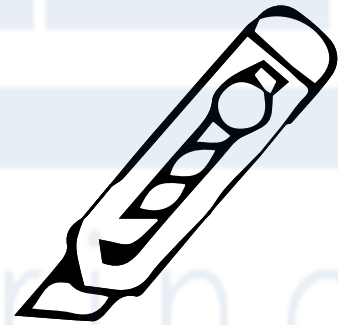


impregnation

+









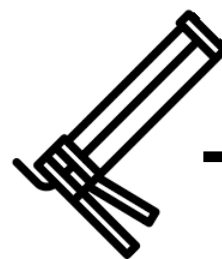










+

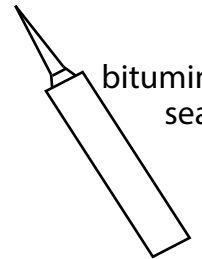


bituminous
sealant


NOT INCLUDED!

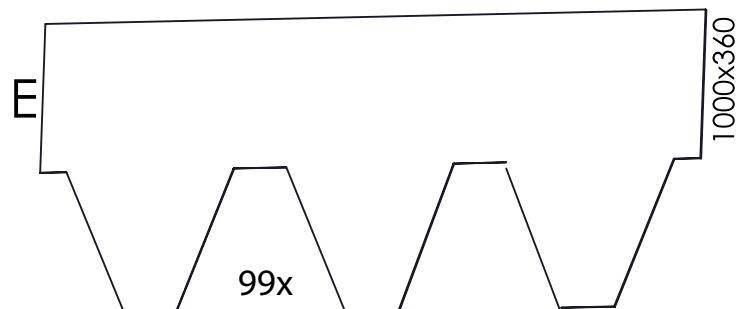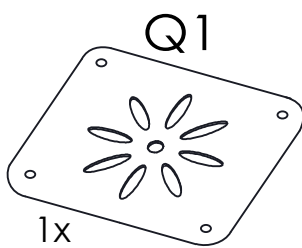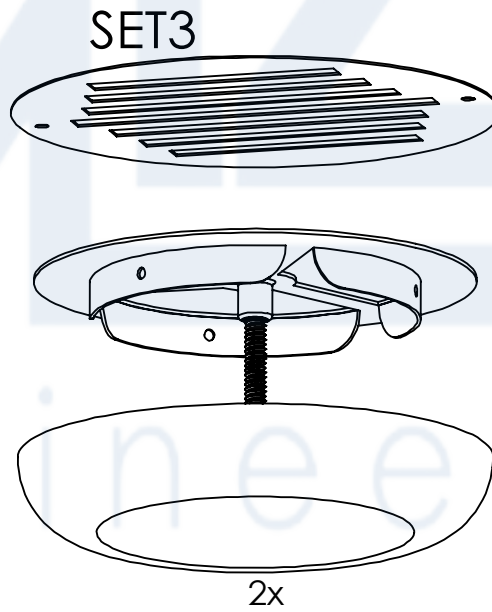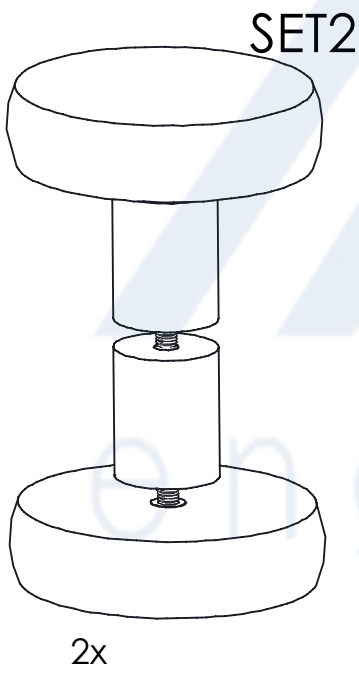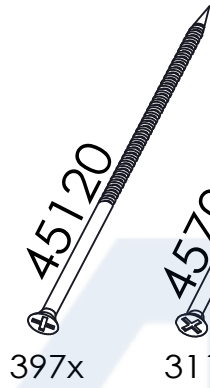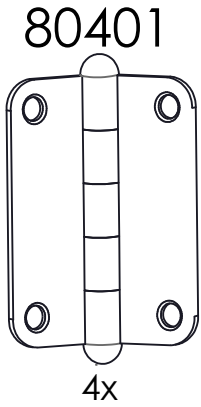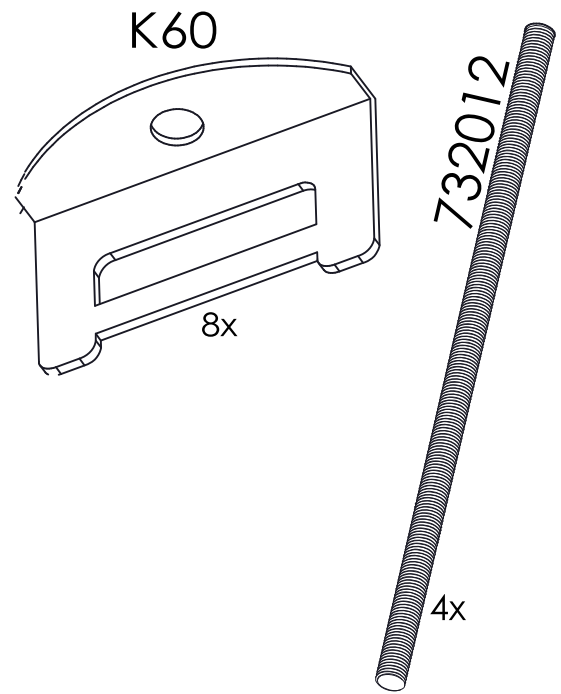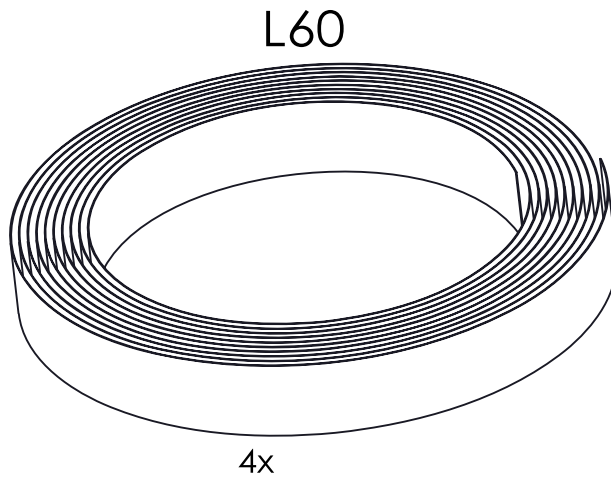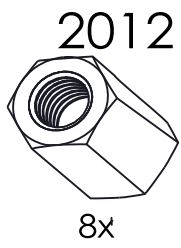

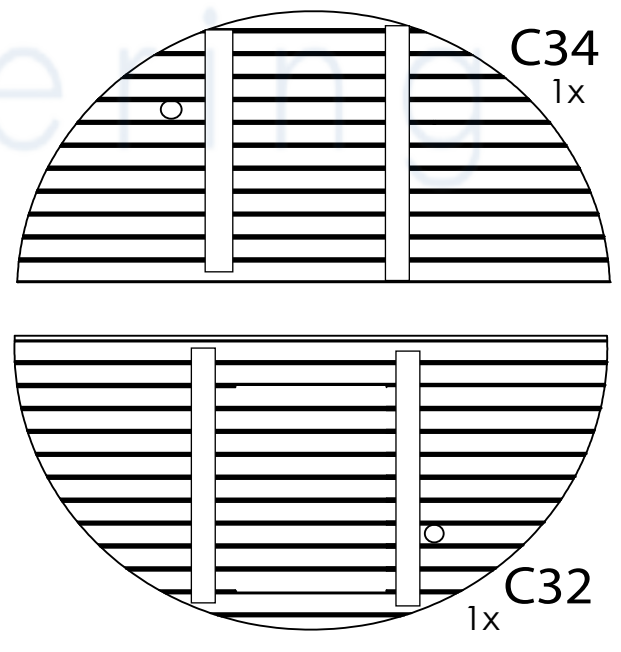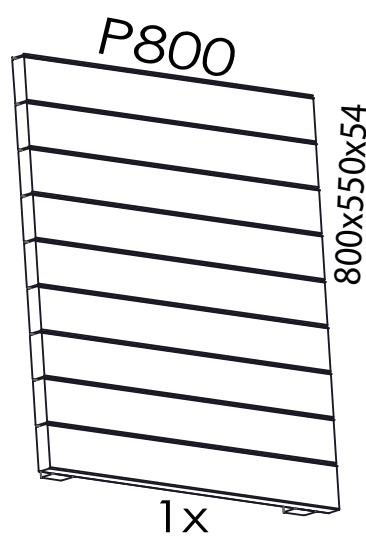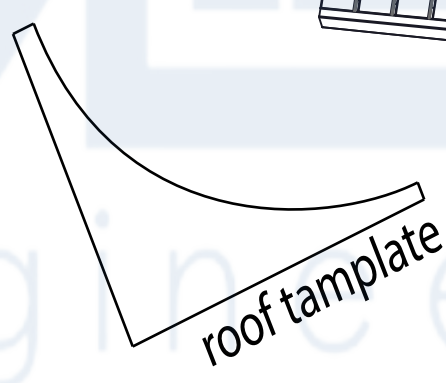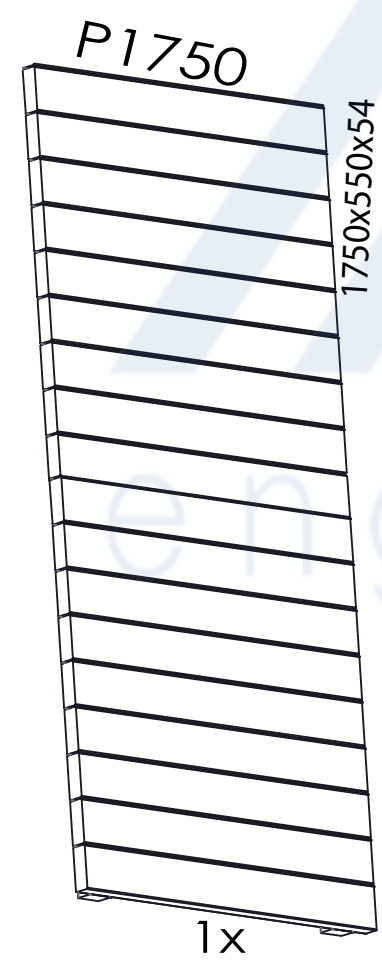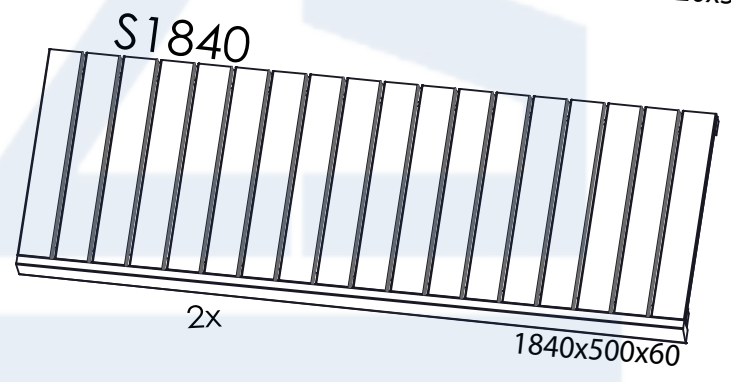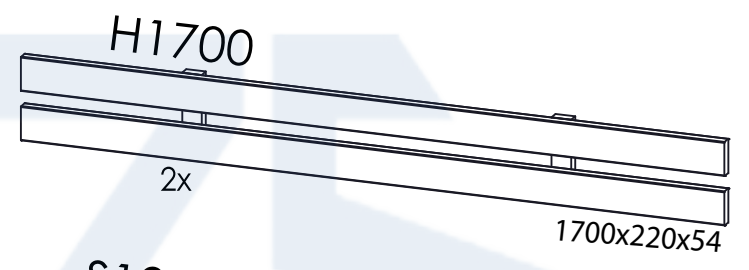
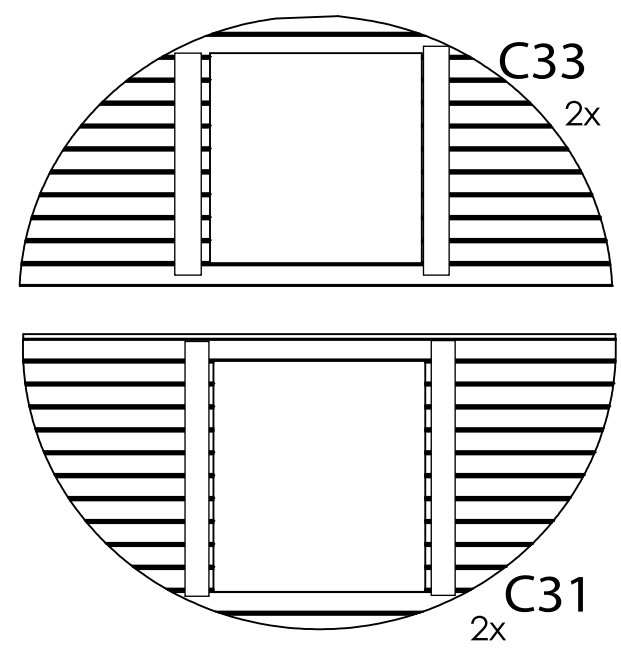
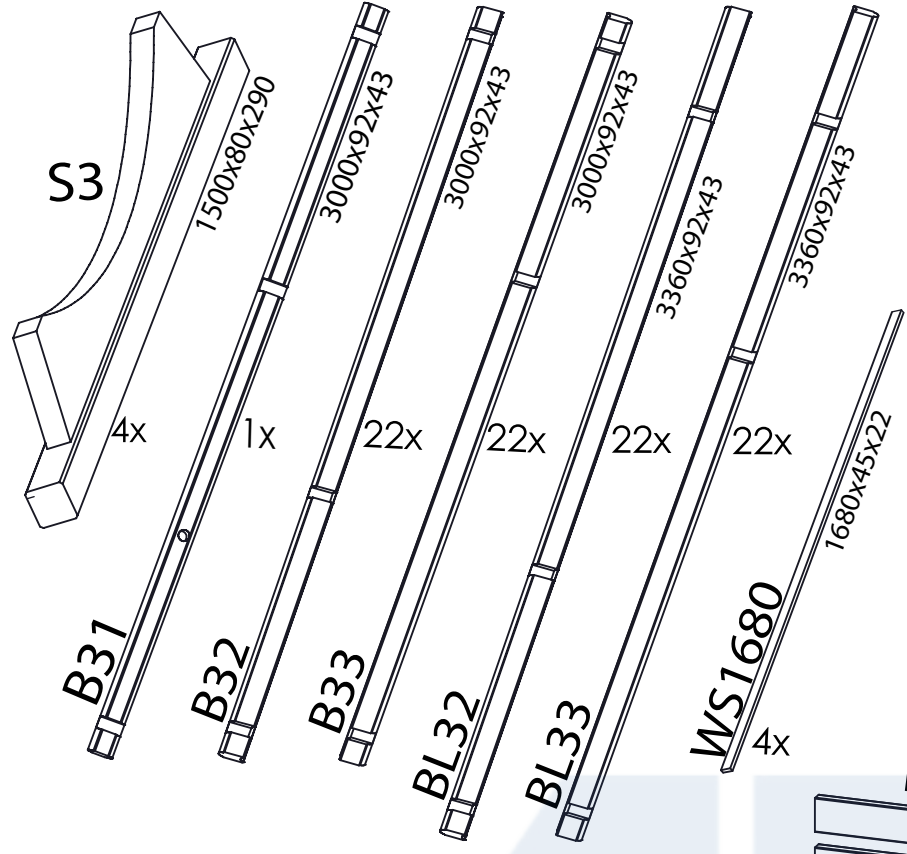


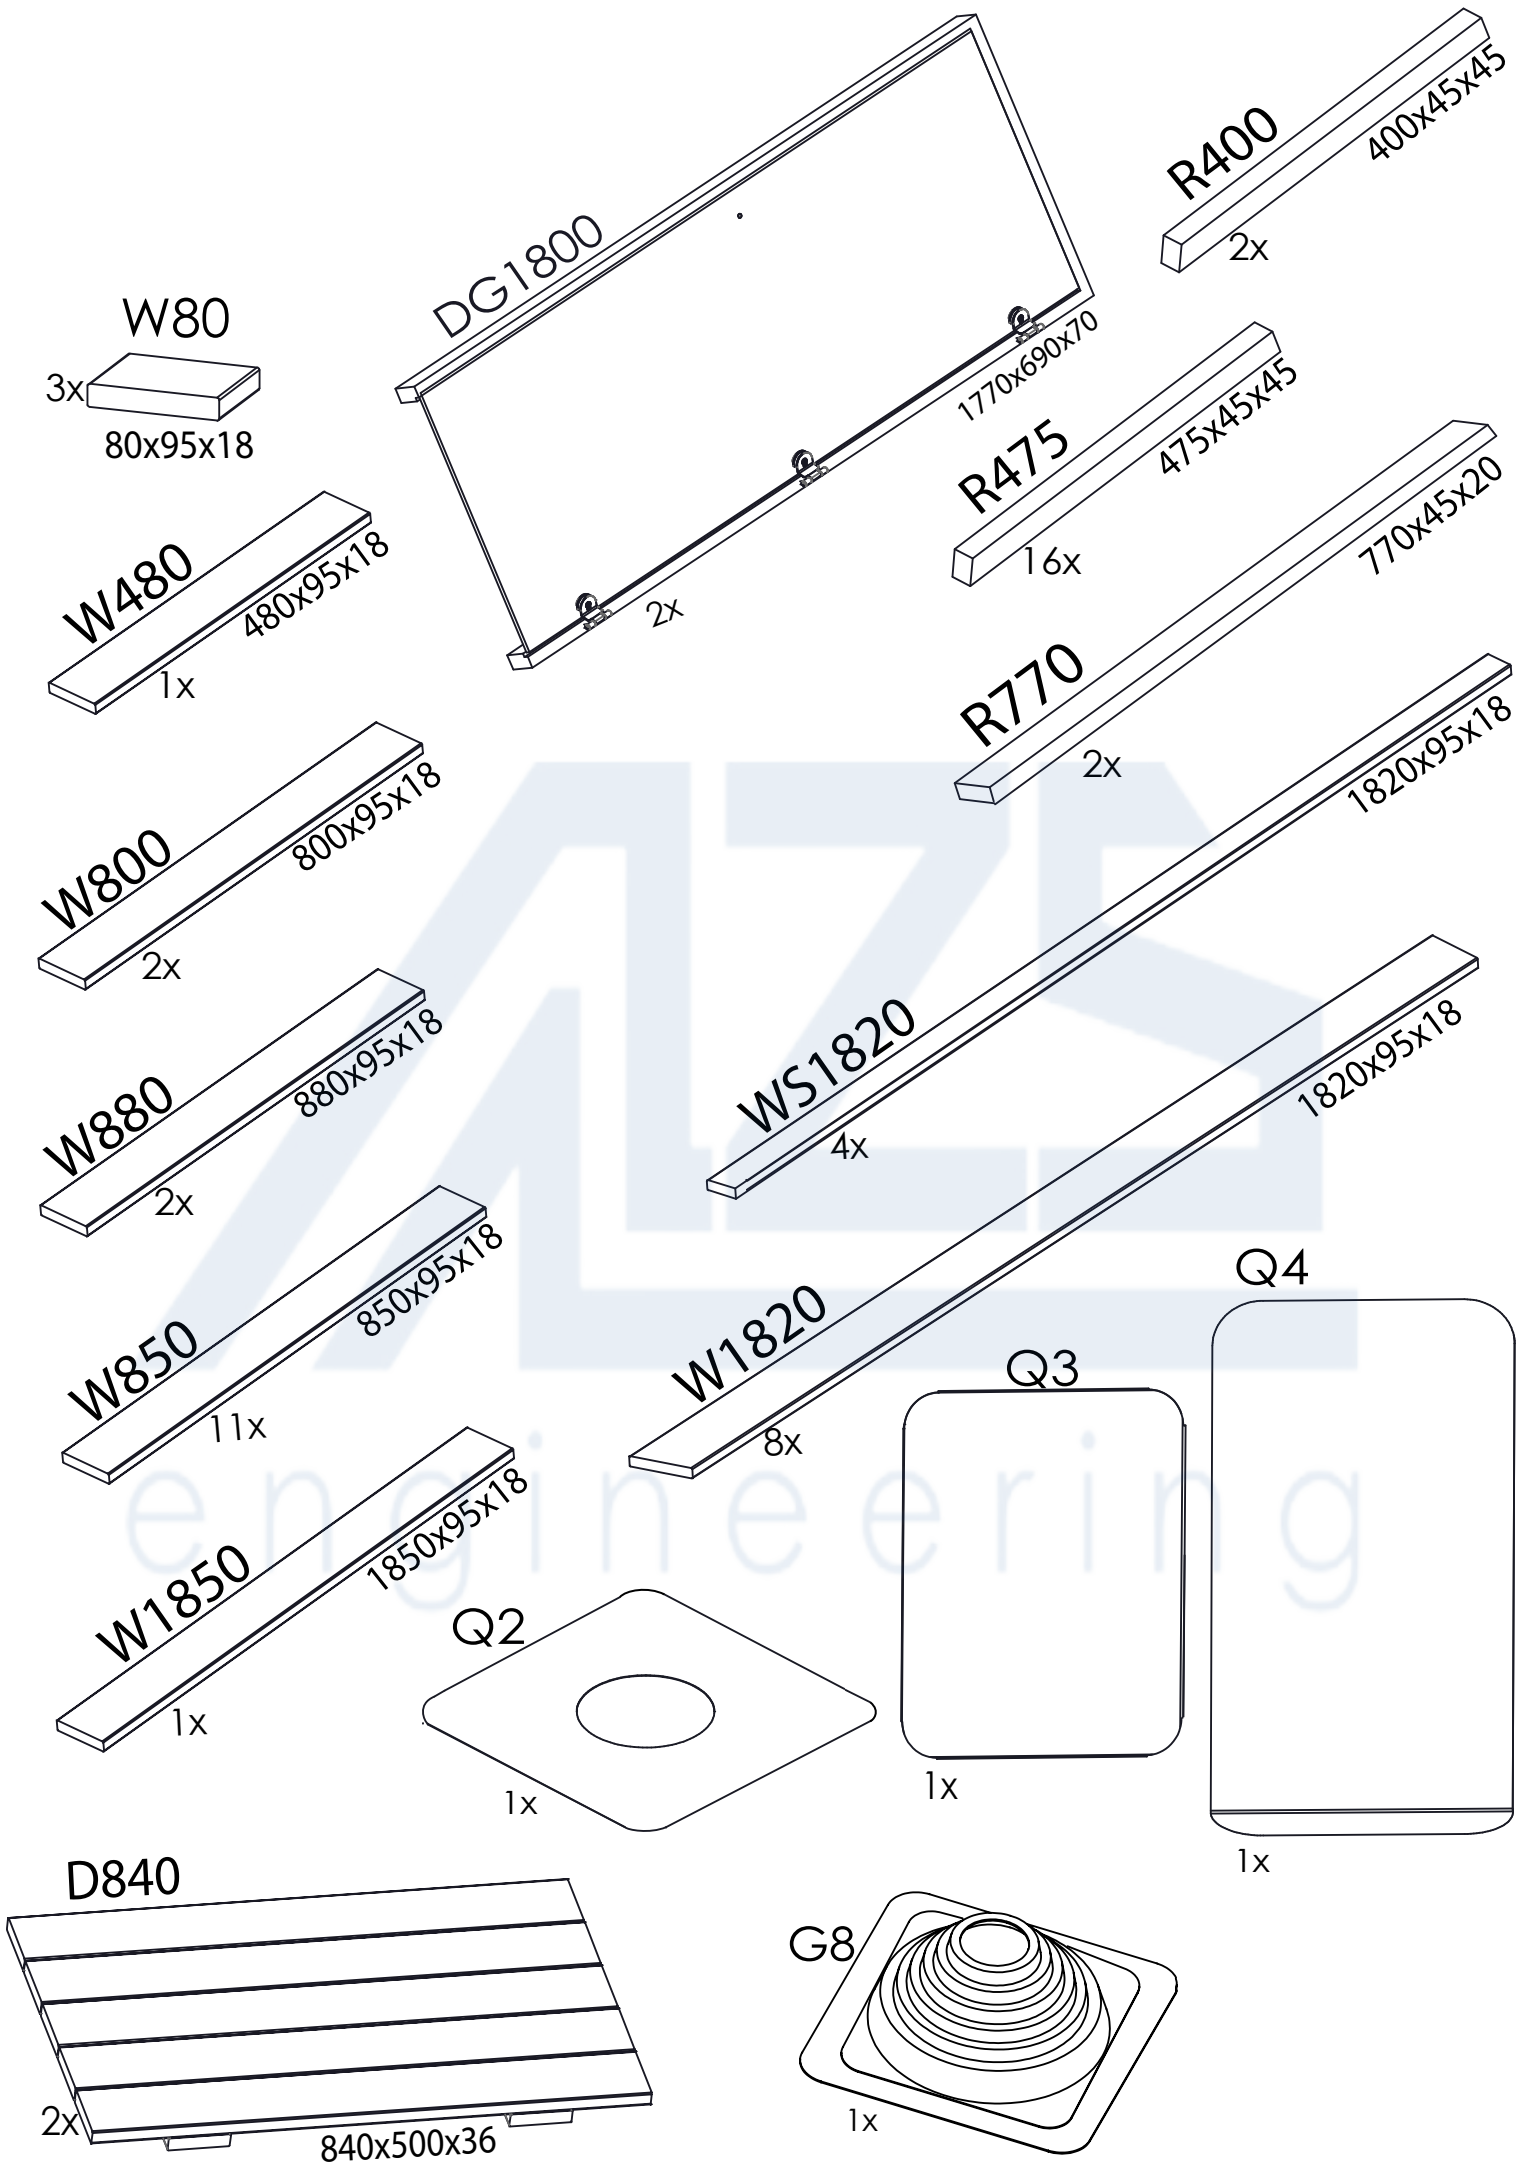



A SET FOR INSTALLING WOOD-BURNING STOVE (NOT INCLUDED).
PURCHASED SEPARATELY

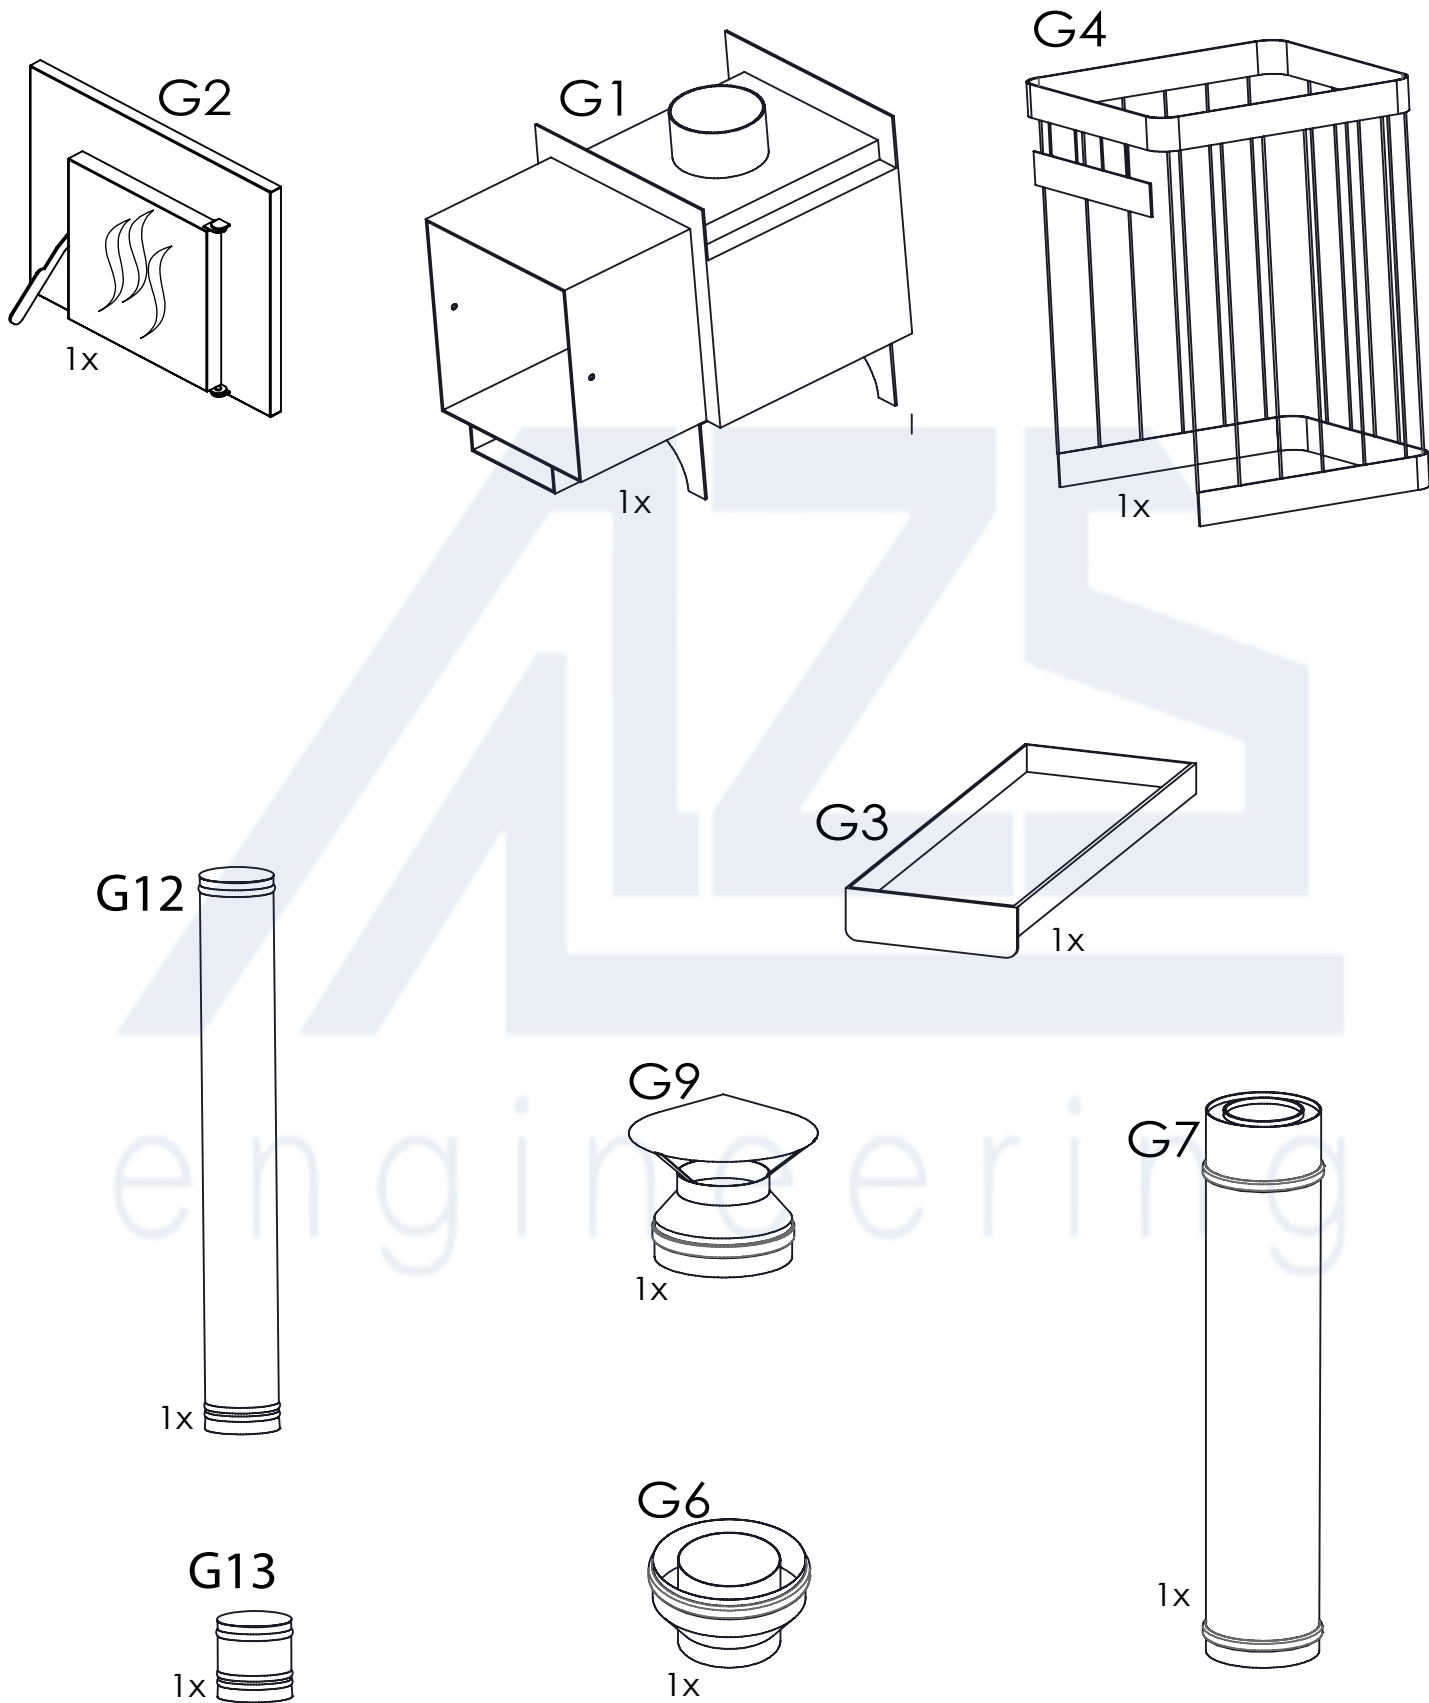


S3 - 4

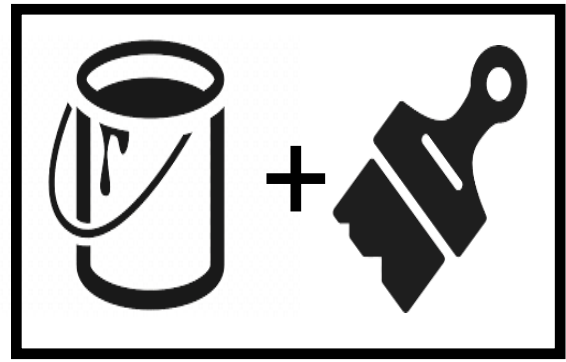
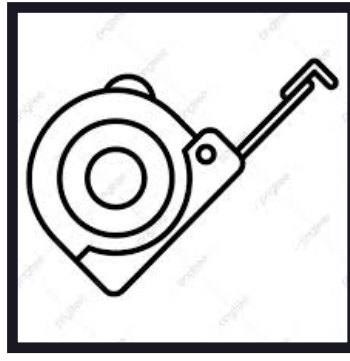
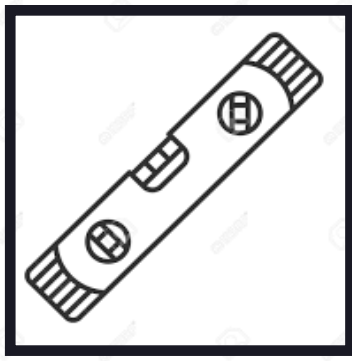






S3x4

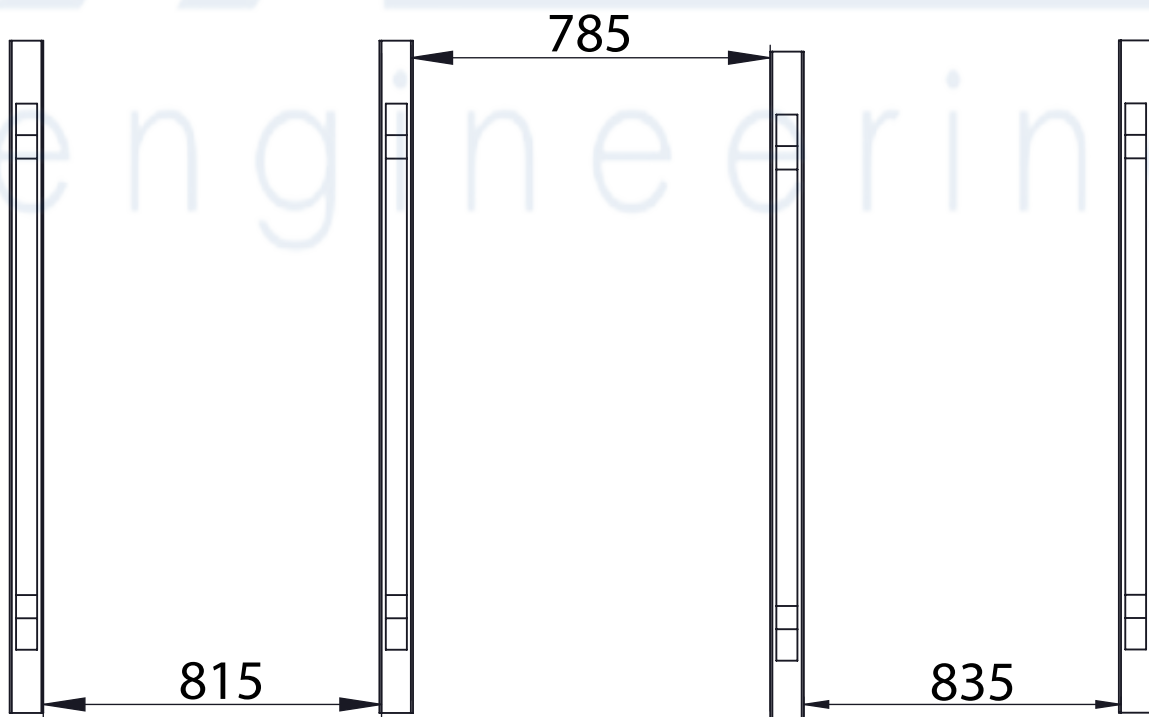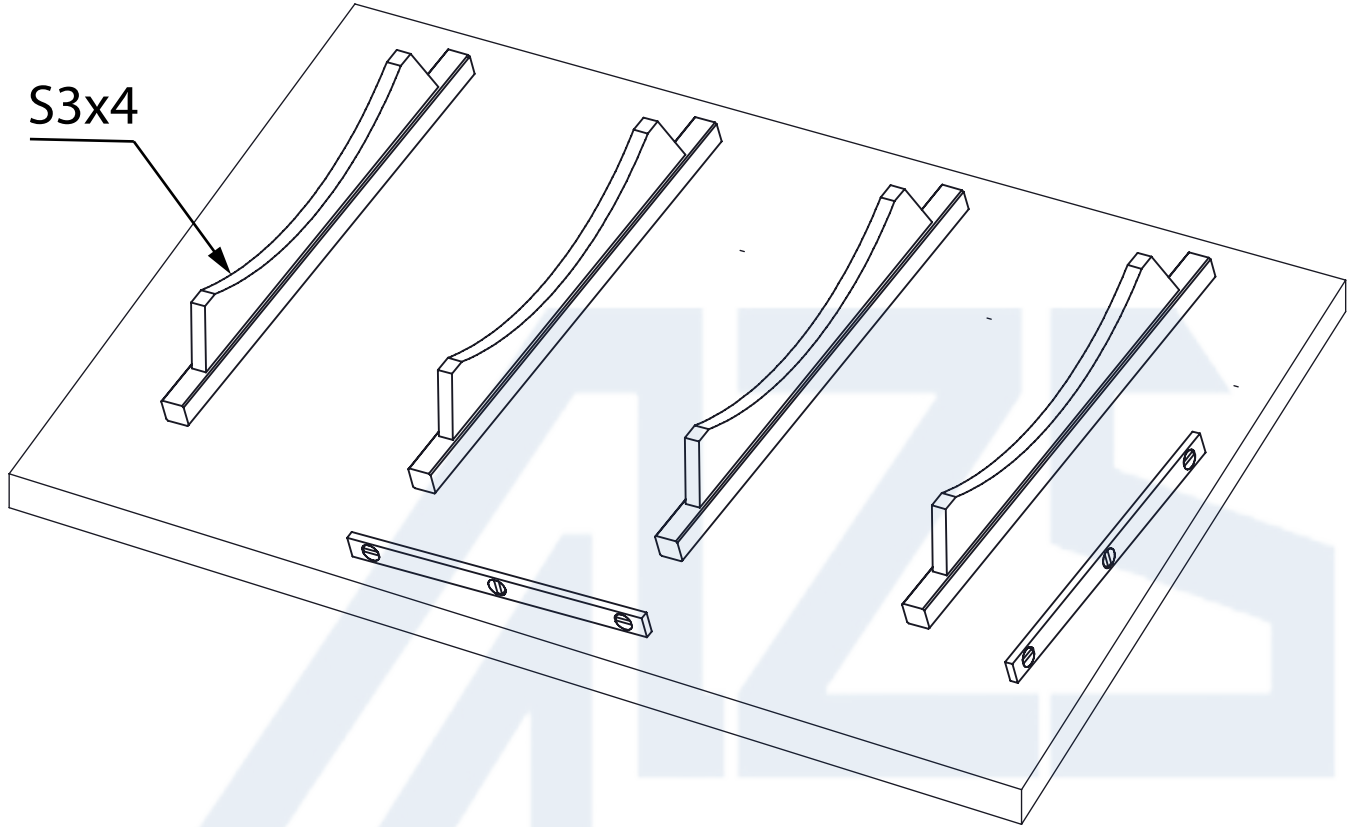




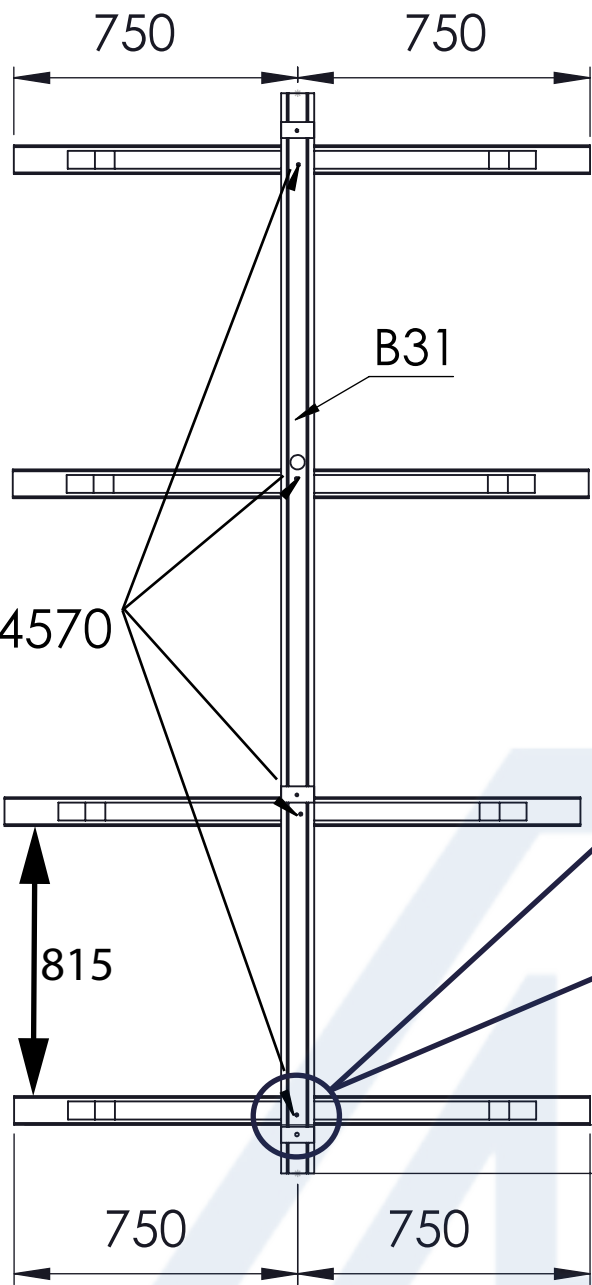


- B31 - 1
- B32 - 2
- B33 - 2
- 4570 - 20
- 45120 - 16

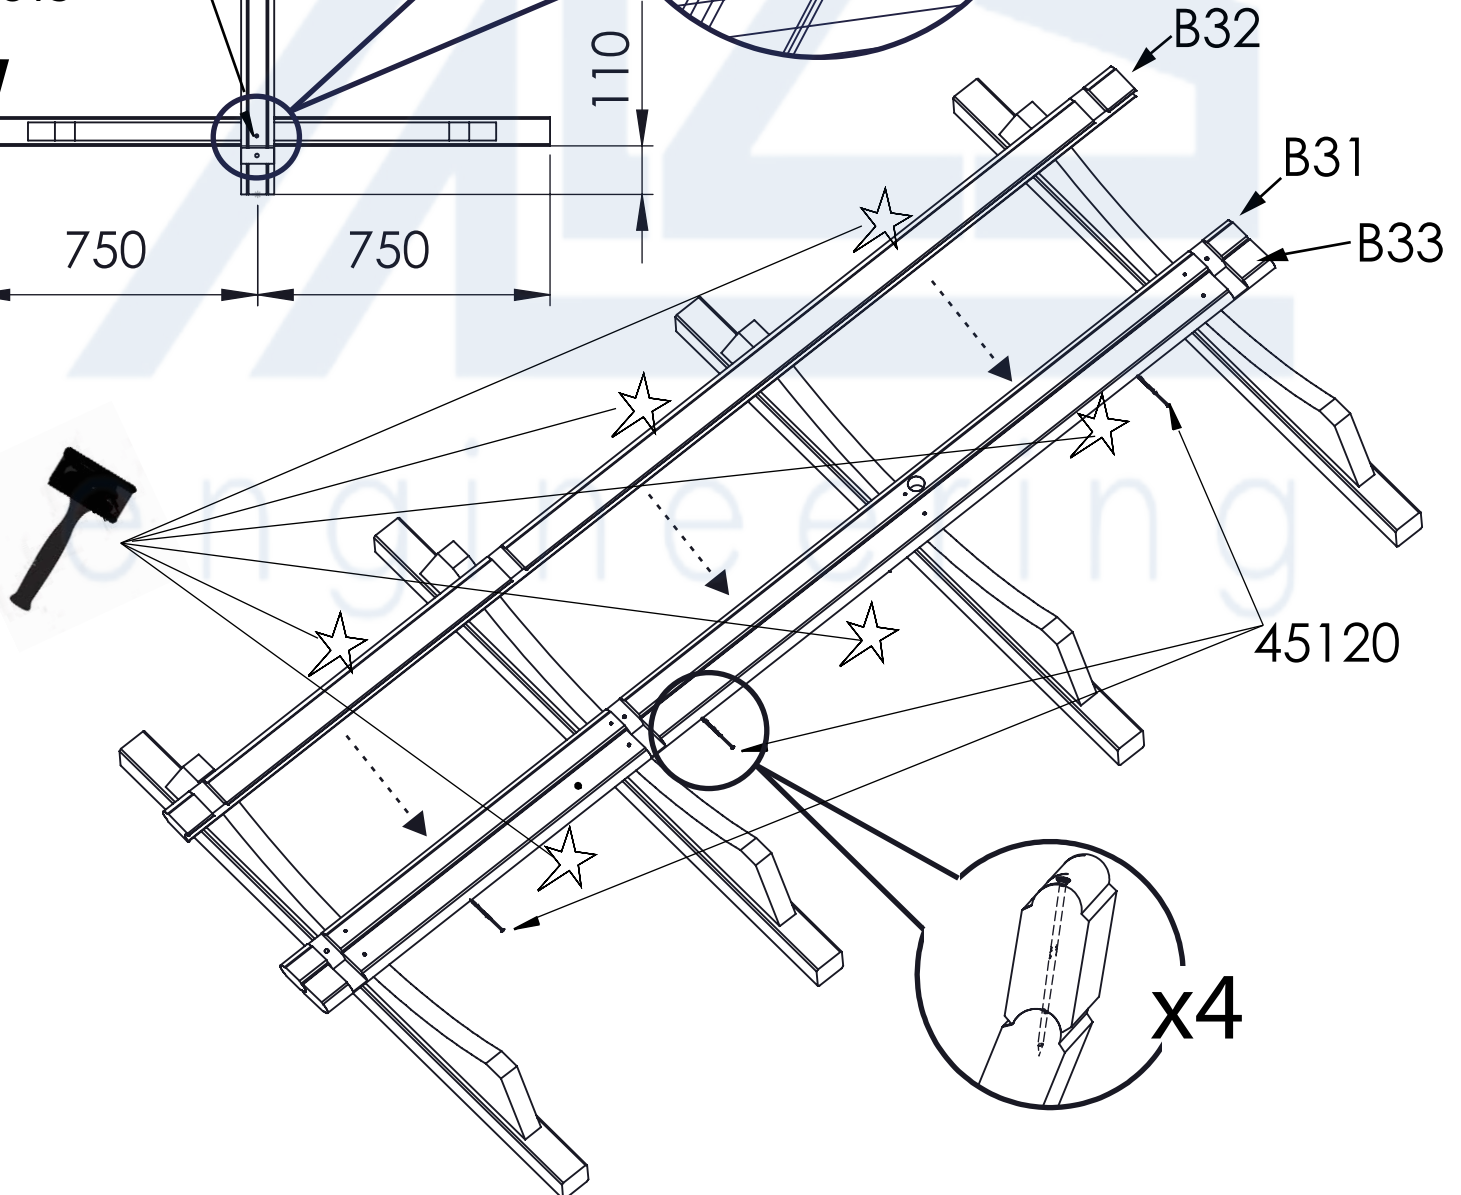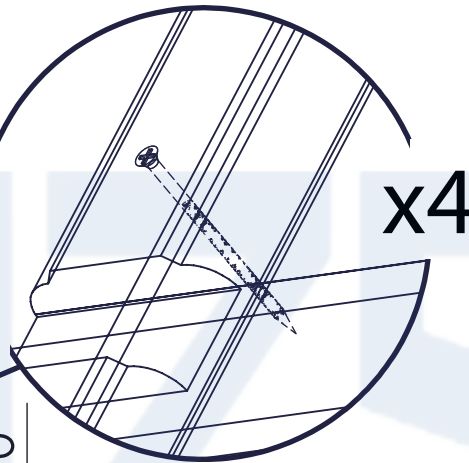
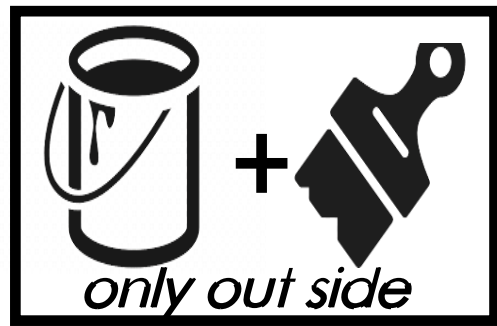


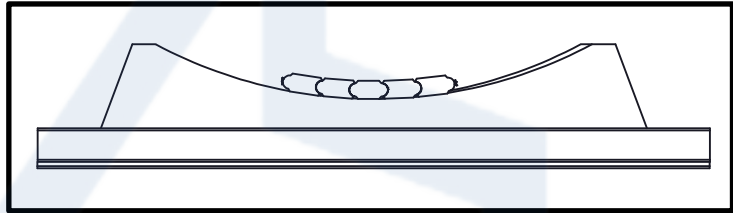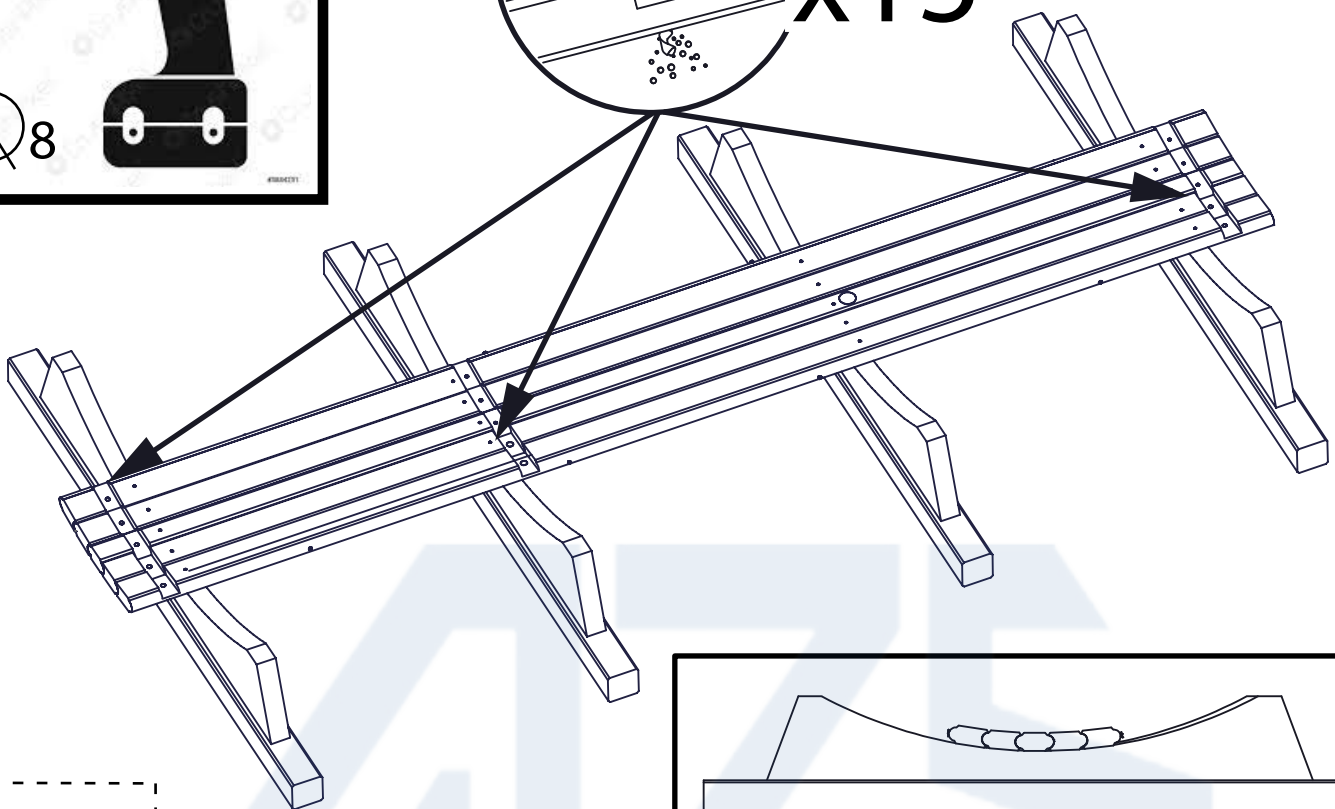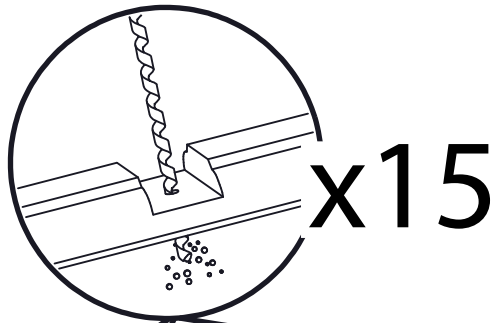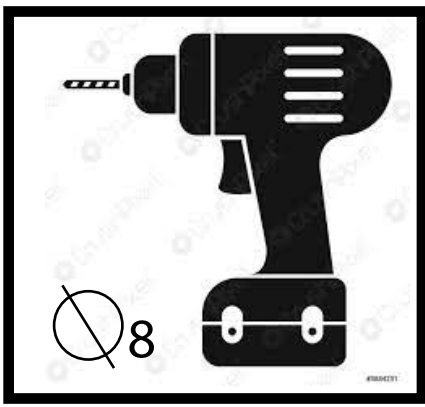





- C31 - 2
- C32 - 1
- B32 - 5
- B33 - 5
- 4570 - 46
- 45120 - 40



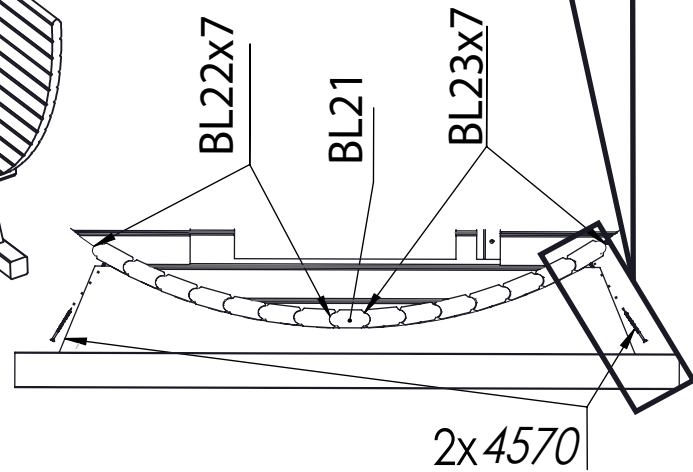
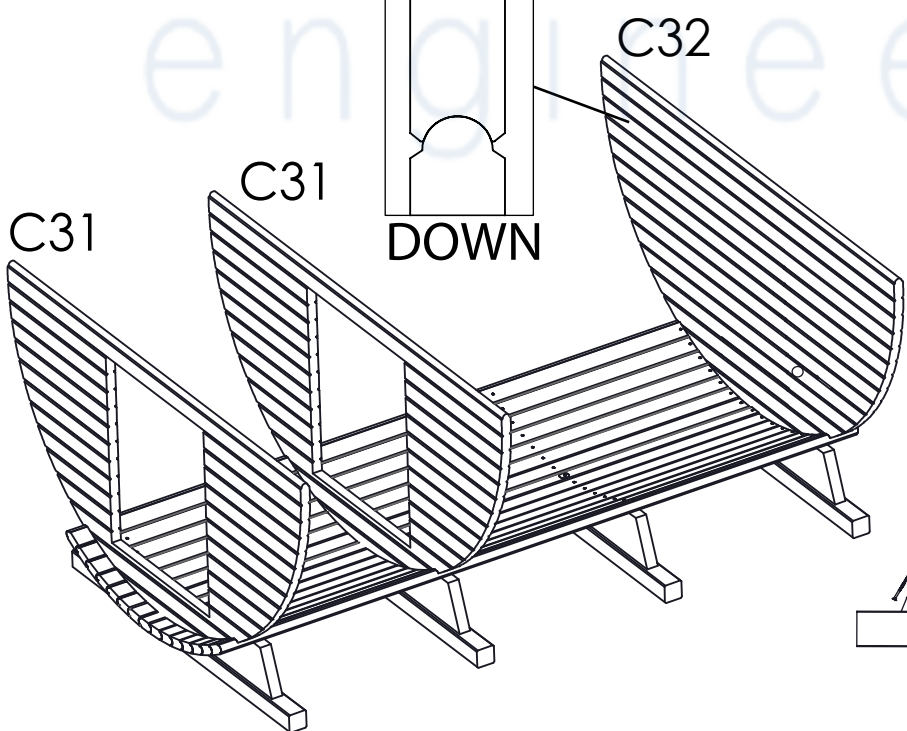
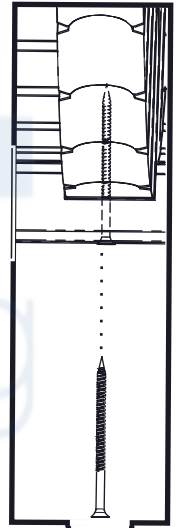
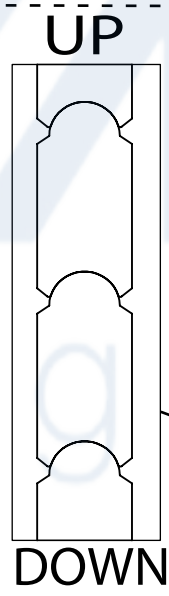






C33 - 2 | BL33 - 1
C34 - 1 | BL32 - 1
B32 - 14 | 4570 - 90
B33 - 14 | 45120 - 122

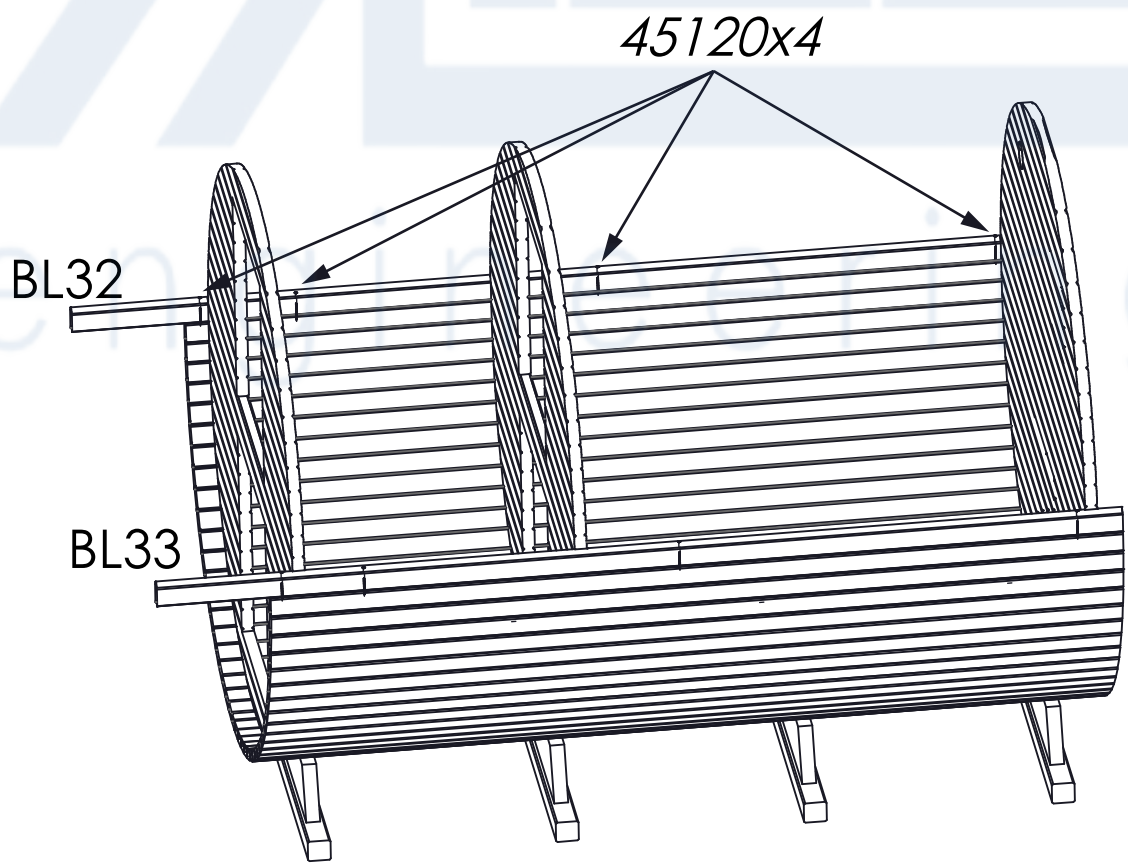
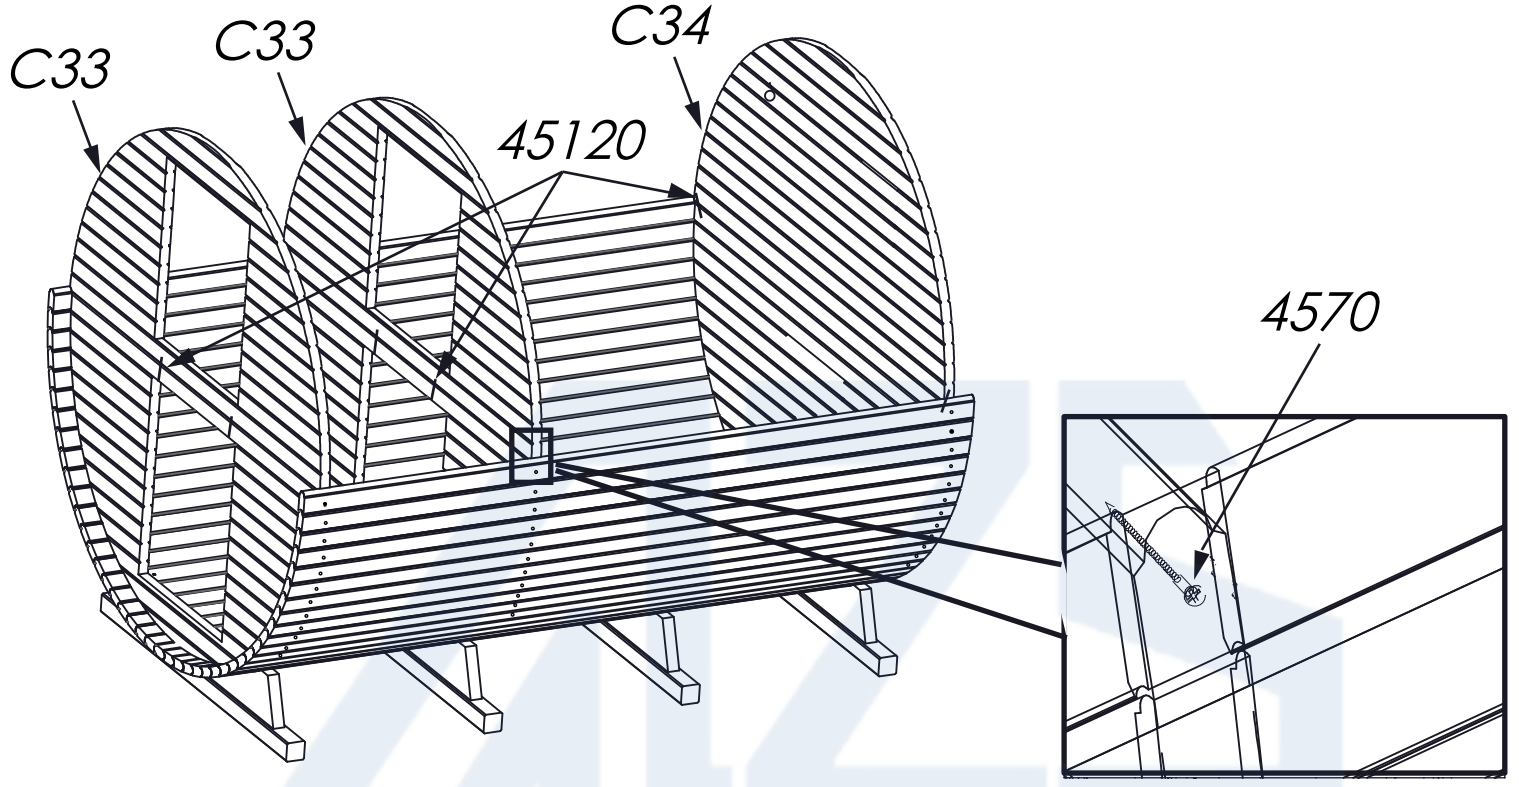


BL33 - 20
BL32 - 20
4570 - 120
45120 - 200

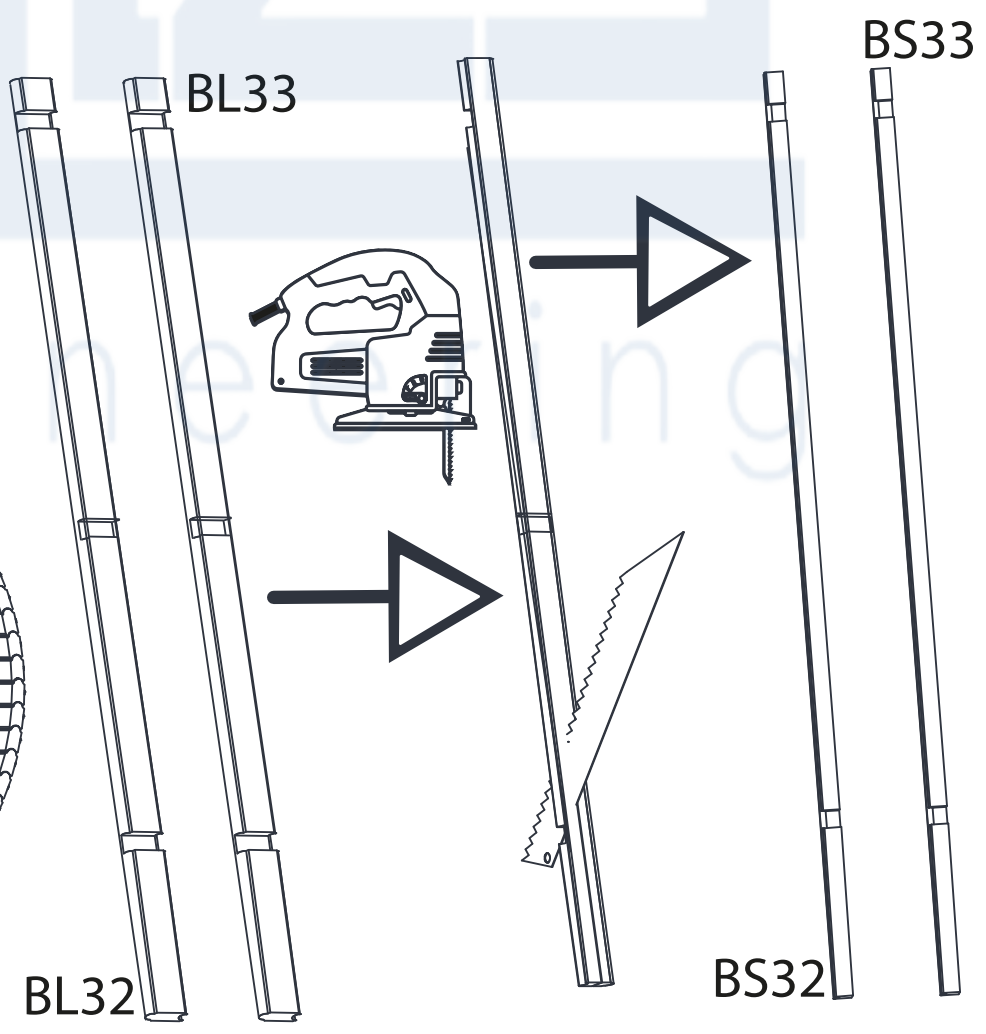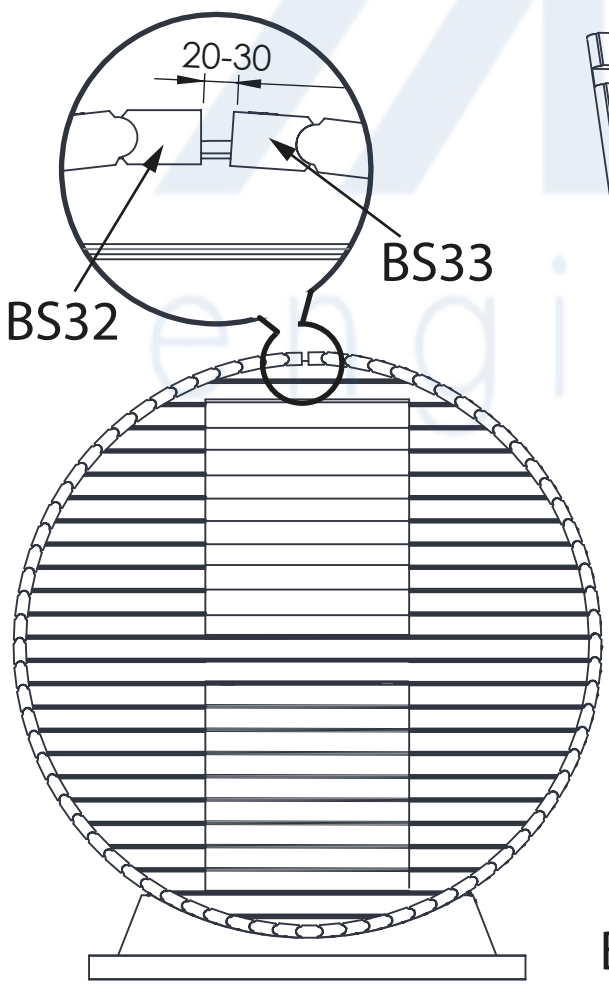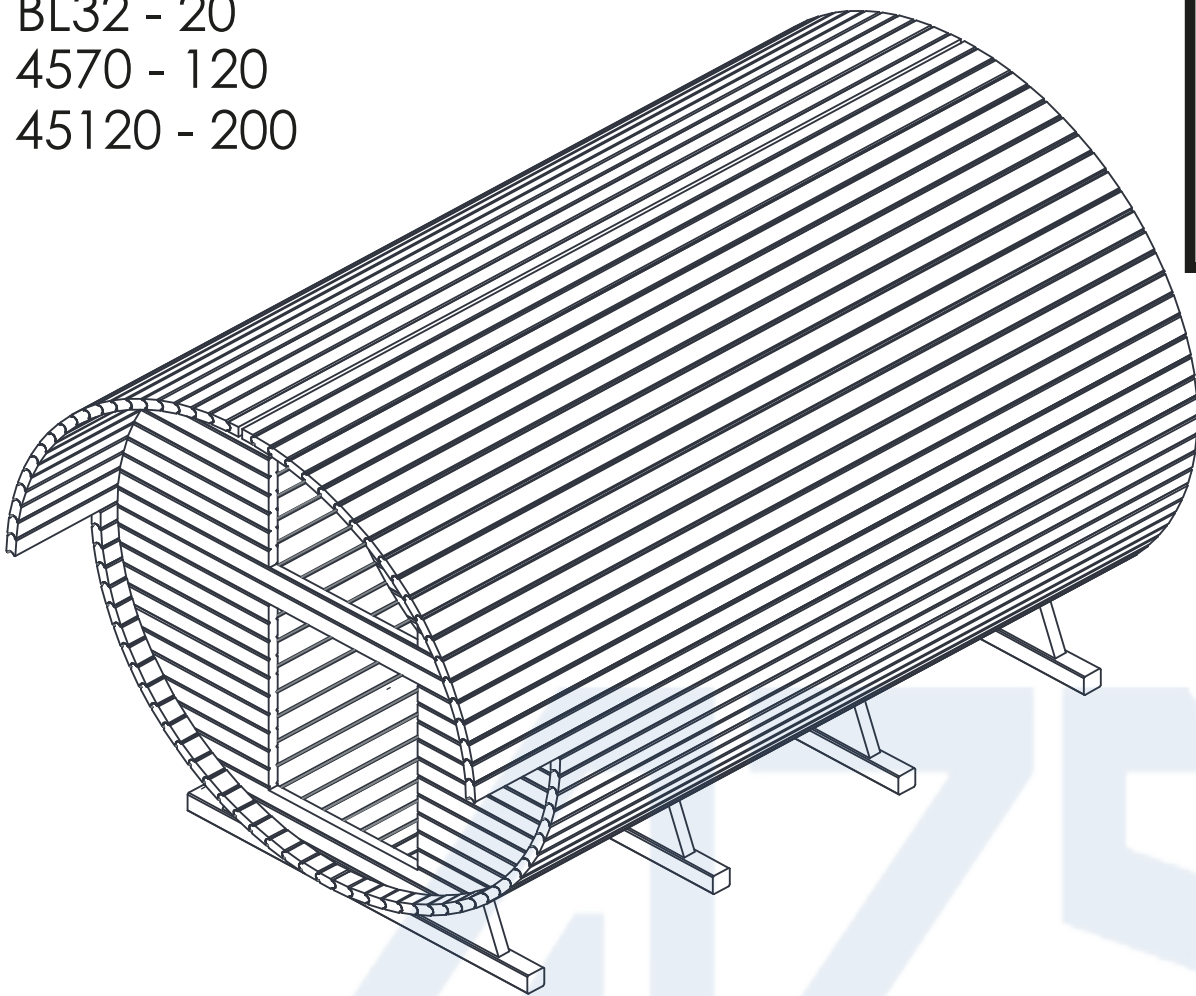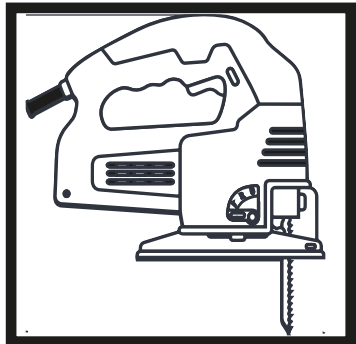


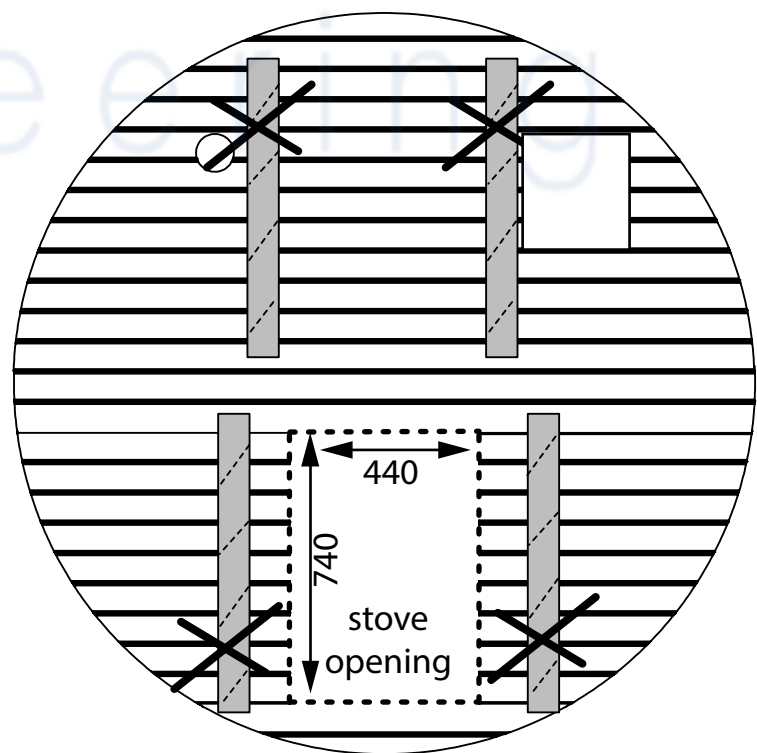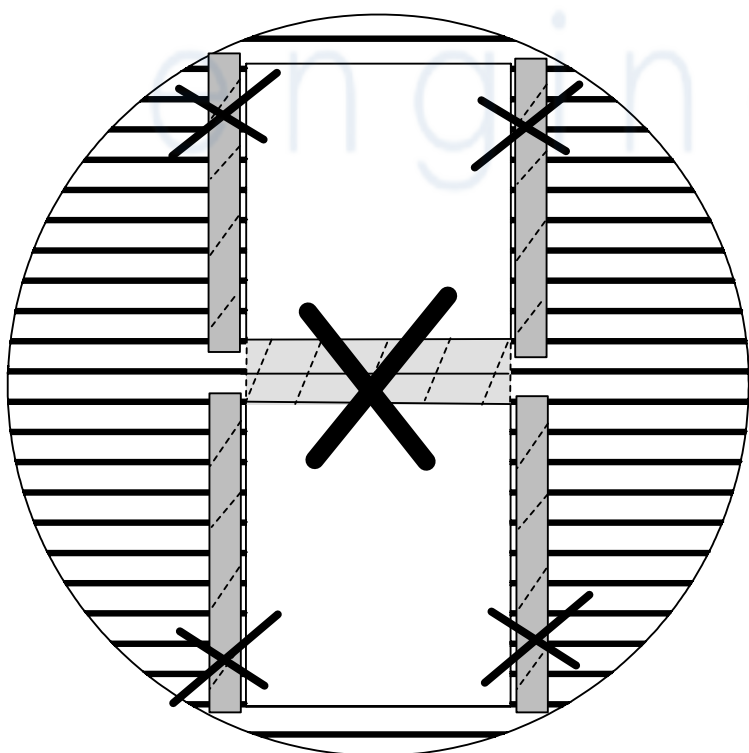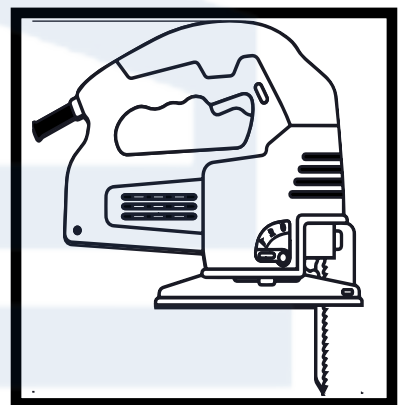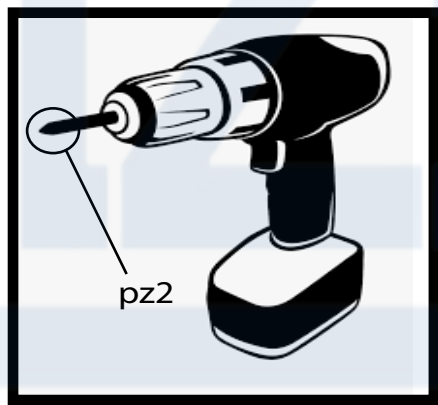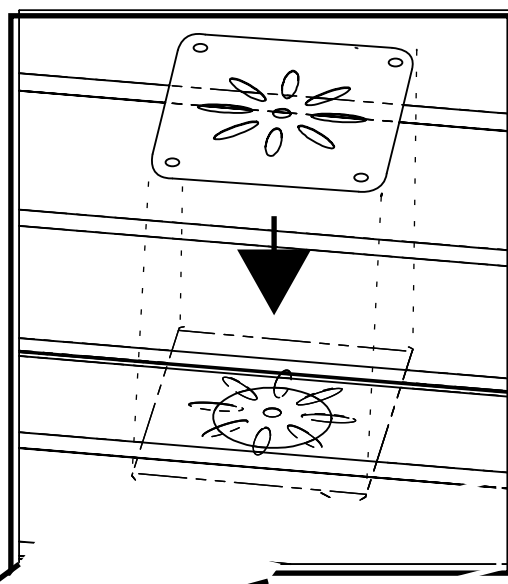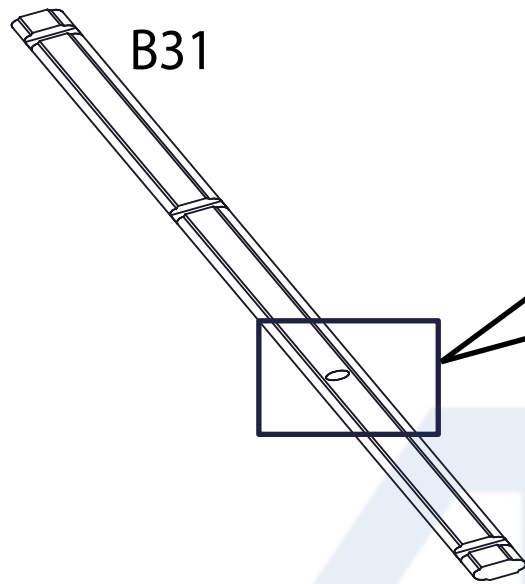

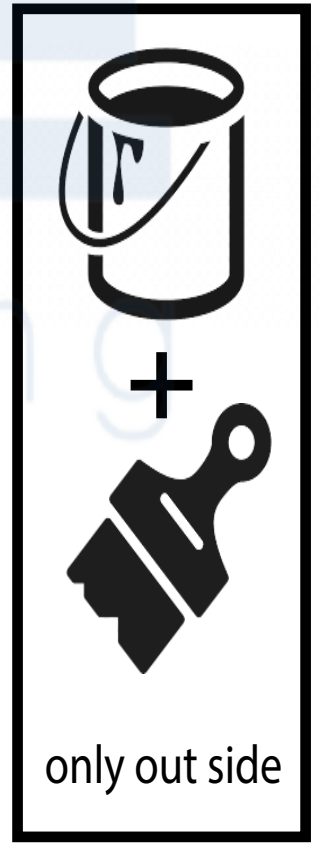
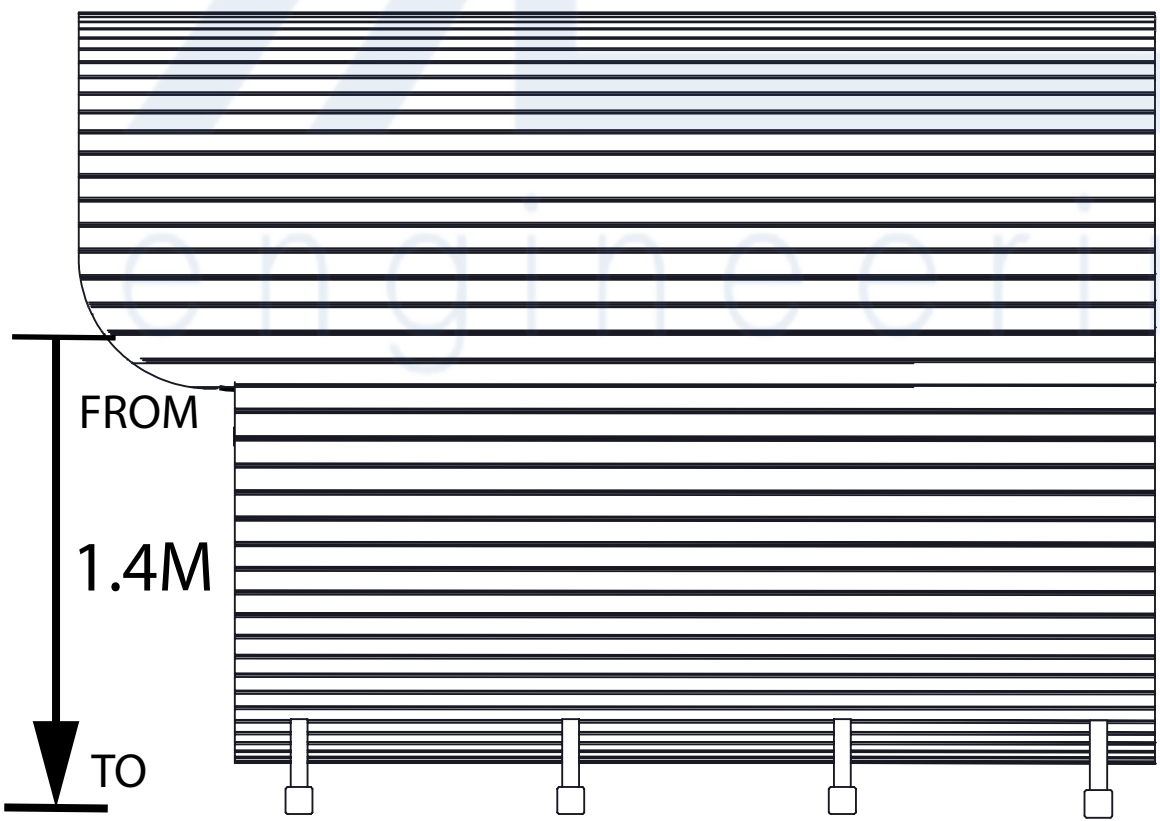
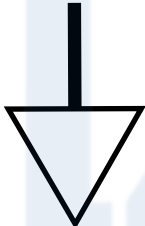
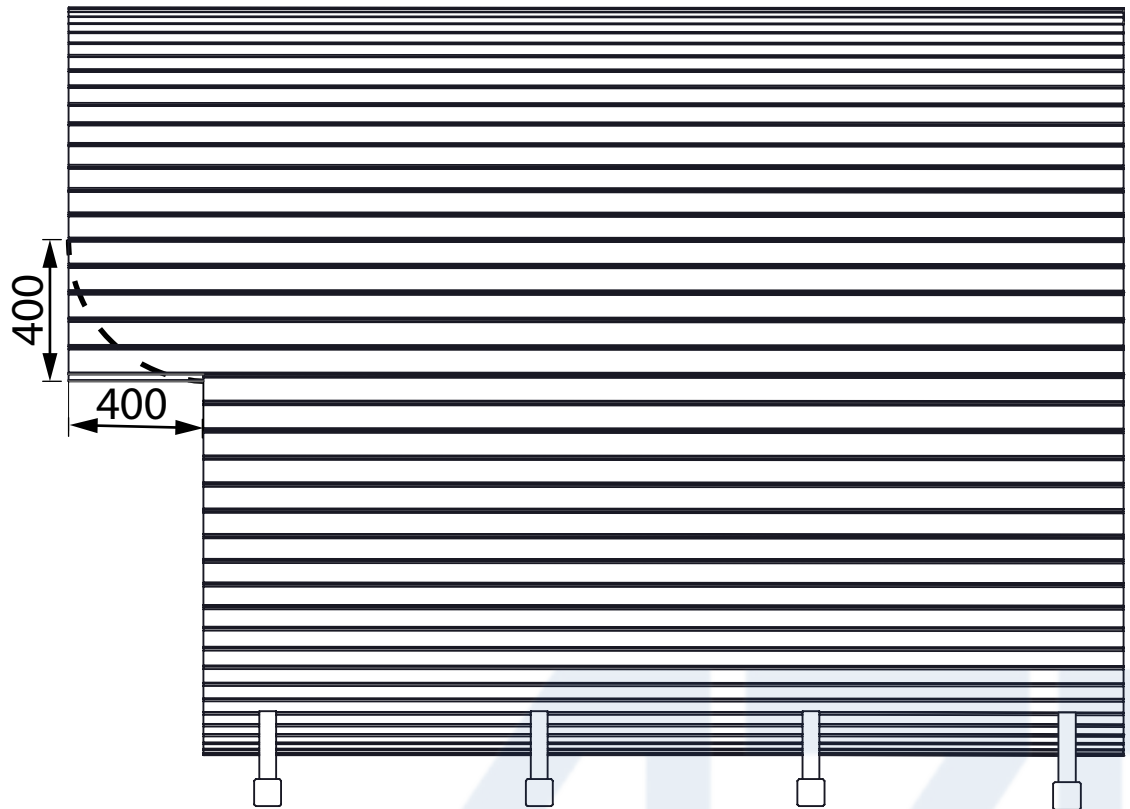


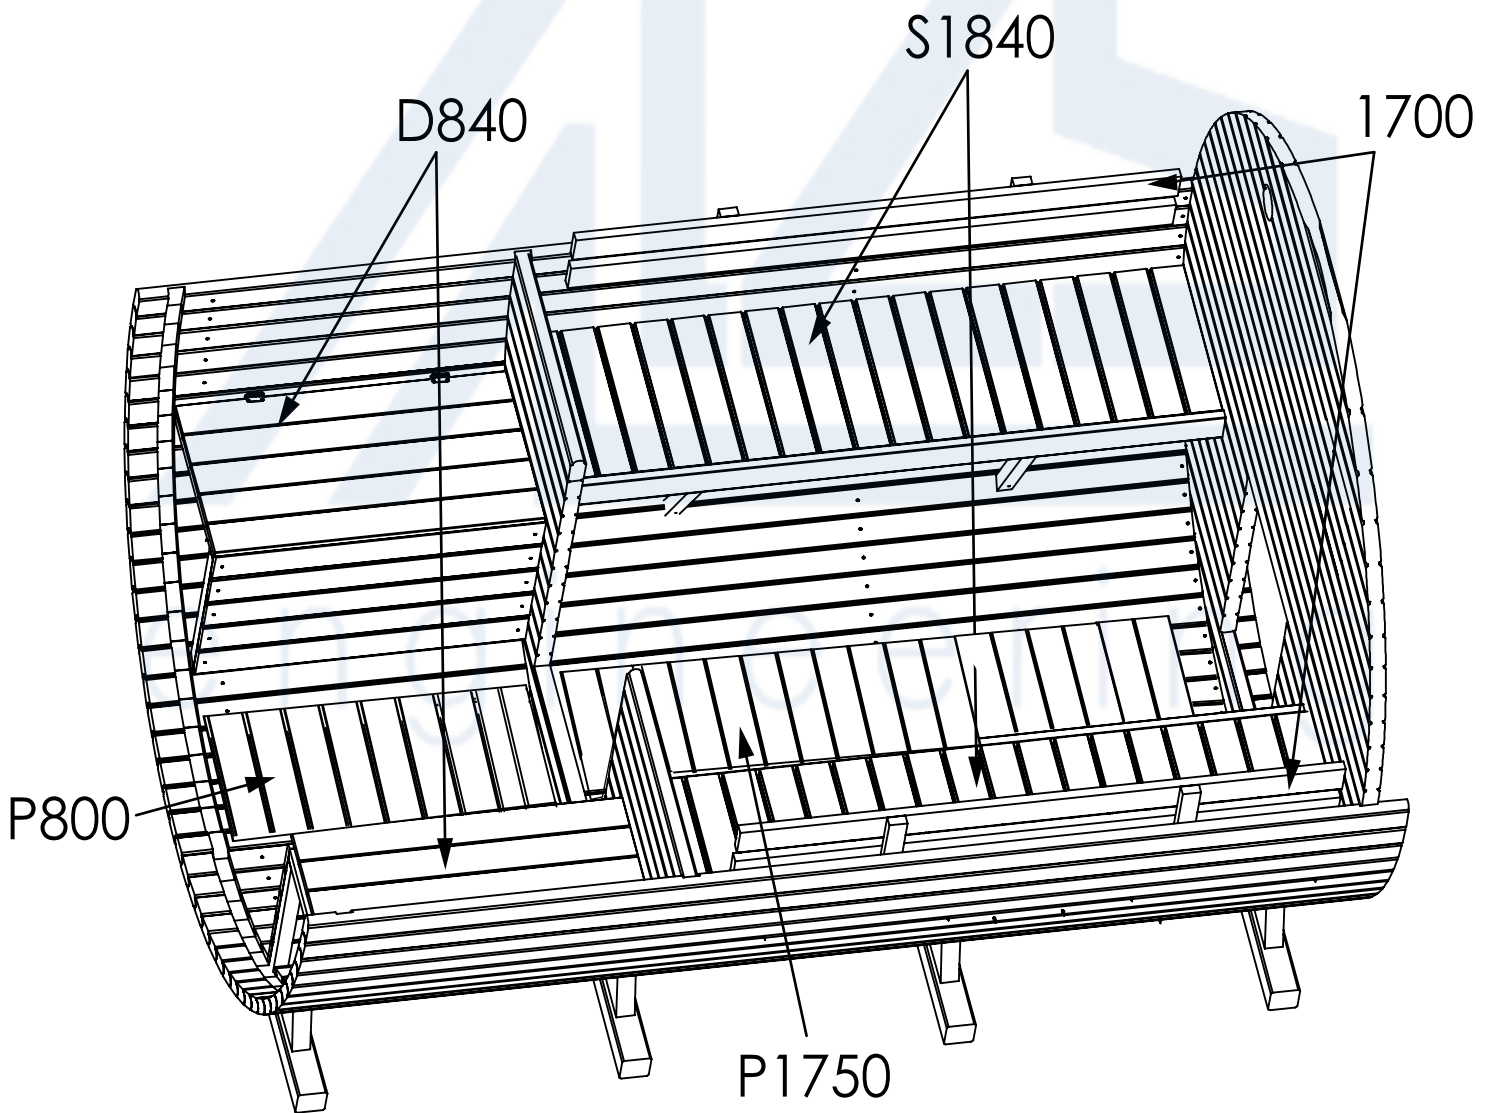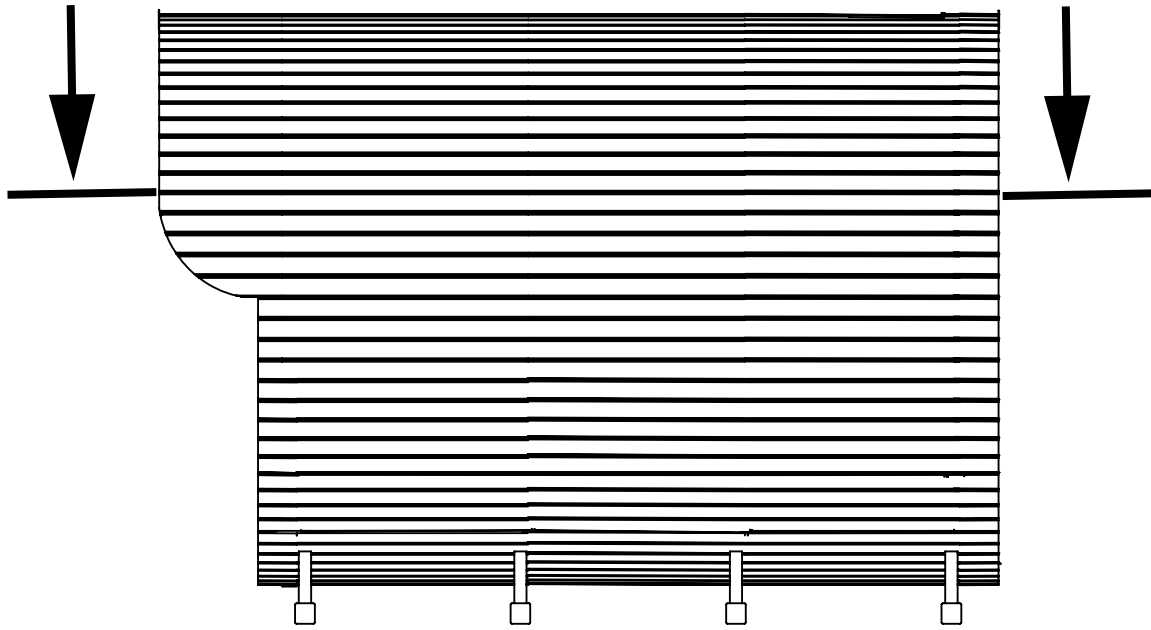





- D840 - 2
- R770 - 2
- R475 - 8
- W850 - 10
- 80401 - 4
- 4470 - 20
- 4460 - 48
- 4216 - 16

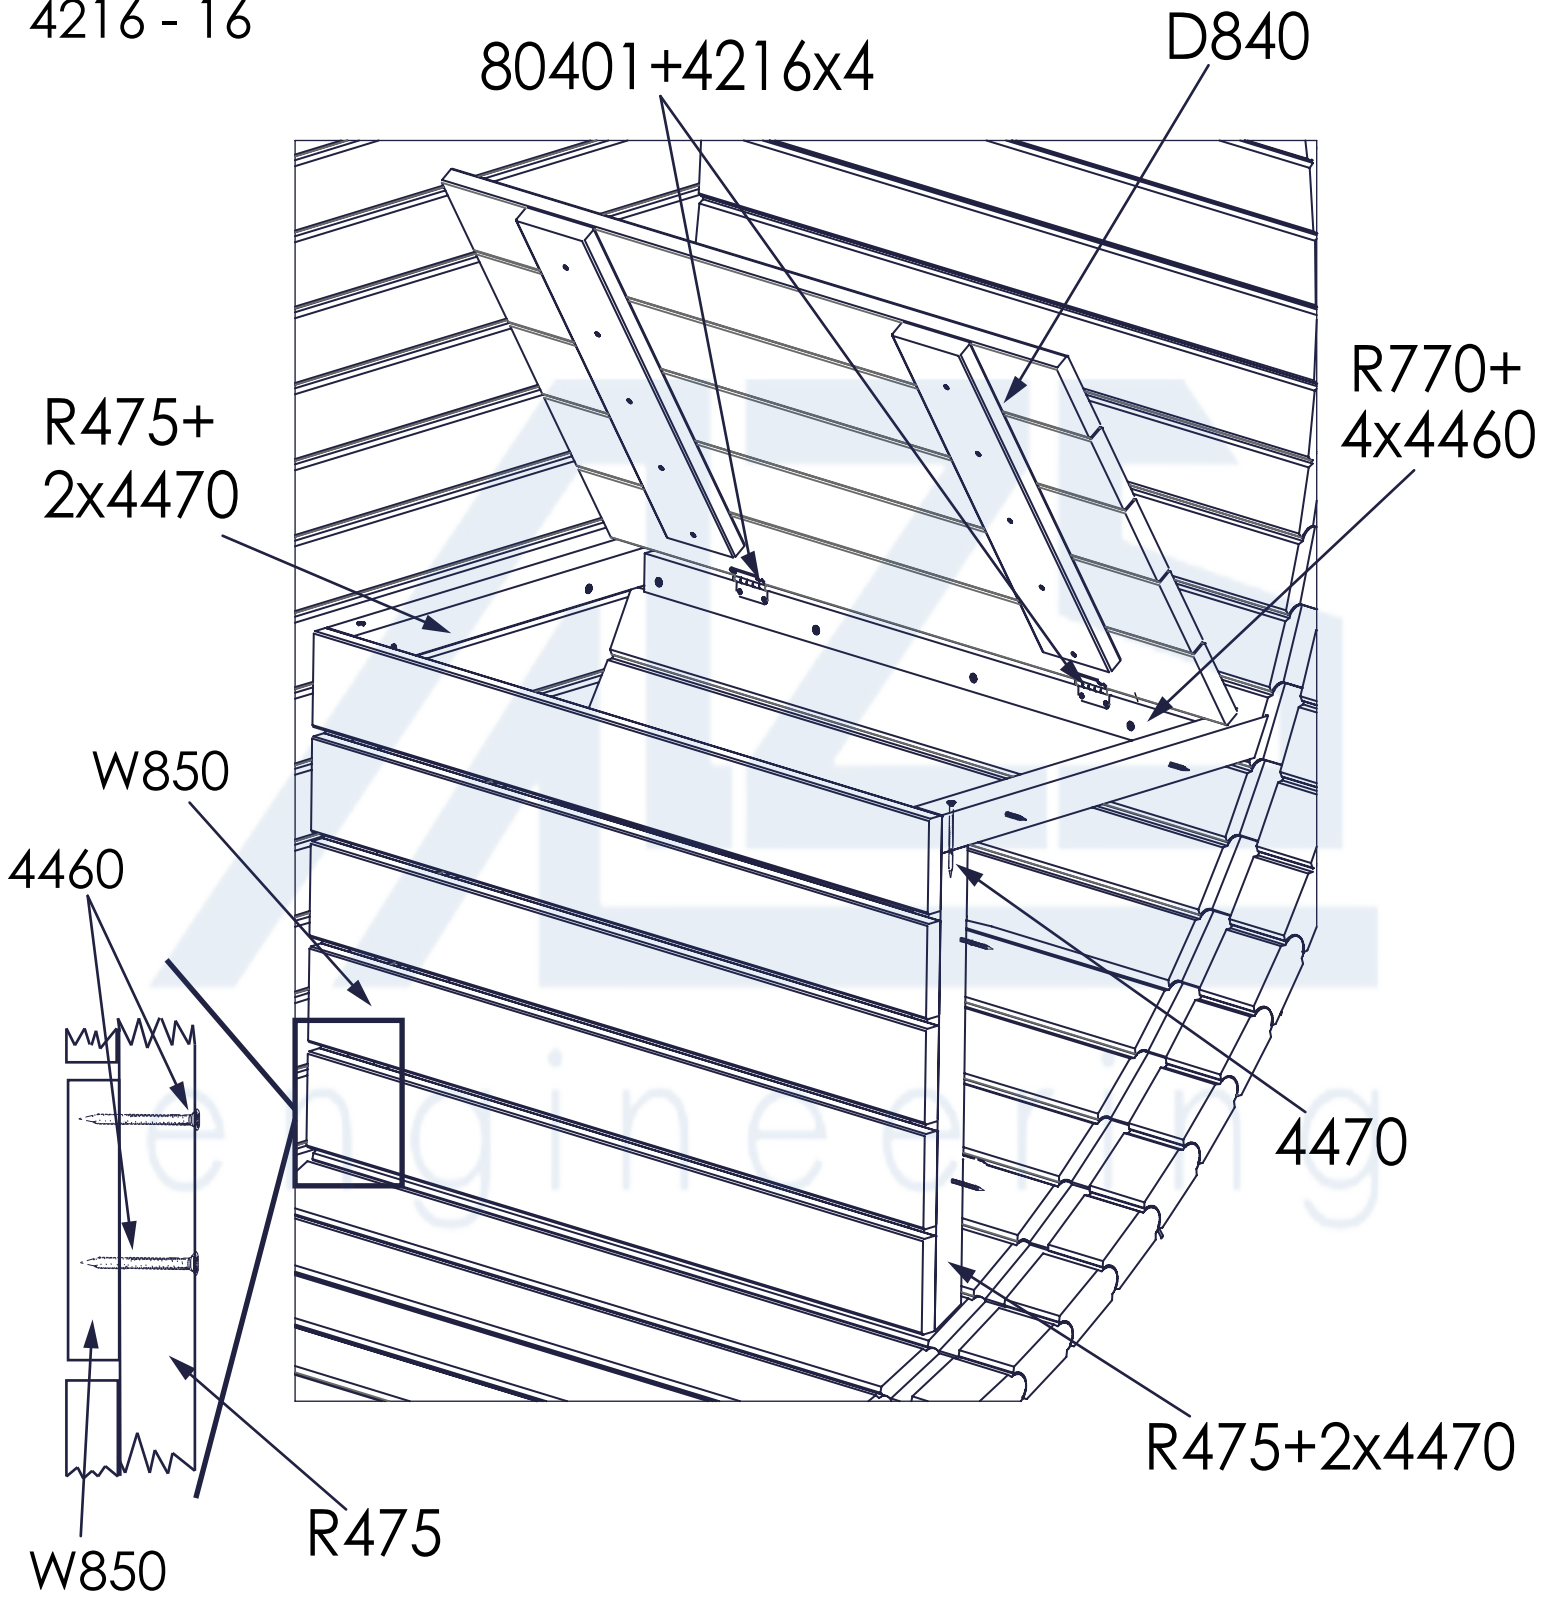


H1700 - 2
S1840 - 2
R475 - 8
4470 - 36

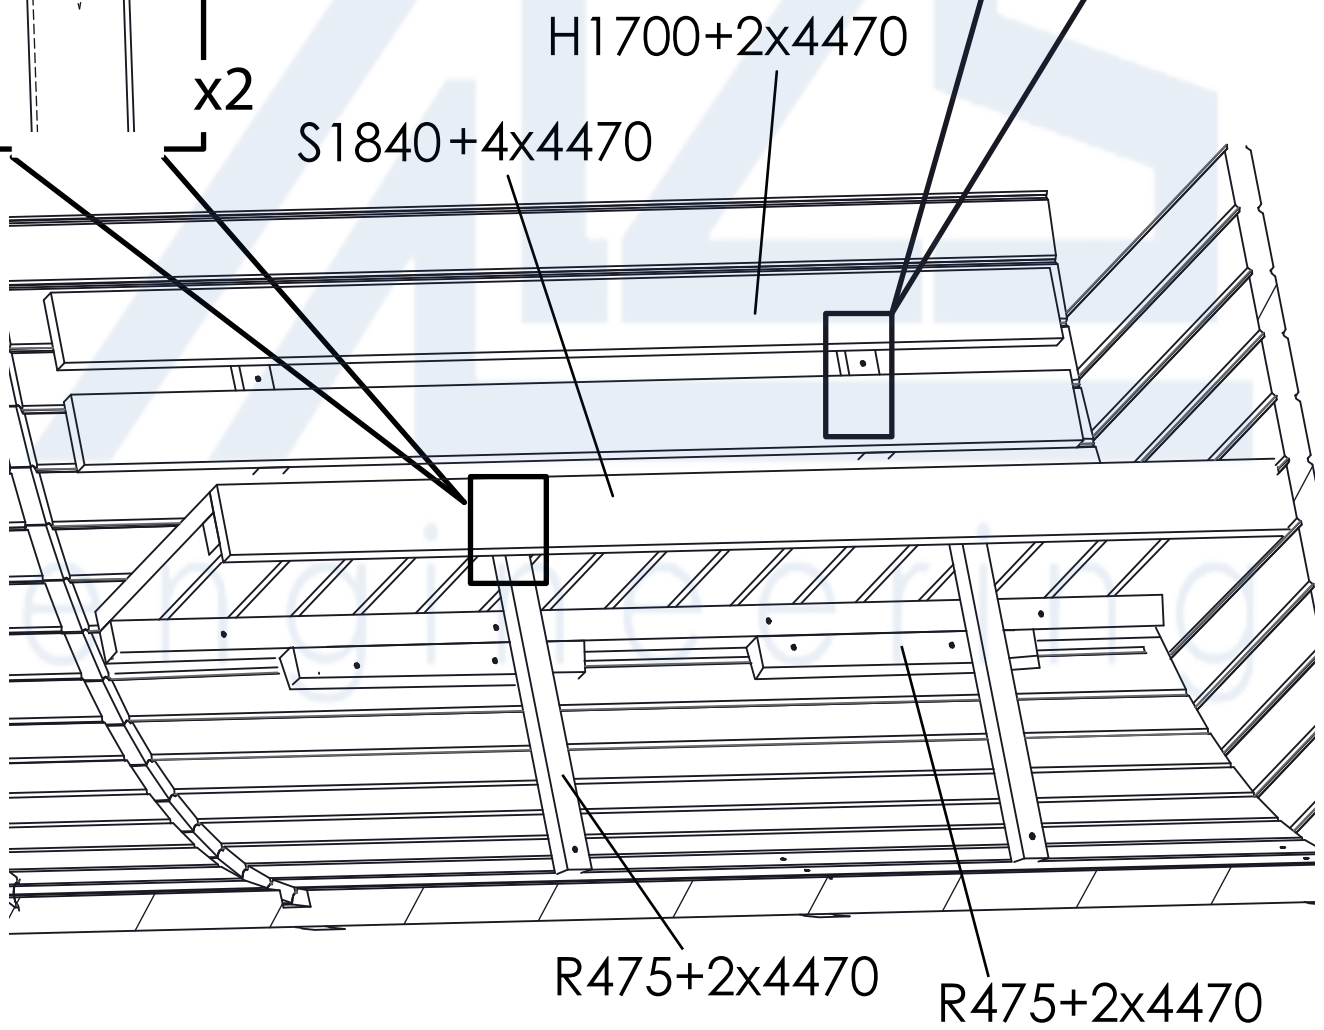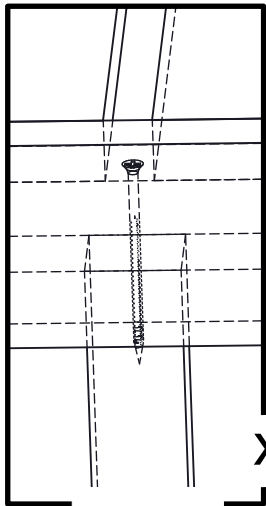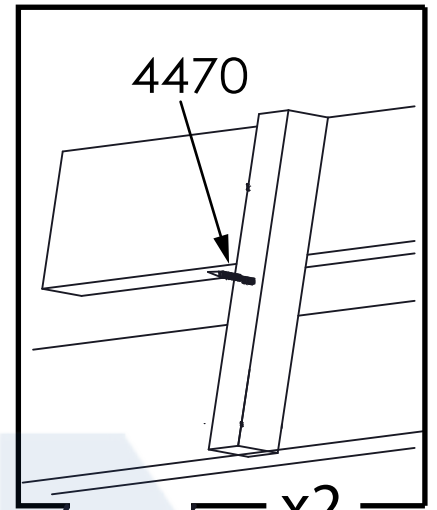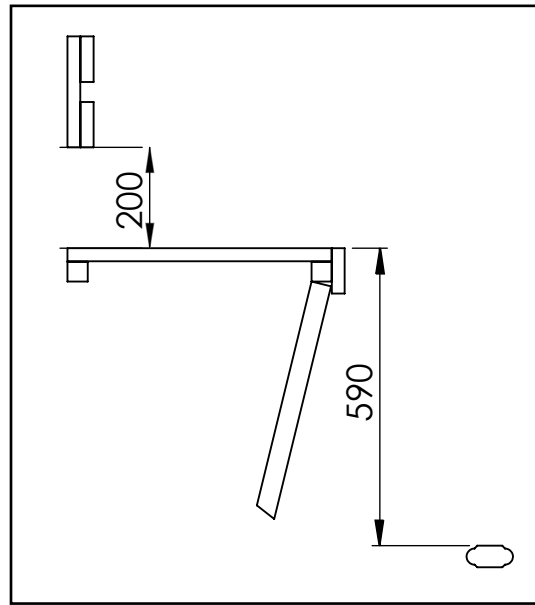





Q2 - 1
4241 - 8

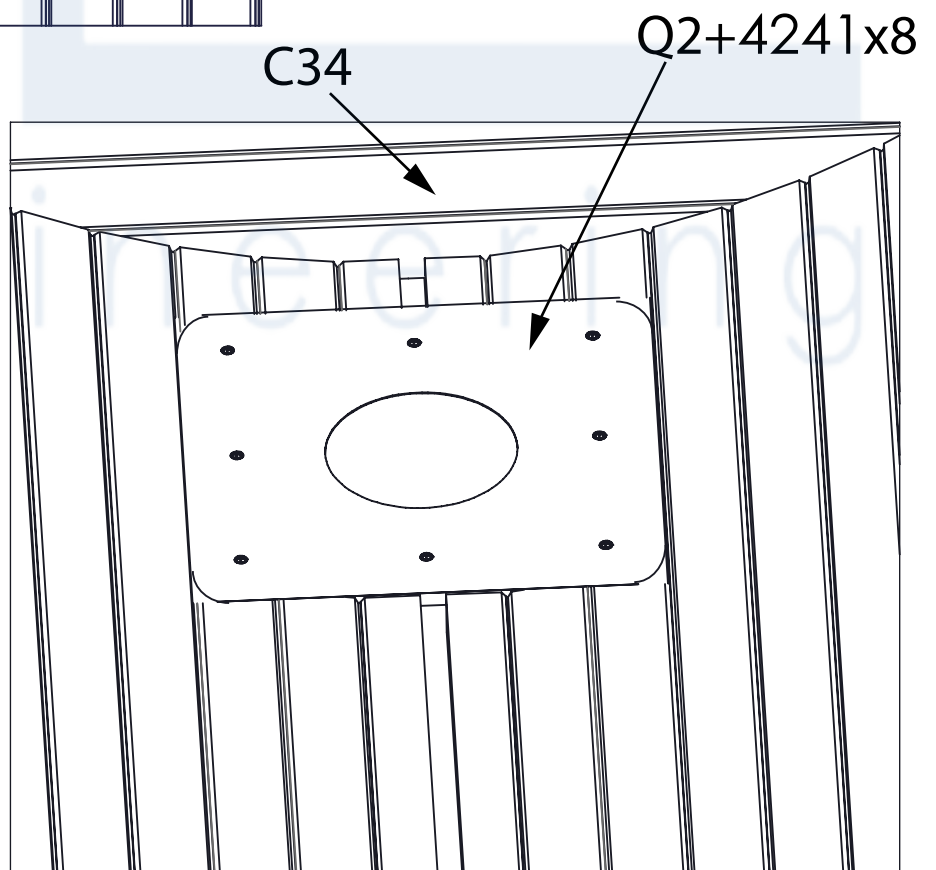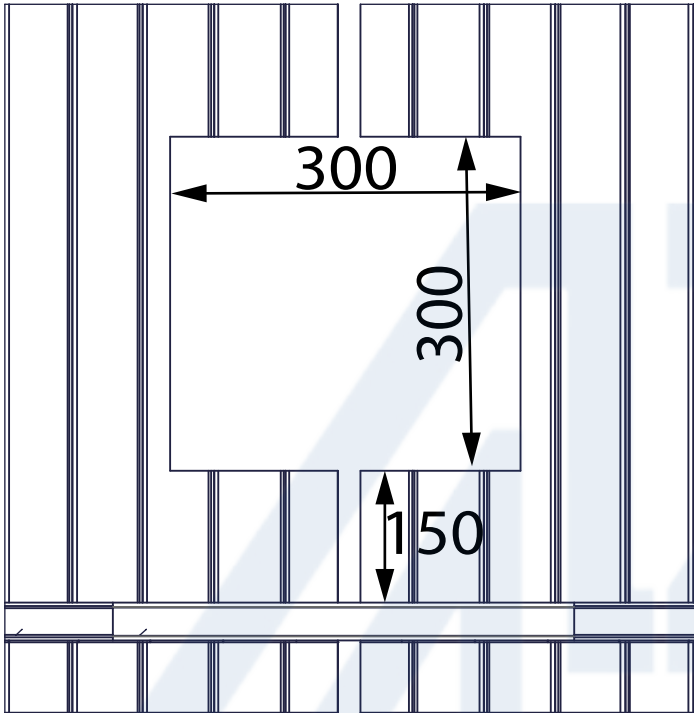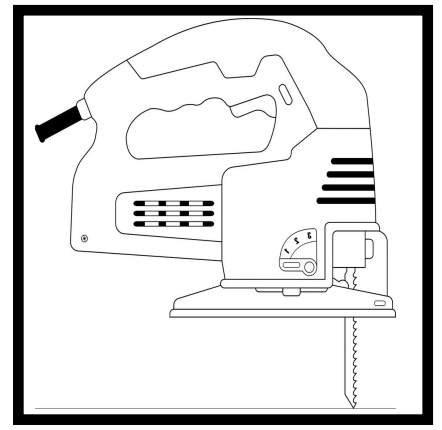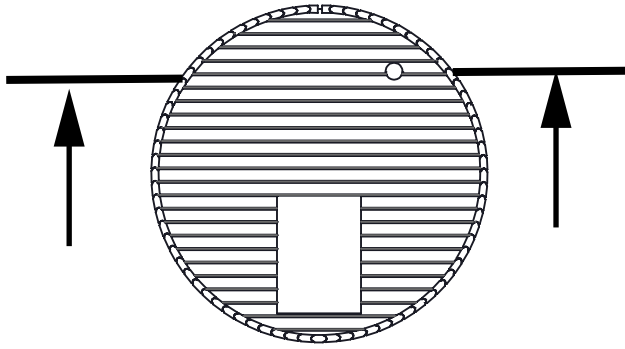




ONLY FOR G1!

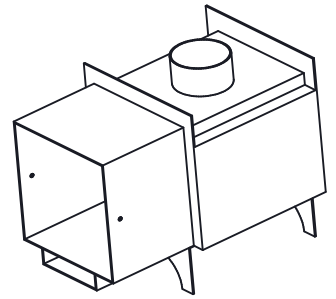

P1750

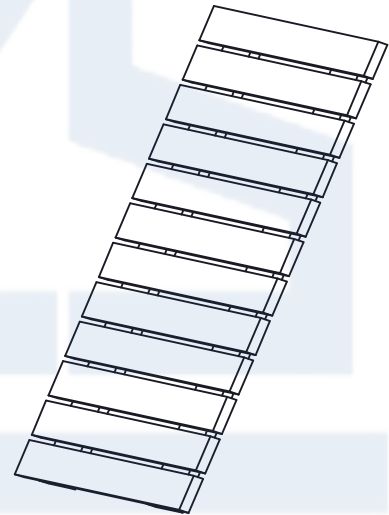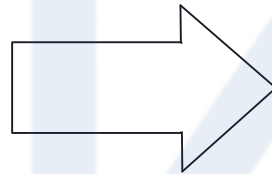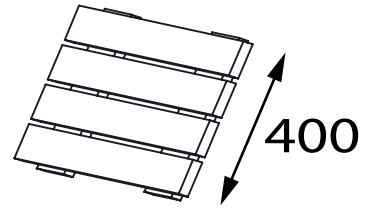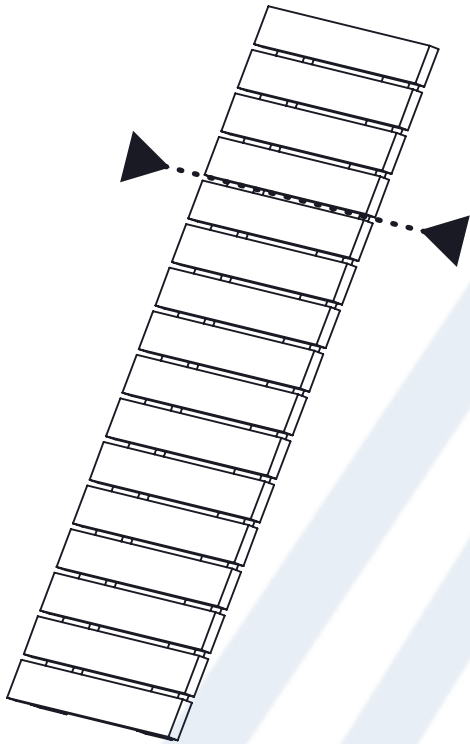

R400 - 2
4460 - 6

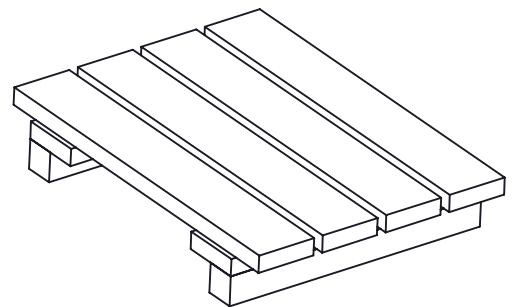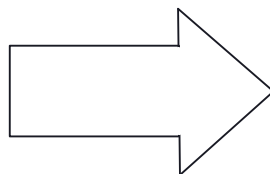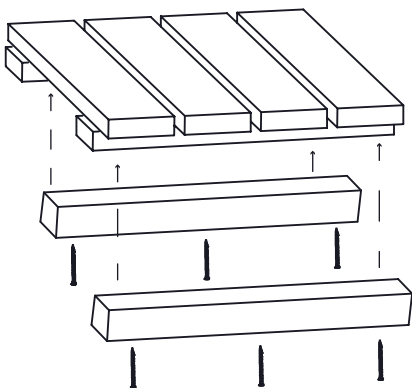


- G1 - 1
 - G2 - 1
 - G3 - 1
 - G4 - 1
- Q3 - 1
 - Q4 - 1
 - 4241 - 22

Q3+4241x10


1.

G1+G4

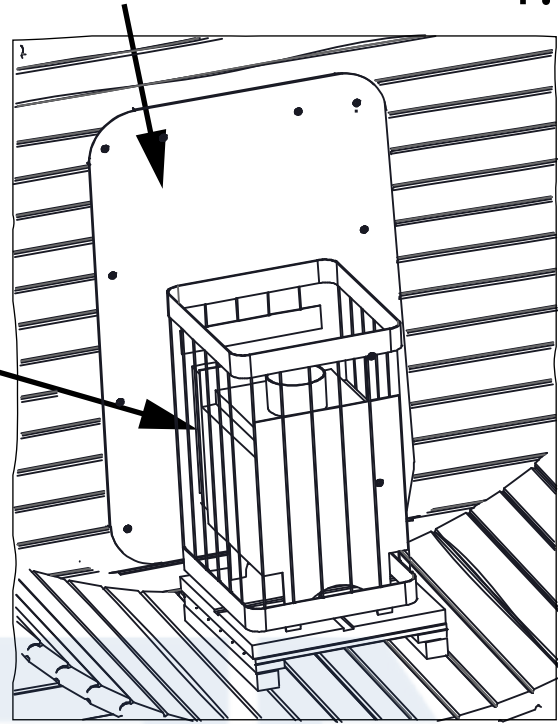


rock wool

2.

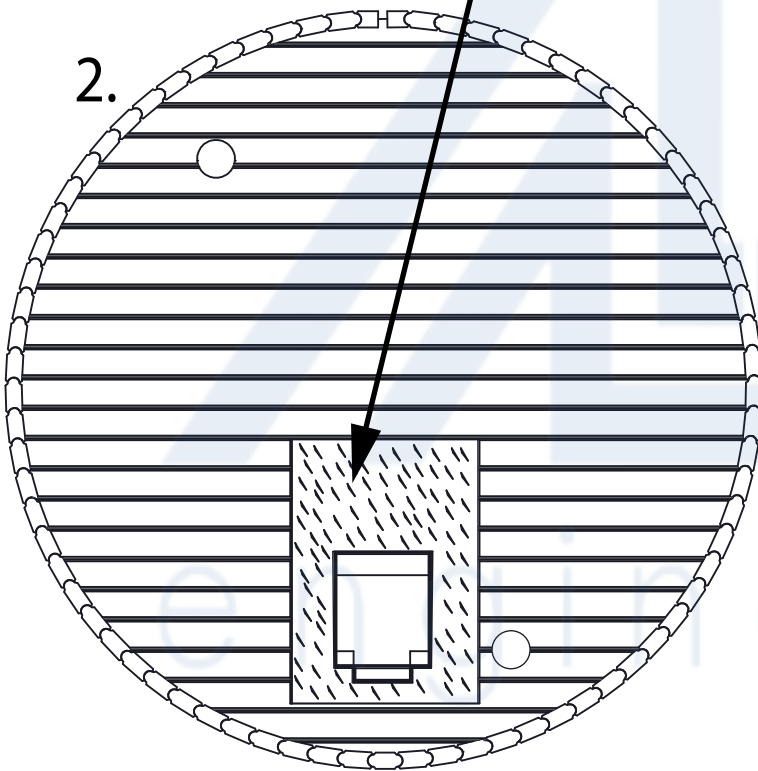

3.


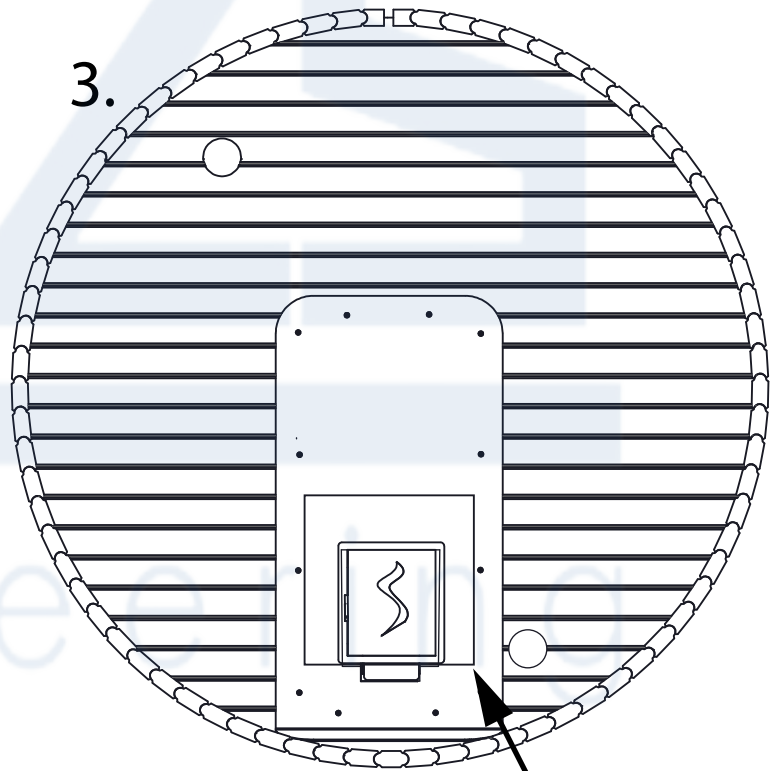


Q4+4241x12


5.

G2





G3

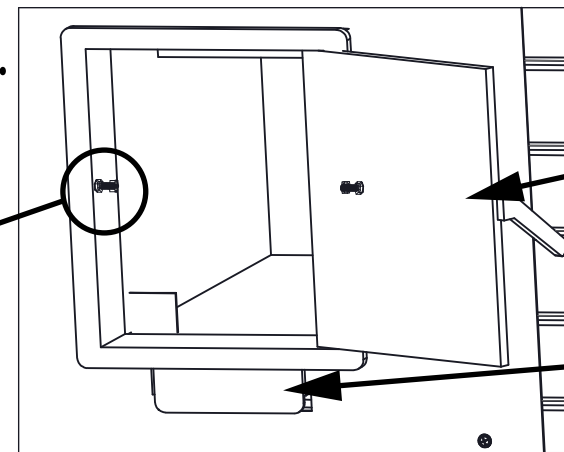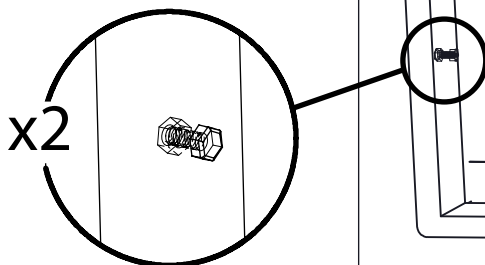



G6 - 1
G7 - 1
G12 - 1
G13 - 1

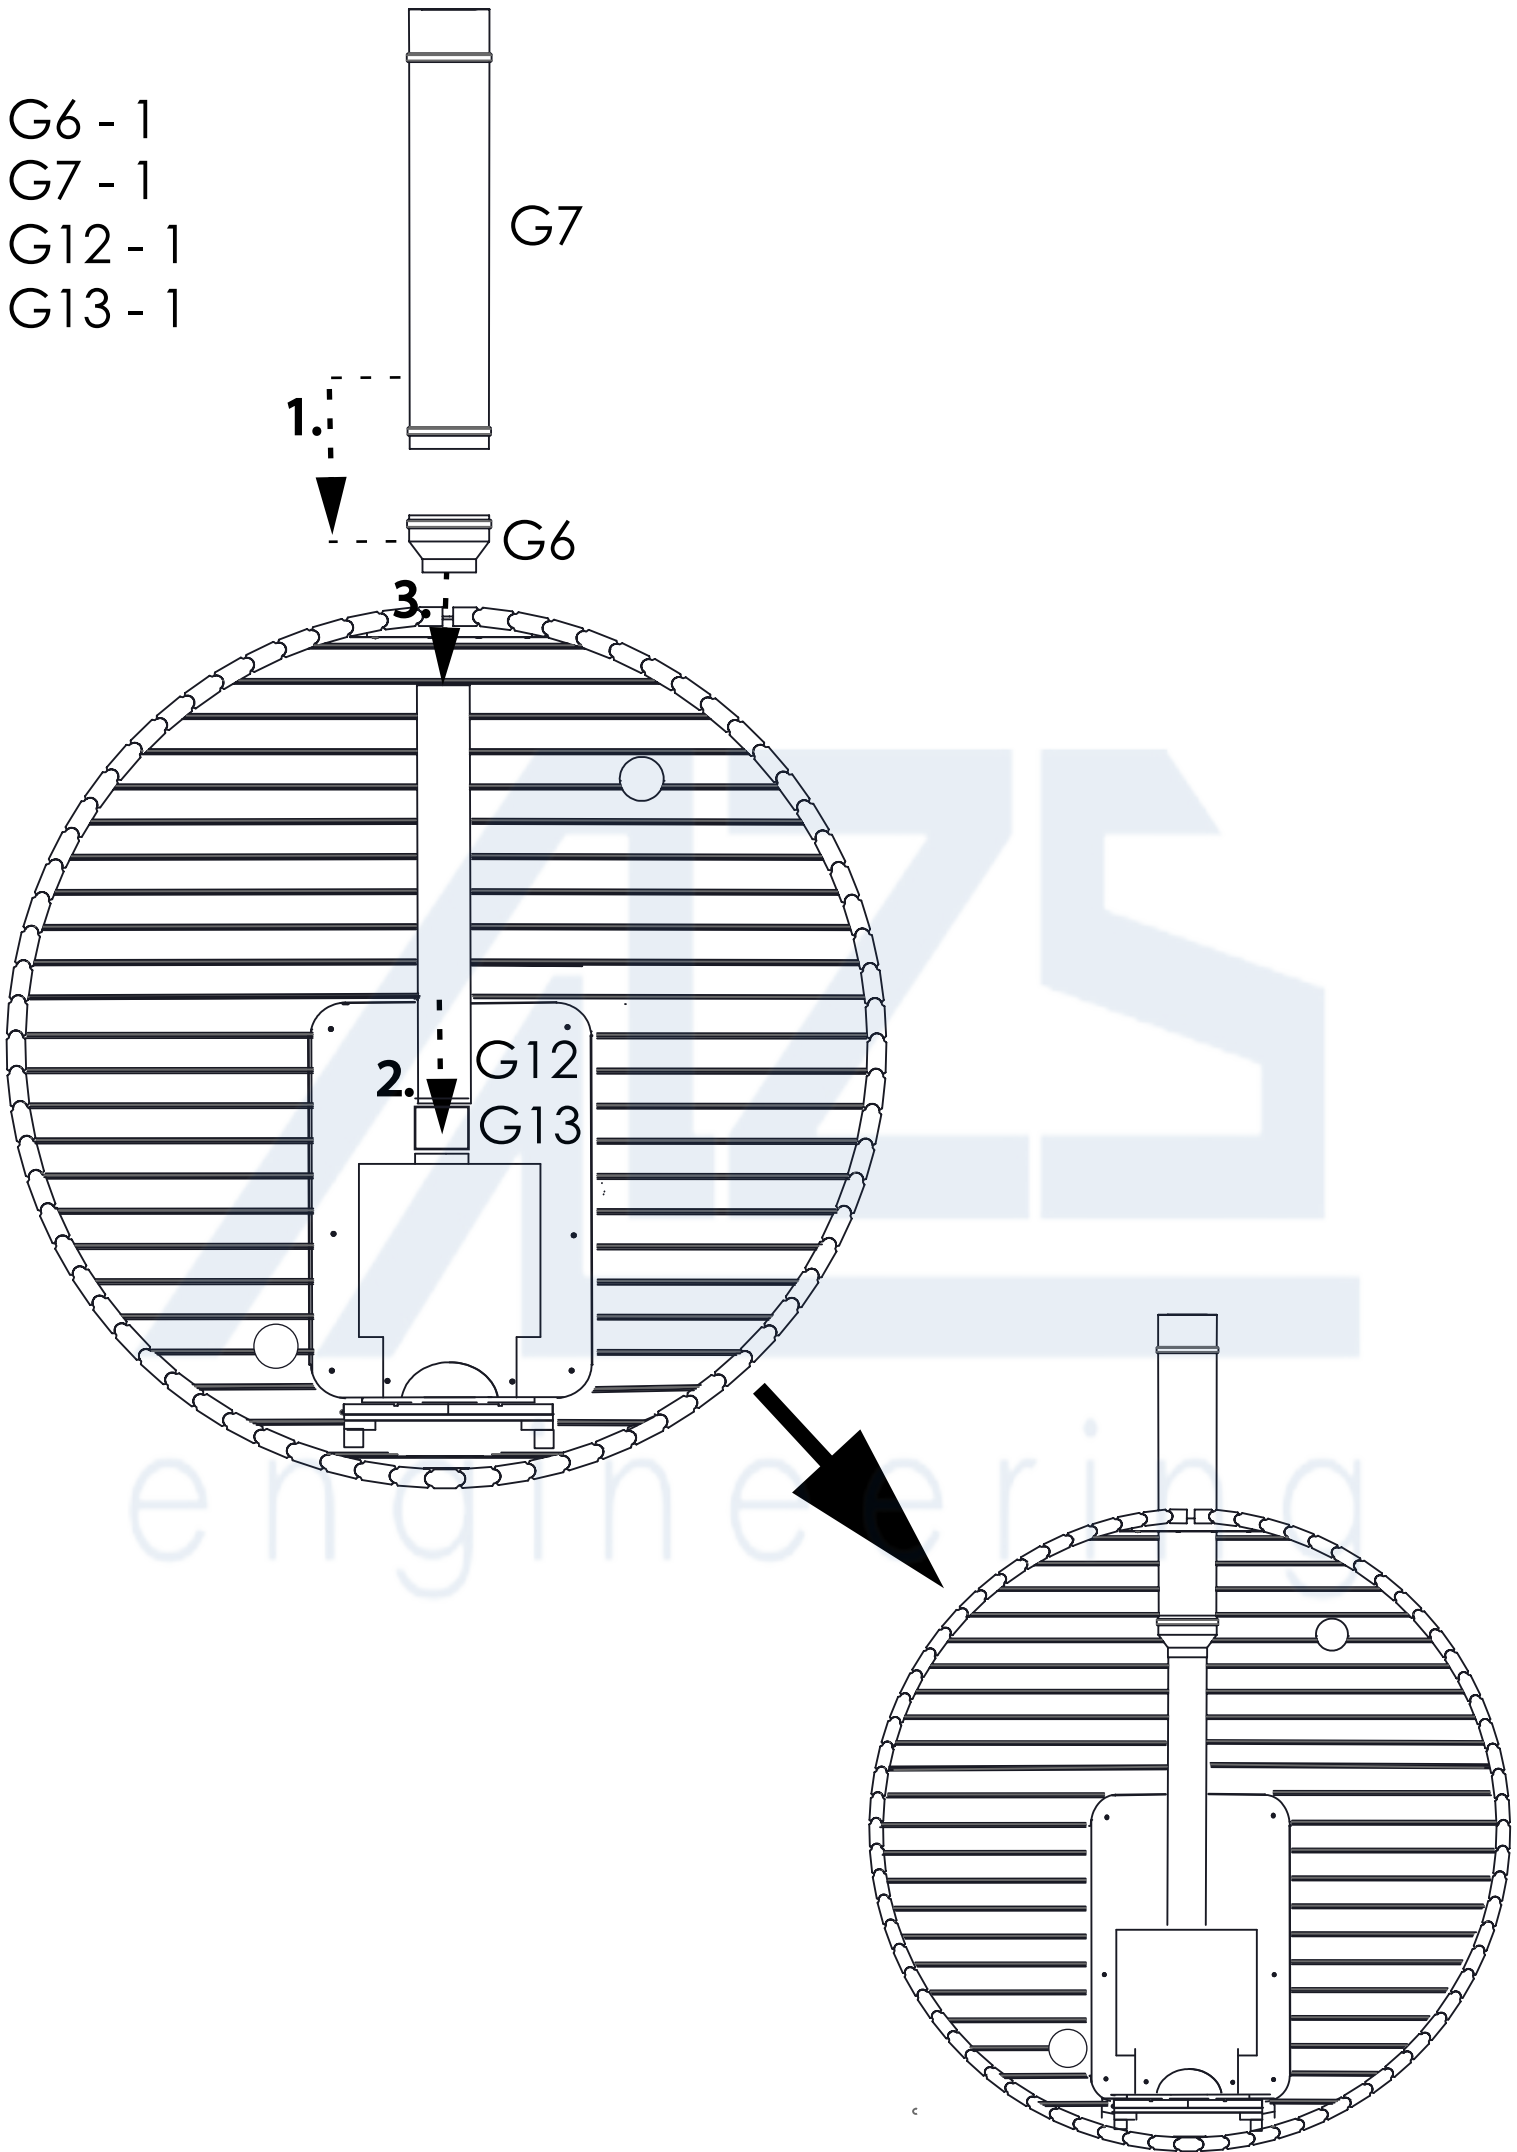


W1850 - 1
W850 - 1
W480 - 1
W80 - 3
4345 - 24

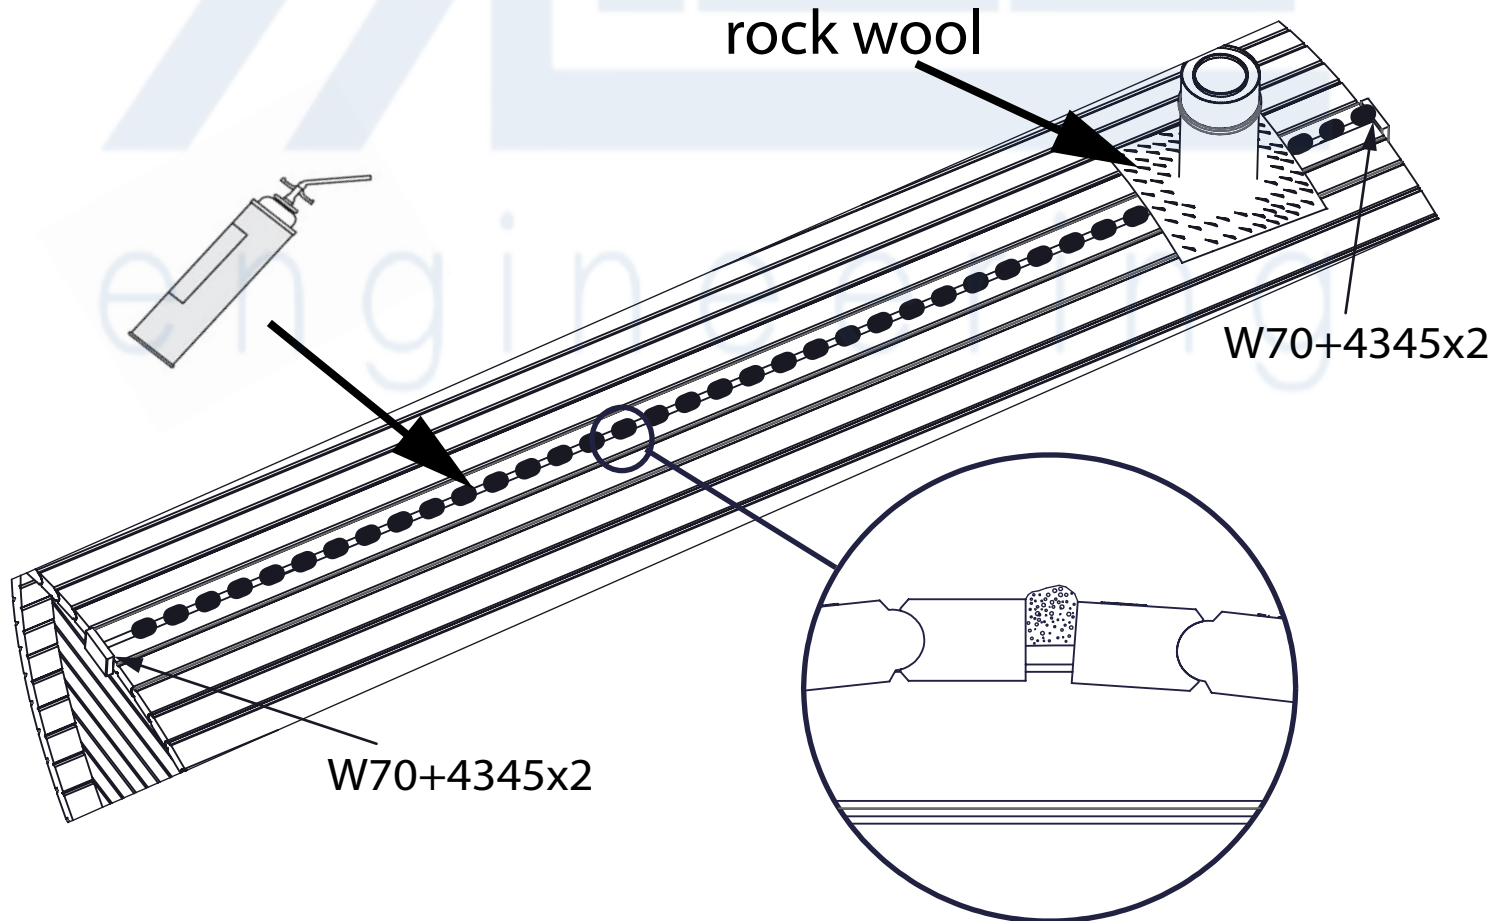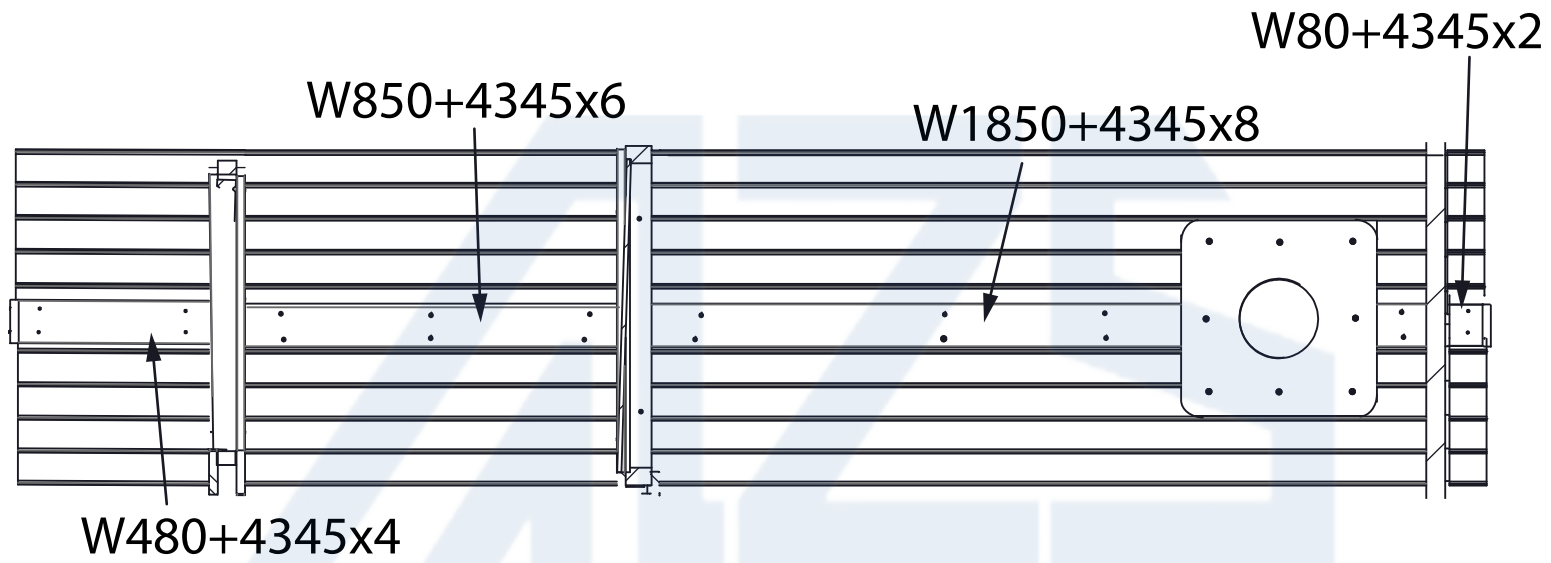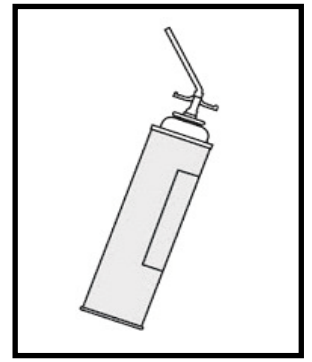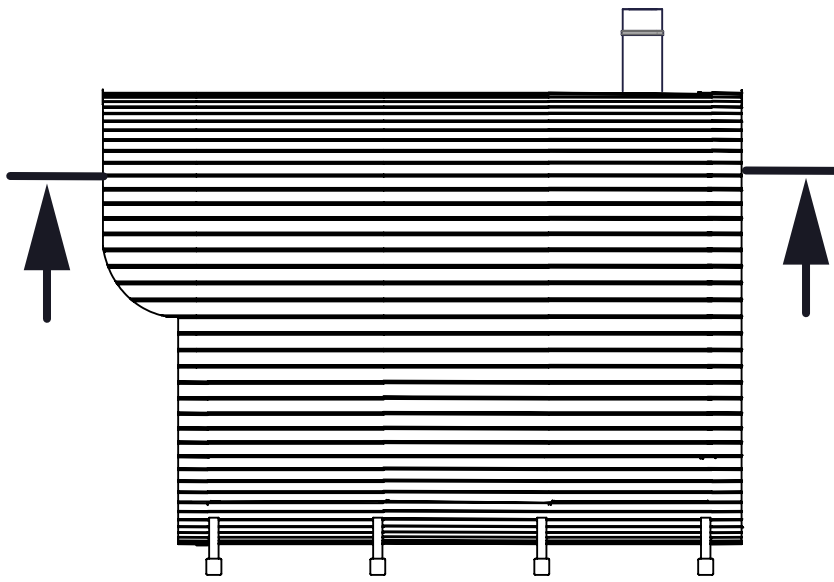

L60 - 4
K60 - 8
2012 - 8
732012 - 4

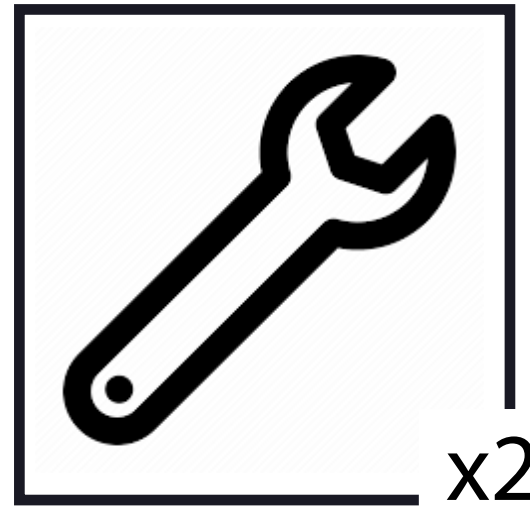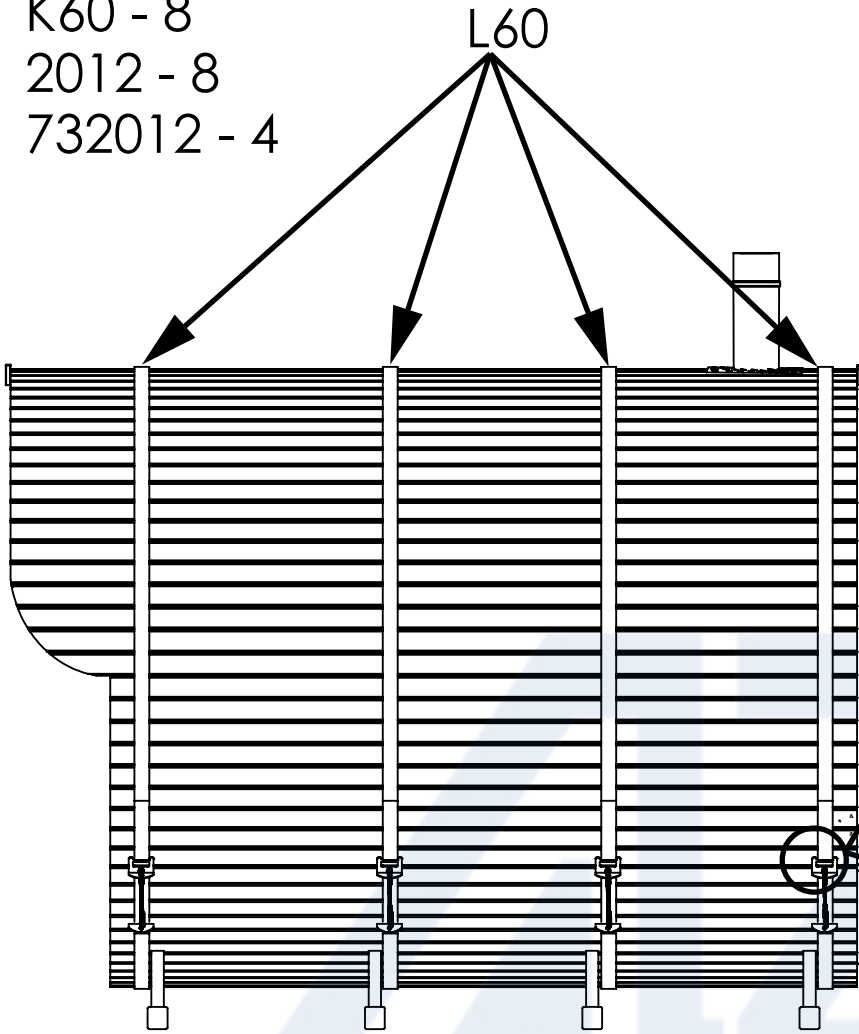


x2

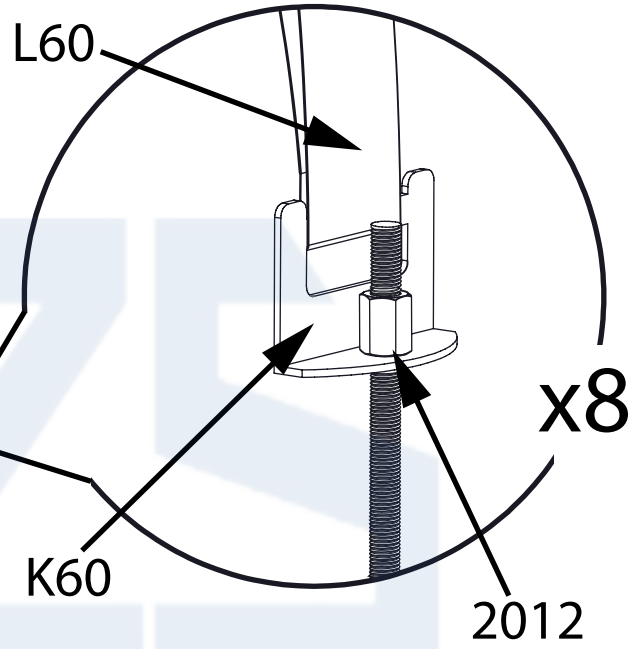

SET3

IN

OUT

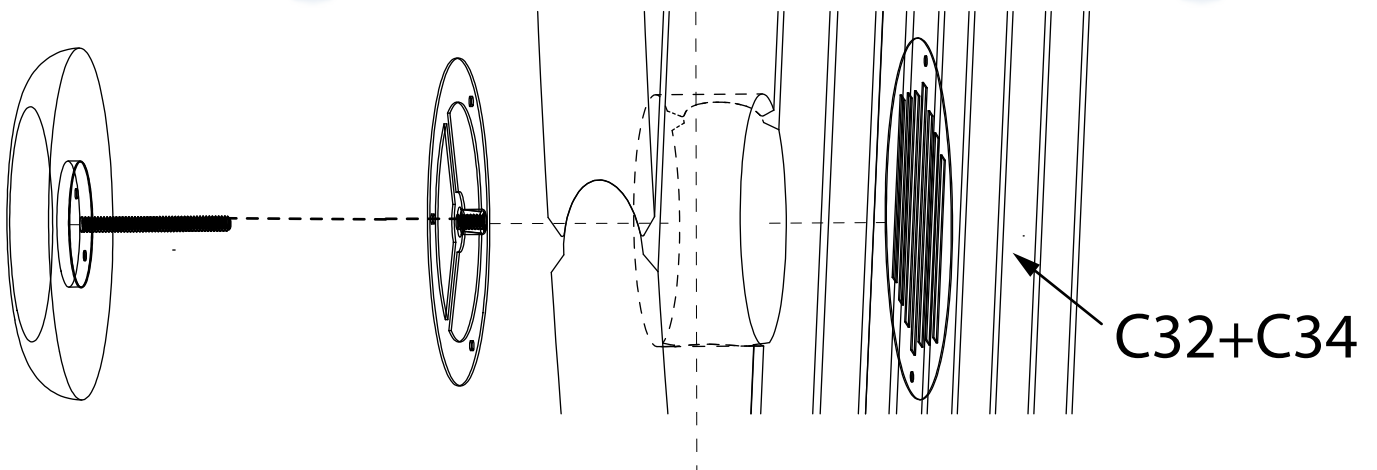


OUT

DG1800 - 2
4570 - 20

DG1800

x10

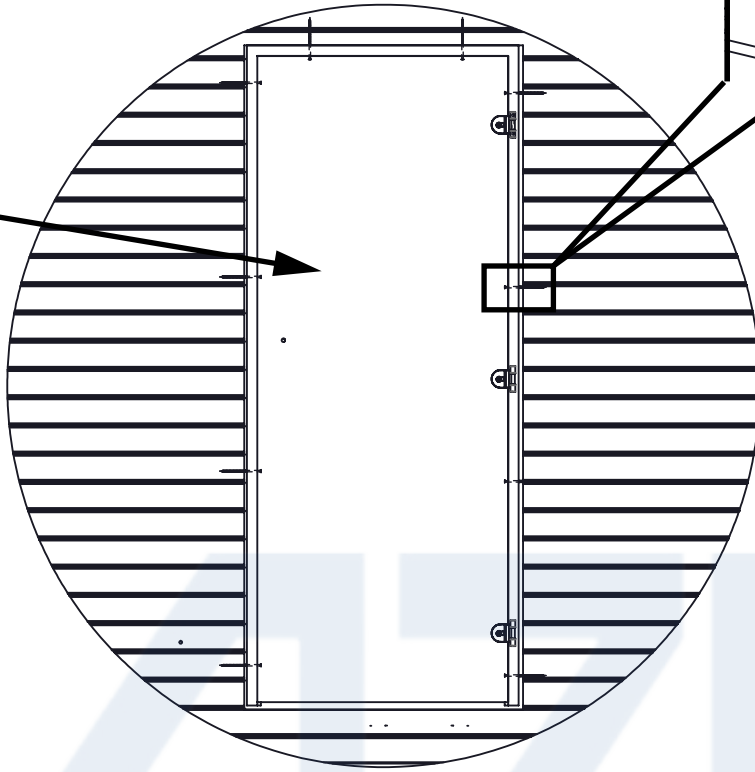


W1820 - 4
W880 - 2
4345 - 32

W880+4345x4


W1820+4345x6

SET2

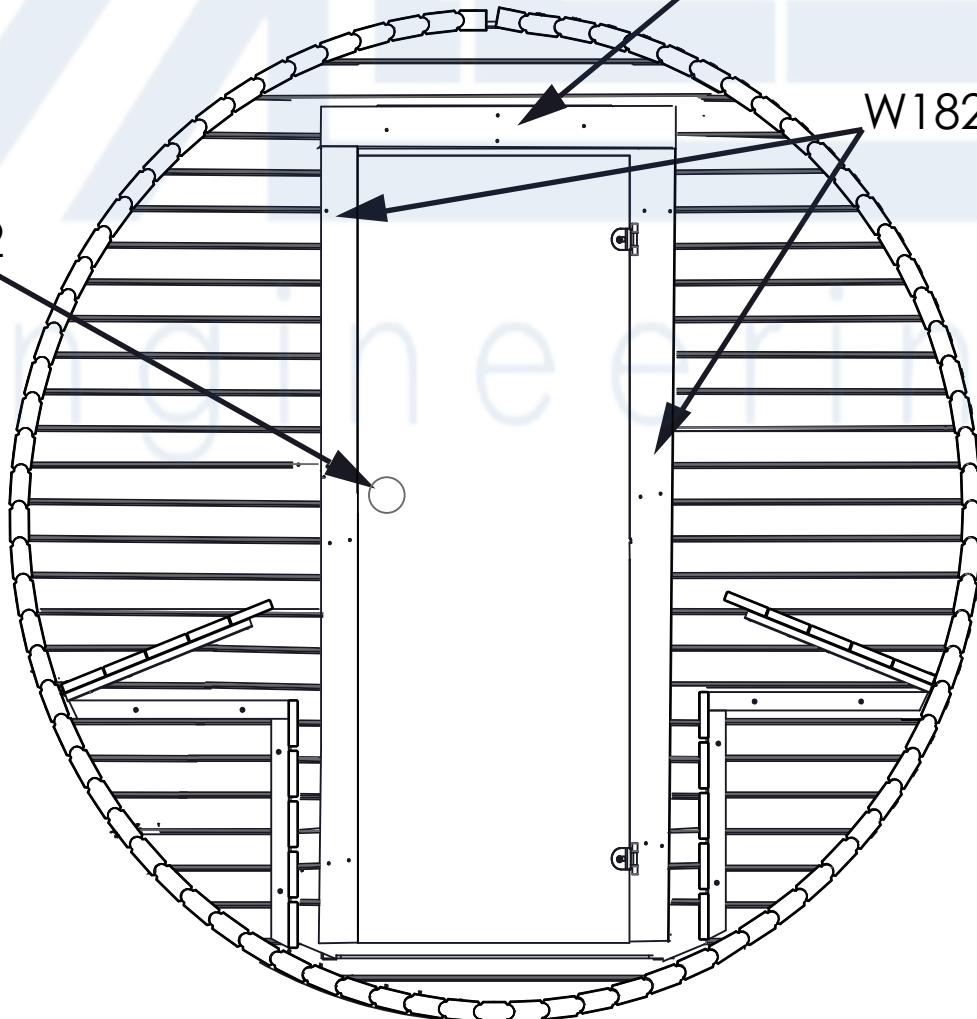


W1820 - 4
W800 - 2
WS1820 - 4
SET2 - 2
4345- 44

IN



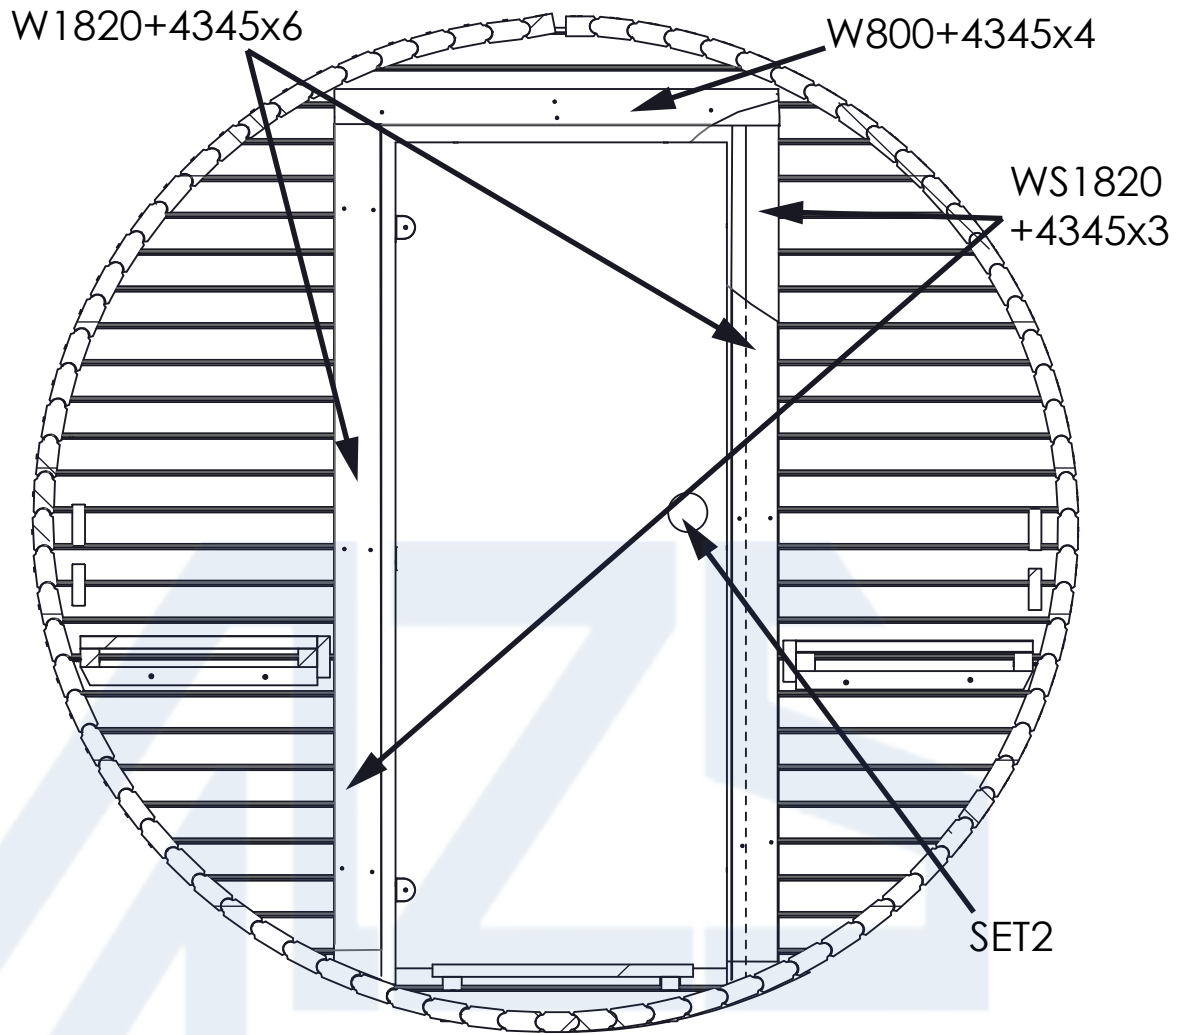


SET2

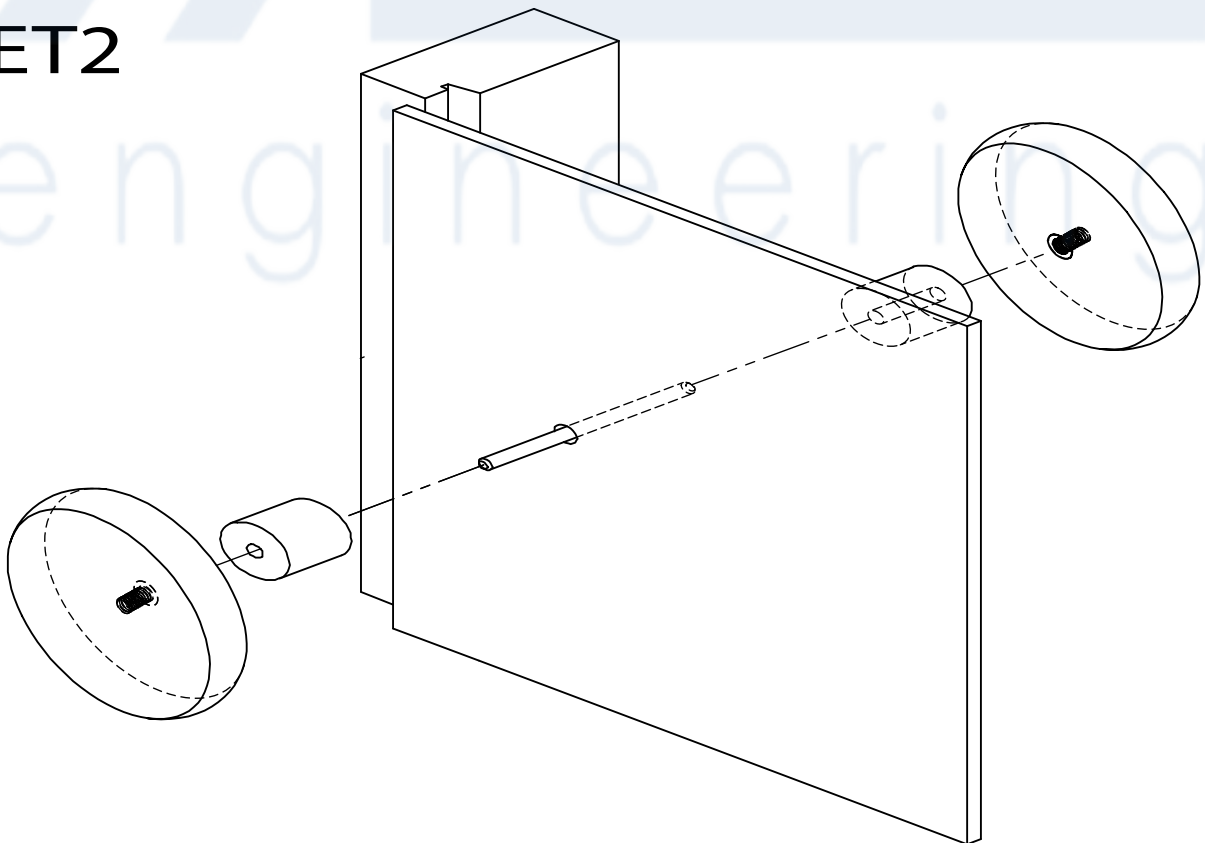

WS1680 - 4
E - 95
4345 - 12
9325 - 648

WS1680x2+4345x6

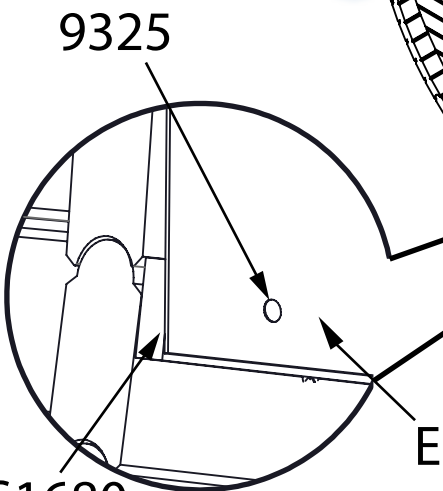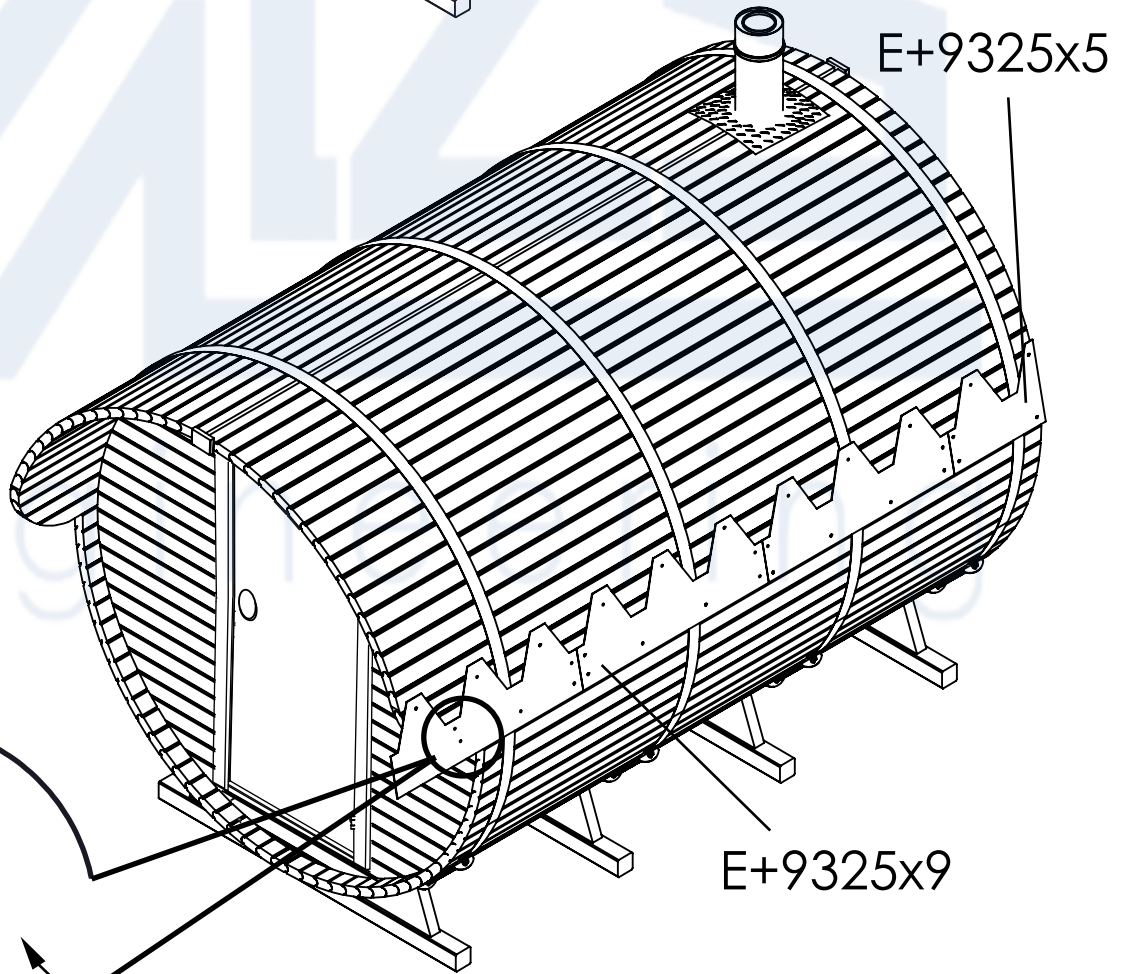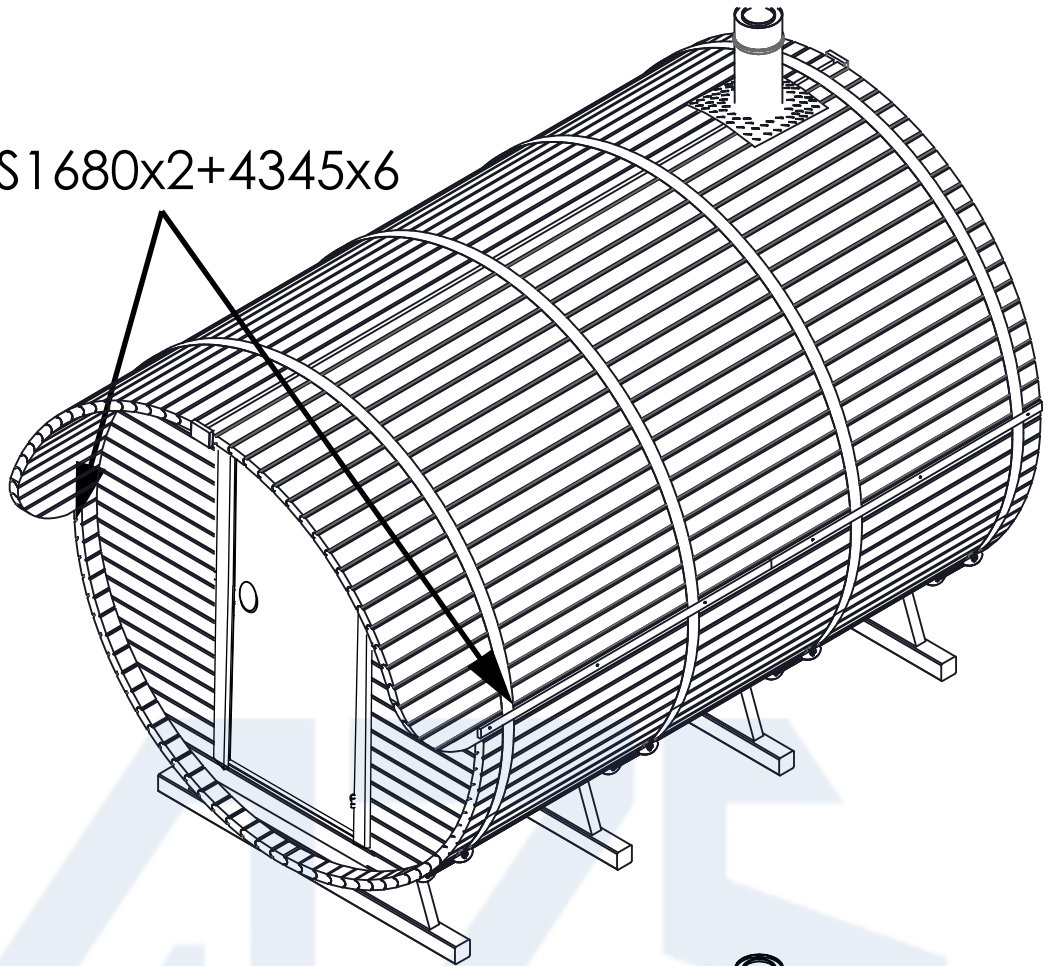

WS1680

G8 - 1
G9 - 1
9325 - 12

