




WOODDEN SQUARE SAUNA COMFORTPROM 1.8m

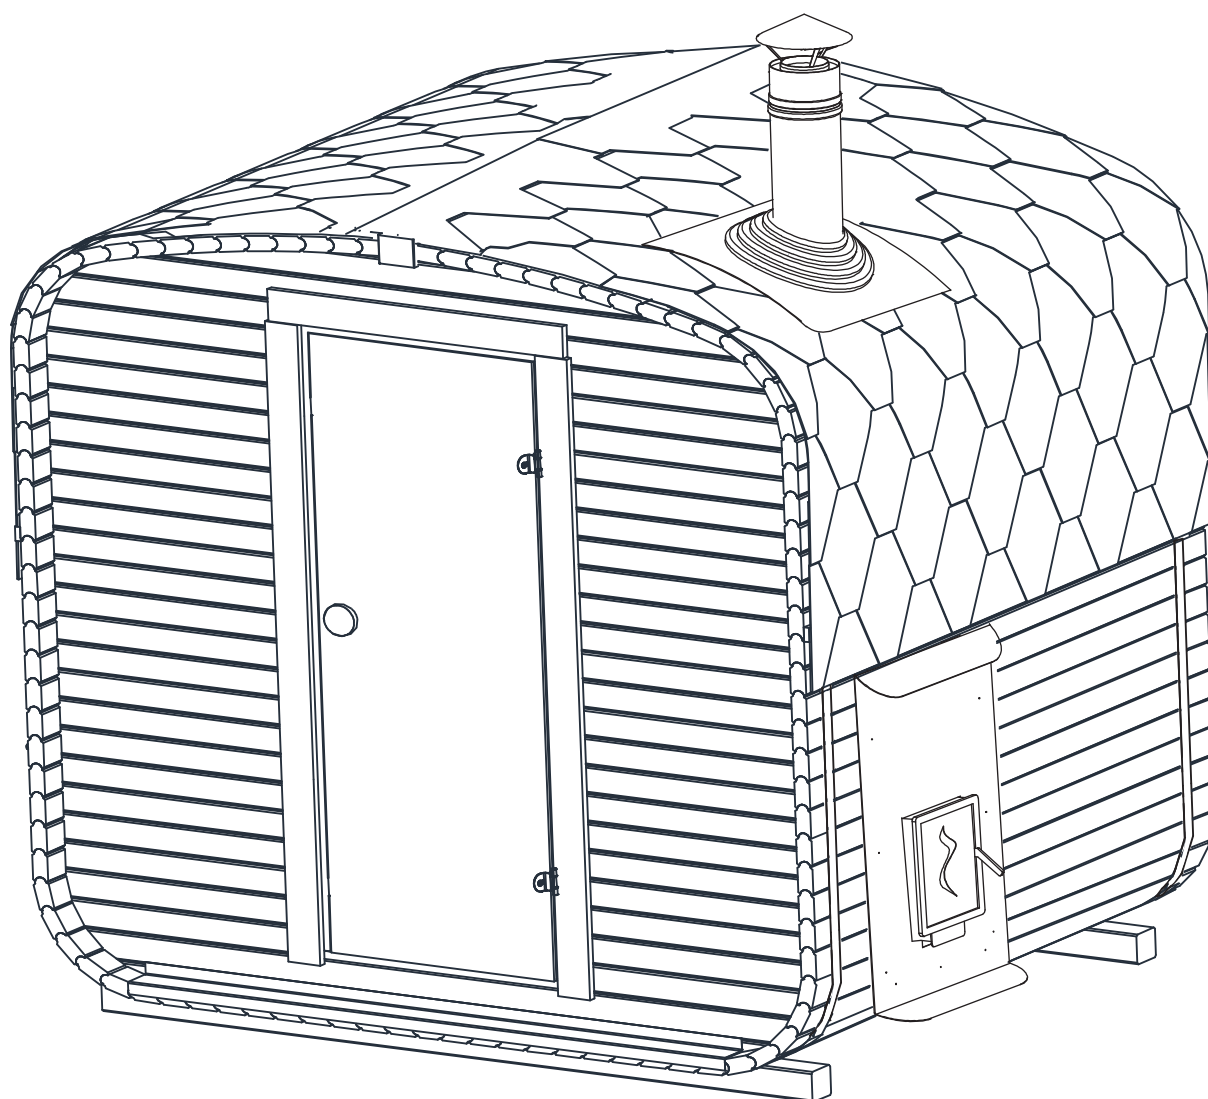

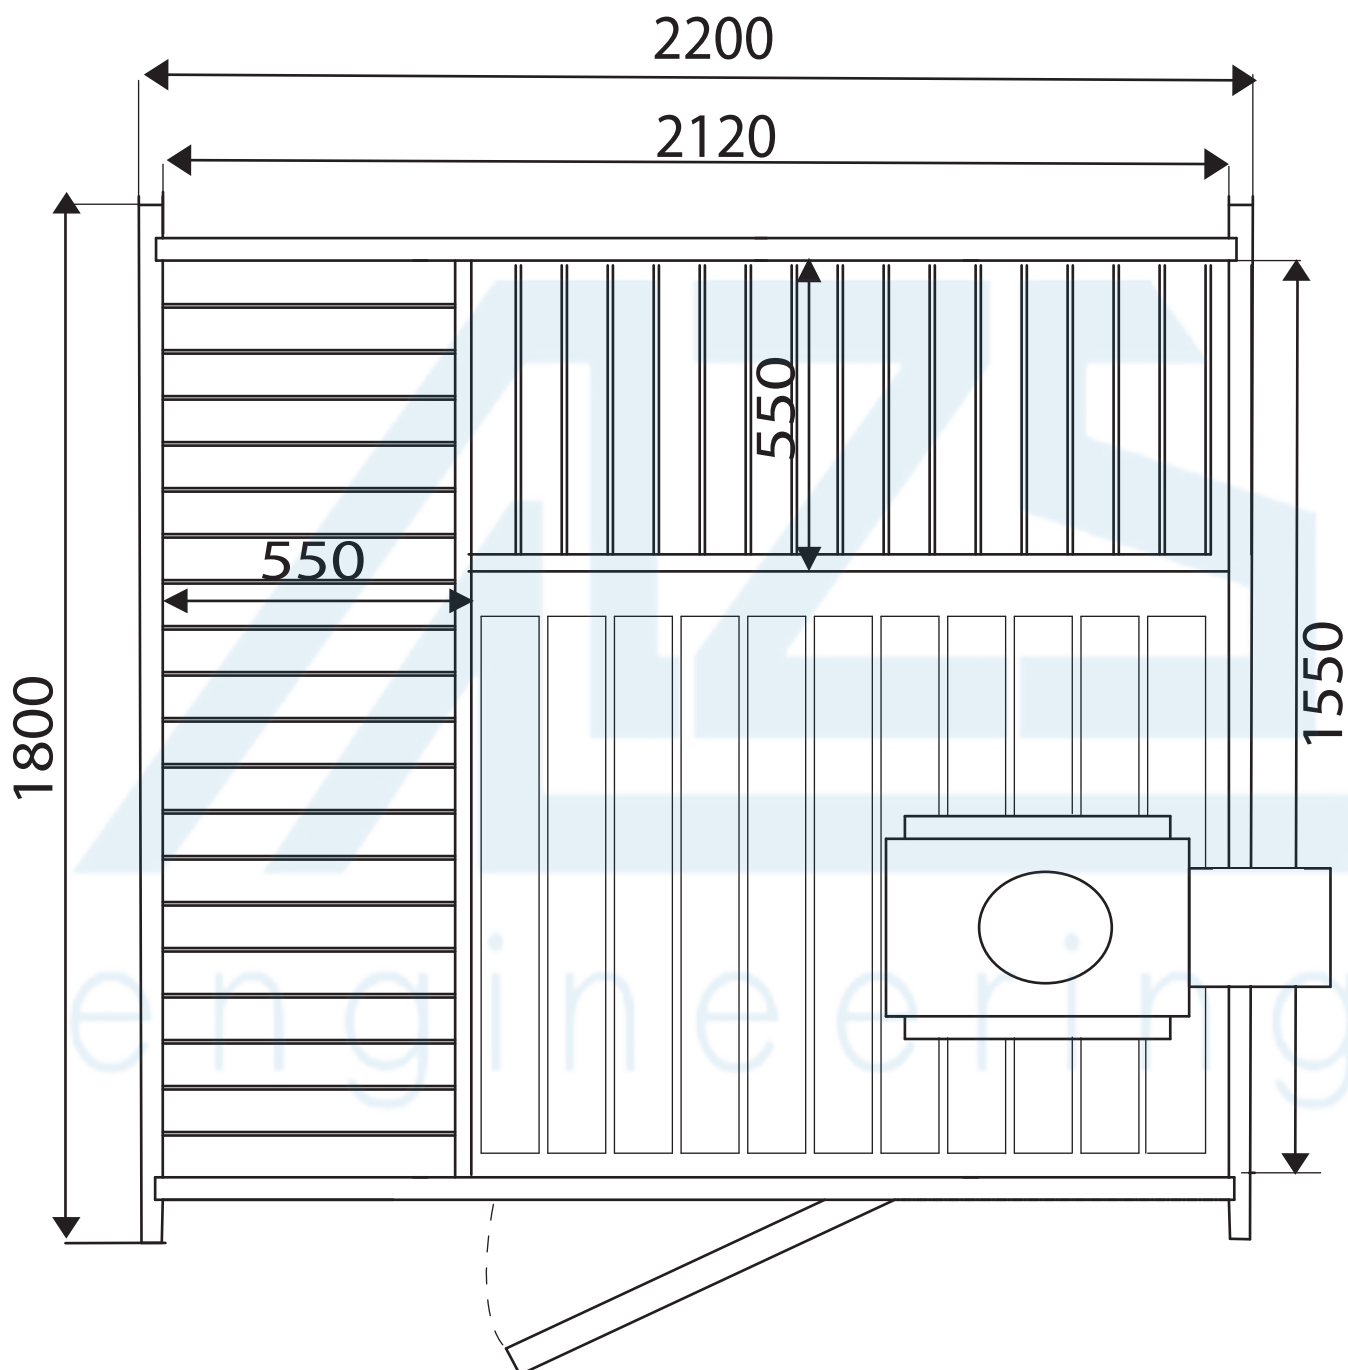


necessary tools

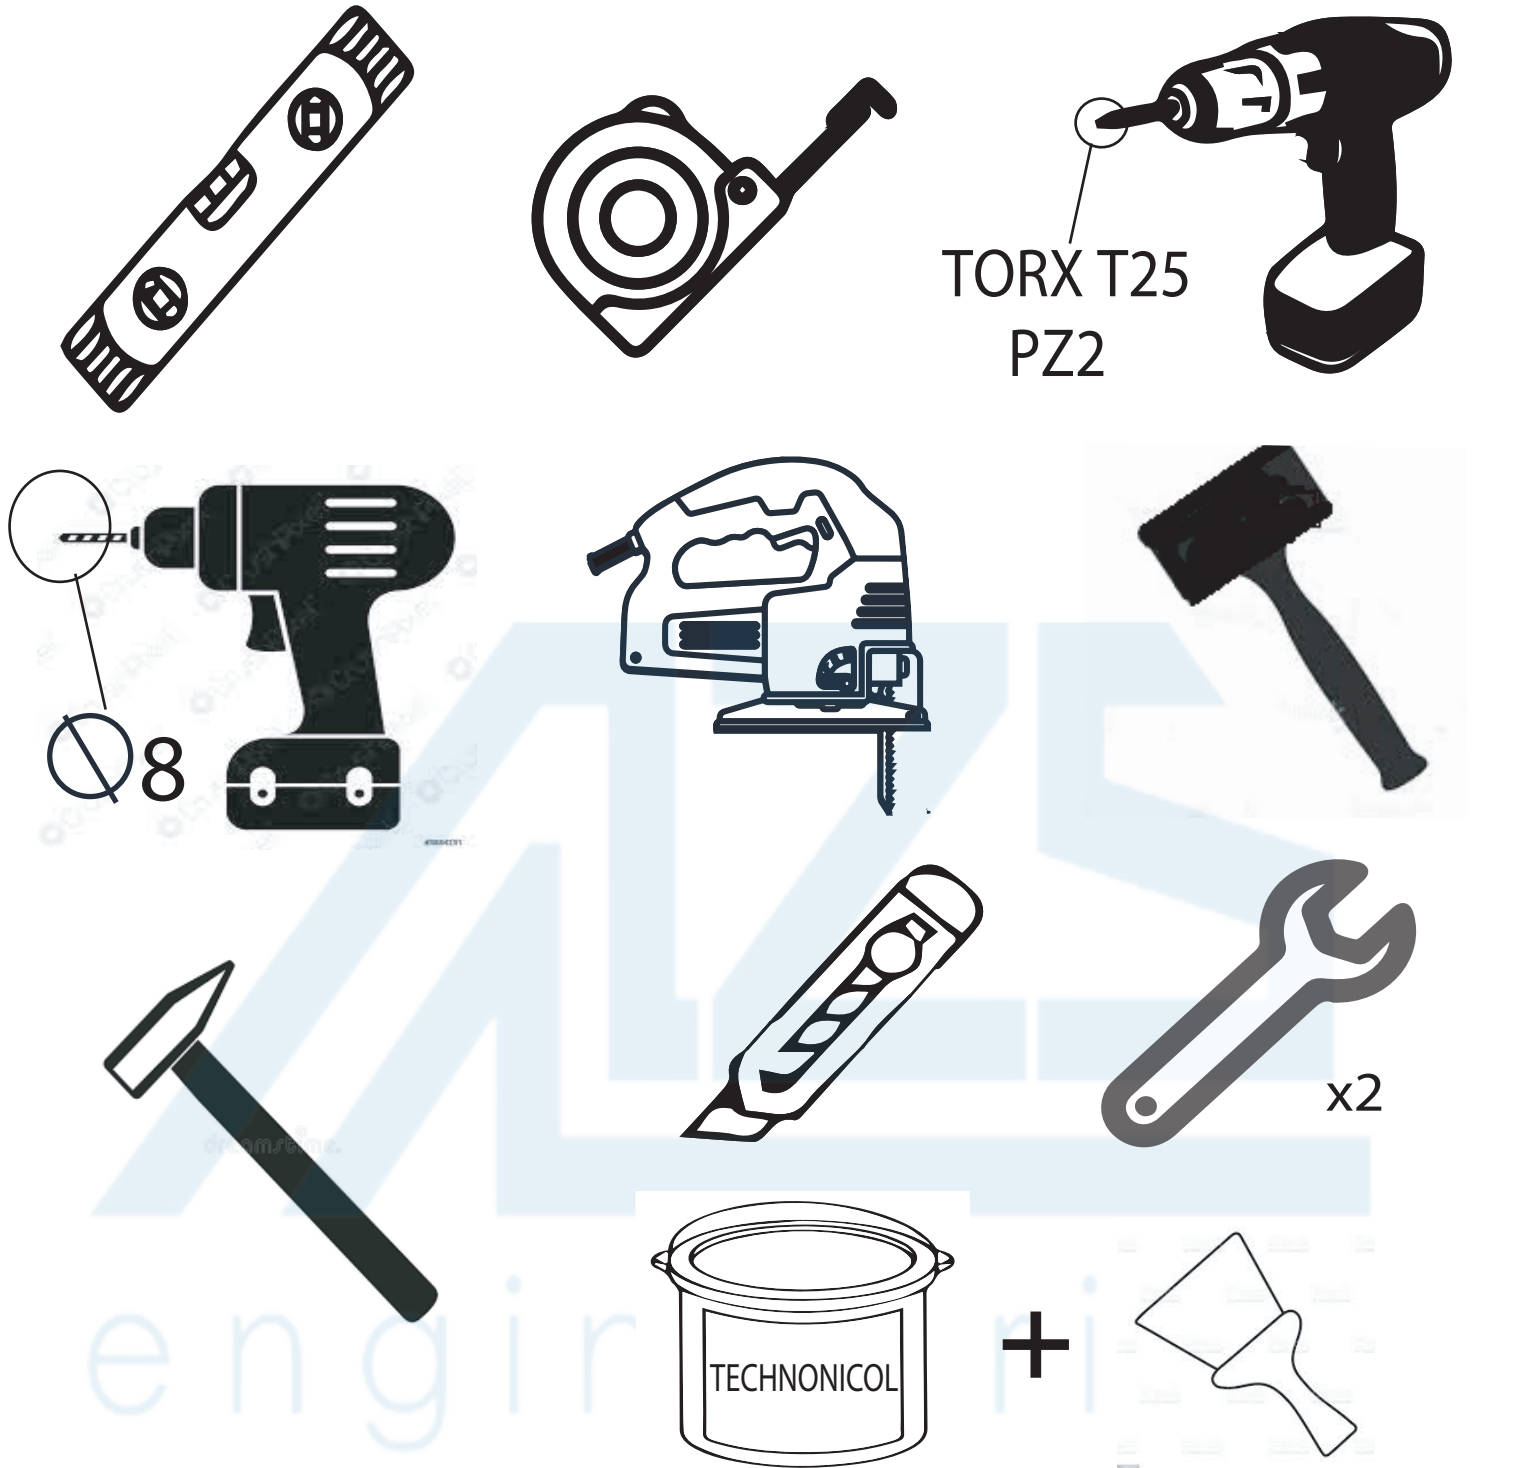

impregnation

+

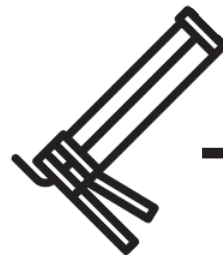


+



bituminous
sealant


NOT INCLUDED!

2012

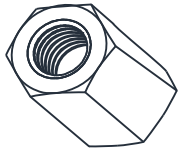


4x

L60

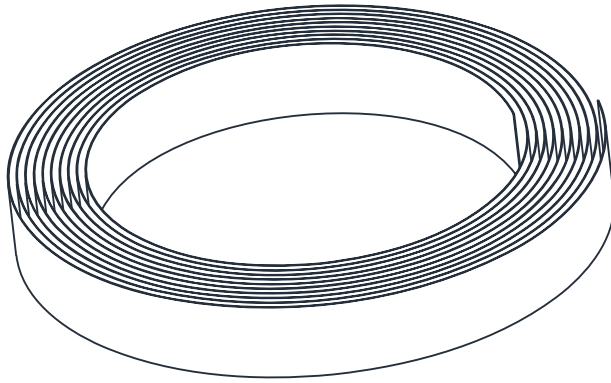


2x

K60

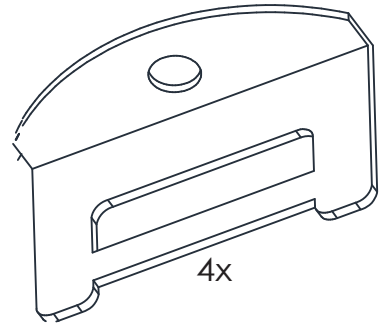

4x


Q1

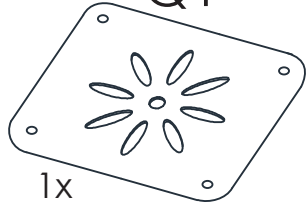

1x



400x

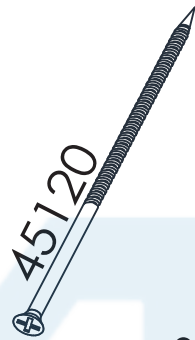

210x



240x




6x



47x




67x

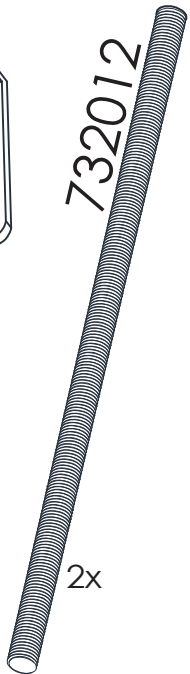


2x

SET2

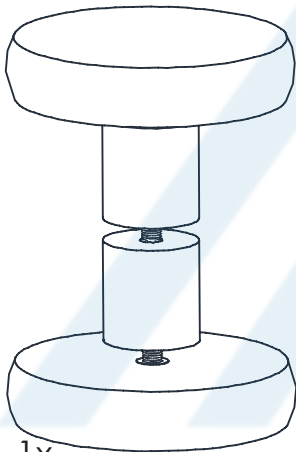


1x

SET3

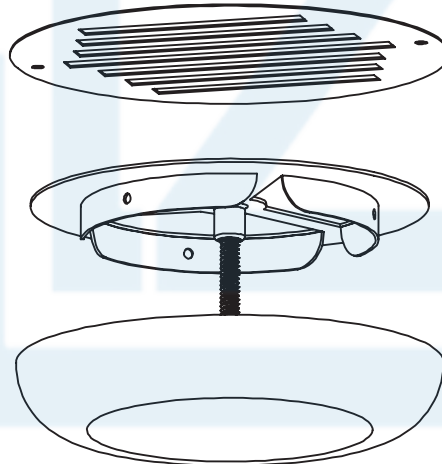

1x


P1450

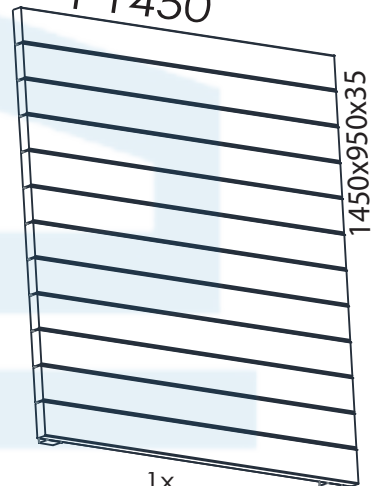

1x

Q4

1x

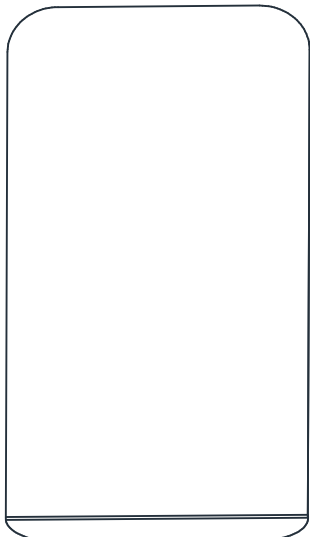


Q7



1x

Q3

2x

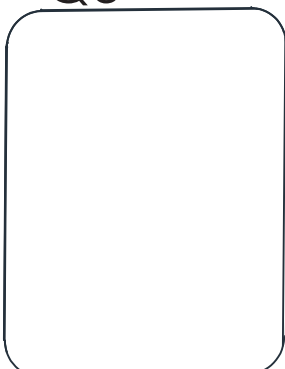


S1540



1540x550x90

2x


H1450

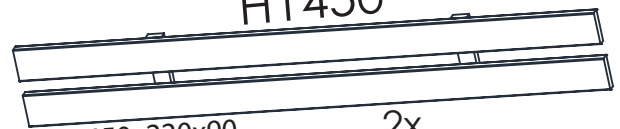

1450x220x90


2x

G8














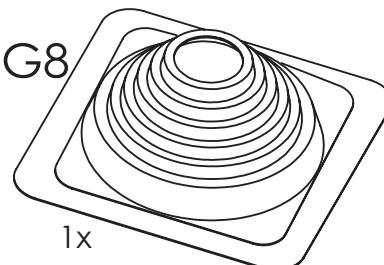


1x


Q2

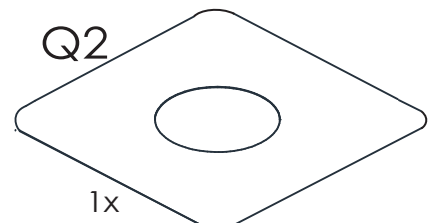




1x

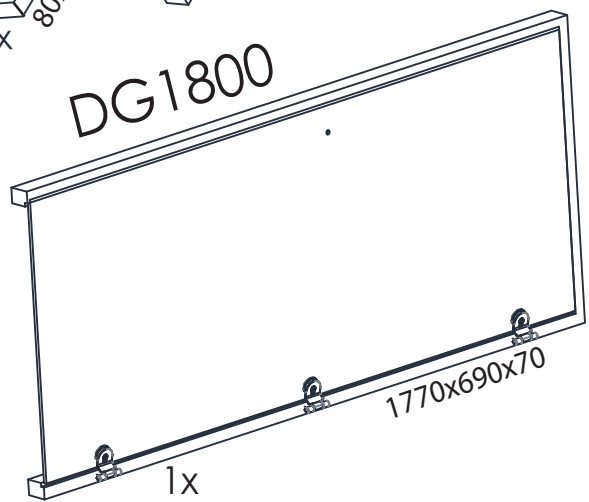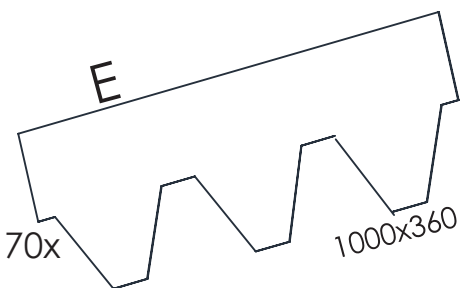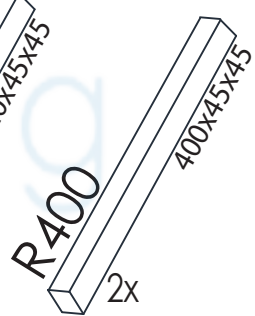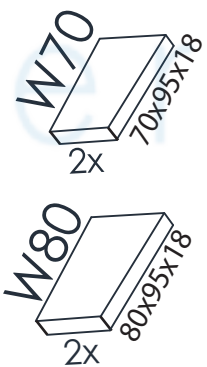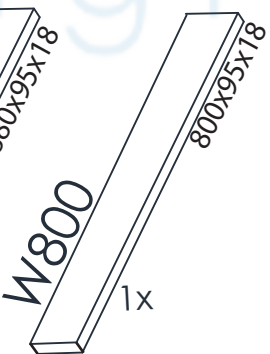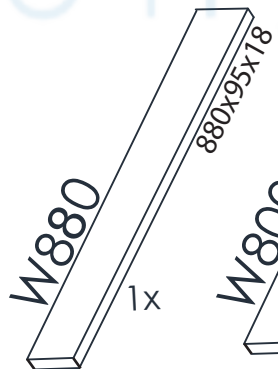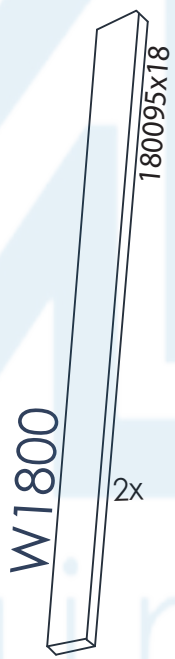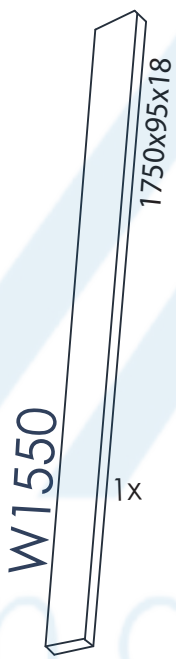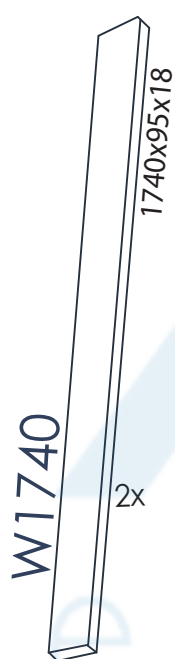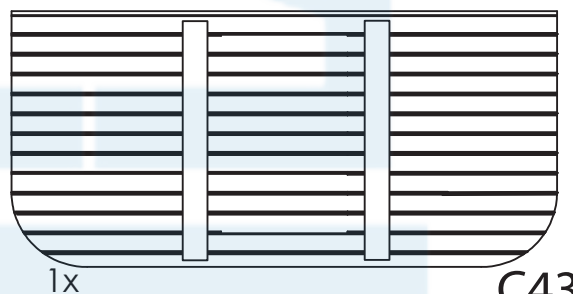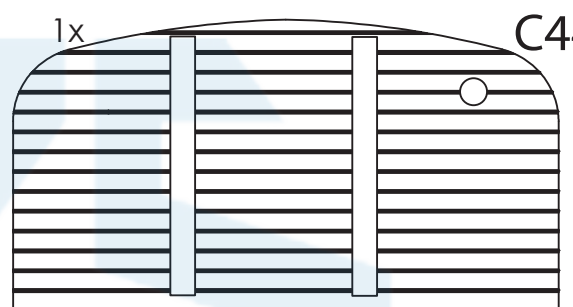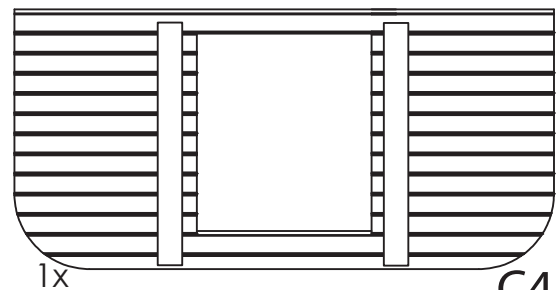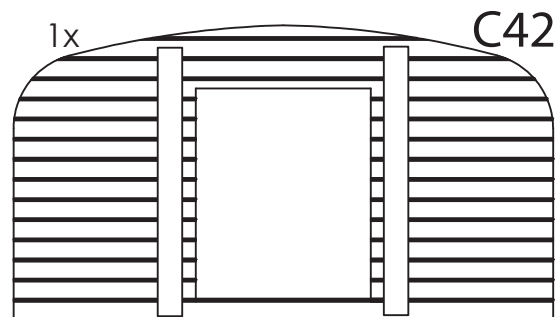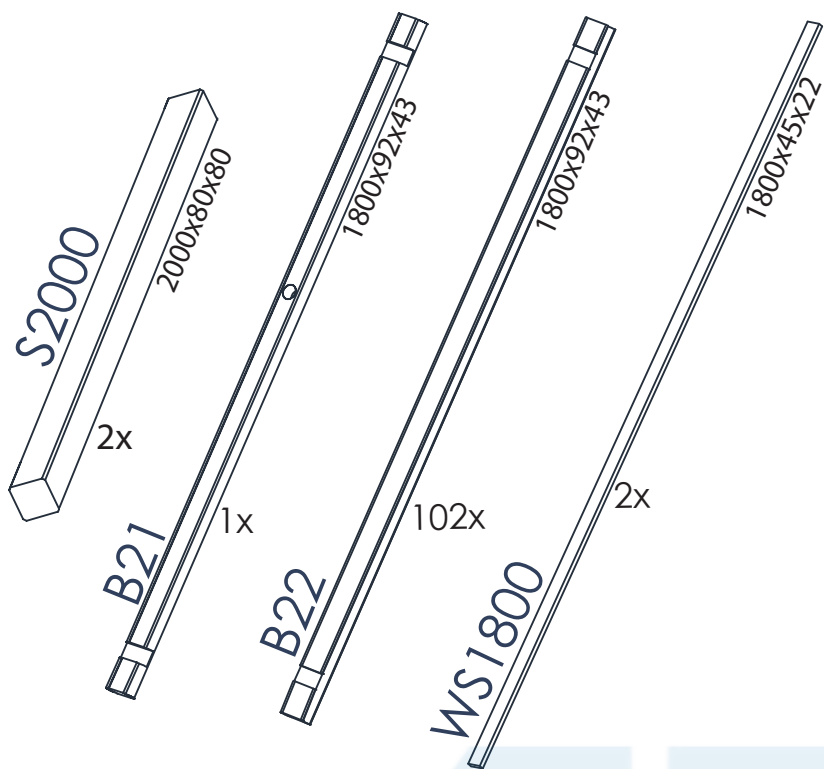


A SET FOR INSTALLING WOOD-BURNING STOVE (NOT INCLUDED).
PURCHASED SEPARATELY

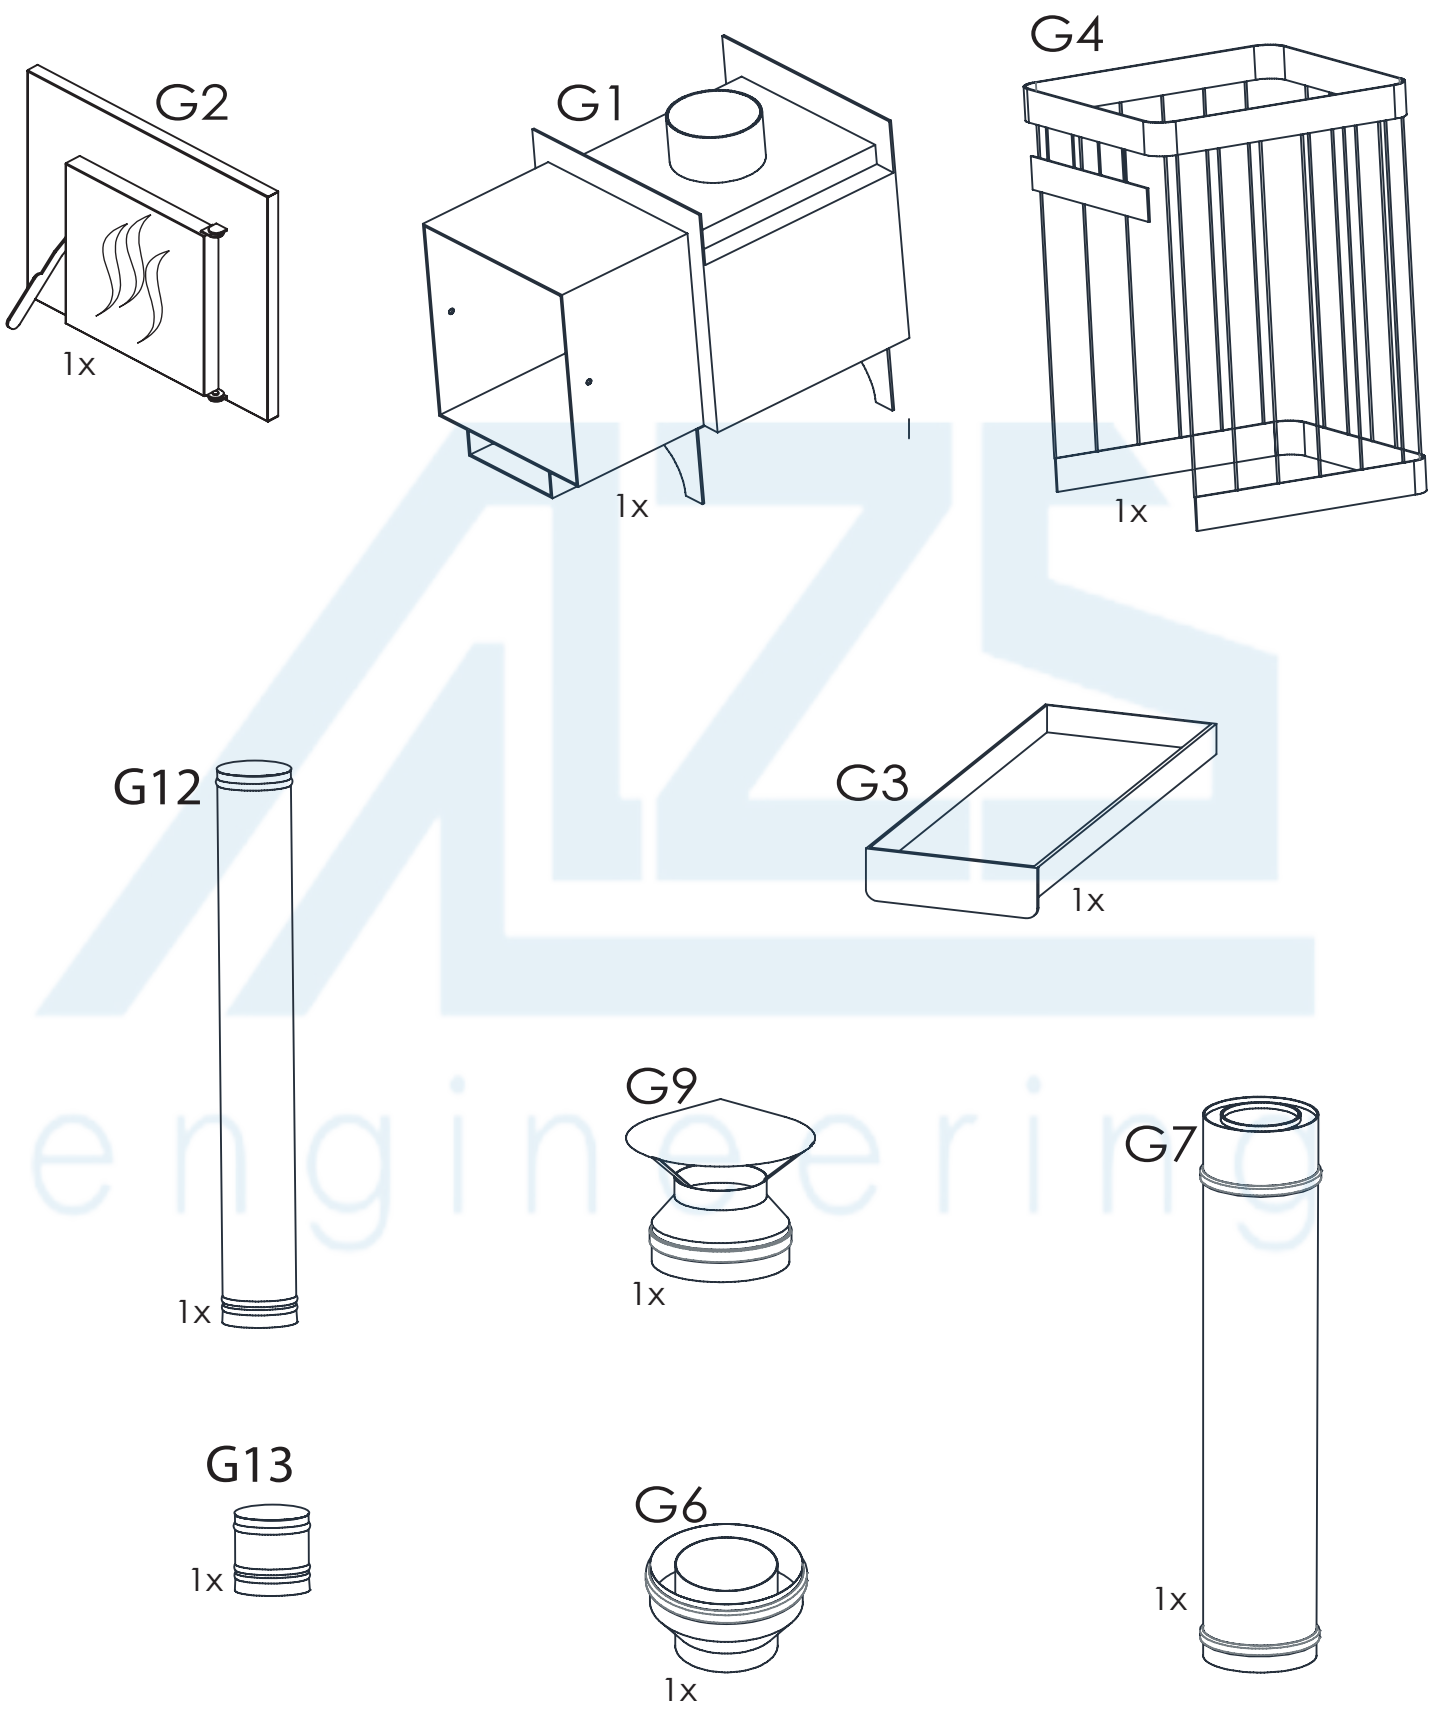


S2000 - 2

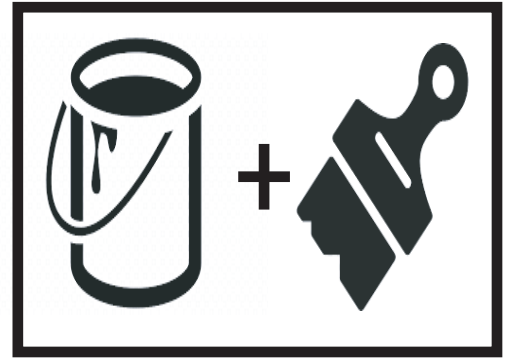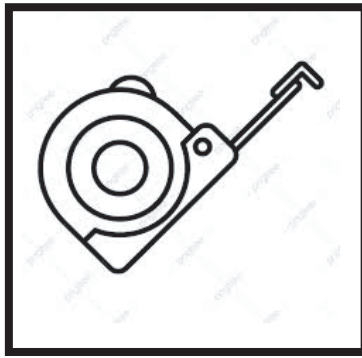
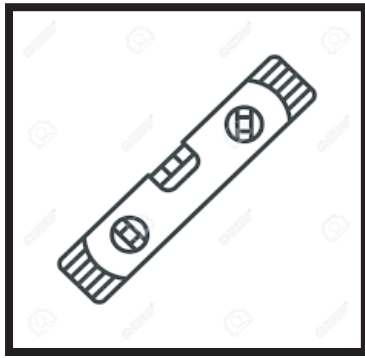


B21 - 1
4570 - 2



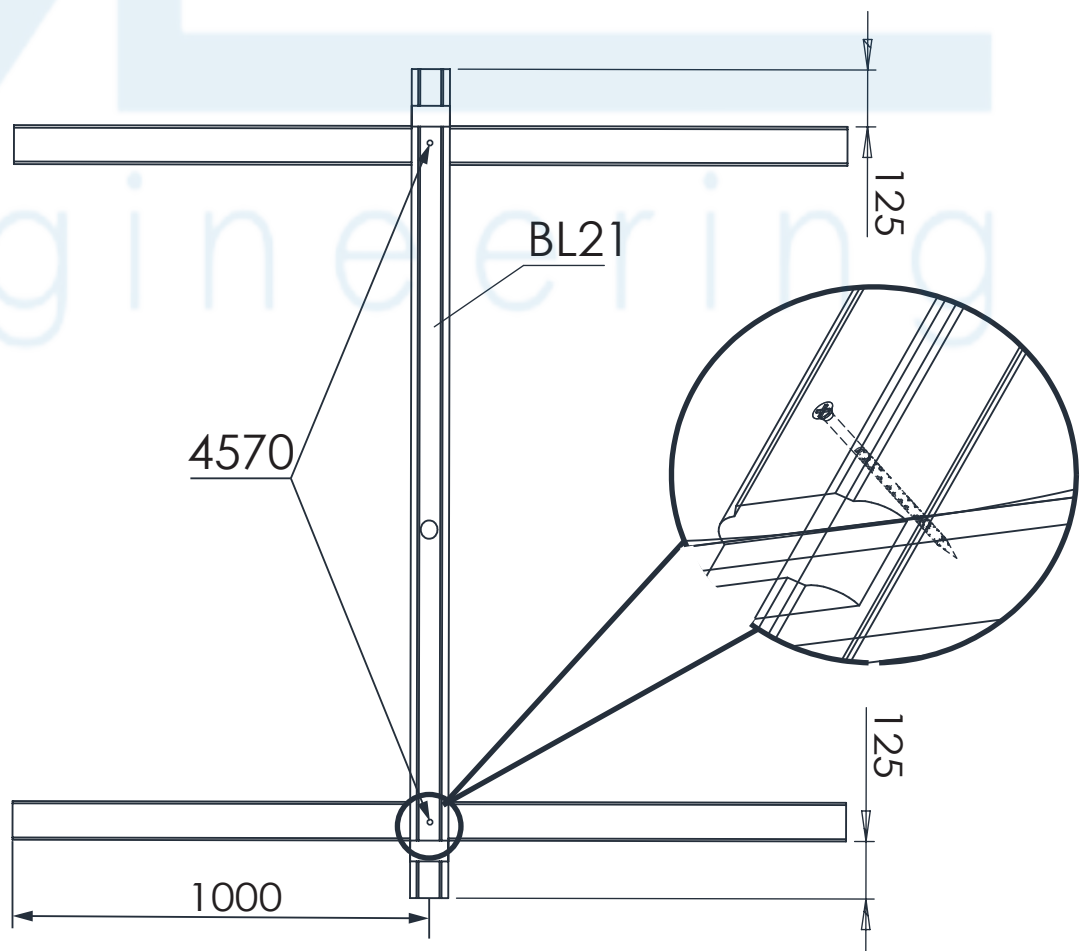


B22 - 18
4570 - 38
45120 - 36


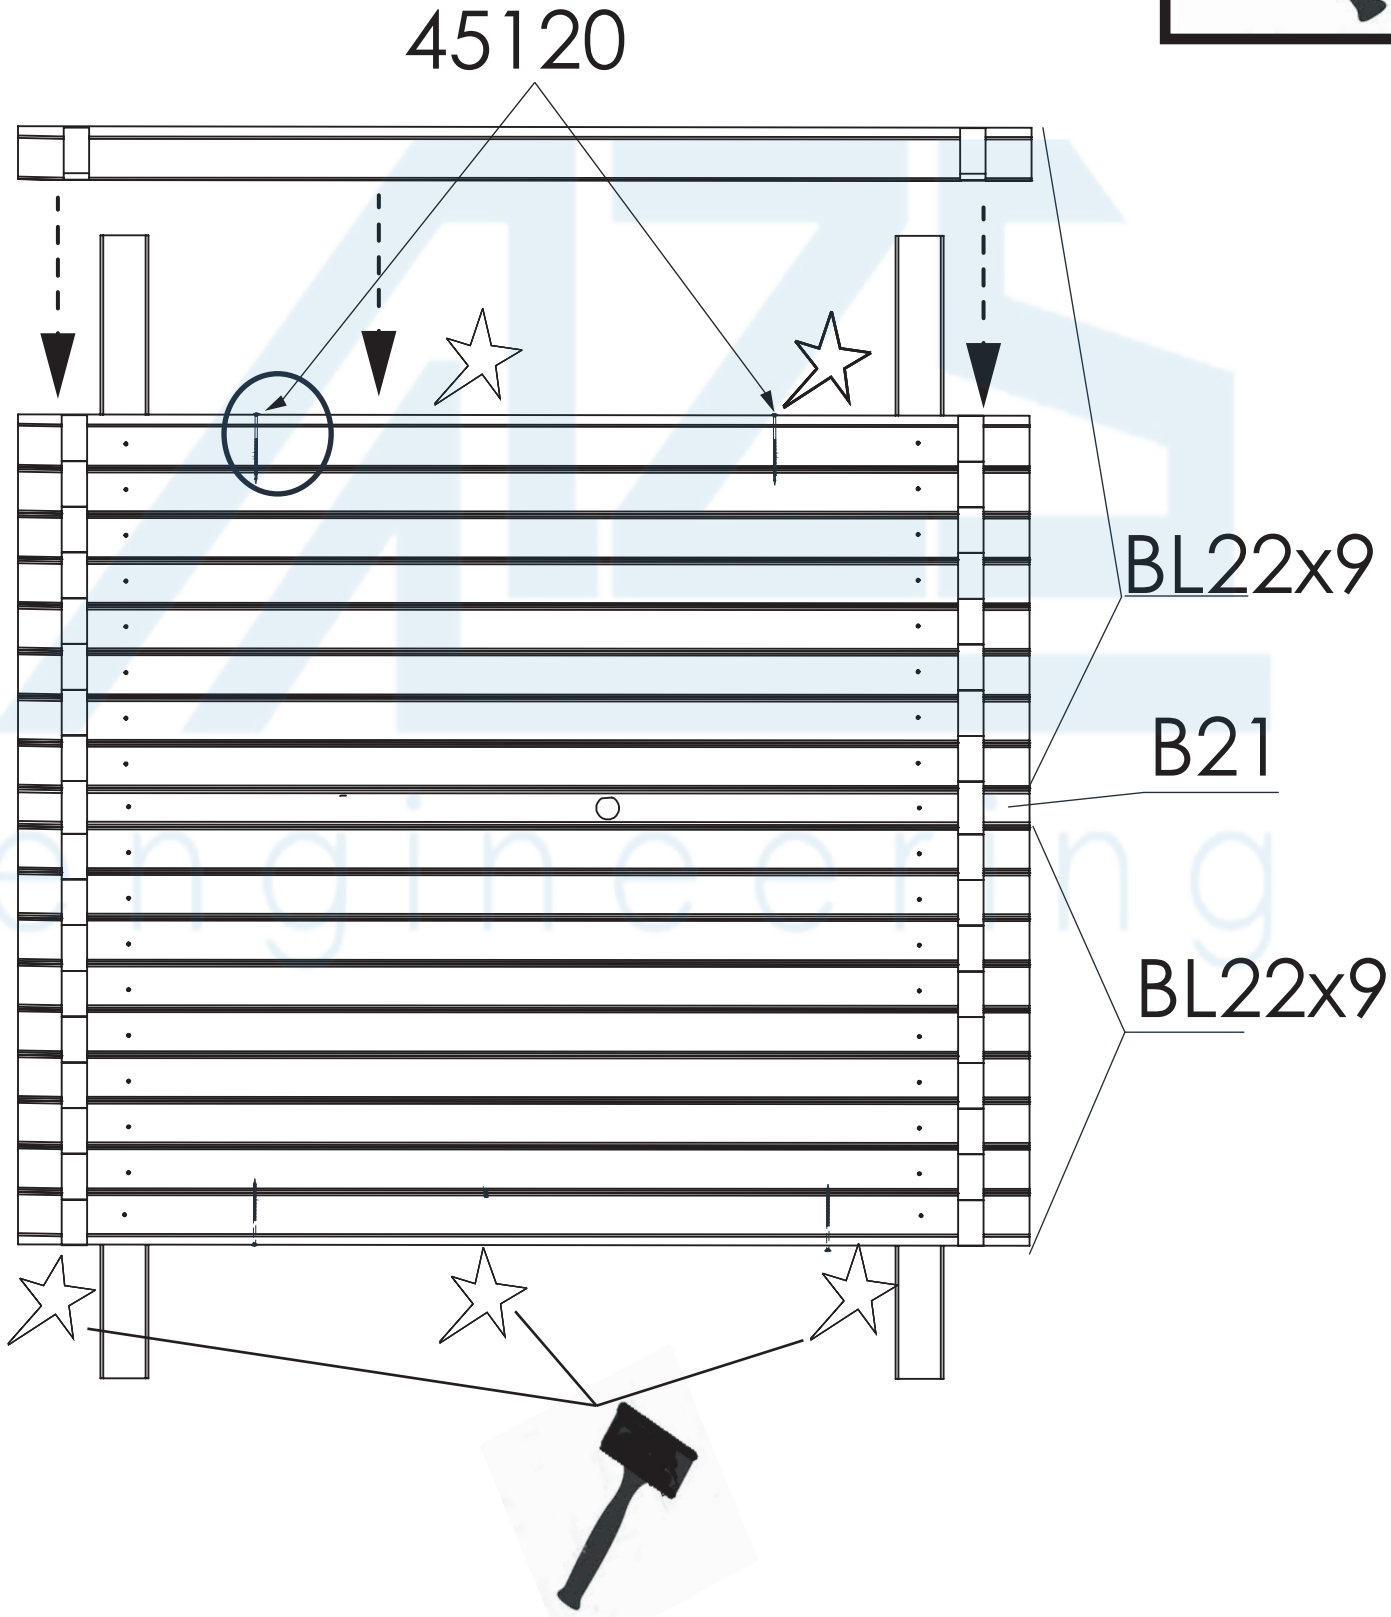


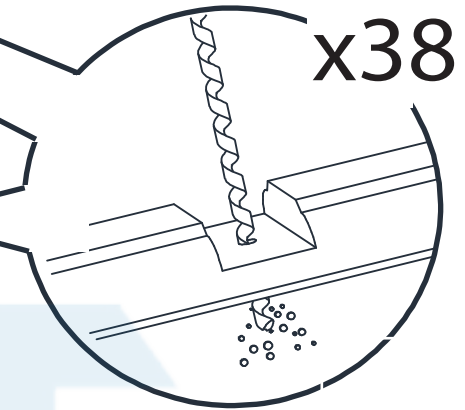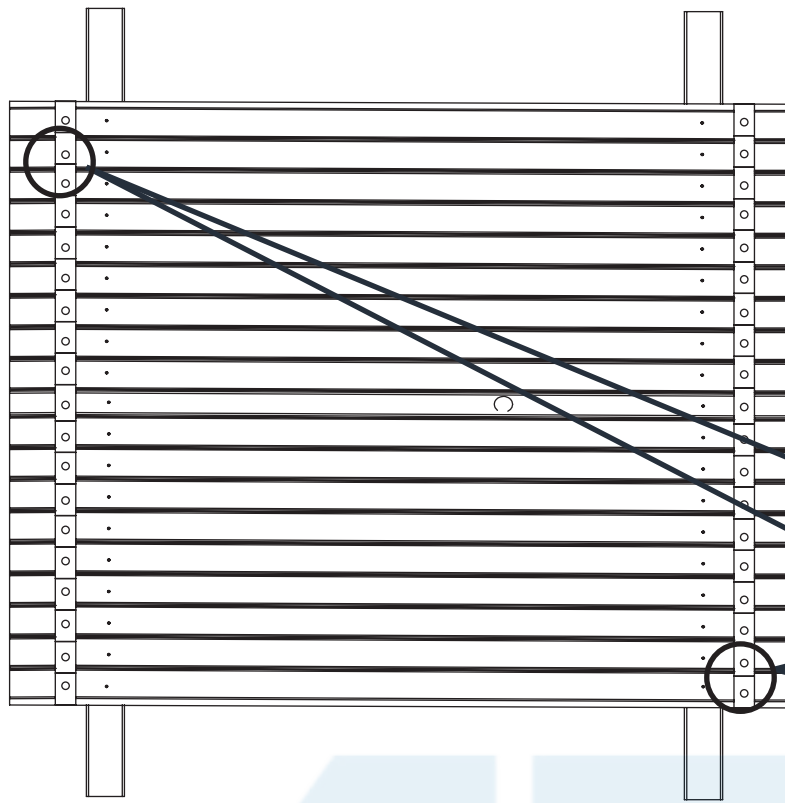


C41 - 1
C43 - 1
4570 - 4

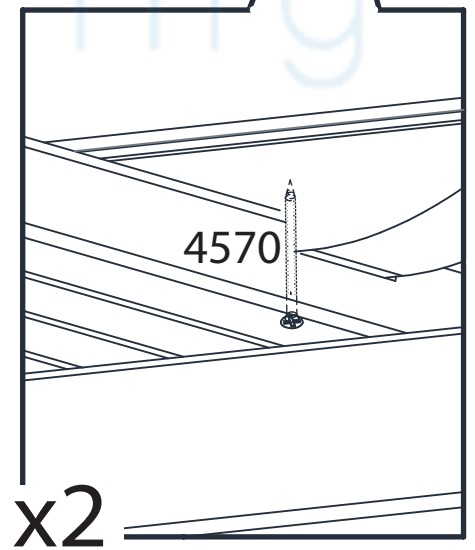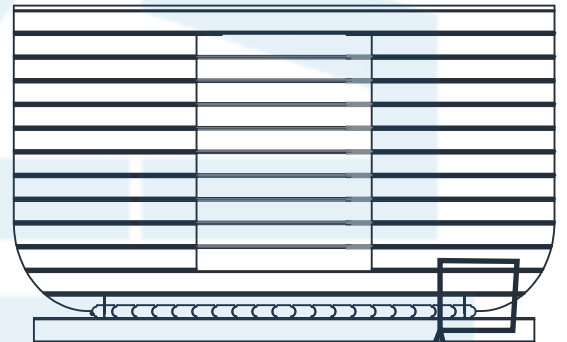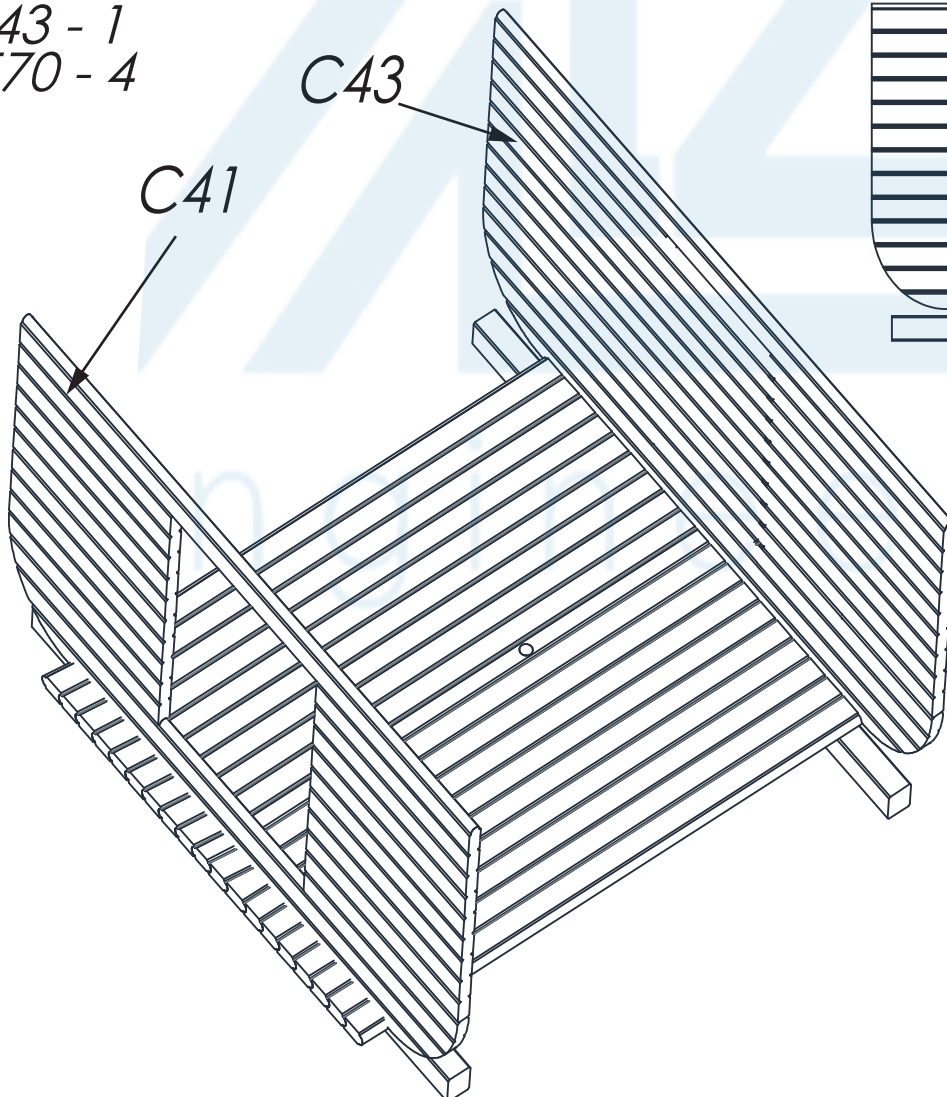




B22 - 32
4570 - 64
45120 - 64

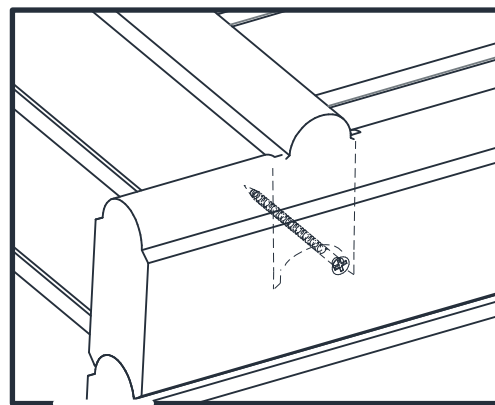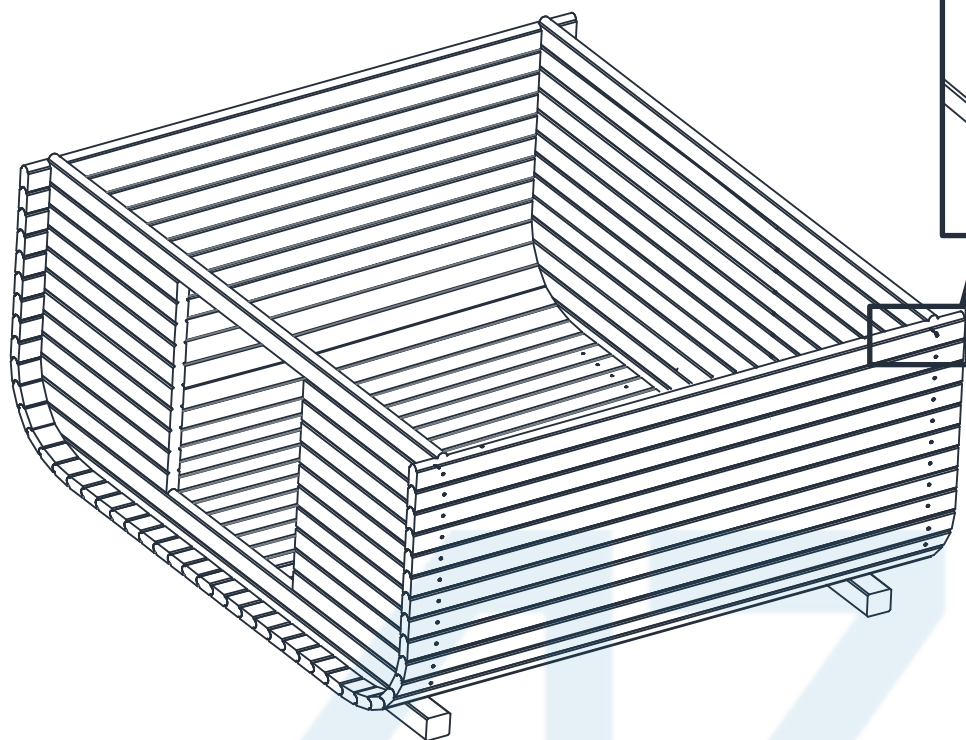


C43 - 1
C44 - 1
45120- 4

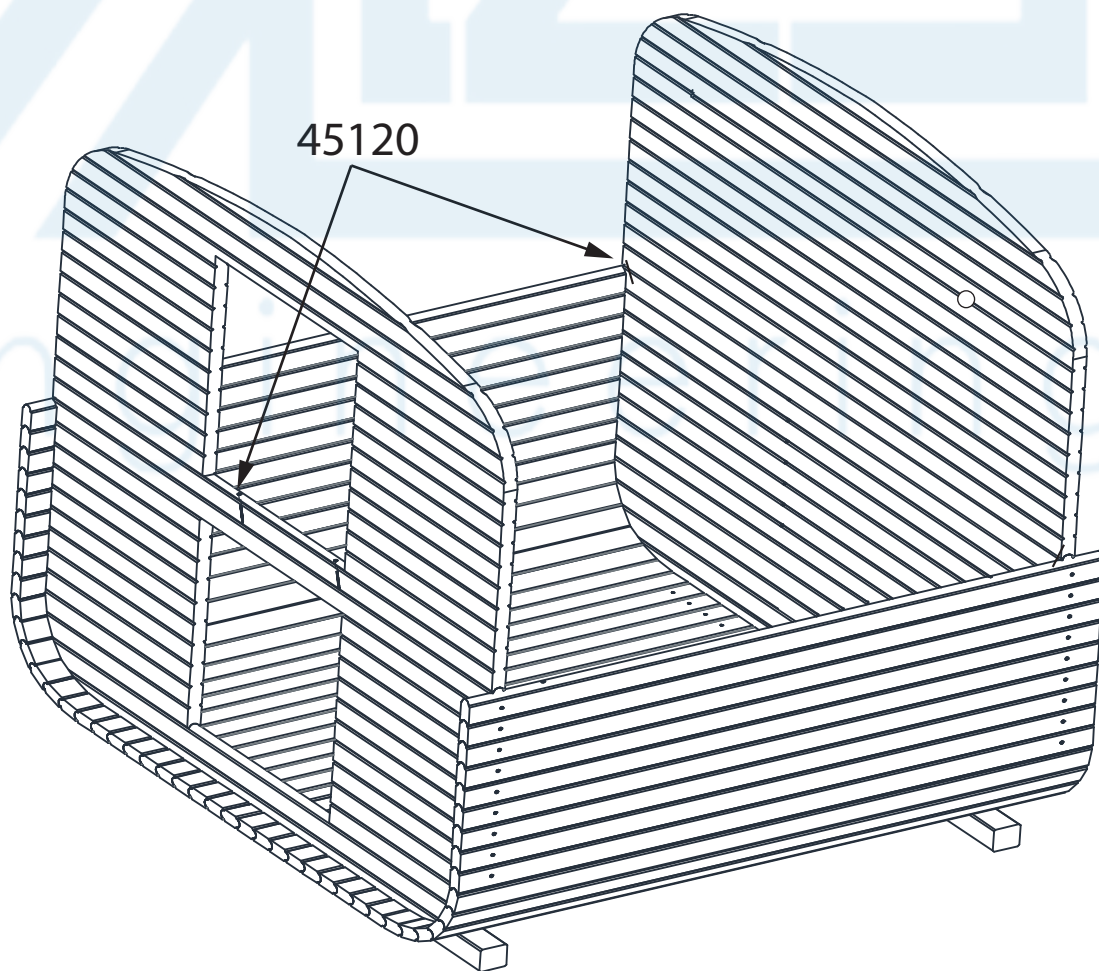


B22 - 48
4570 - 96
45120 - 96

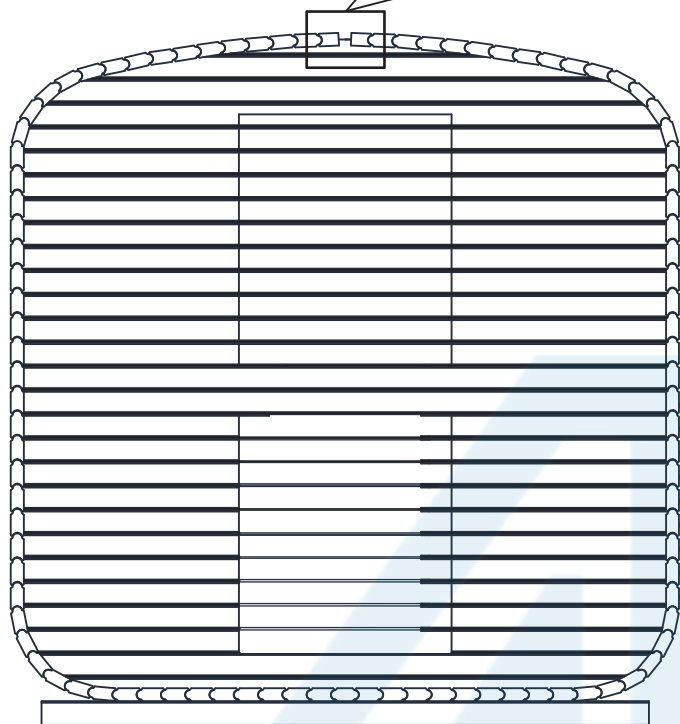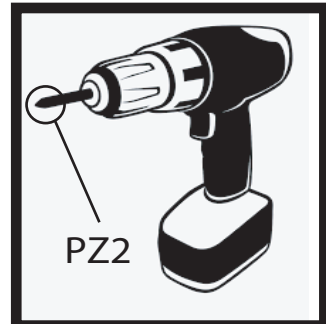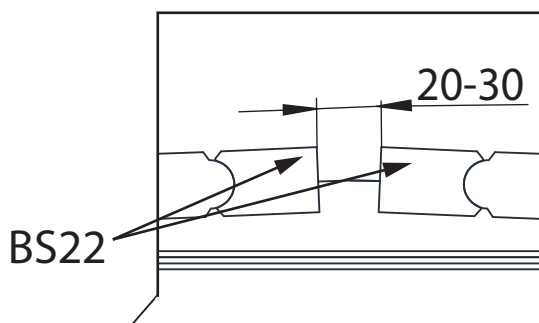

B22

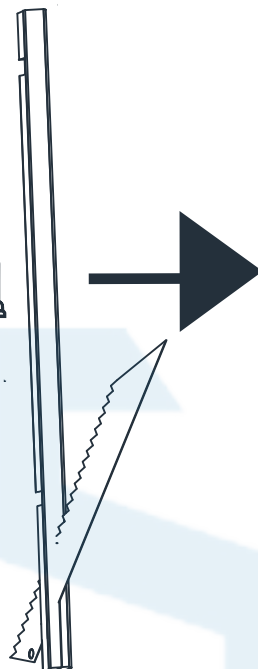




BS22

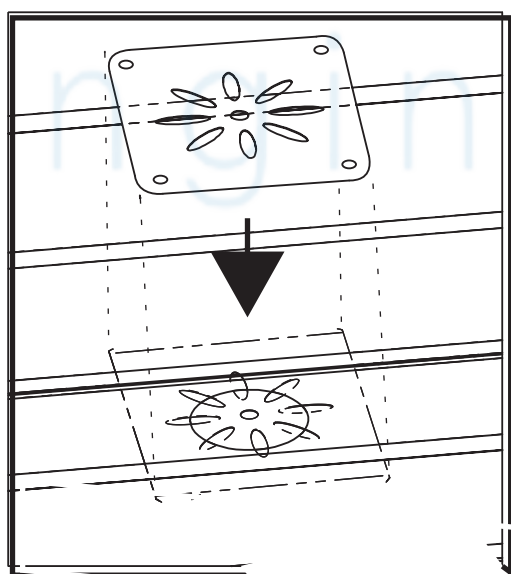



Q1 - 1
4345 - 4

B21



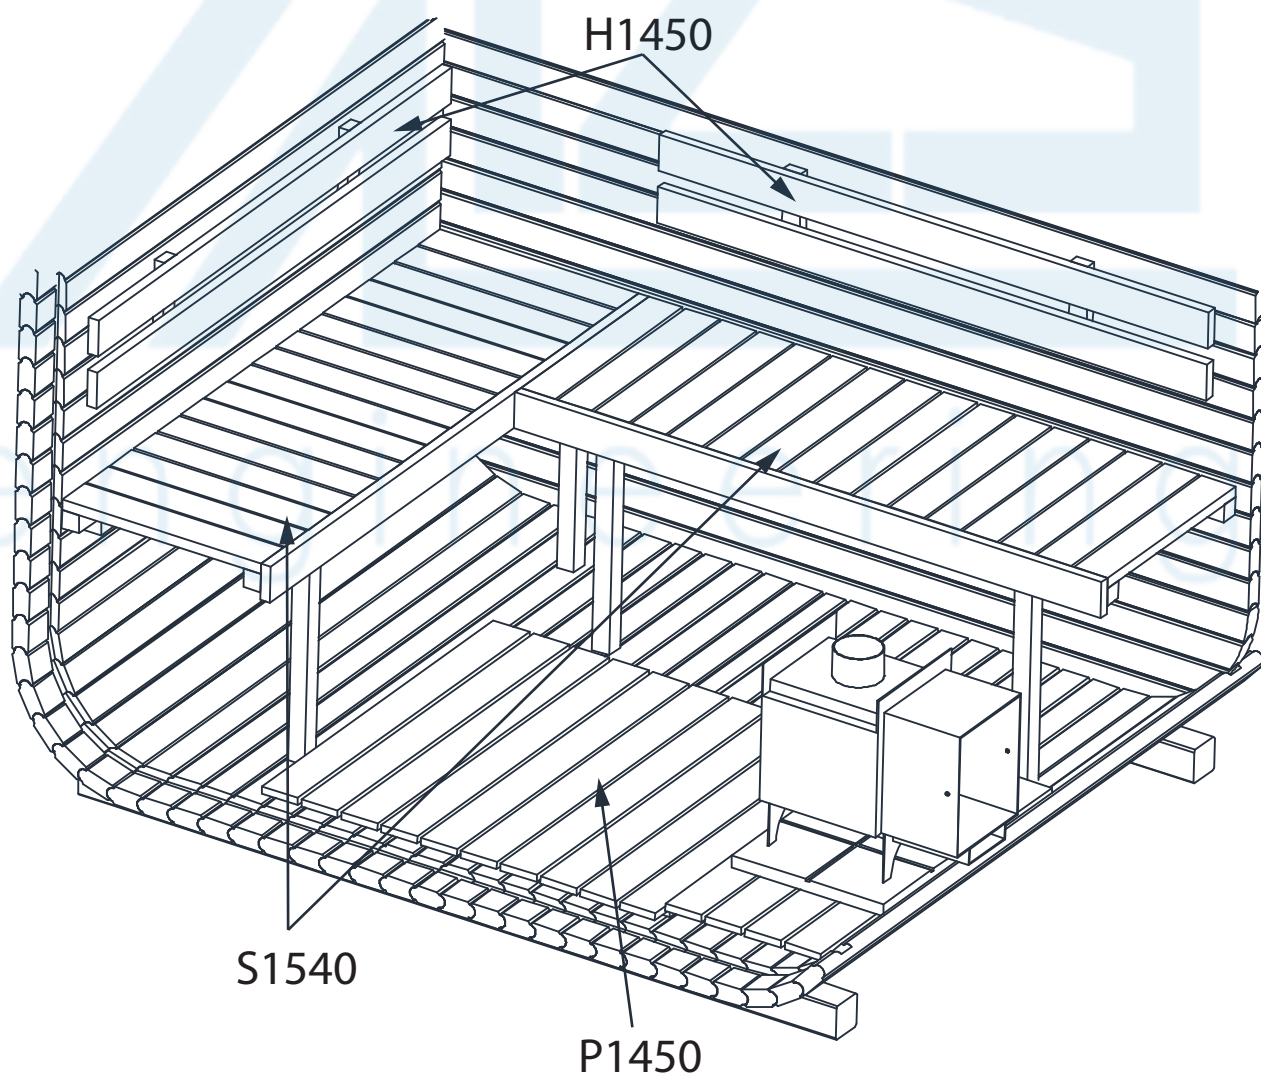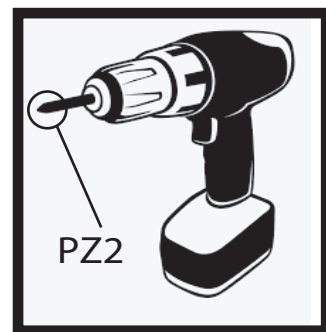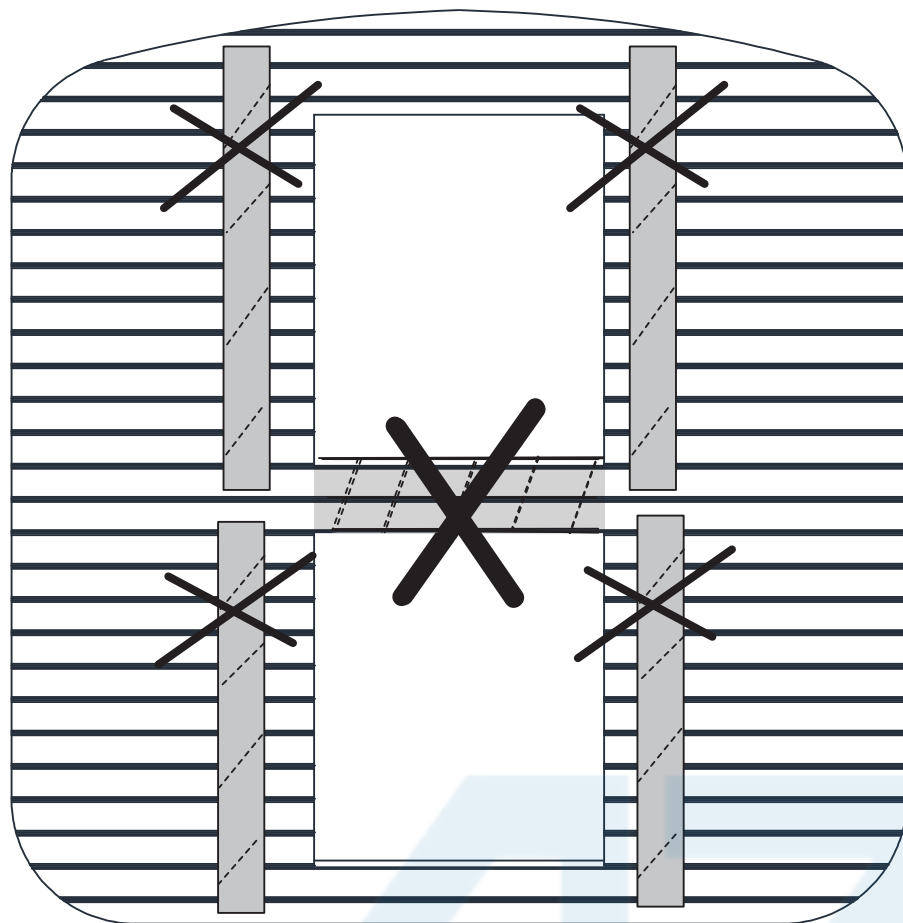


H1450 - 1
S1540 - 1
R520 - 4
4570 - 18

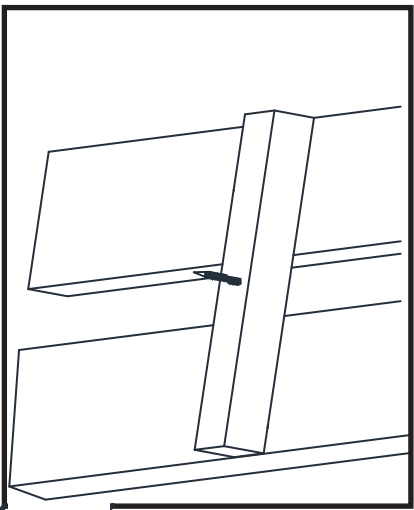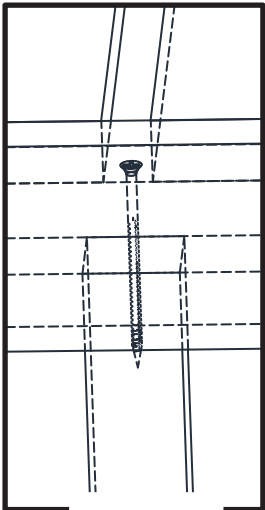


S1540+4x4570


H1450+2x4570

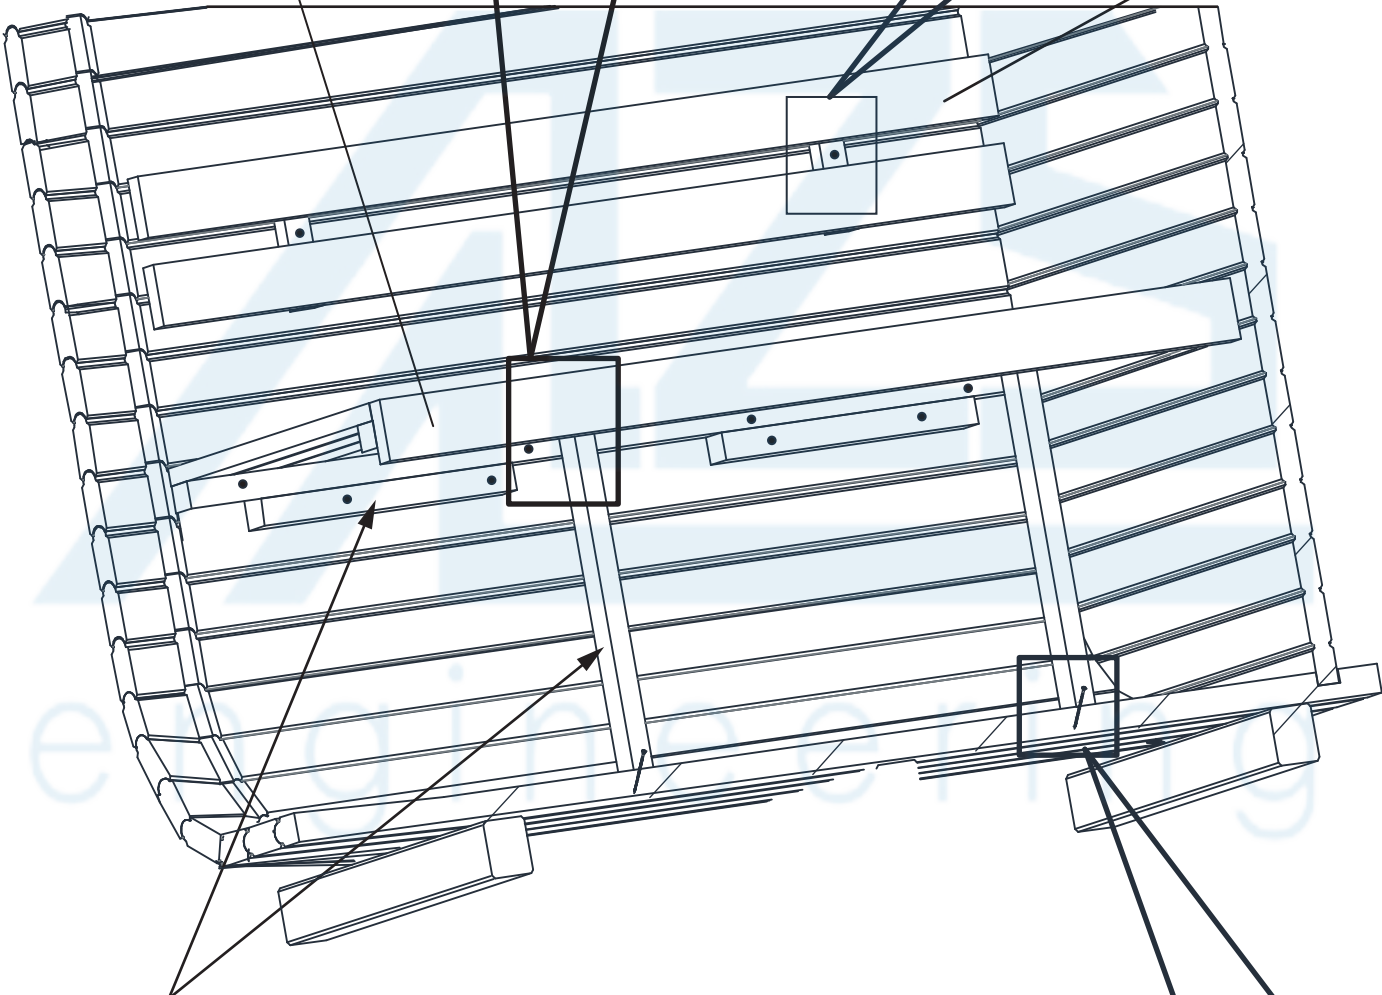


R520+2x4570

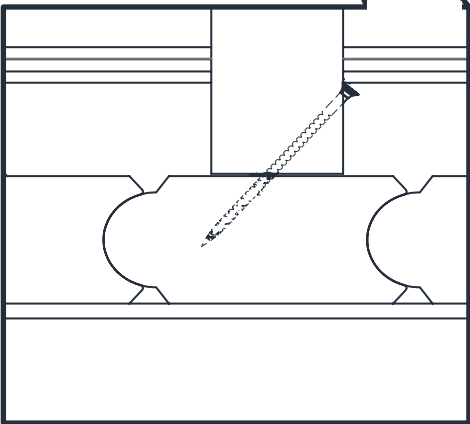

H1450 - 1
S1540 - 1
R520 - 4
4570 - 18

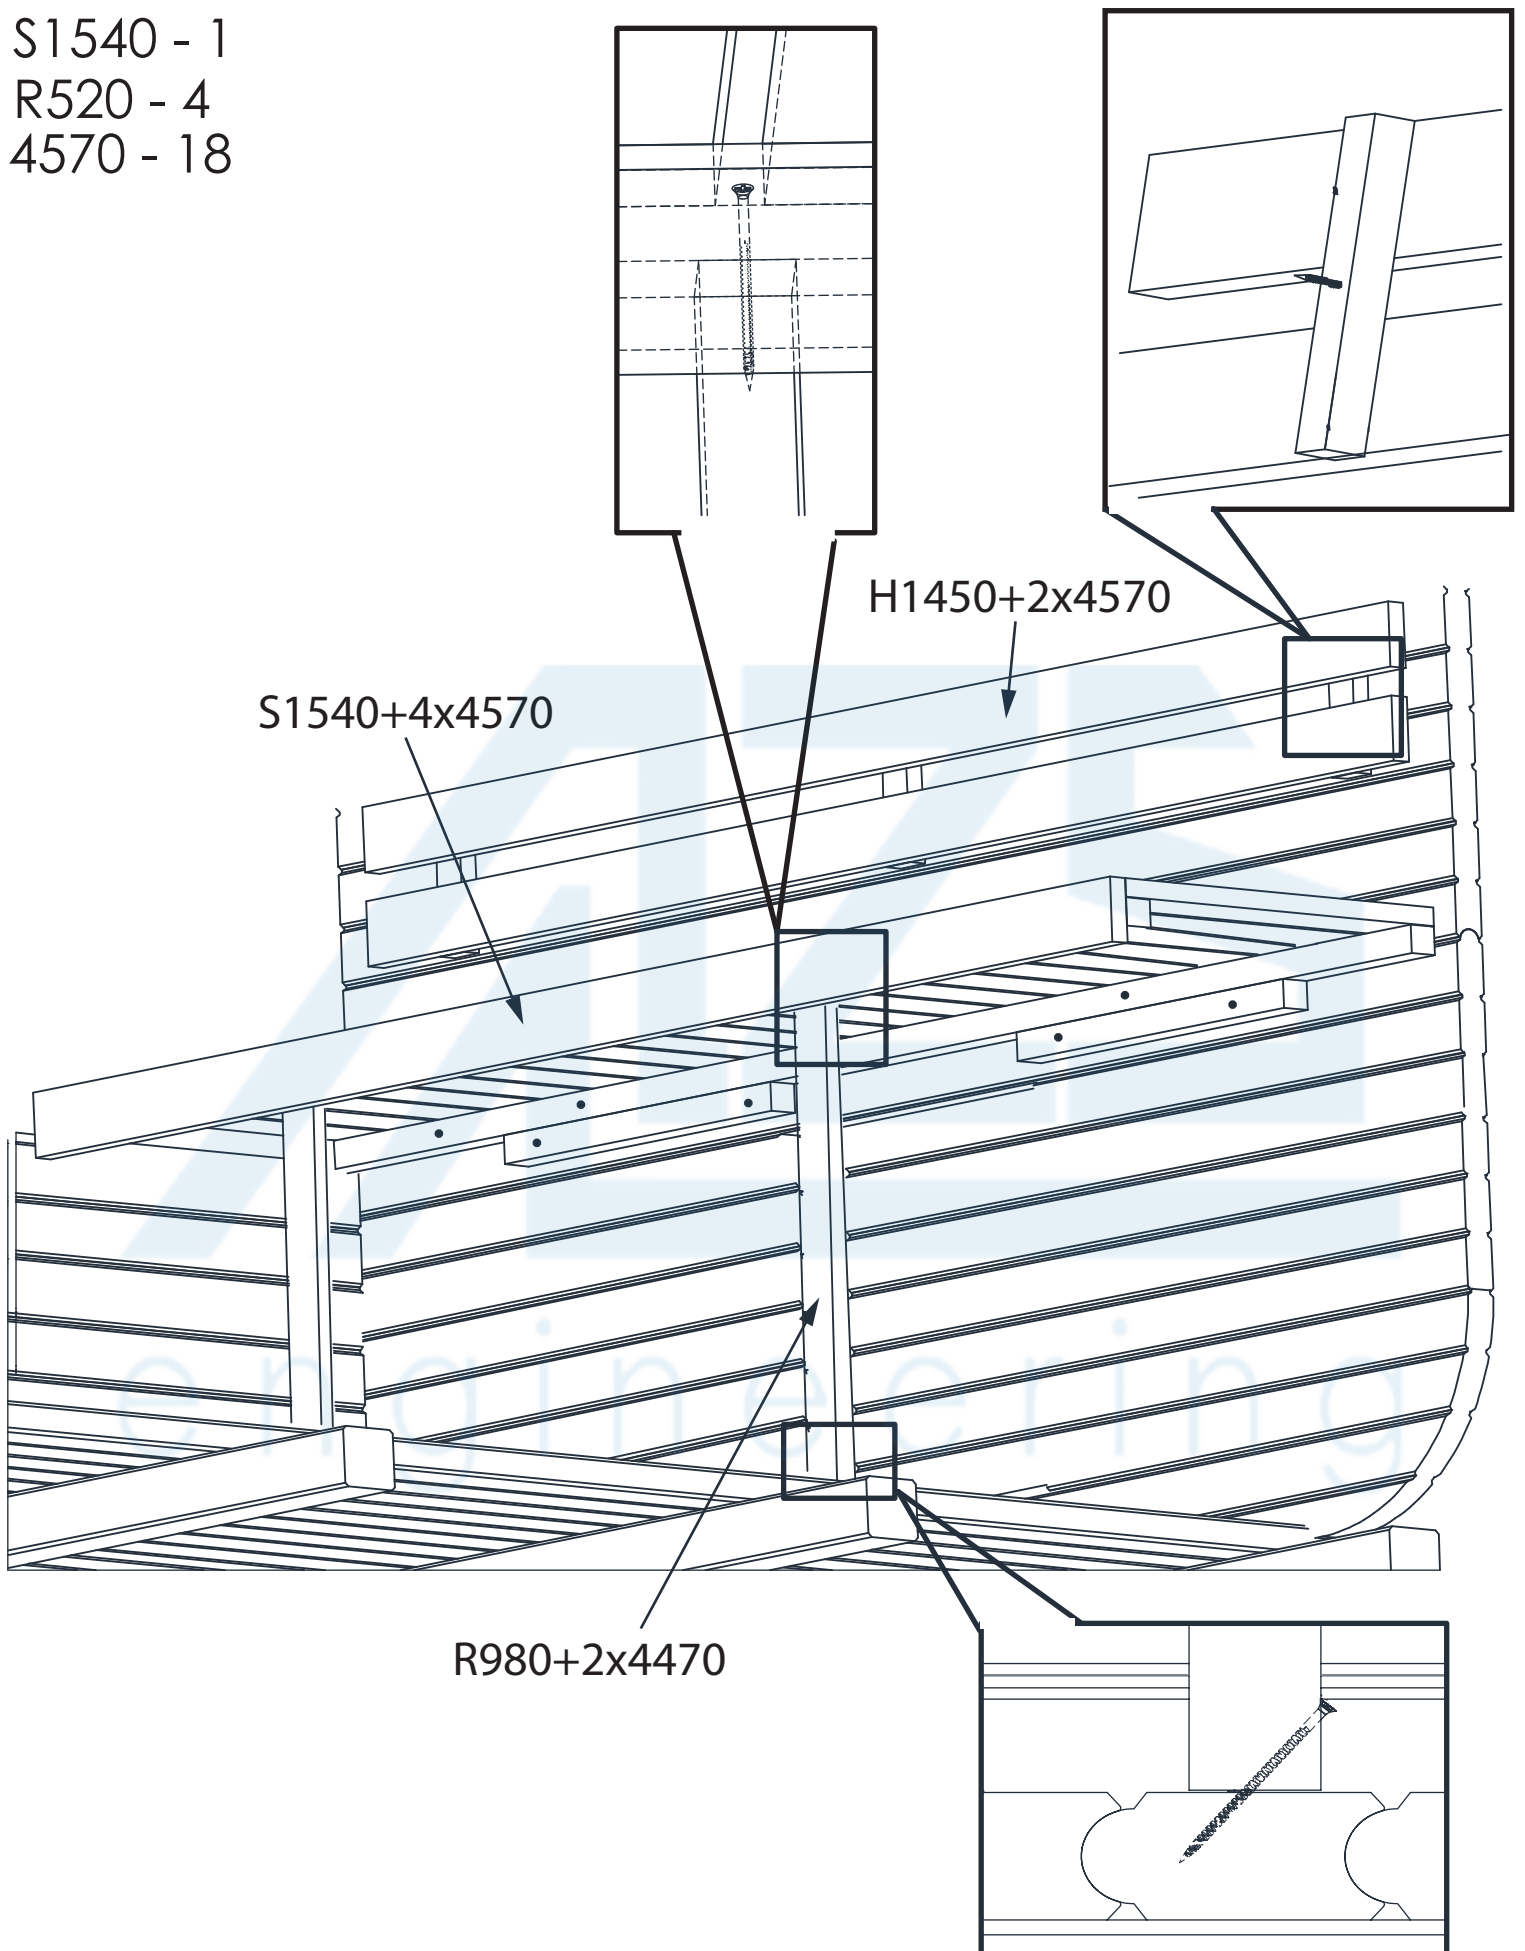


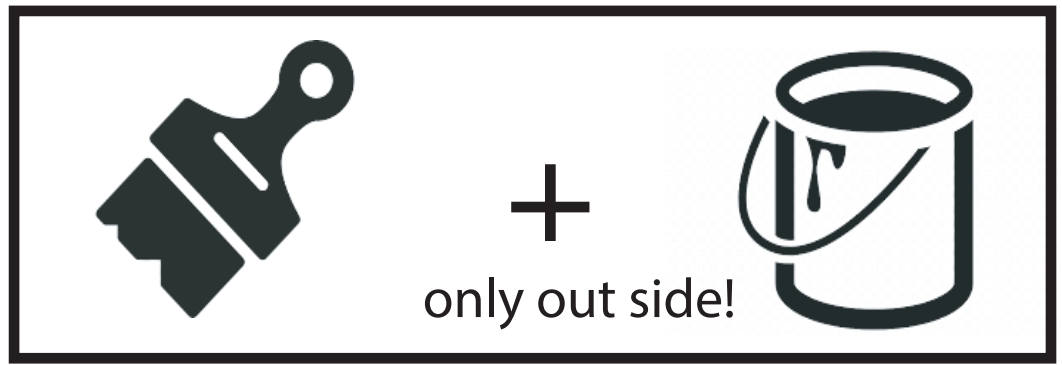


FROM

1.5M





TO

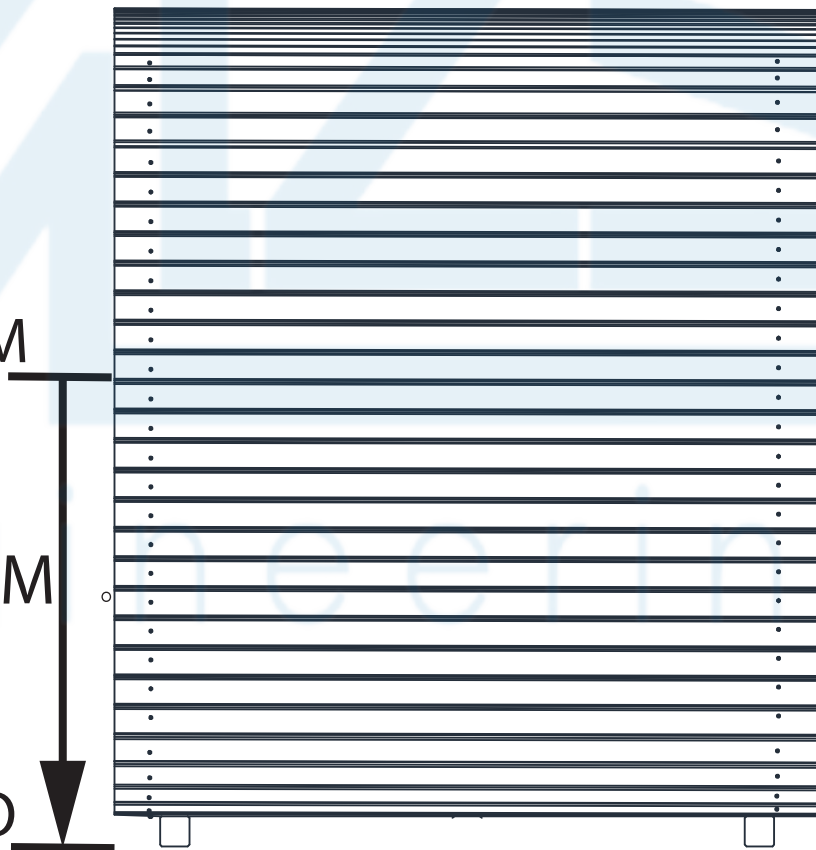




ONLY FOR G1!

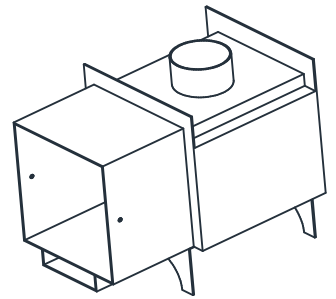


P1450

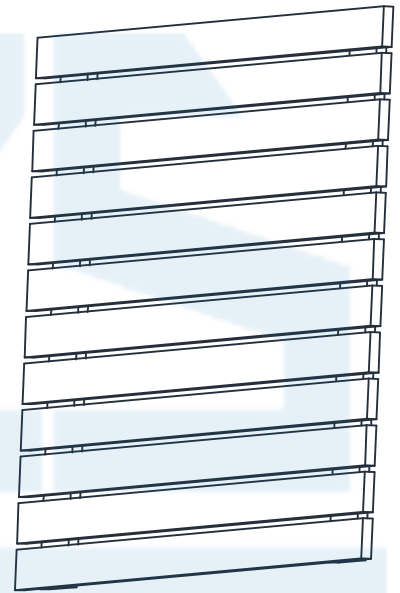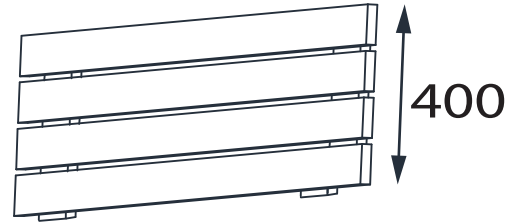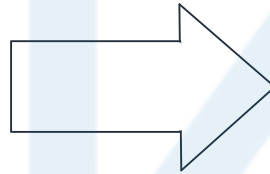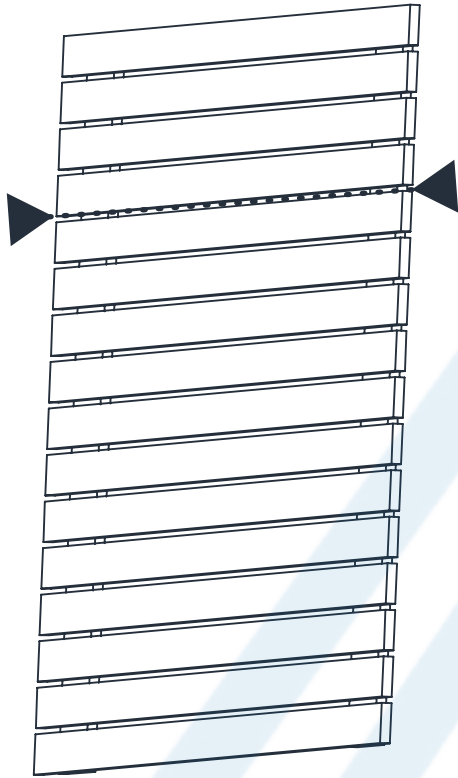


R400 - 2
4460 - 6

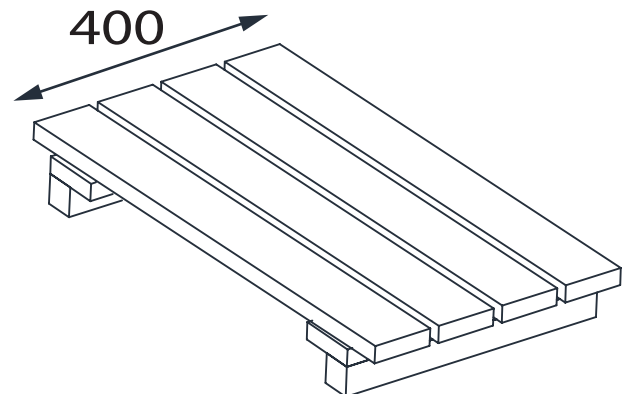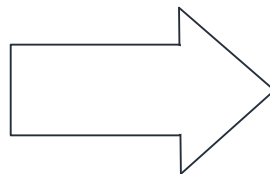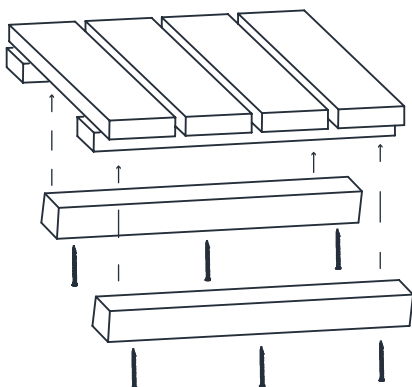


Q3 - 2
4241 - 24

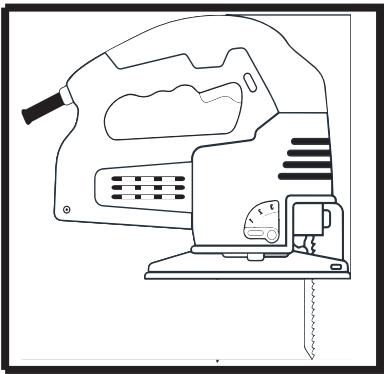




ENTER →

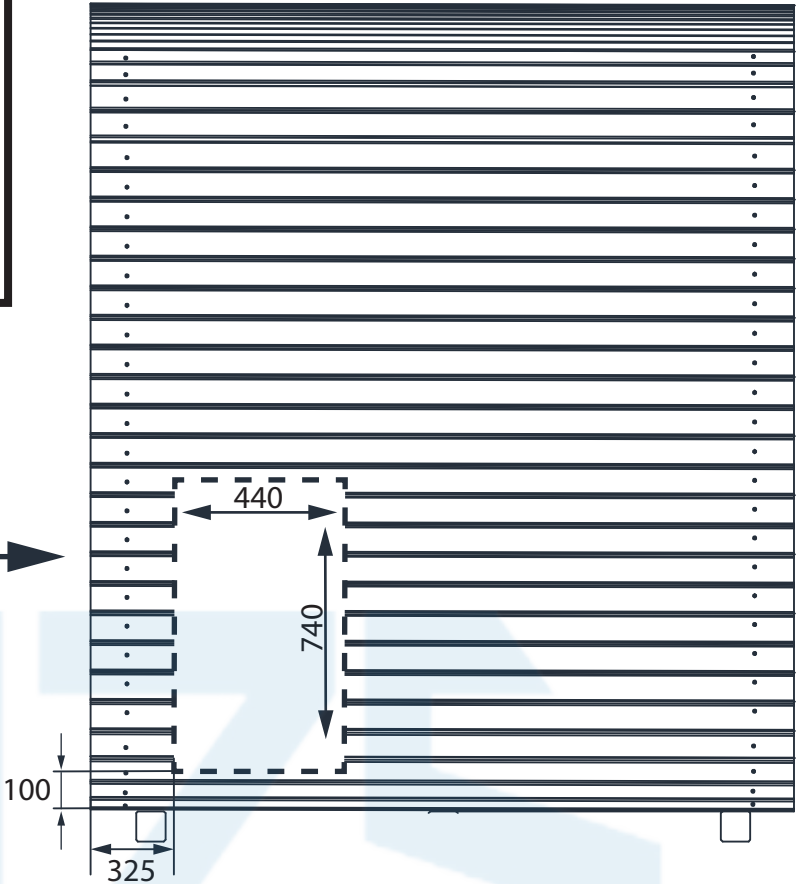


Q3 + 12x4241

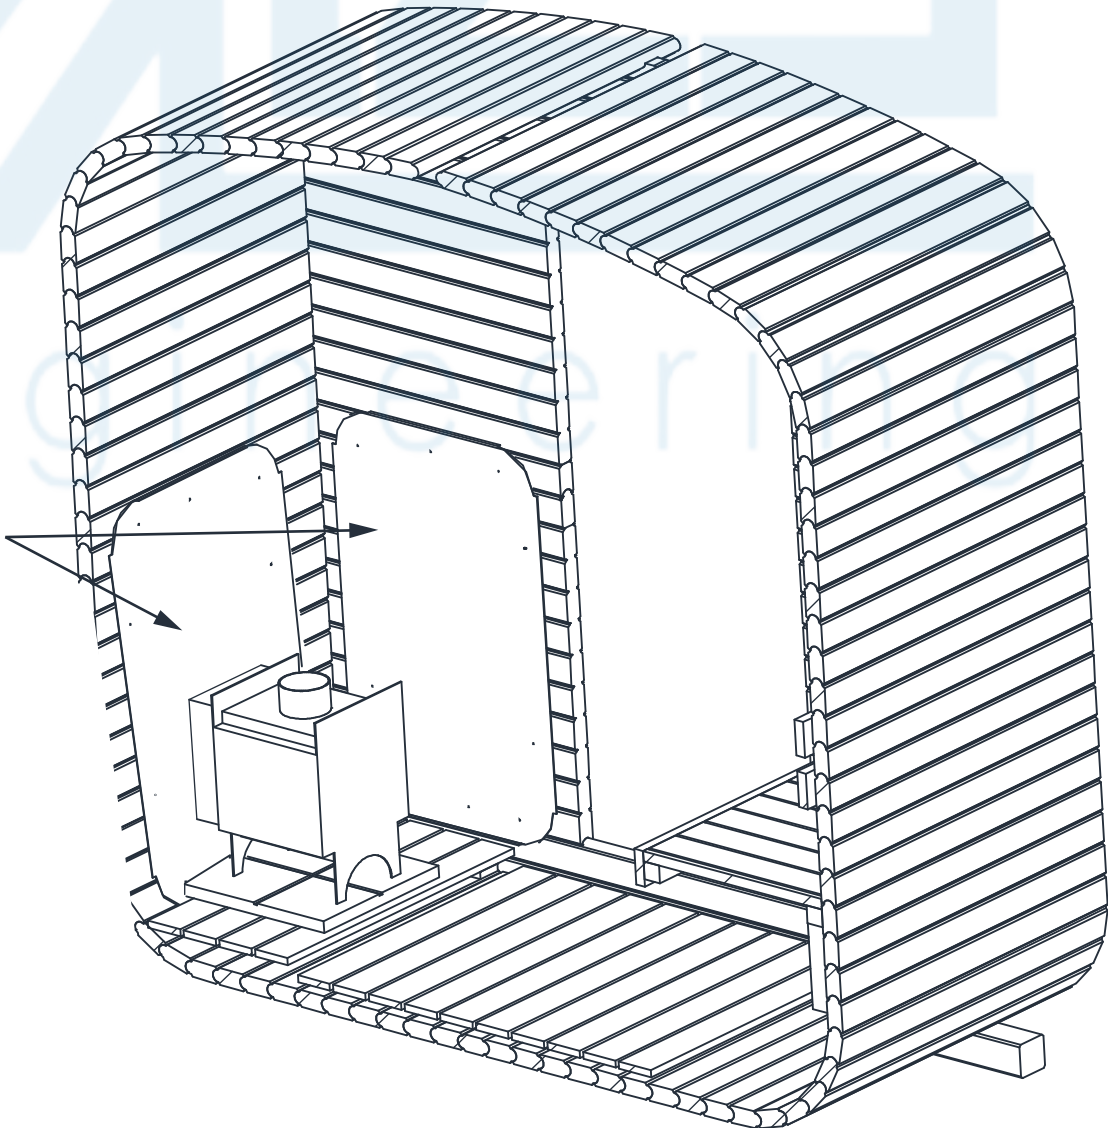

- G6 - 1
- G7 - 1
- G12 - 1
- G13 - 1
- Q2 - 1
- 4241 - 8

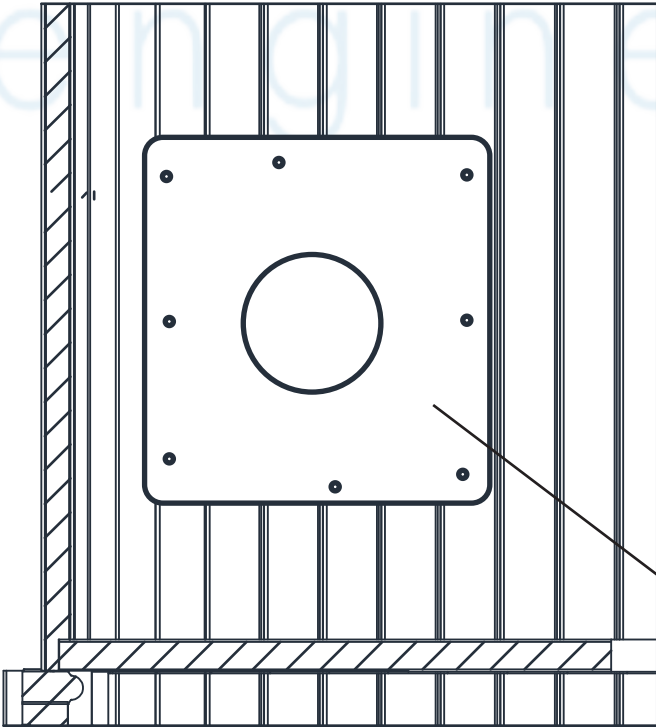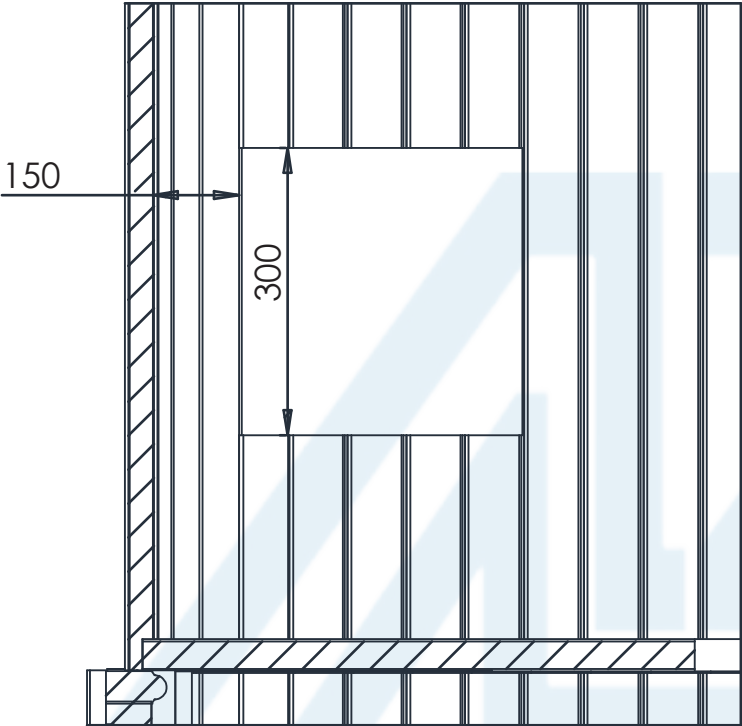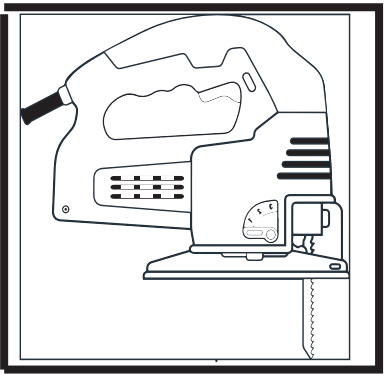


Q2+4241x8



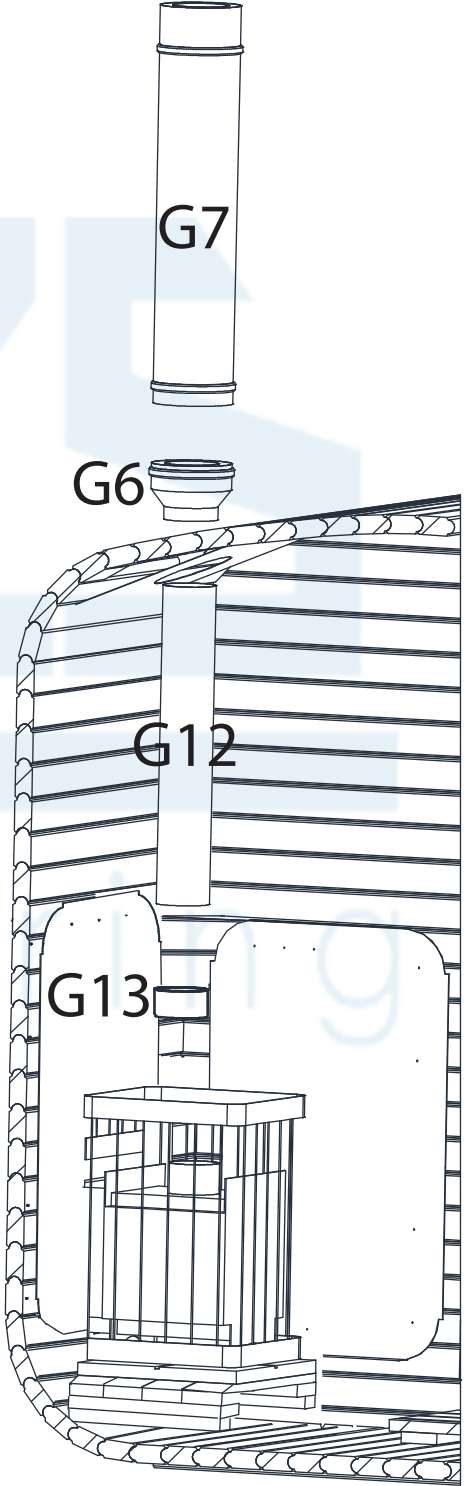


G2 - 1
Q4 - 1
Q7 - 1
4241 - 15


OUT SIDE

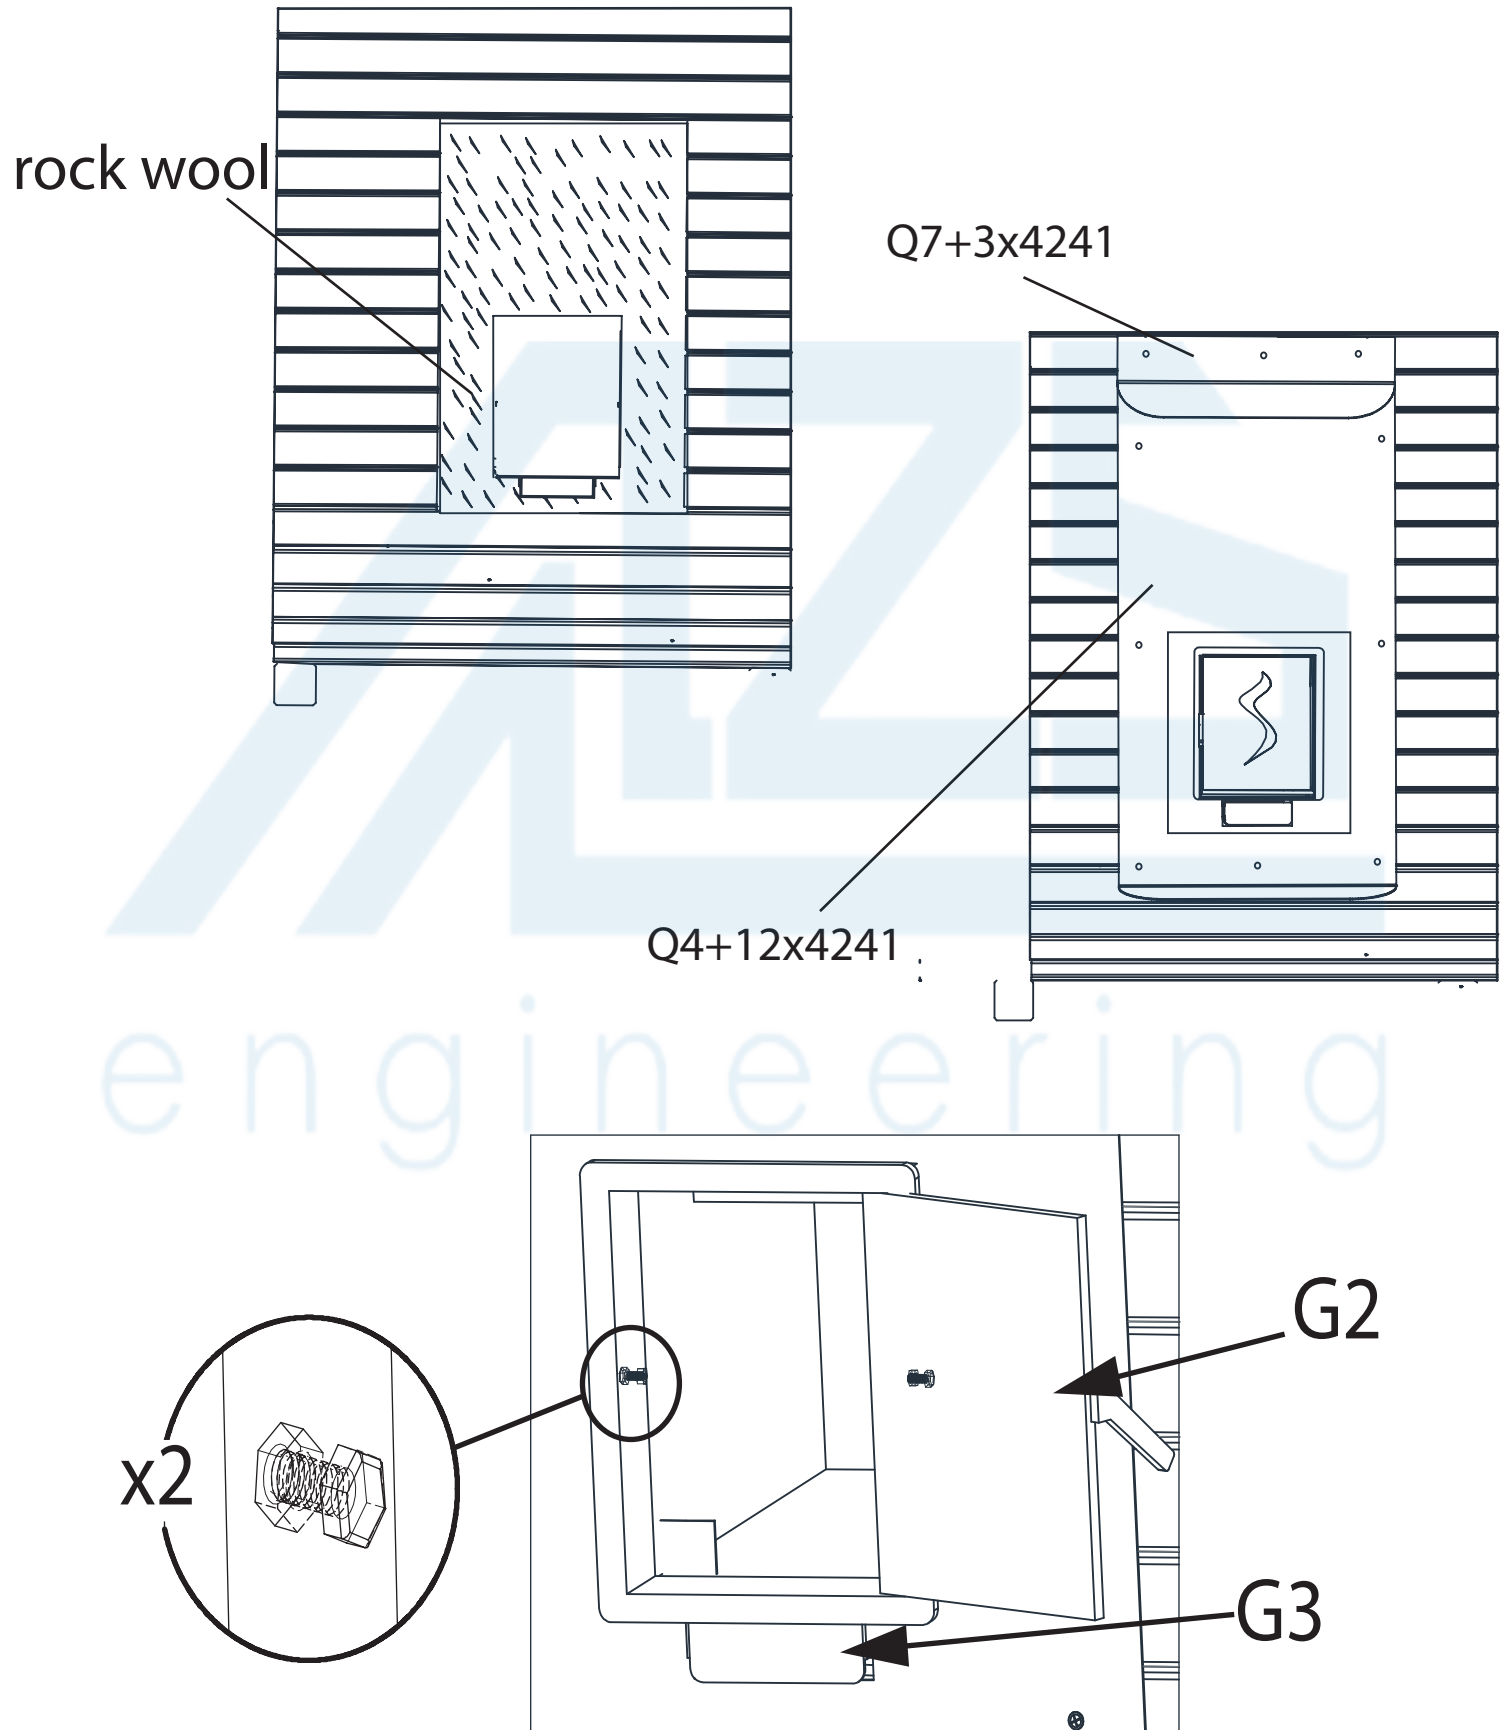



W1550 -1
W80 - 2
W70 - 2
4345 - 16

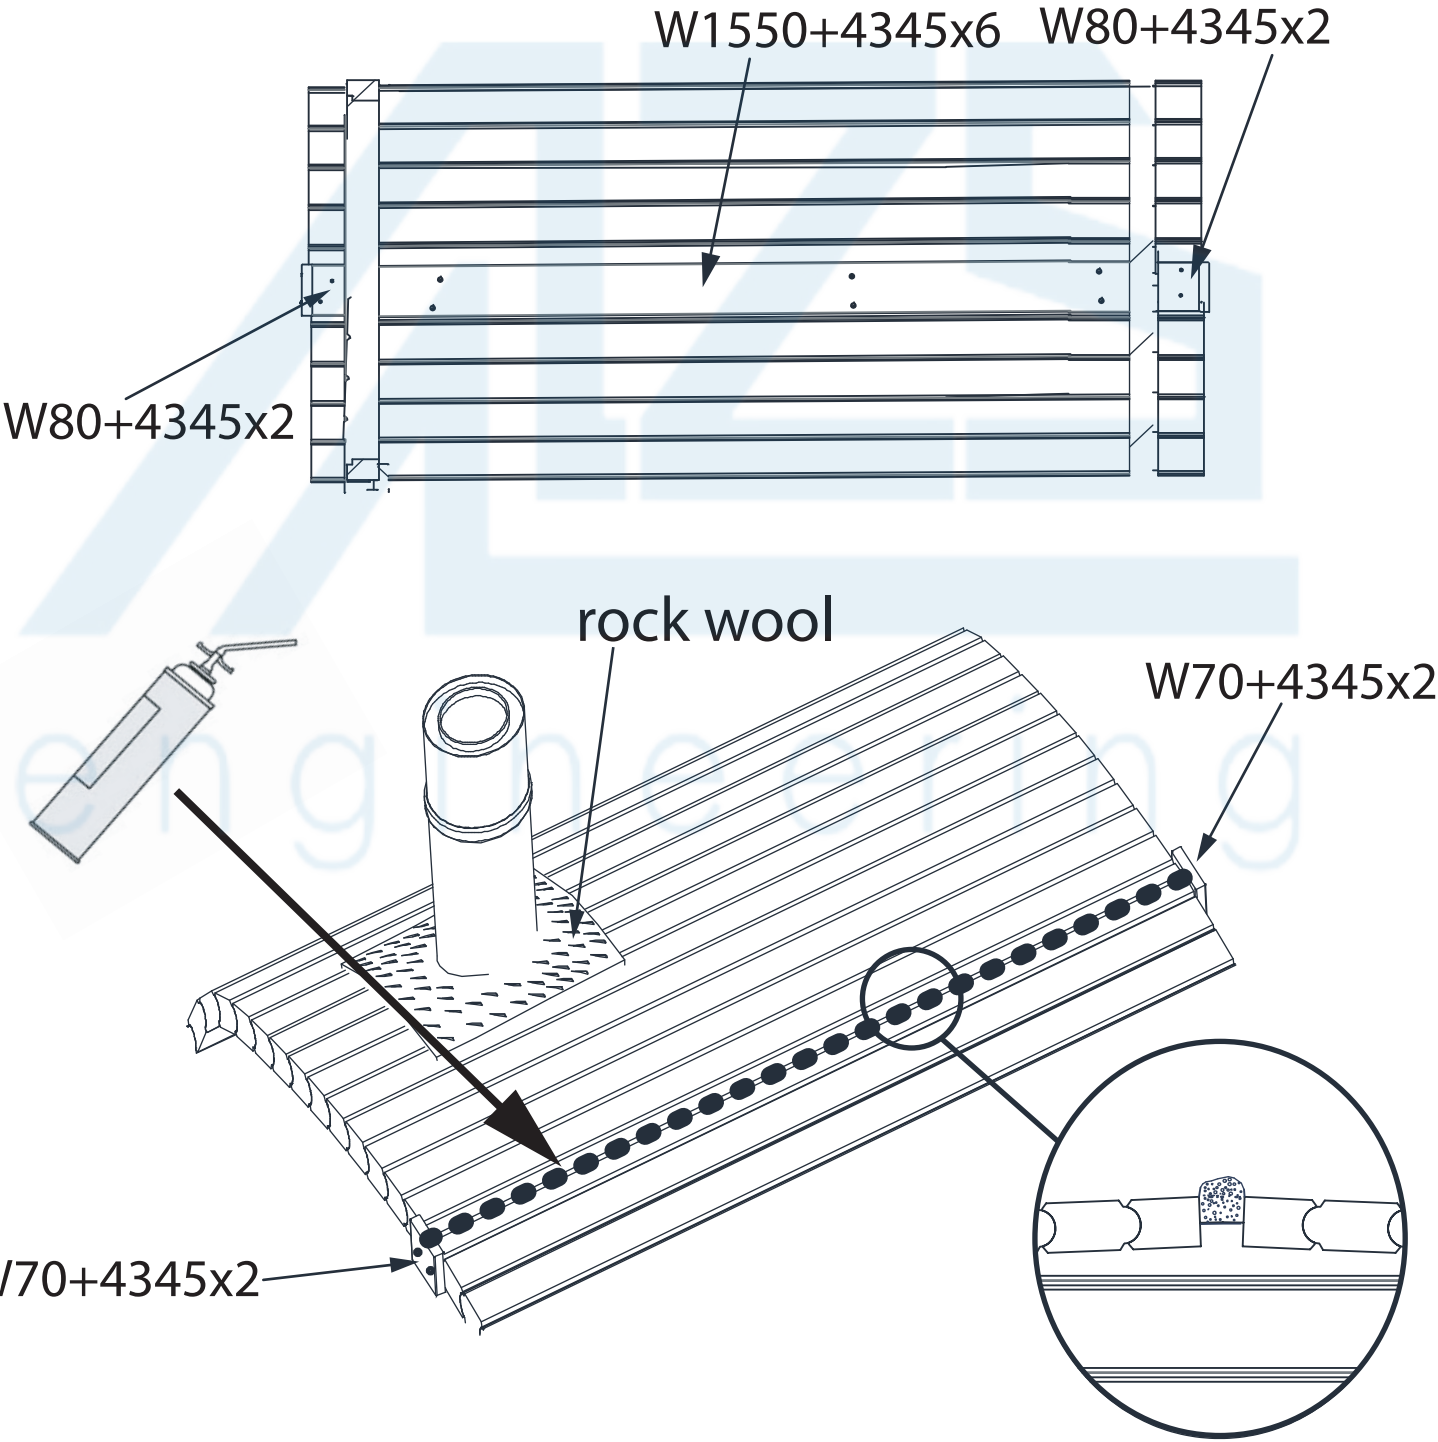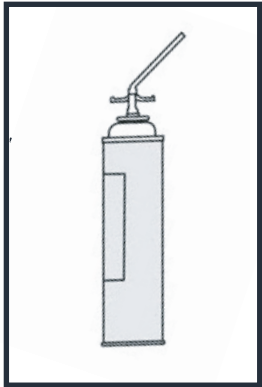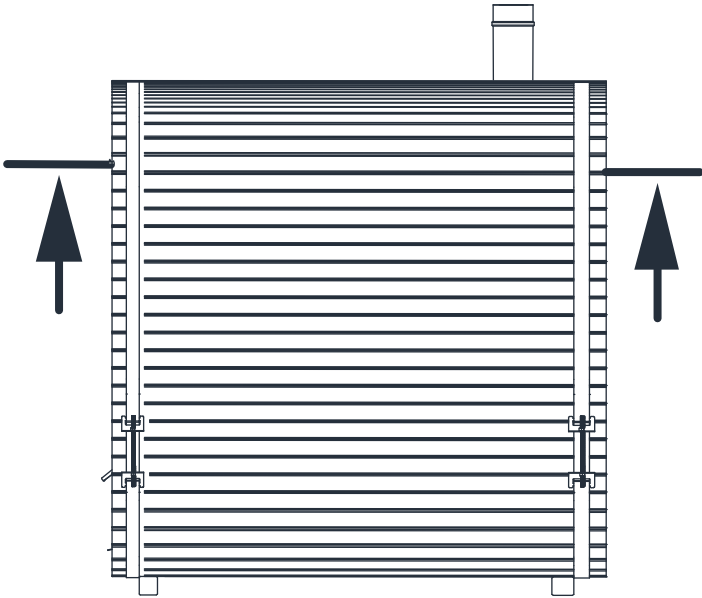


L60 - 2
K60 - 4
2012 - 4
732012 - 2

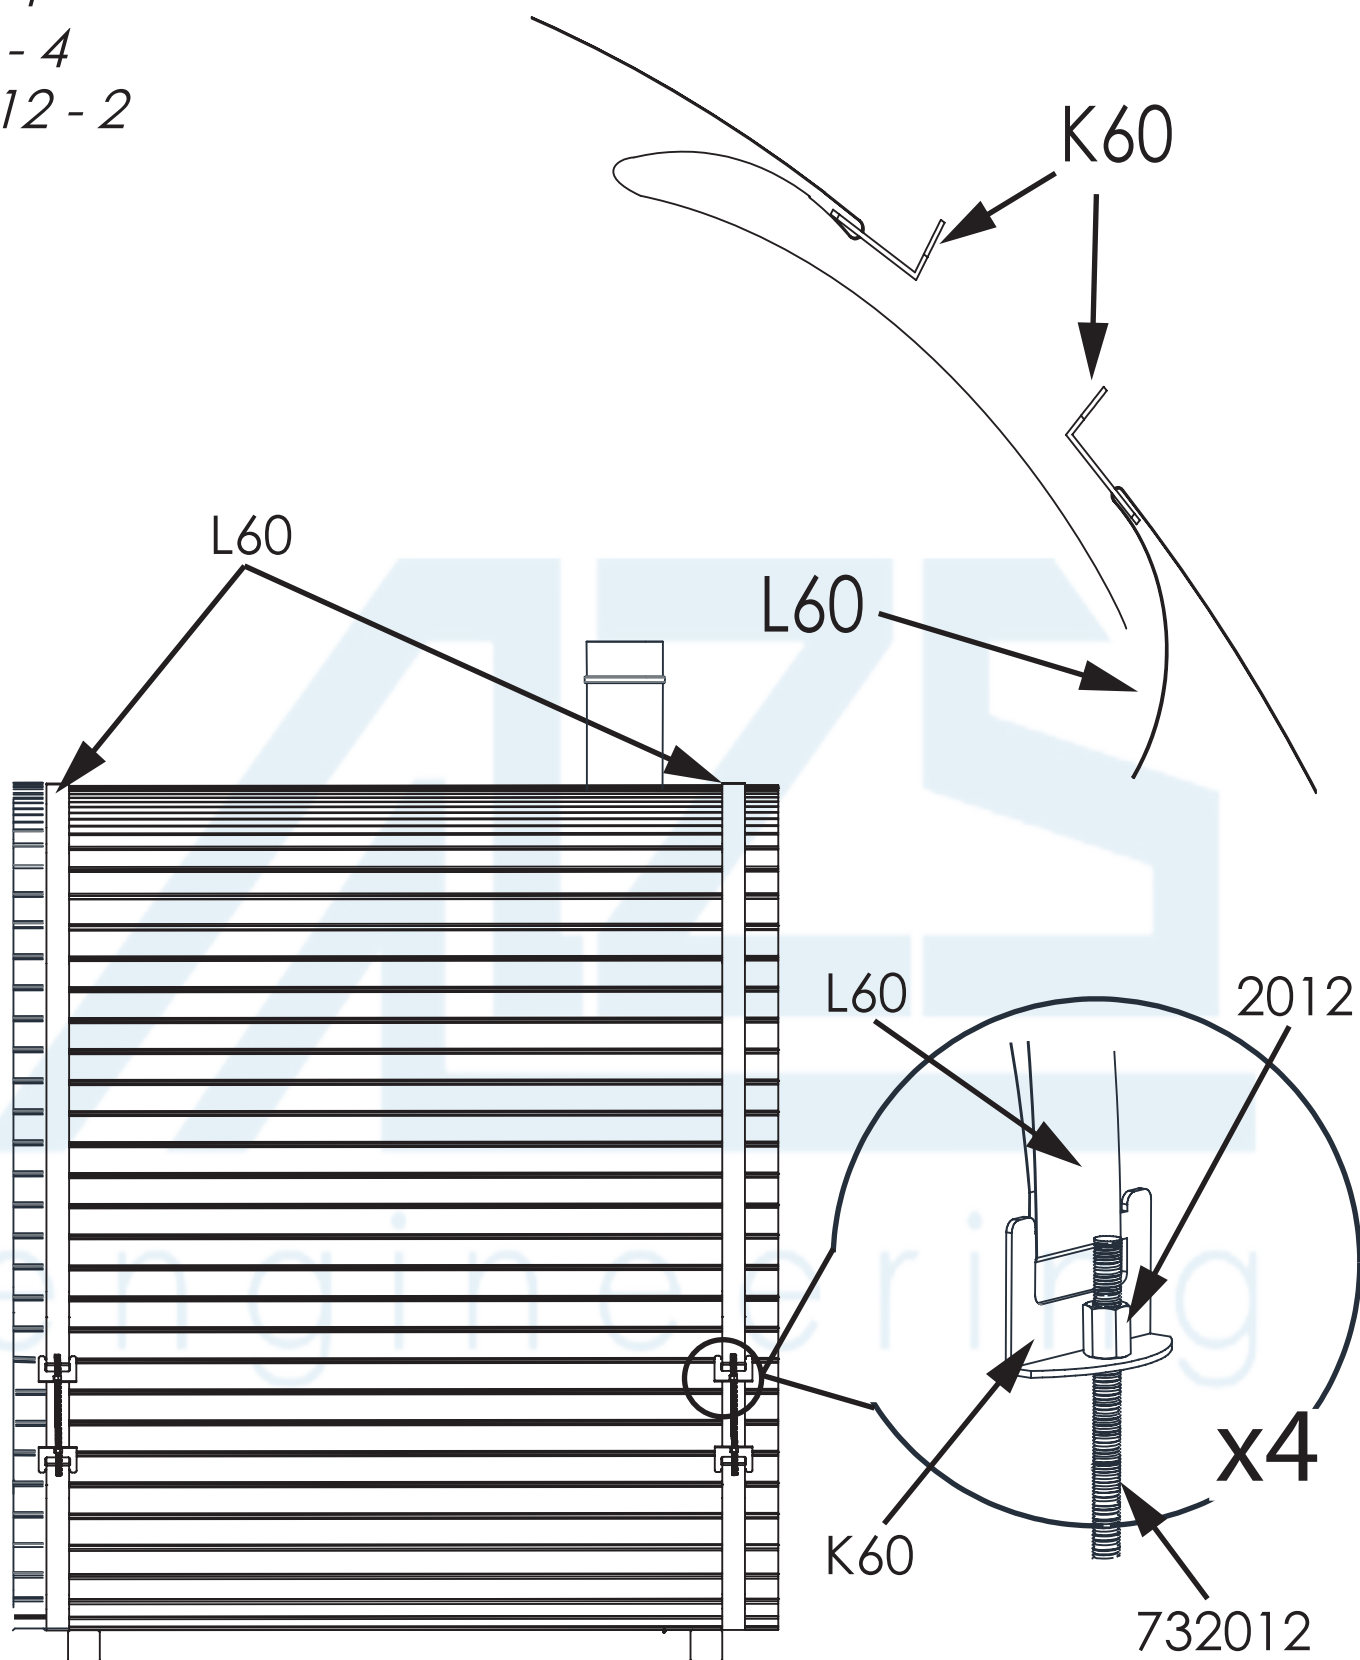


- DG1800 - 1
- W1740 - 2
- W800 - 1
- WS1820 - 2
- SET2 - 1
- 4570 - 10
- 4345 - 22

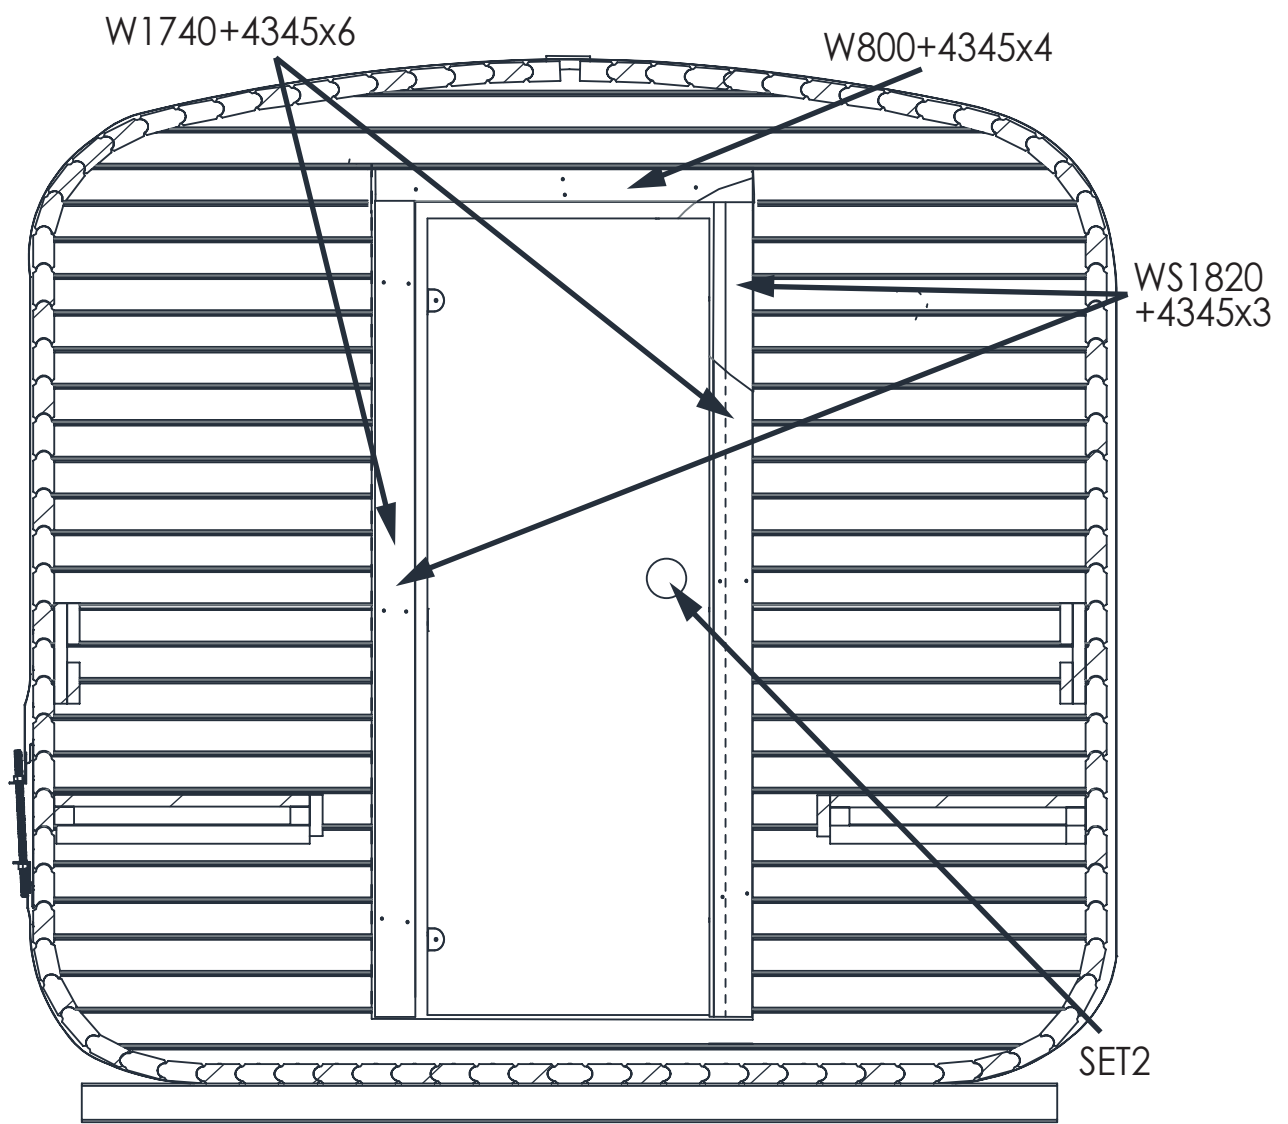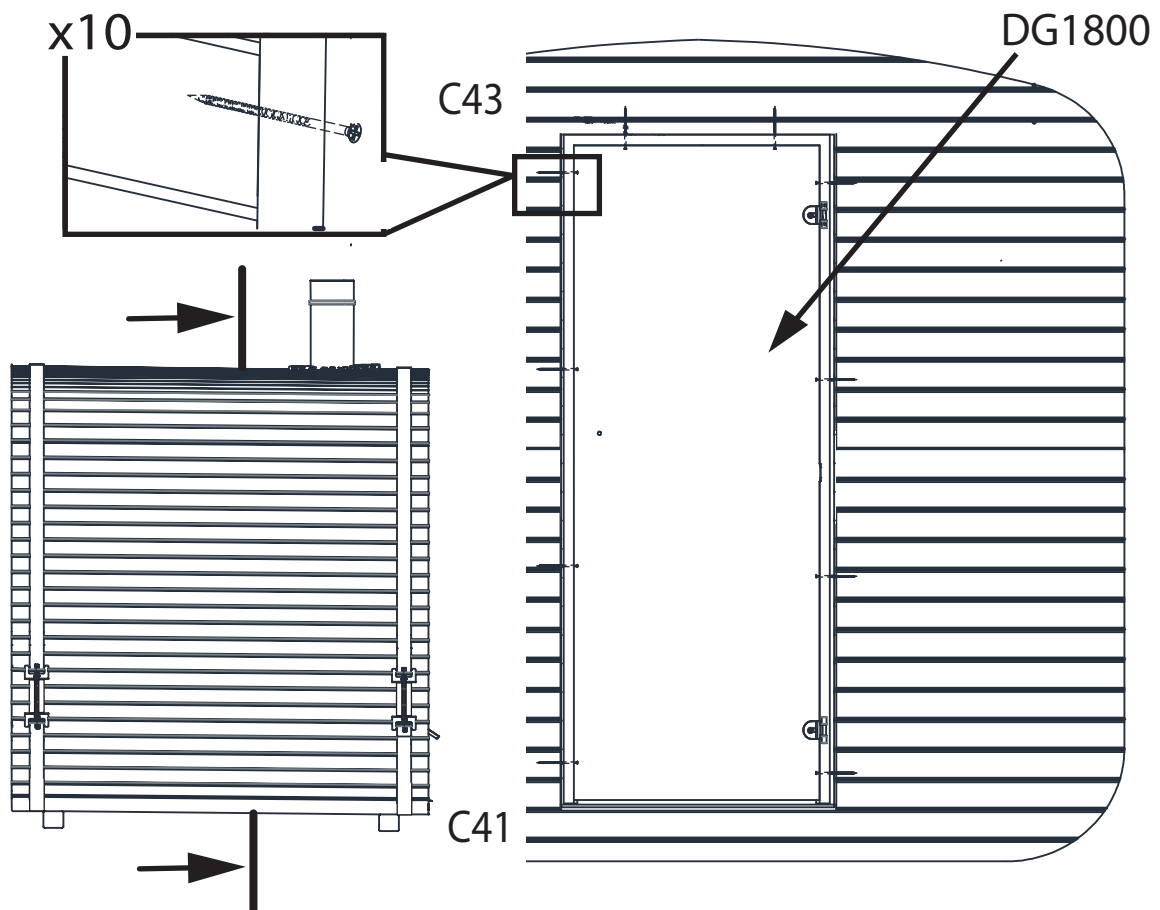

SET2

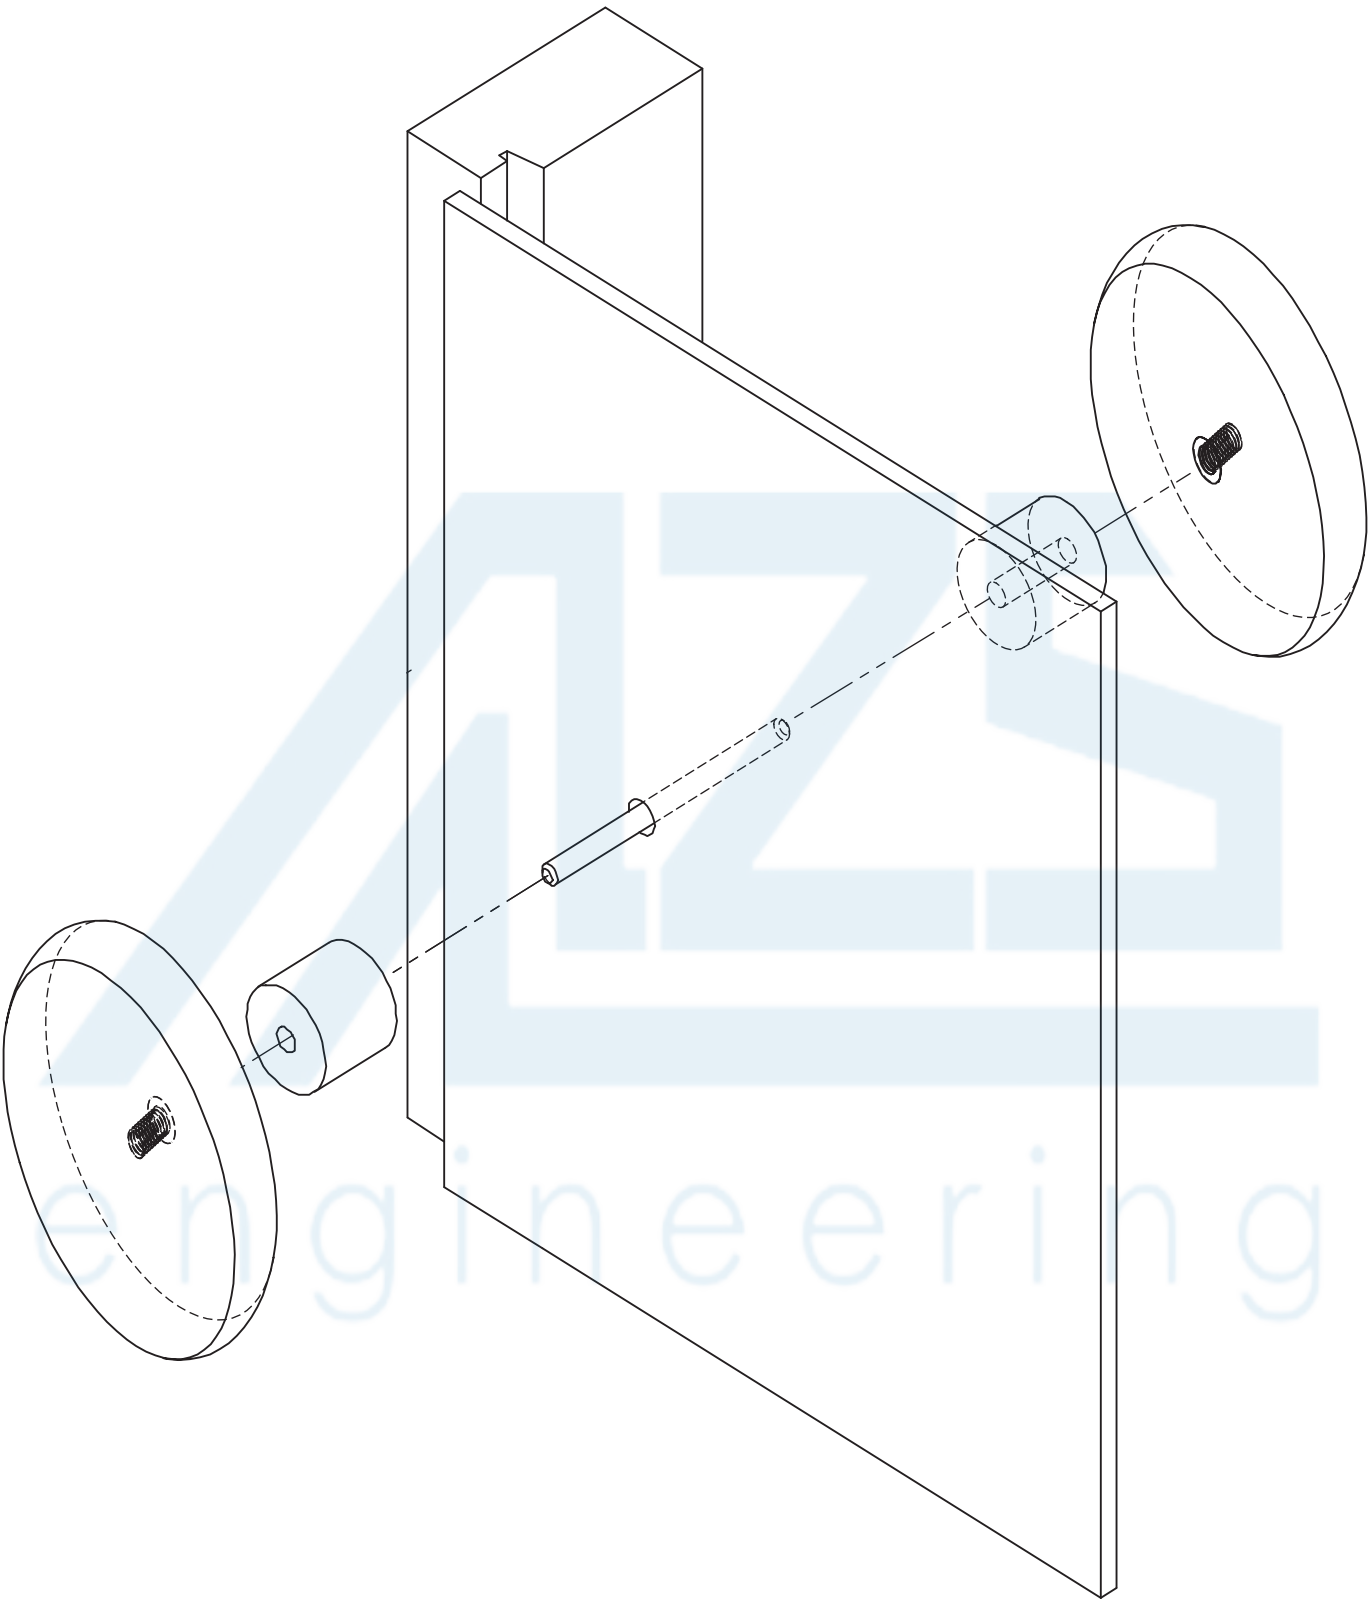


W1800 - 2
W880 - 1
4345 - 16
SET3

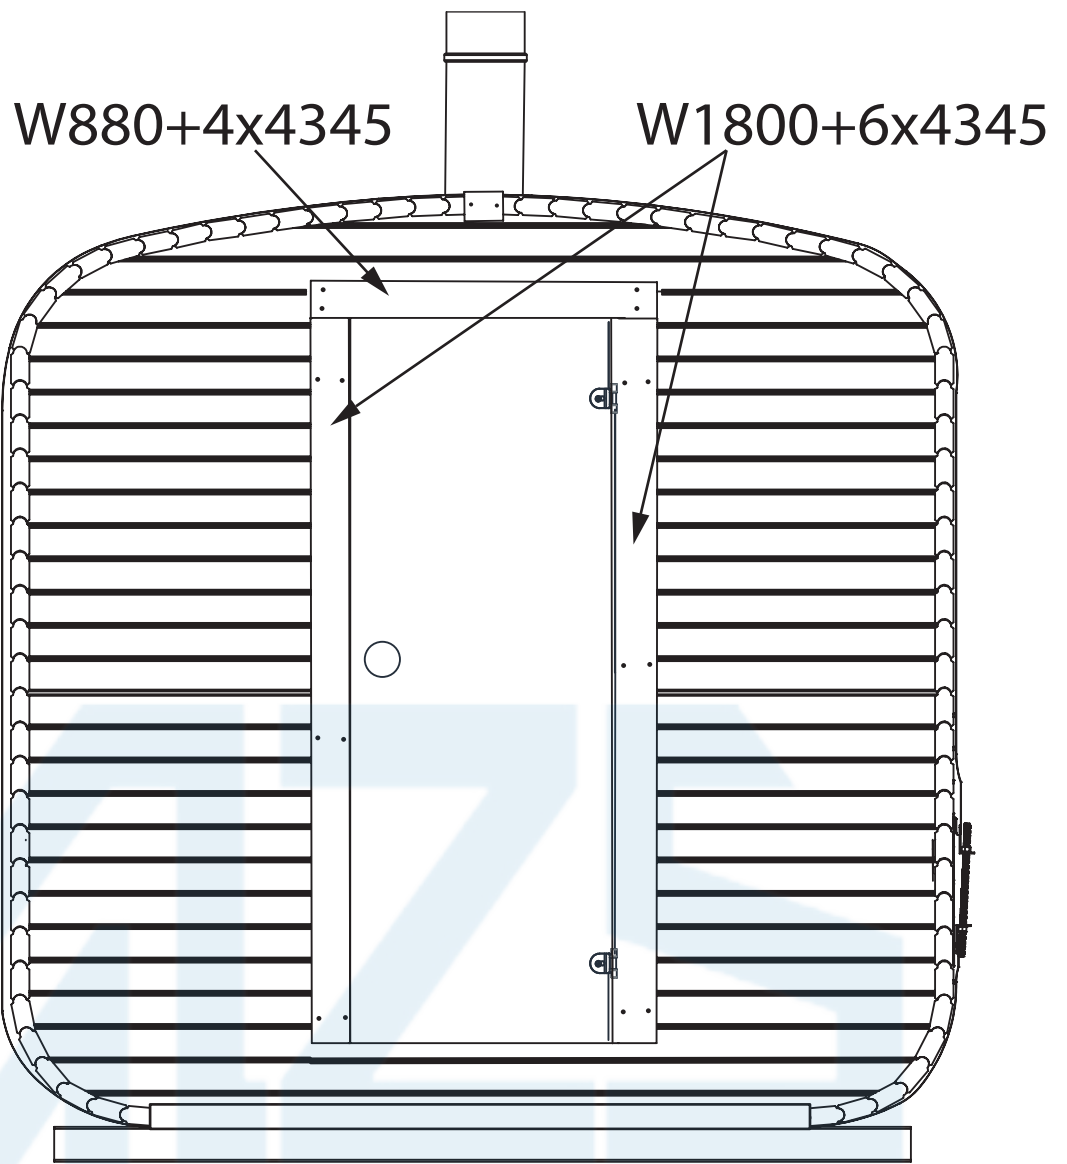





SET3

IN



OUT

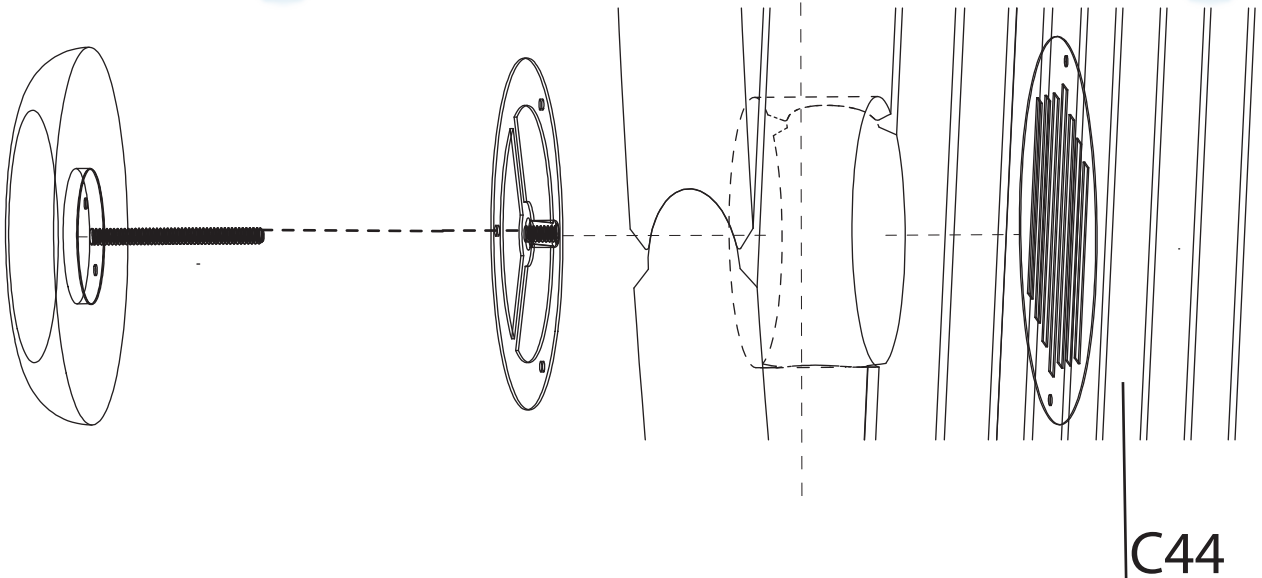


WS1800 - 2
4345 - 8
9525 - 450
E - 62

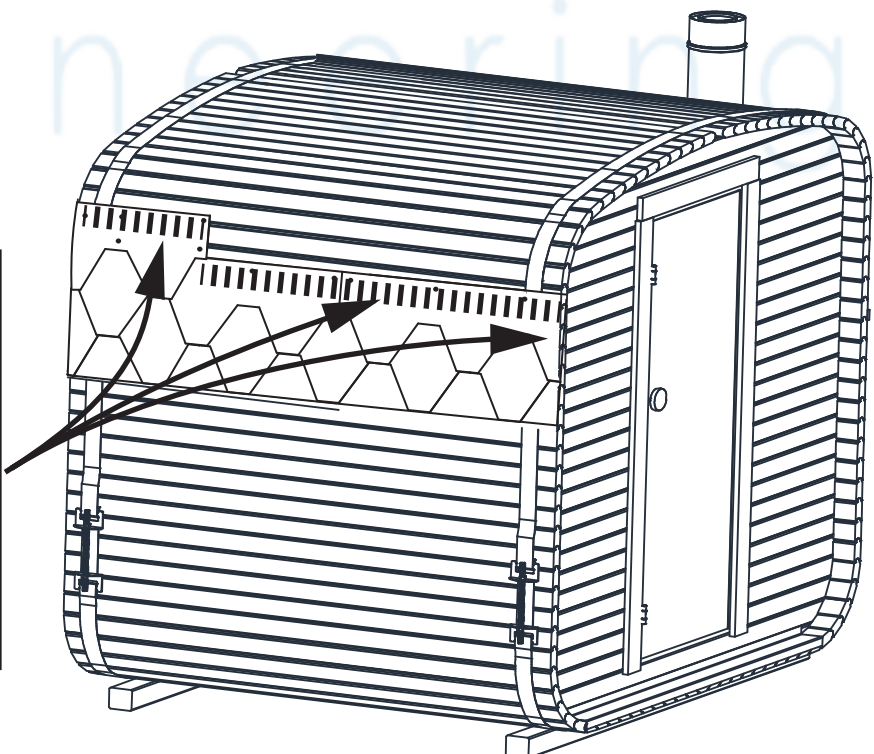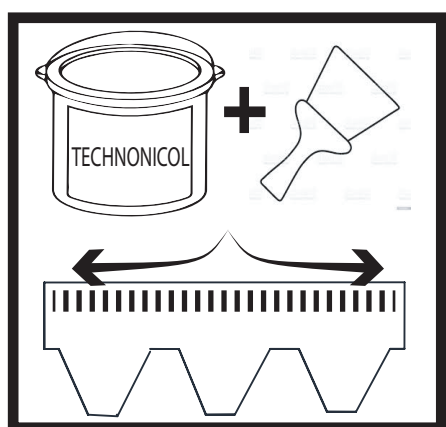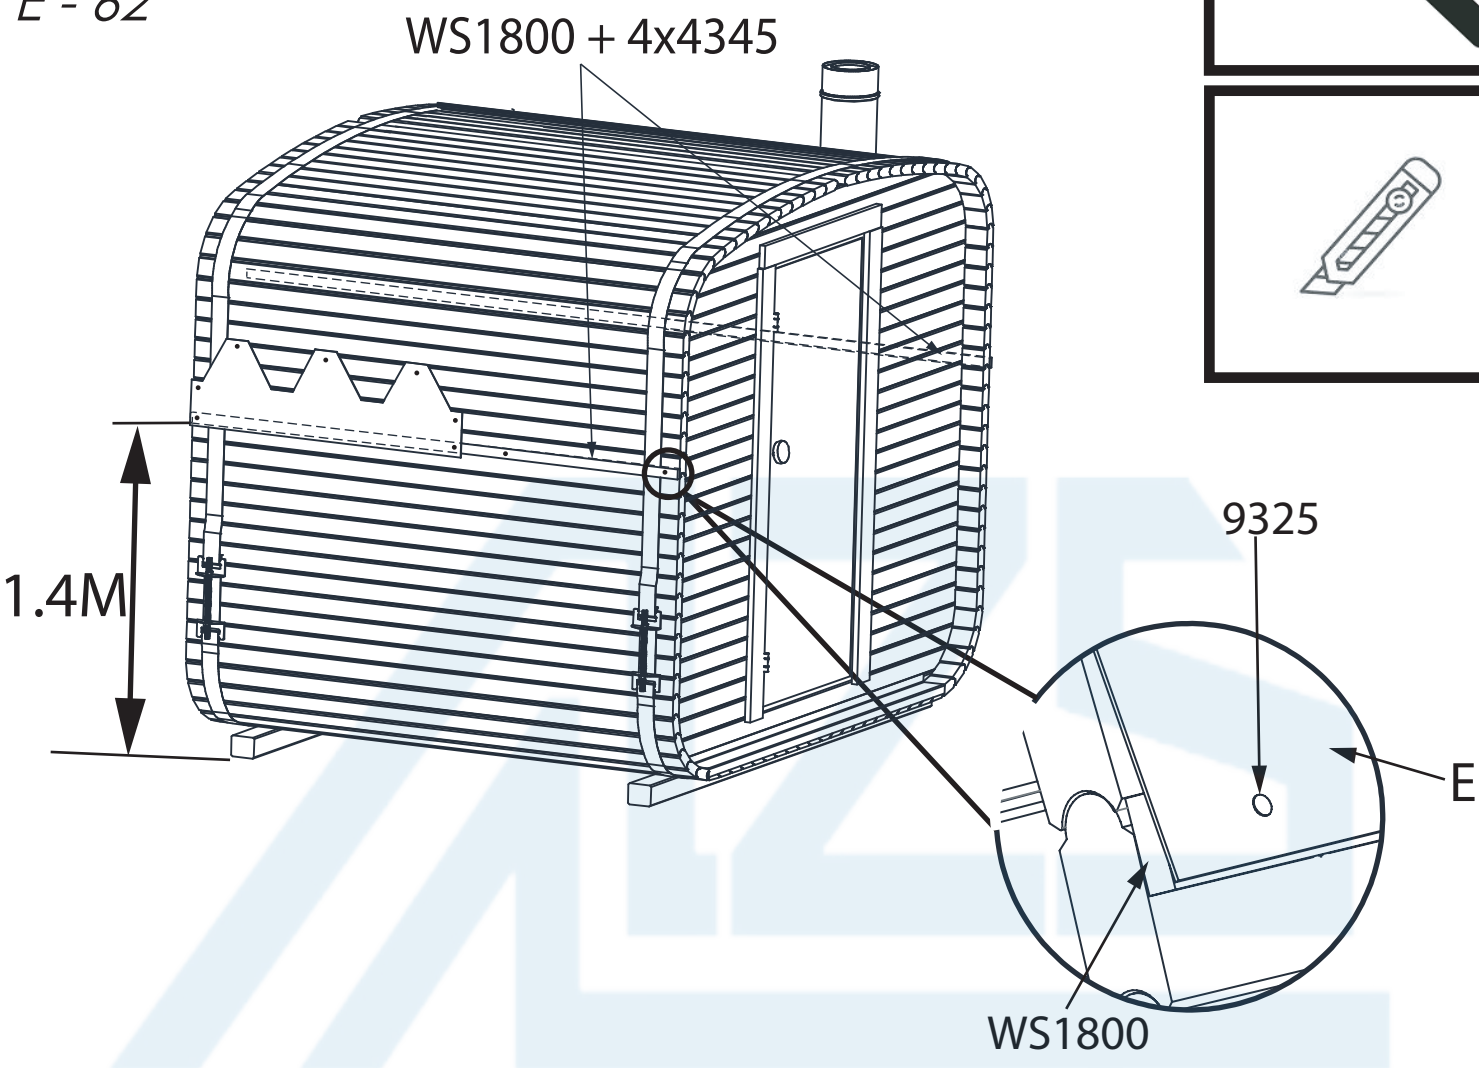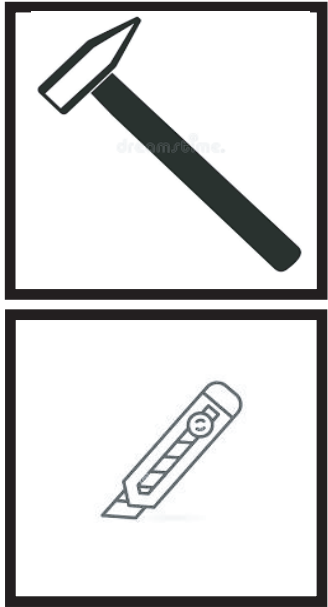

G8 - 1
9325 -12

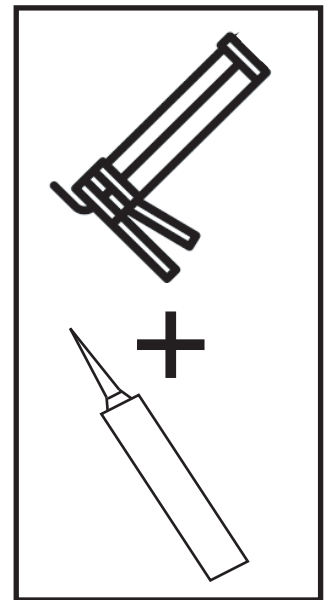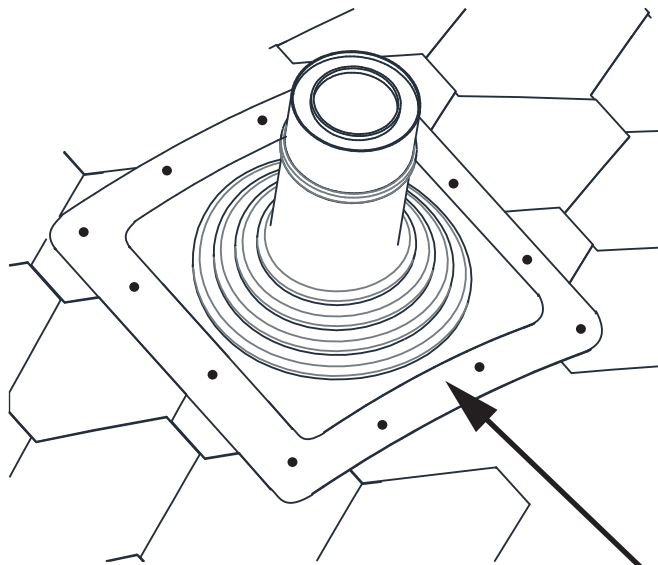

G8 + 12x9325

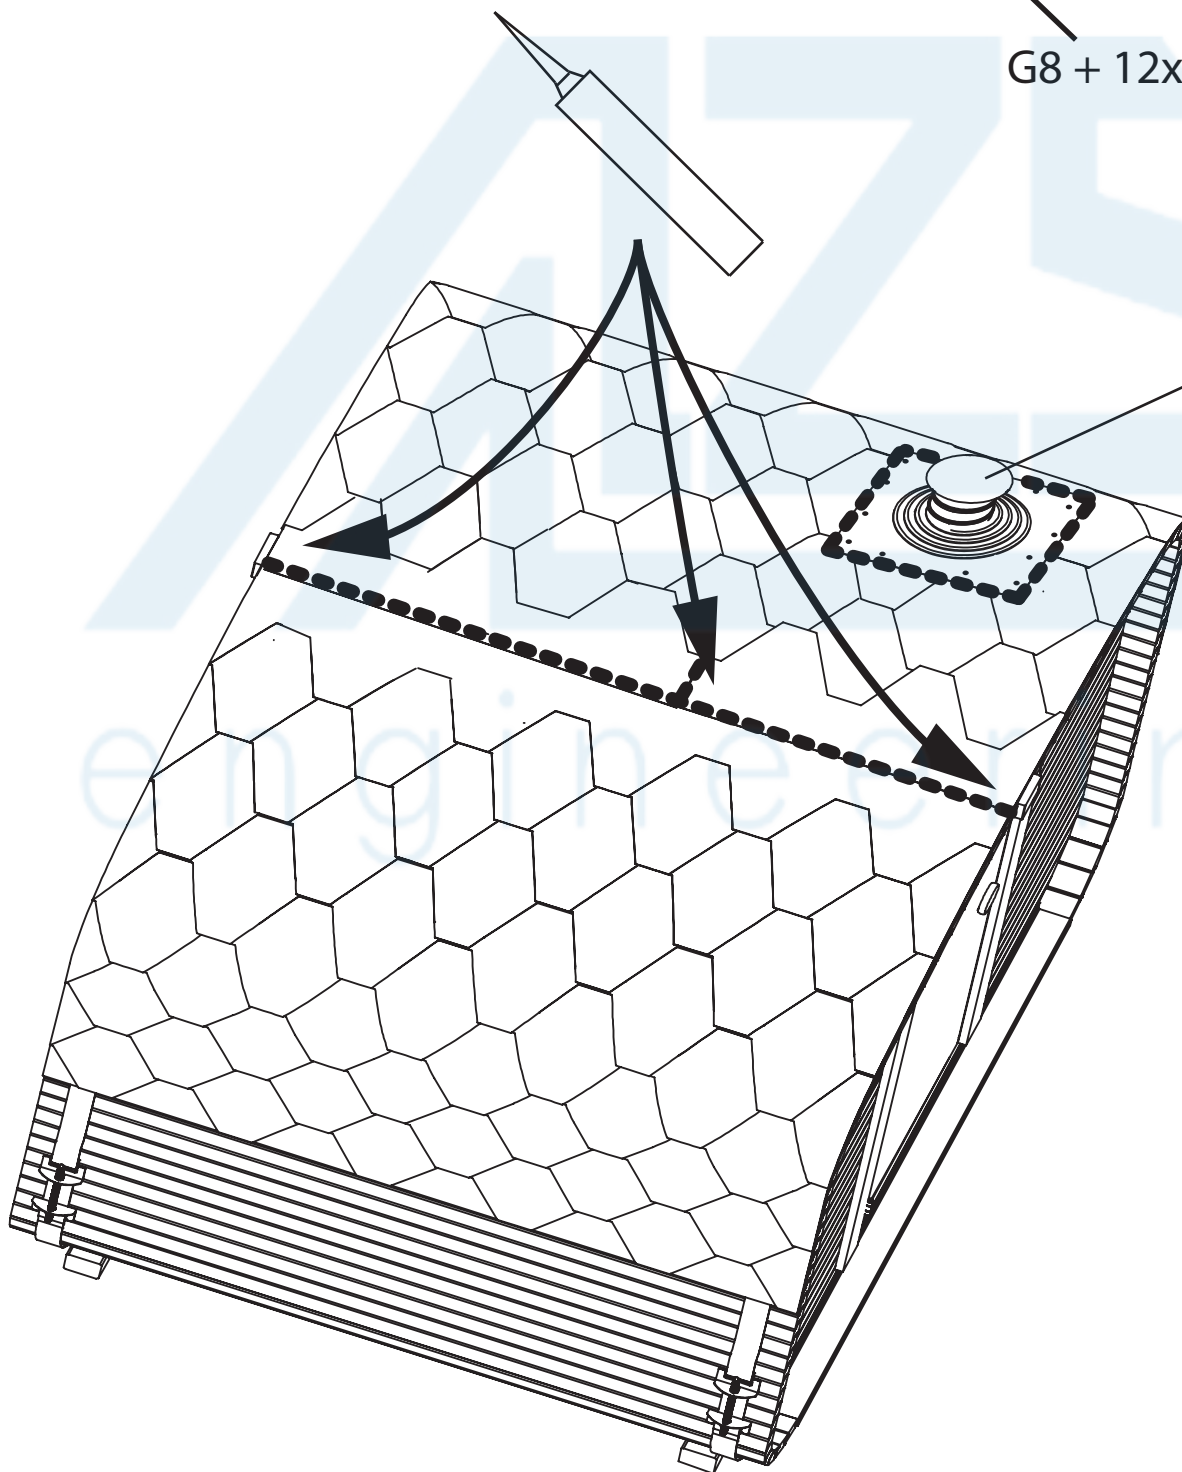

G9