


PL - INSTRUKCJA MONTAŻU: **KOMODA LOFT**
ENG - ASSEMBLY INSTRUCTIONS: **CHEST OF DRAWERS LOFT**
DE - MONTAGEANLEITUNG: **KOMMODE LOFT**



ZESTAWIENIE OKUĆ:
LIST OF FITTINGS:
AUSSTATTUNGSLISTE:



				10 x Nockenschloss Cam lock Mimośród		5 x Bolzen M4x25 Bolt M4x25 Śruba M4x25			36 x Schrauben 3,5x16 Screw 3,5x16 Wkręt 3,5x16
1	2	3	4	5	6	7	8	9	10
									
Klucz „4” Wrench „4” Schlüssel „4” 1 x	Śruba M6x45 Bolt M6x45 Bolzen M6x45 4 x	Komfirmat Comfirmat screw Bestätigung 10 x	Trzpień Cam lock bolt Nockenverriegelungs bolzen 10 x		Kołek 8x35 Dowel 8x35 Holzdübel 8x35 32 x		Gwóźdź Nails Nagel 30 x	Prowadnice Guides Schubladenführungen 3 x	

ZESTAWIENIE ELEMENTÓW:
LIST OF ELEMENTS:
LISTE DER ELEMENTE:

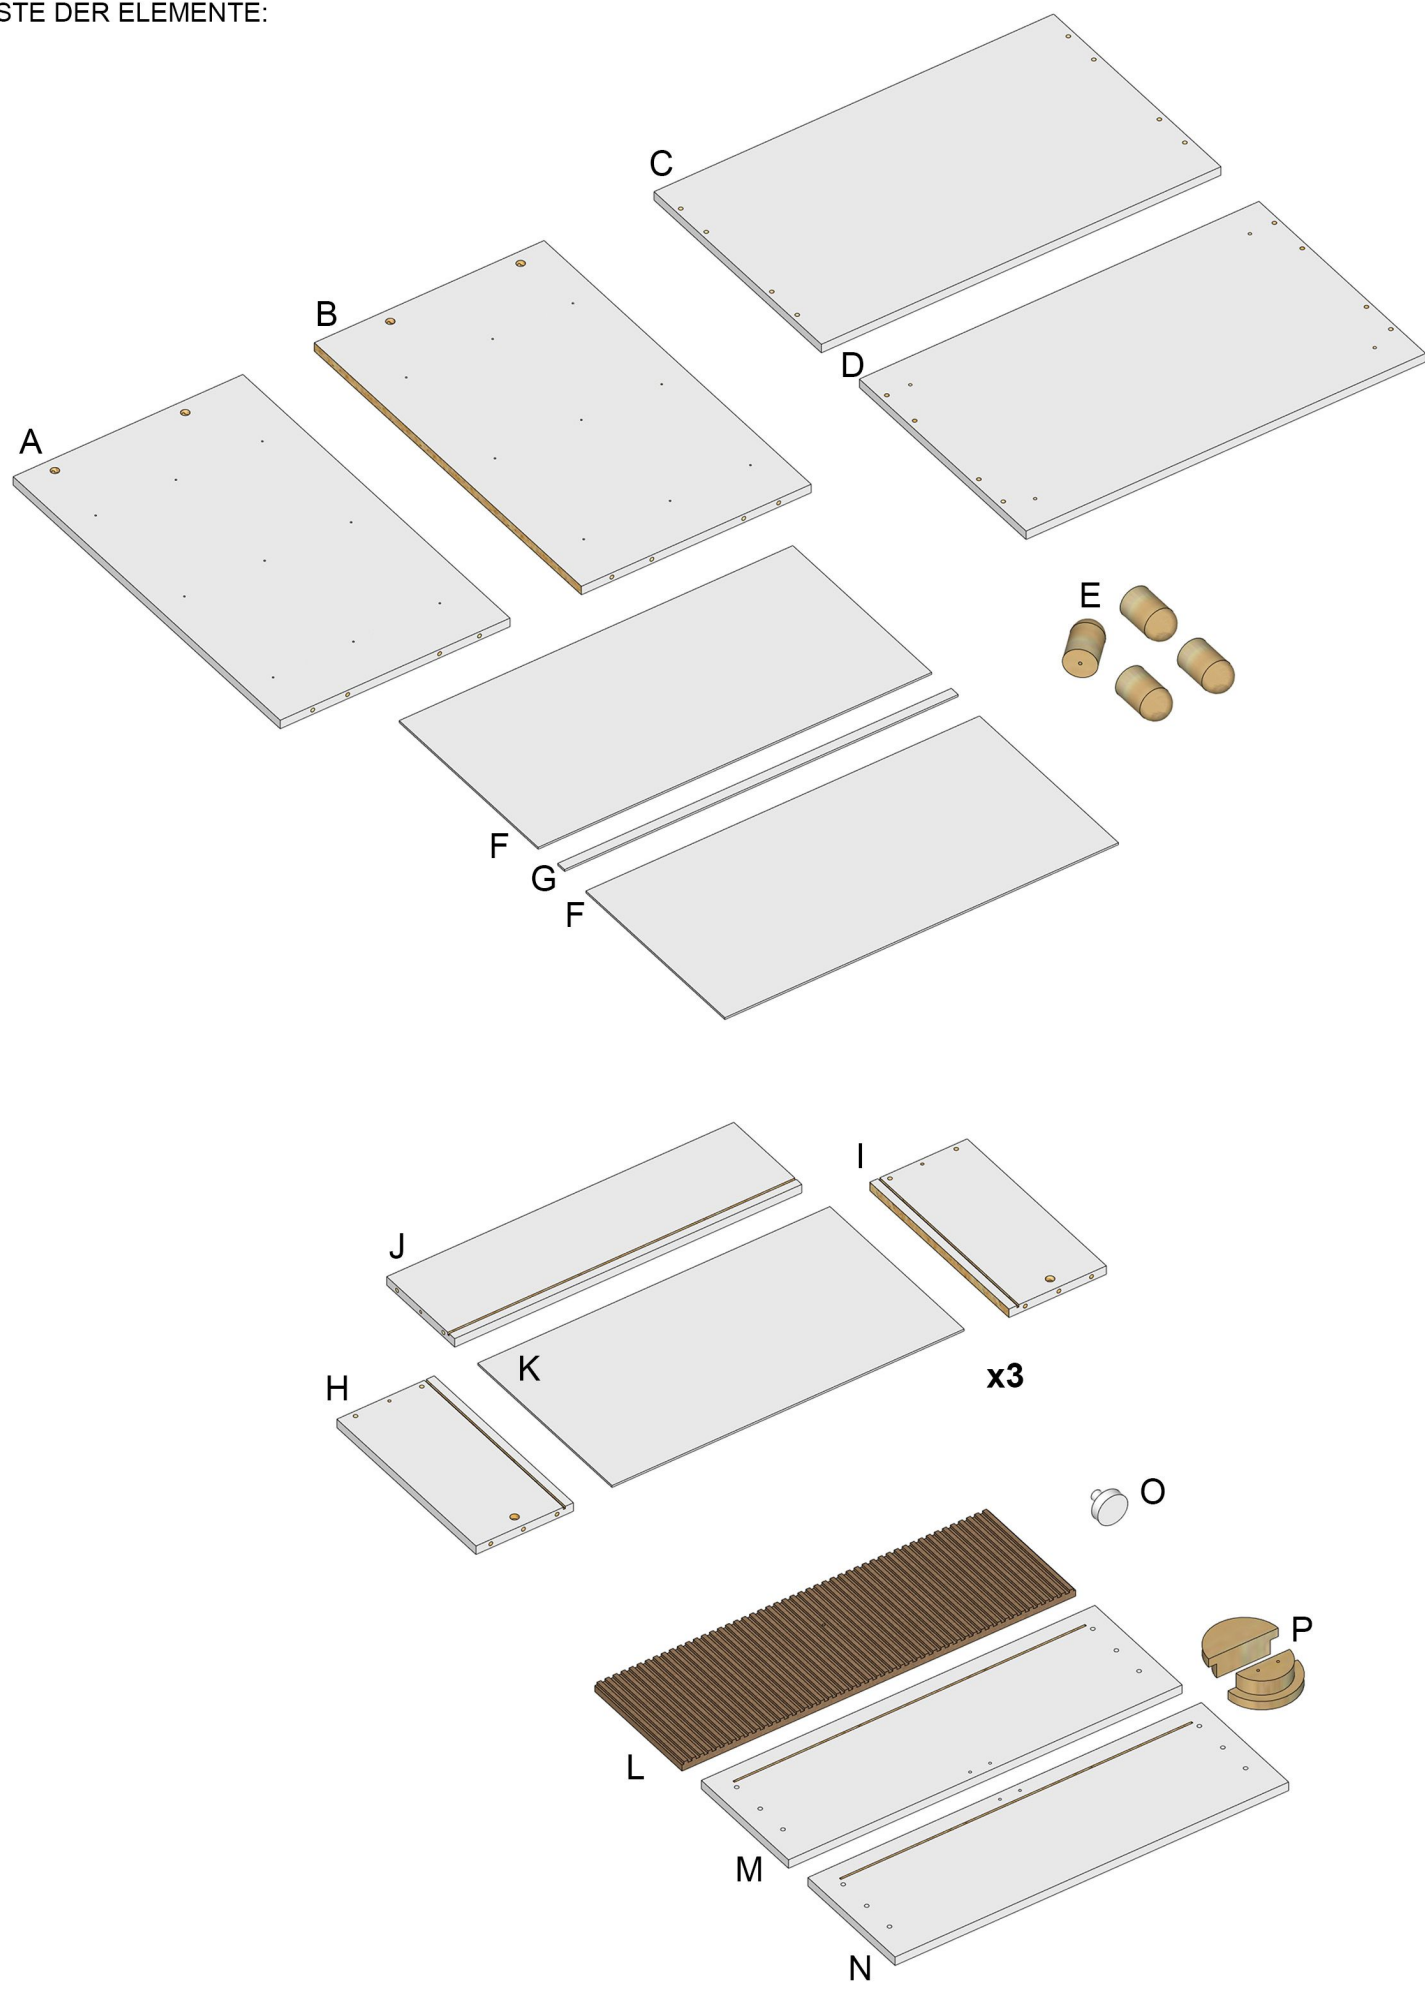


1


ROZDZIELENIE PROWADNICY
GUIDE SEPARATION
FÜHRUNGSABTEILUNG

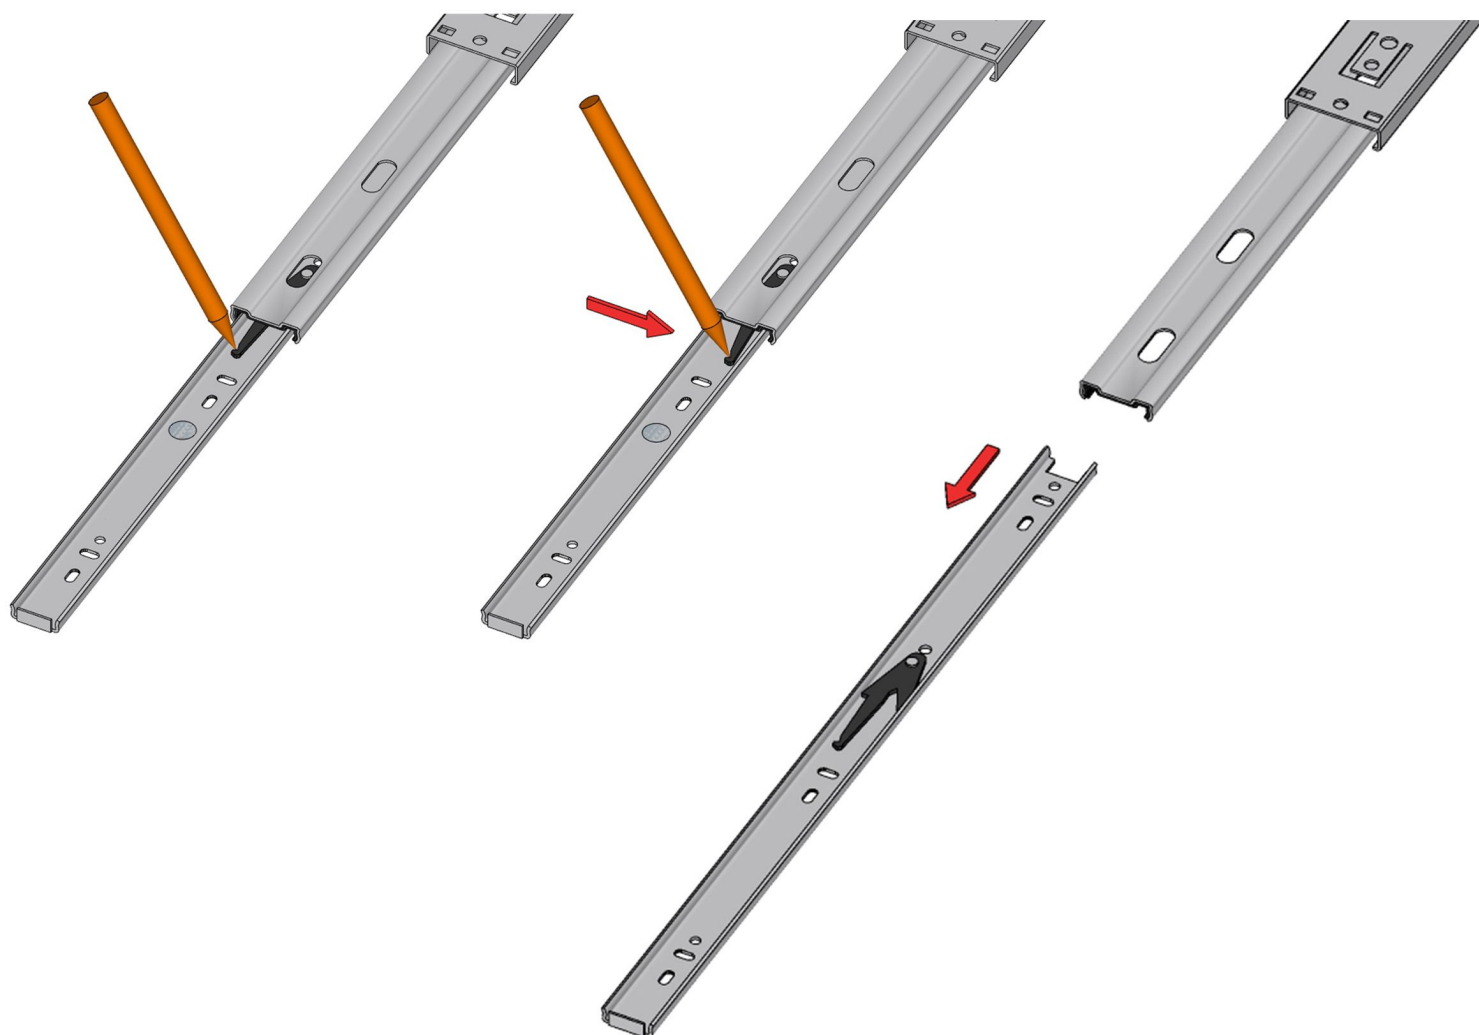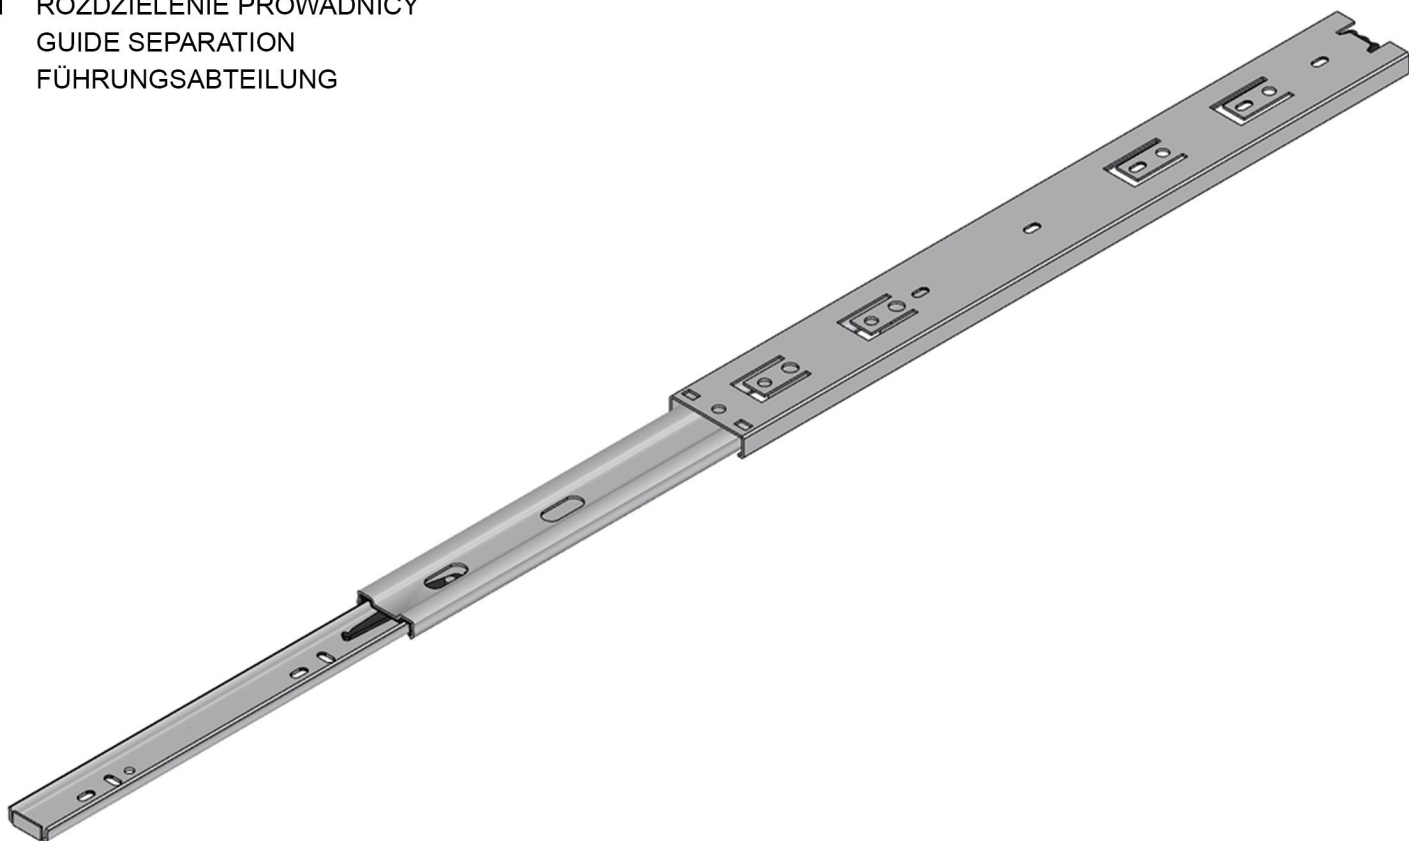


2

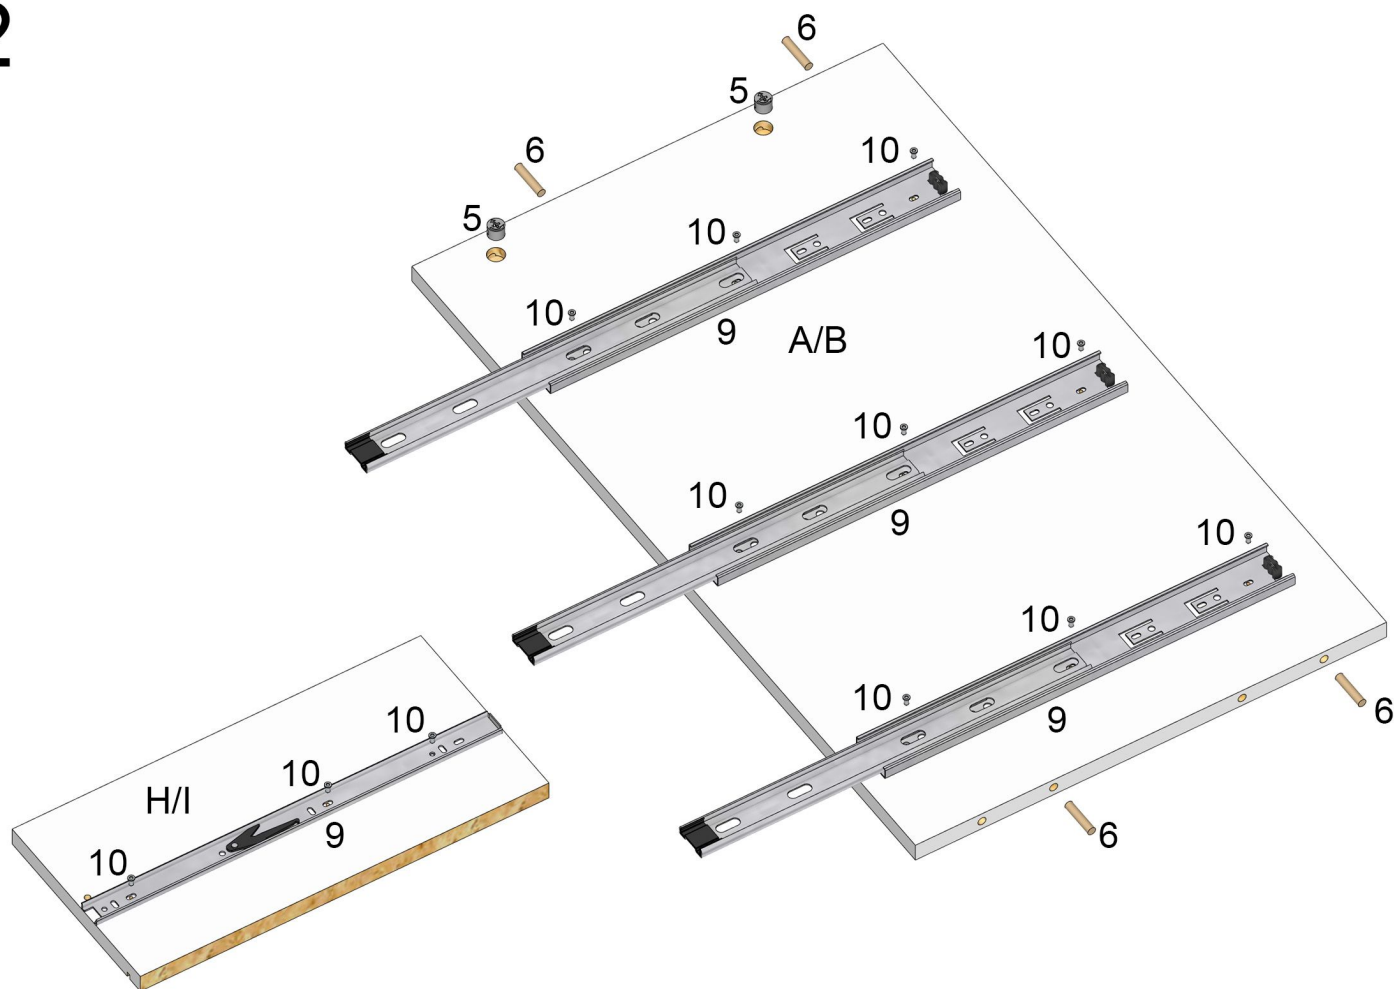


3

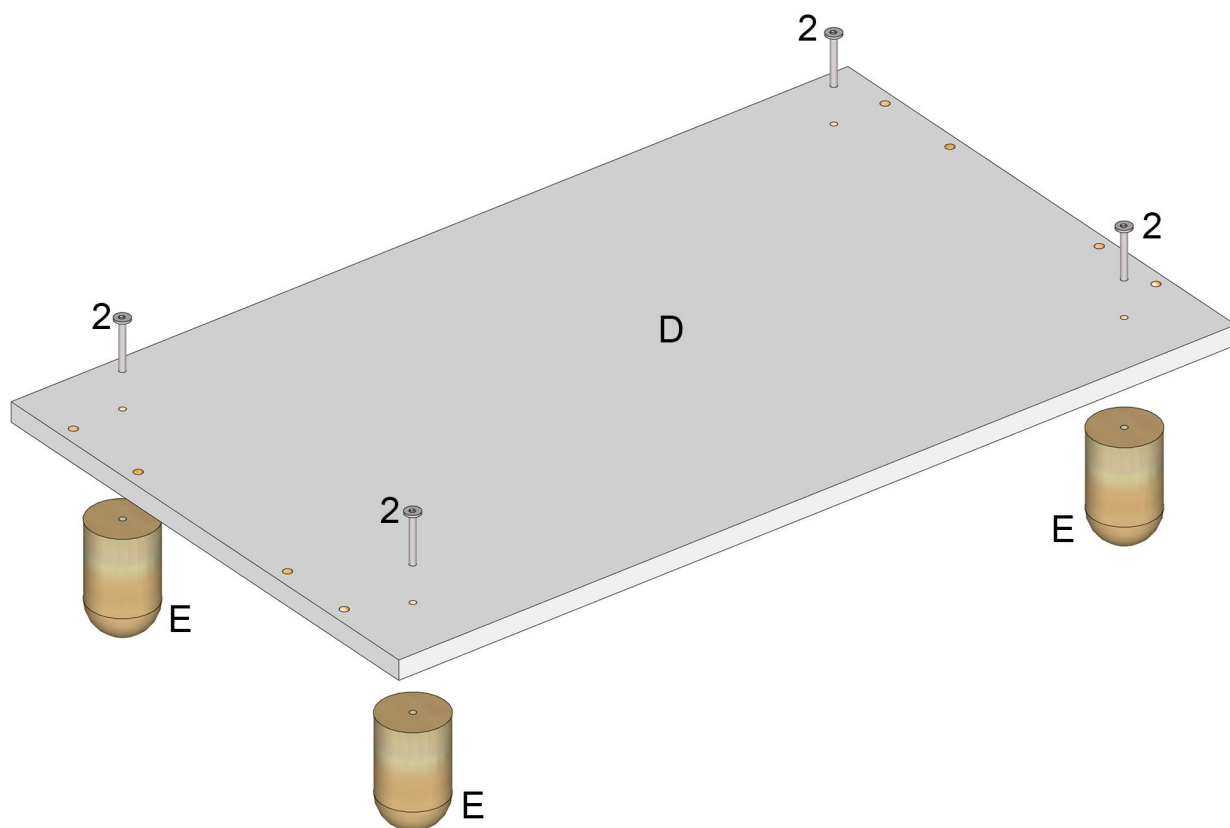

4

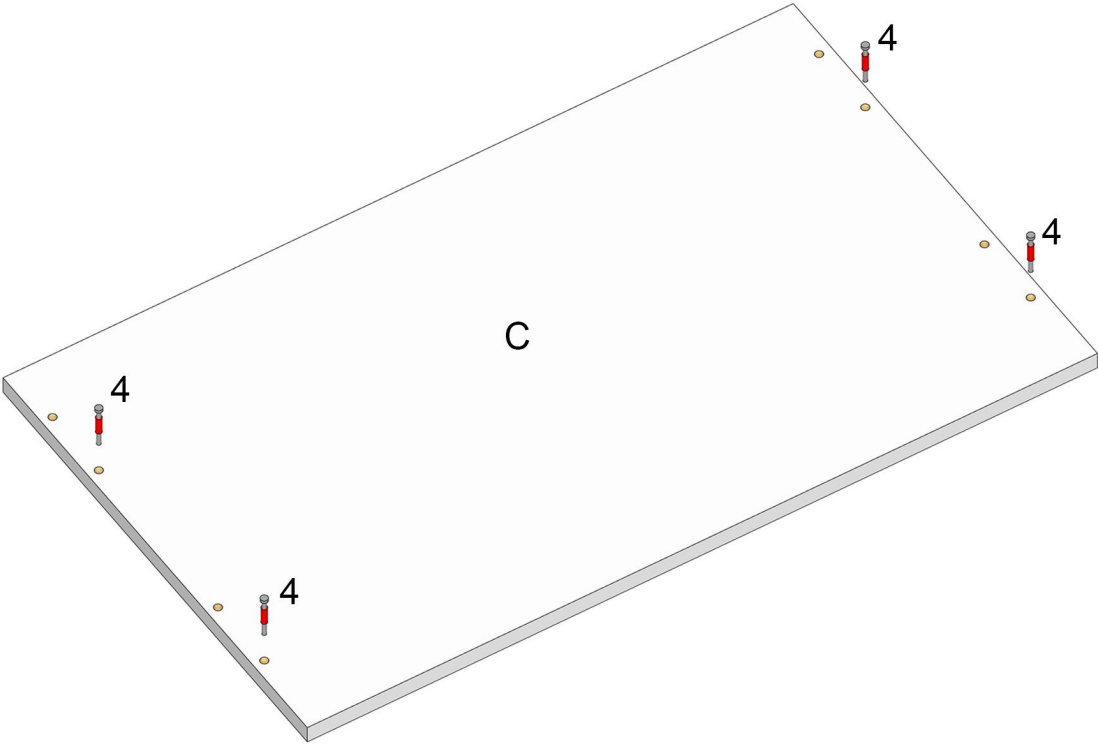

5

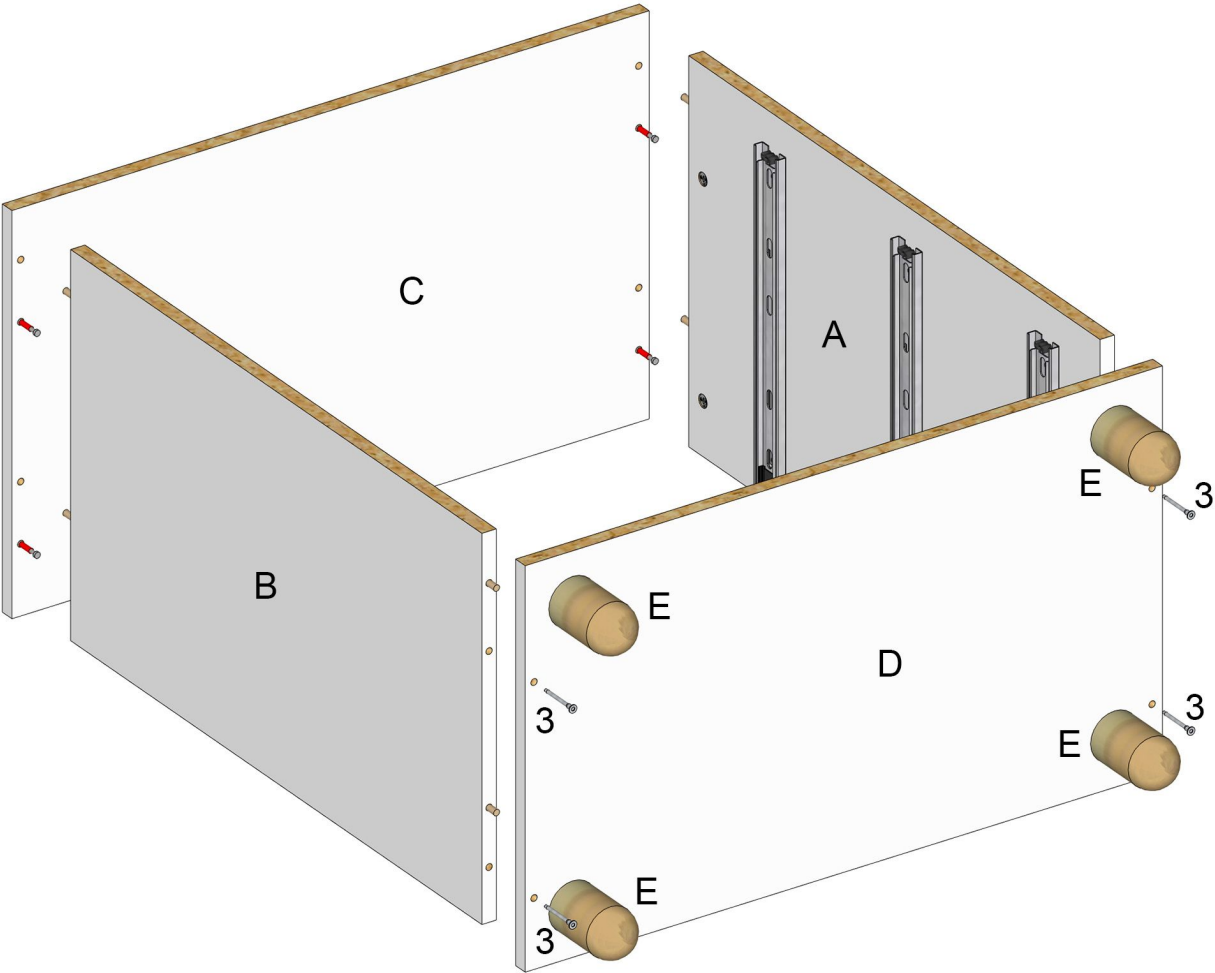


6


UWAGA! PRZED MONTAŻEM CZĘŚCI „F” SPRAWDŹ PRZEKĄTNĄ!!!

NOTE! BEFORE INSTALLING PART "F", CHECK THE DIAGONAL!!!


AUFMERKSAMKEIT! VOR DER MONTAGE VON TEIL „F“ DIE DIAGONALE PRÜFEN!!!

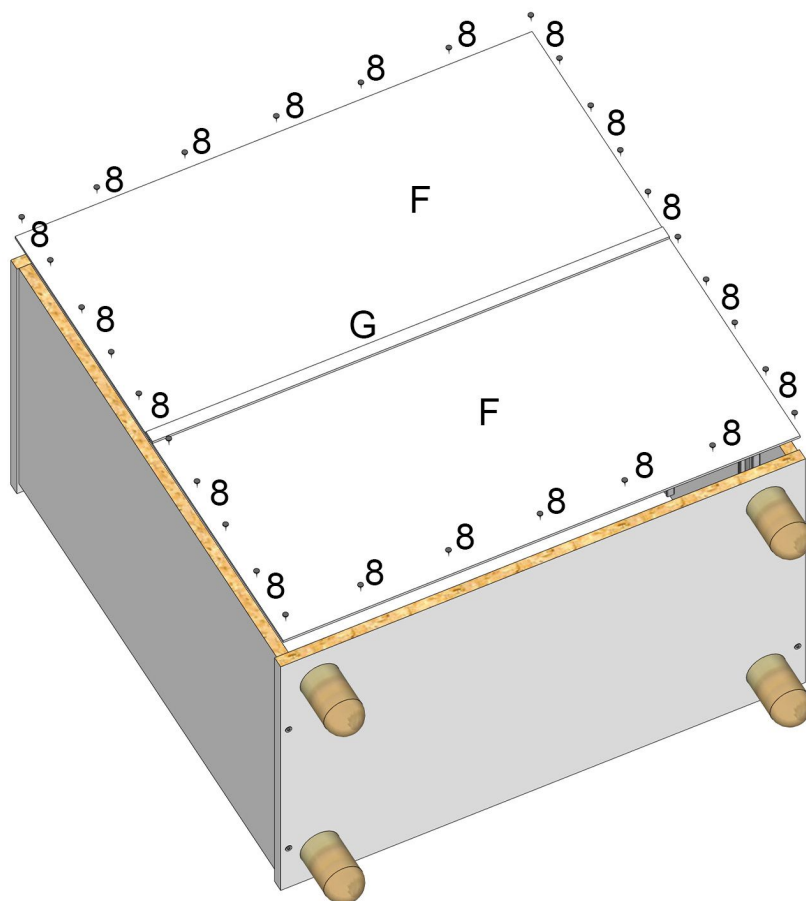

7

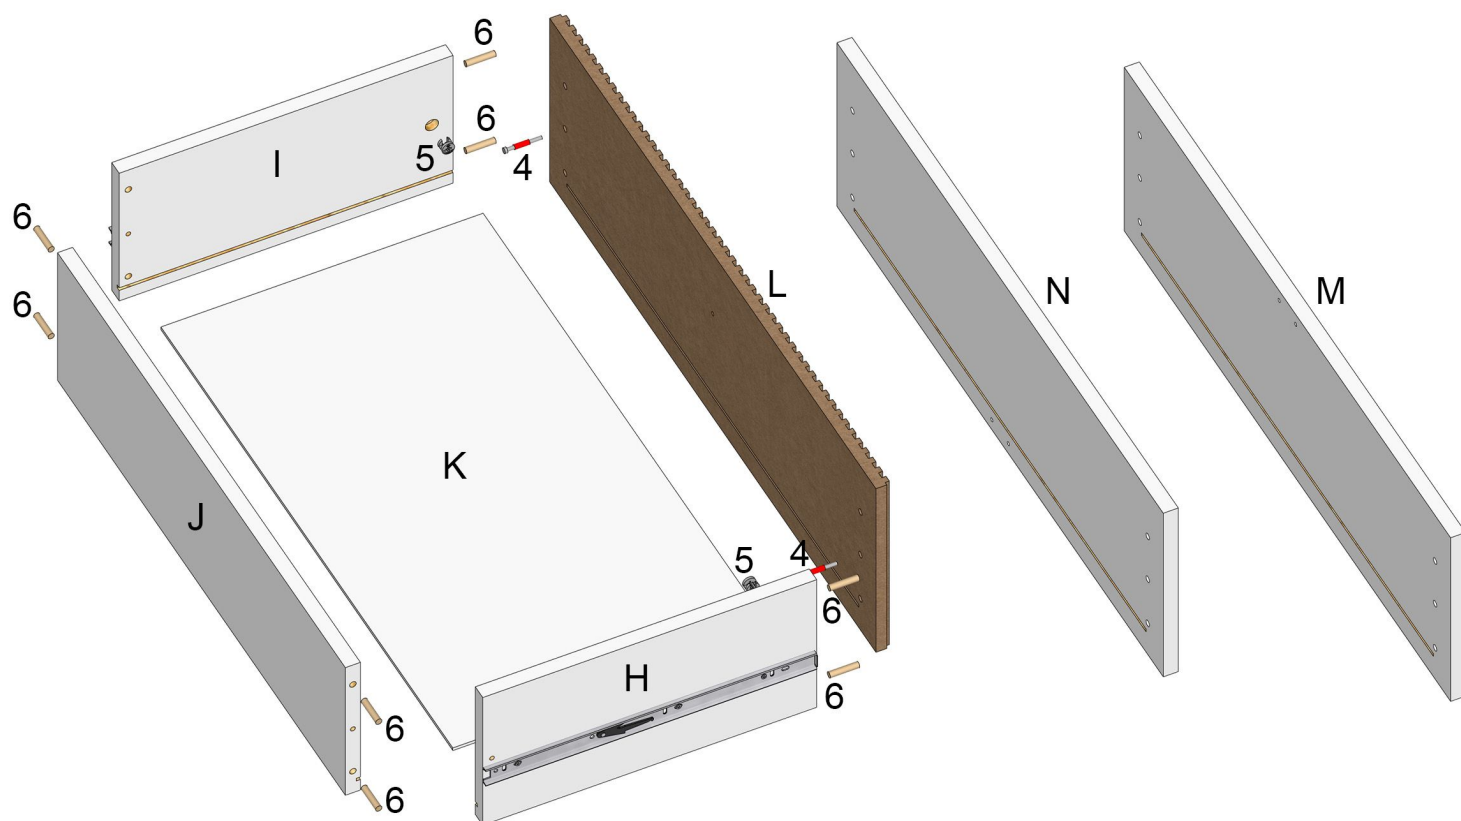

8

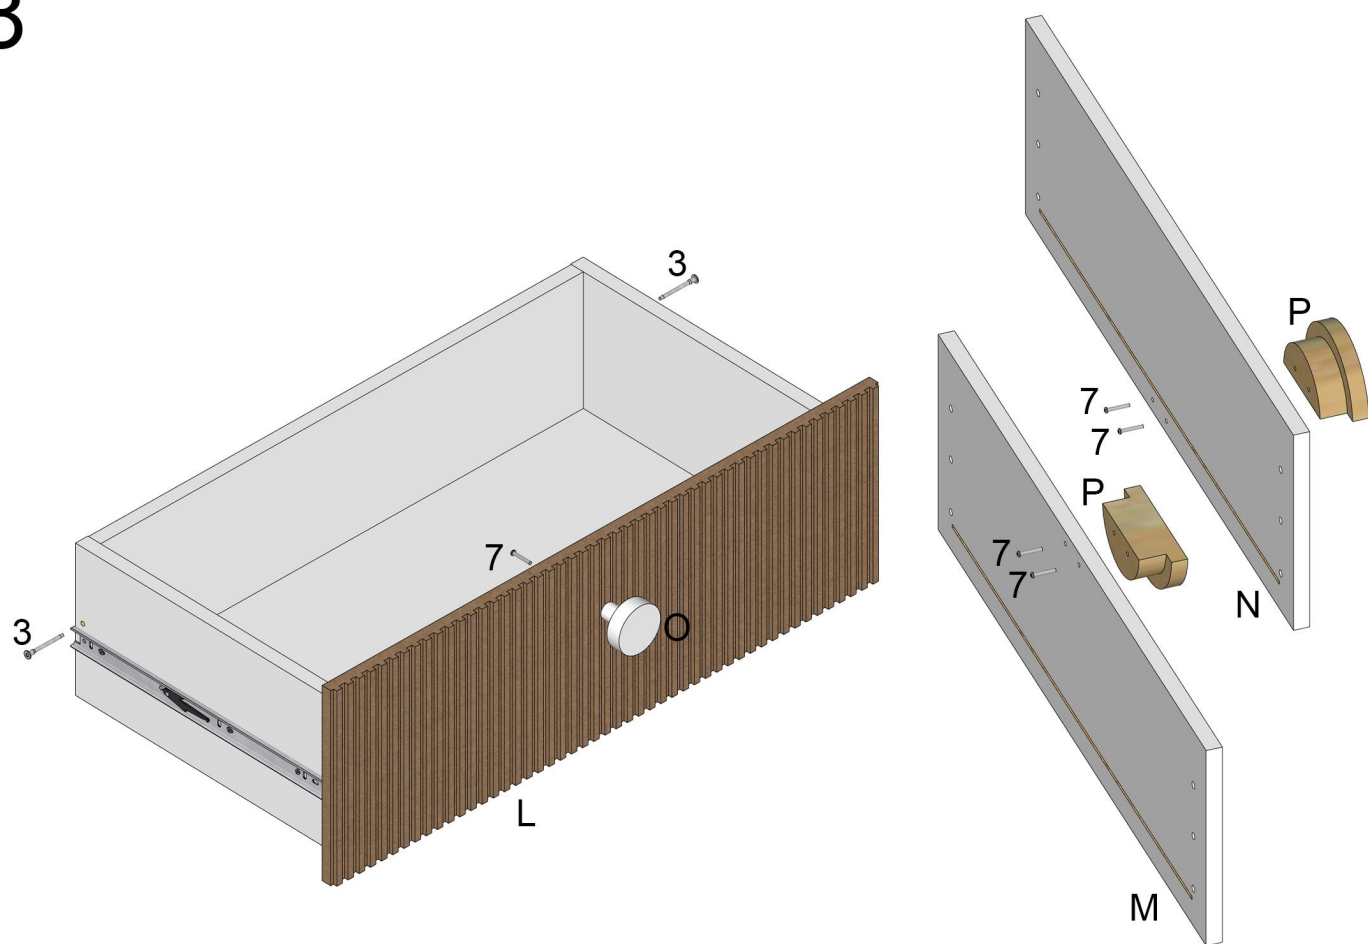

9

