



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Astra J Hatchback 5dr (2009-2015)

ASTRA J HB BEZ KL

SOLARRIDE Ltd. vydala návod pro montáž pouze SolarRide do Opel Astra J Hatchback 5dr (2009-2015) BEZ KL



5 904035 795489 >

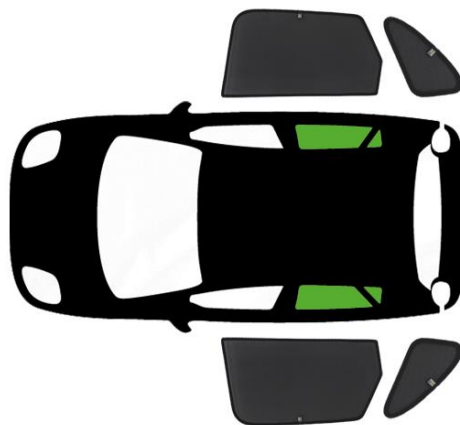

4 x







Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

