


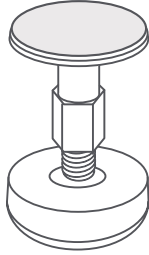


22339

Tope Anti Golpes


Tope Anti Golpes
Headboard Tool




Guía Rápida

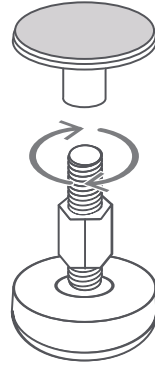


1 Identifica

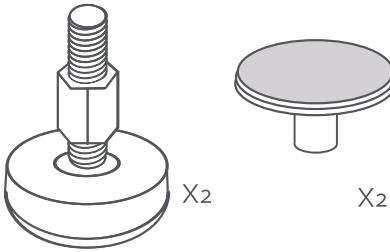


2 Enrosca

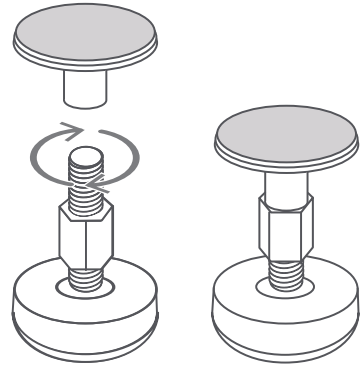

3 Desprende

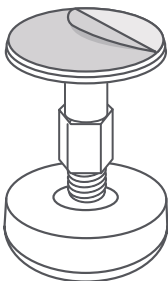

4 Instala

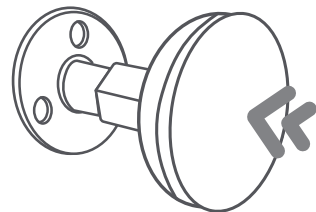

Elige una pared lisa, limpia y pega.