



① Prepare 2 part C and insert them into each side of part A like below picture.

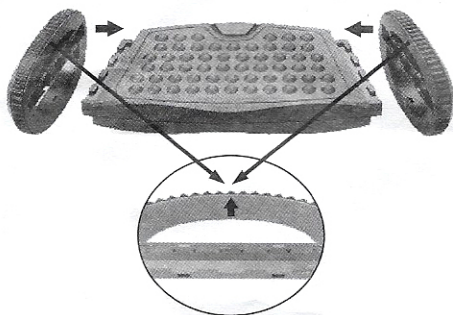


② Push forward both part C according to the indicated arrow till it's locked .

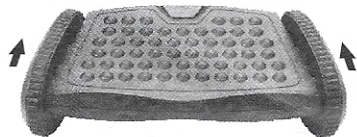

“Note: Be sure Left and Right side in same level

③ Insert each part B into each part C's center slot .

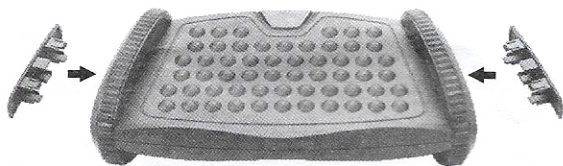


④ Ready to use .



BUY ON


www.cablematic.com

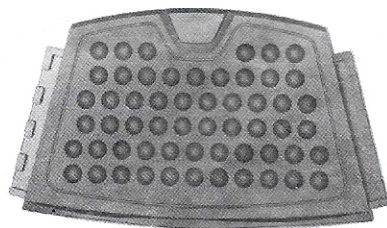

A
x1



B
x2

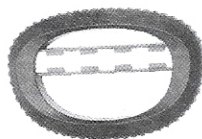

C
x2