



# *Cablematic*



**1.Remove the circlip**



**2.Fix the bleed block**



**3.Rubber band fixing**





# CABLEmatic



**4. Open disc brake nozzle mouth. Connection oiler.**




**4. At the same time, unscrew the brake nozzle, Put on the funnel.**





# CABLEmatic

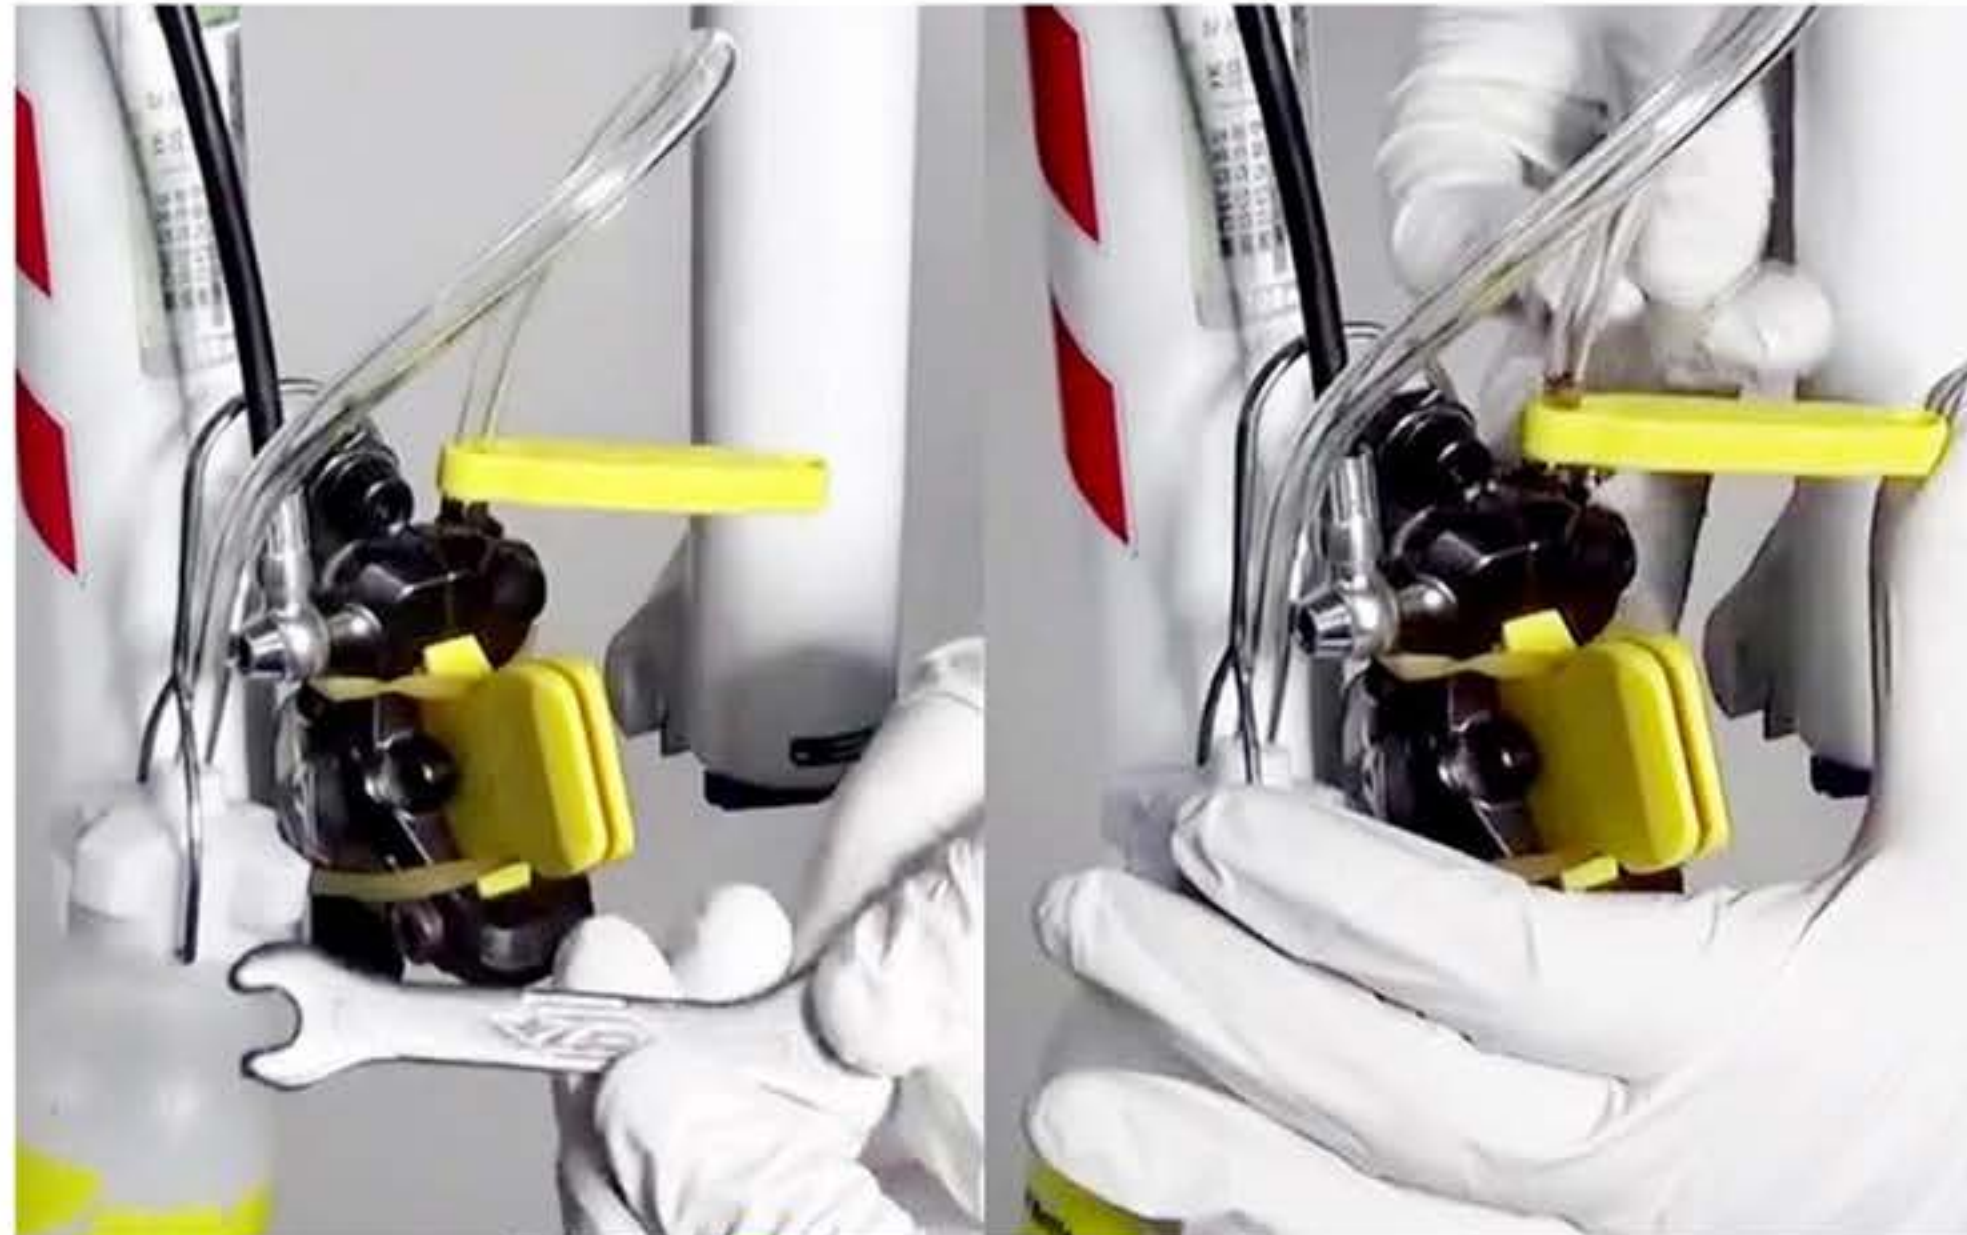

**5. Using a spanner to twist the nozzle to drain, flow out waste oil.**




**6. Clean the oil-circuit**





# CABLEmatic

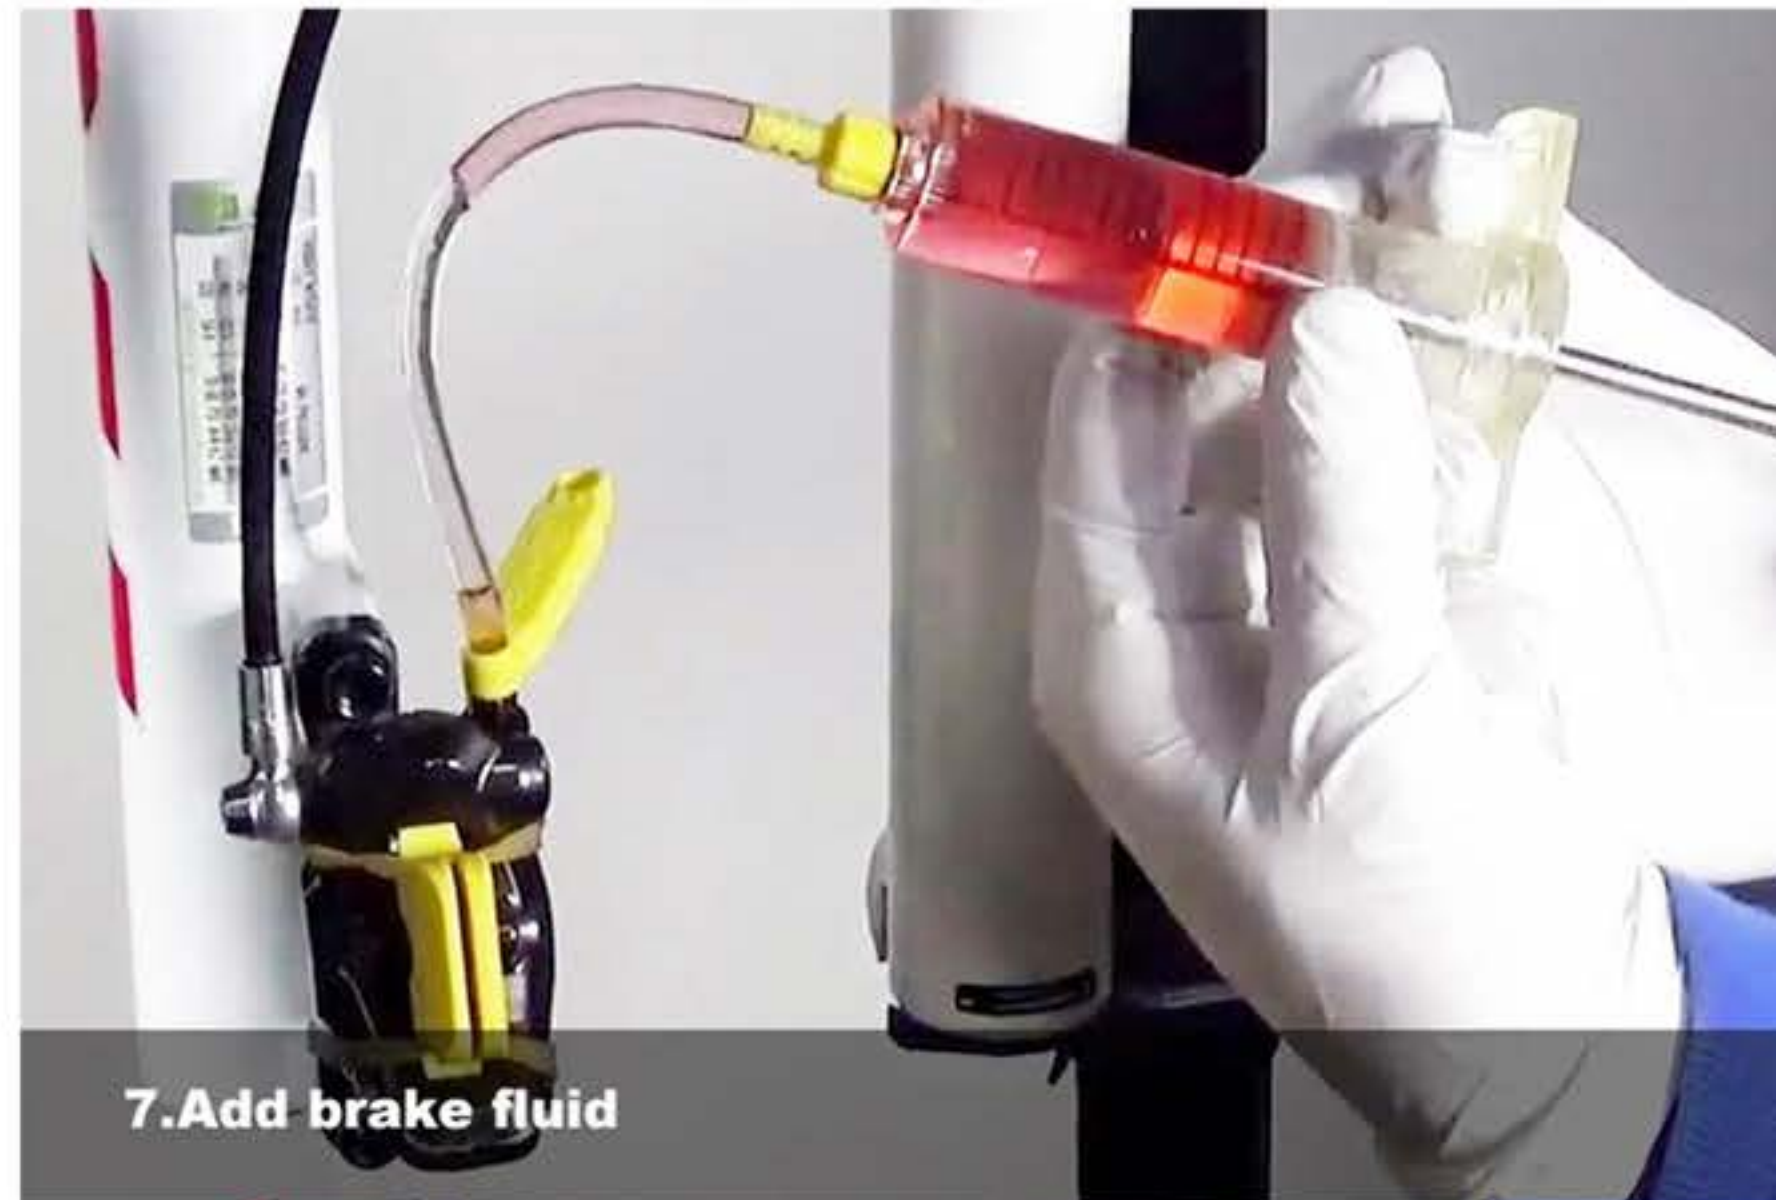

**7.Add brake fluid**



**8.Close the nipple**



**! Adding the brake oil to avoid the air mix in lever**

**9.Connection oiler, Unscrewed half turn nipple**





# CABLEmatic



**10. Wait until there are no more bubbles**



**11. Depress the lever and hold on**  
**Open and close the nipple in rapid succession.**  
**Repeat this procedure 2~3 times.**



**12. Cap the nozzle**





# CABLEmatic



**13. Check out no air remains,**



**Block the funnel**



**14. close the nipple Screw on**

