
www.cablematic.com

INSTALLATION INSTRUCTIONS FOR Shower Seat Models C&D

Before installing, please read the instructions carefully in order to install and use this product safely.

Note:

The structure and installation method for Model C is the same as for Model D.

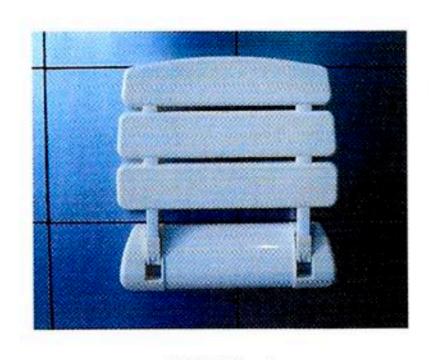




MODEL C


MODEL D

Spare parts List:

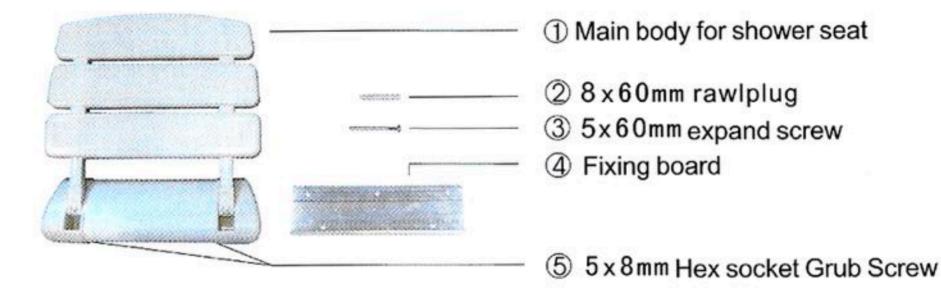



Installing steps:

- A .keep the plane of Fixing board [04] towards the wall and place it on the wall level (Note: the edge with three holes of Fixing board [04] should be up) and the recommended upright height from the bottom of Fixing board [04] to Floor is 400-500mm. Mark down the screw holes and take down the Fixing board [04] so as to drill five holes with the depth of 60mm and diameter of 8 mm and place the rawlplug [02] into the holes.
- B.Put the Fixing board [04] onto the original place once again and screw down the expand screw[03] and fasten them.
- C.Button the Main body for shower seat [01] downwards absolutely from the upper part of Fixing board [04] until the inner side on the bottom of Main body for shower seat [01] touches the wall and keep the pedestal made of aluminium alloy material on the Main body for shower seat [01] and the two ends of Fixing board [04] orderly.
- D.Screw down two pcs of 5*8mm Hex socket Grub Screw[05] inserted on the underside of Main body for shower seat [01] with the supplied Hex socket spanner.

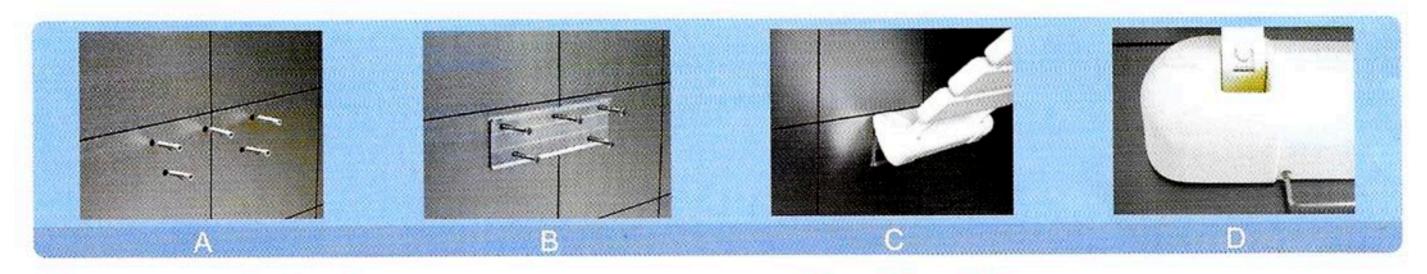

Dimensional drawing:

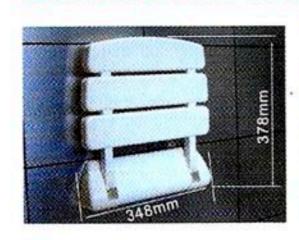

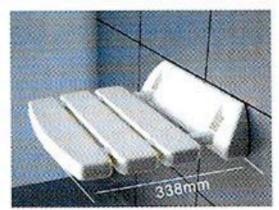



Packing List:

Serial No.	Name of components	QuantityRemark
01	Main body for shower seat	1
02	8*60mm rawlplug	5
03	5*60mm expand screw	- 5
04	Fixing board	1
05	Hex socket spanner	1
06	Instructions	1

Important:

- 1. Safe Working Load 160 kilogram.
- 2. If the Supplied Screws/Raw plugs are not Suitable for Installation you must select appropriate ones.