





CABLEMATIC

① Front wheel installation and disassembly


Insert the wheel directly to install

Press here, the wheel is lifted up to complete the disassembly

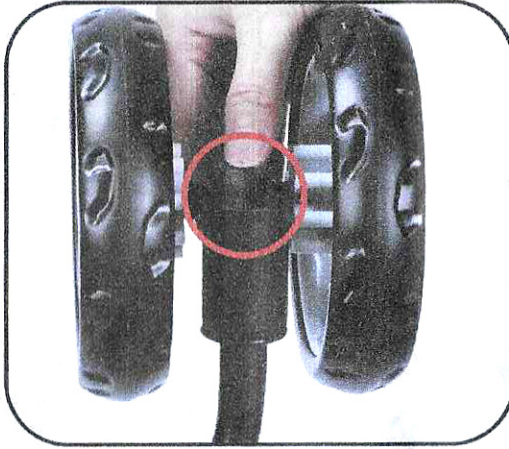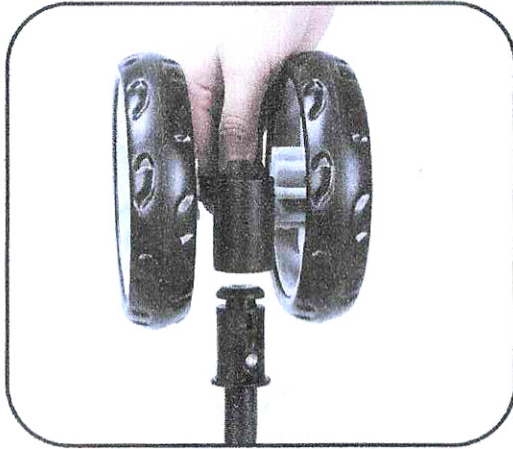





② Rear wheel installation

Note: The rear wheel brake button is facing the armrest for the correct installation direction.

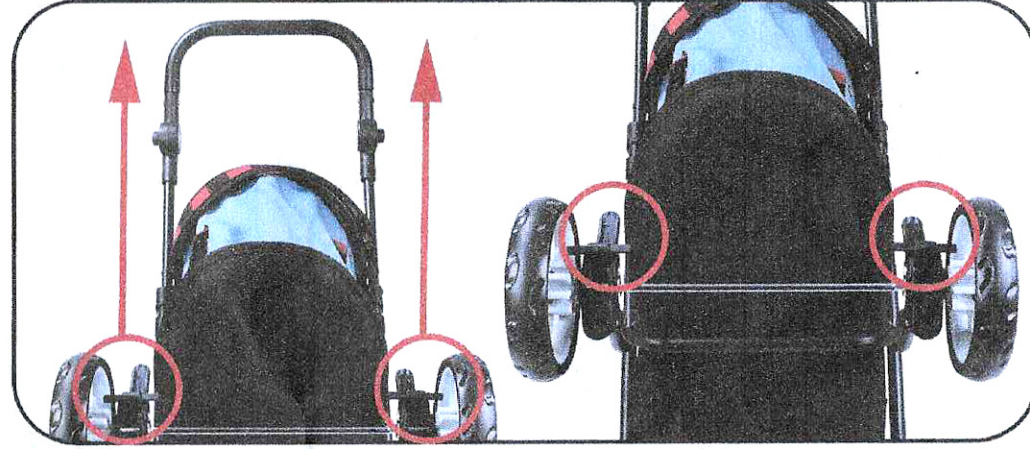


③ Handrail height adjustment

Adjust the armrest height by pressing both hands at the same time

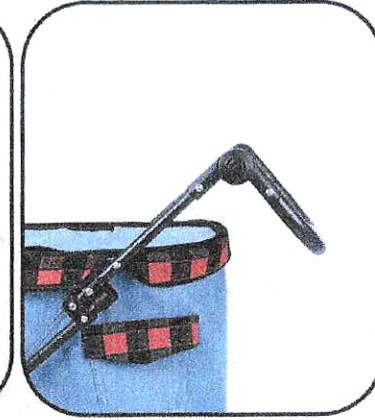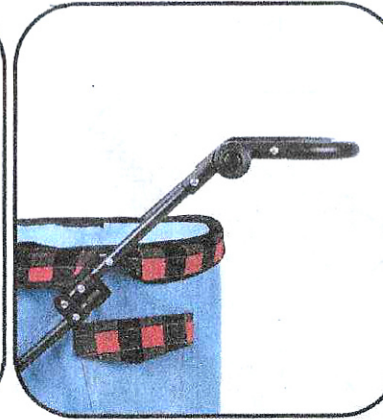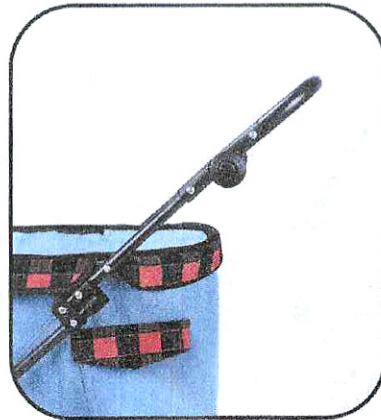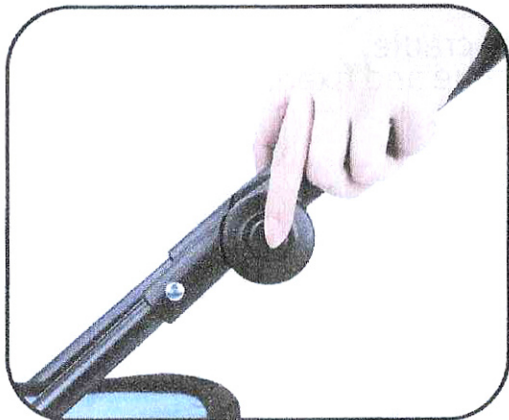

④ Folding Stroller

Pull the stroller button by hands at the same time, and then press the stroller forward to complete folding.

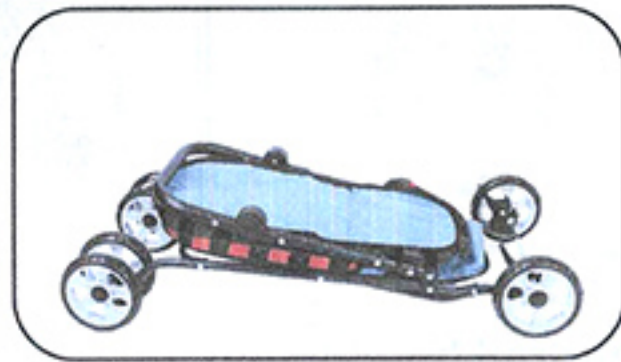

⑤ Cradle removal

Open the cradle edge button, detachable and washable cradle



⑥ Fixed cradle

There is a Velcro on the bottom of the cradle, which can be wrapped around the frame and fixed.

