

TRAY x 1



KNOB x 12



SUCTION BASE x 1



SCREW x 7



L ARM x 4



BALL CLAMP (L) x 2



BALL CLAMP (R) x 2



MARM (R) x 1



MARM (L) x 1




L CLIP X 2




PROTECT PAD X 10



ARROW CLIP X 3

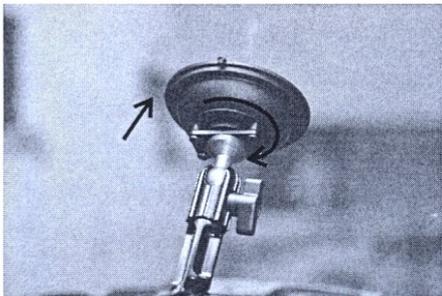


1. Press the SUCTION BASE on the windshield and tighten the TURNTABLE

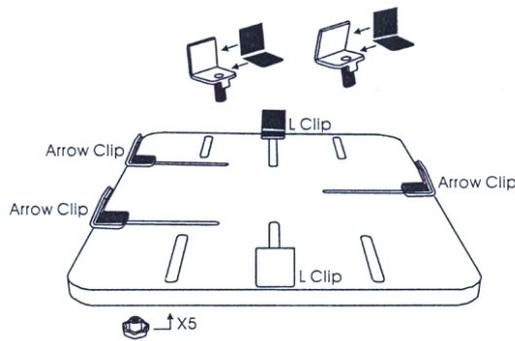

2. Stick the L CLIPS and ARROW CLIPS with PROTECT PADS and screw onto the TRAY with TRAY KNOBS.



3. Only adjust the upper TRAY KNOB to put on or take out the iPad or the other elec device. The TRAY can be install on any tripod.

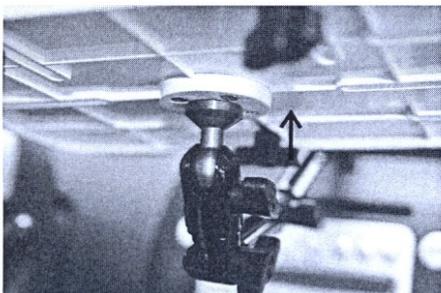

4. SCREW the TRAY onto the BALL HEAD of the ARM.



5. Keep the ARM close to the central console will reduce the vibration.

CAUTION

*Please surely fasten all the screws to the tightest when Use the stand.

*Not for use while driving.

Max load:
when moving 2.5KG
when immobility 5KG