

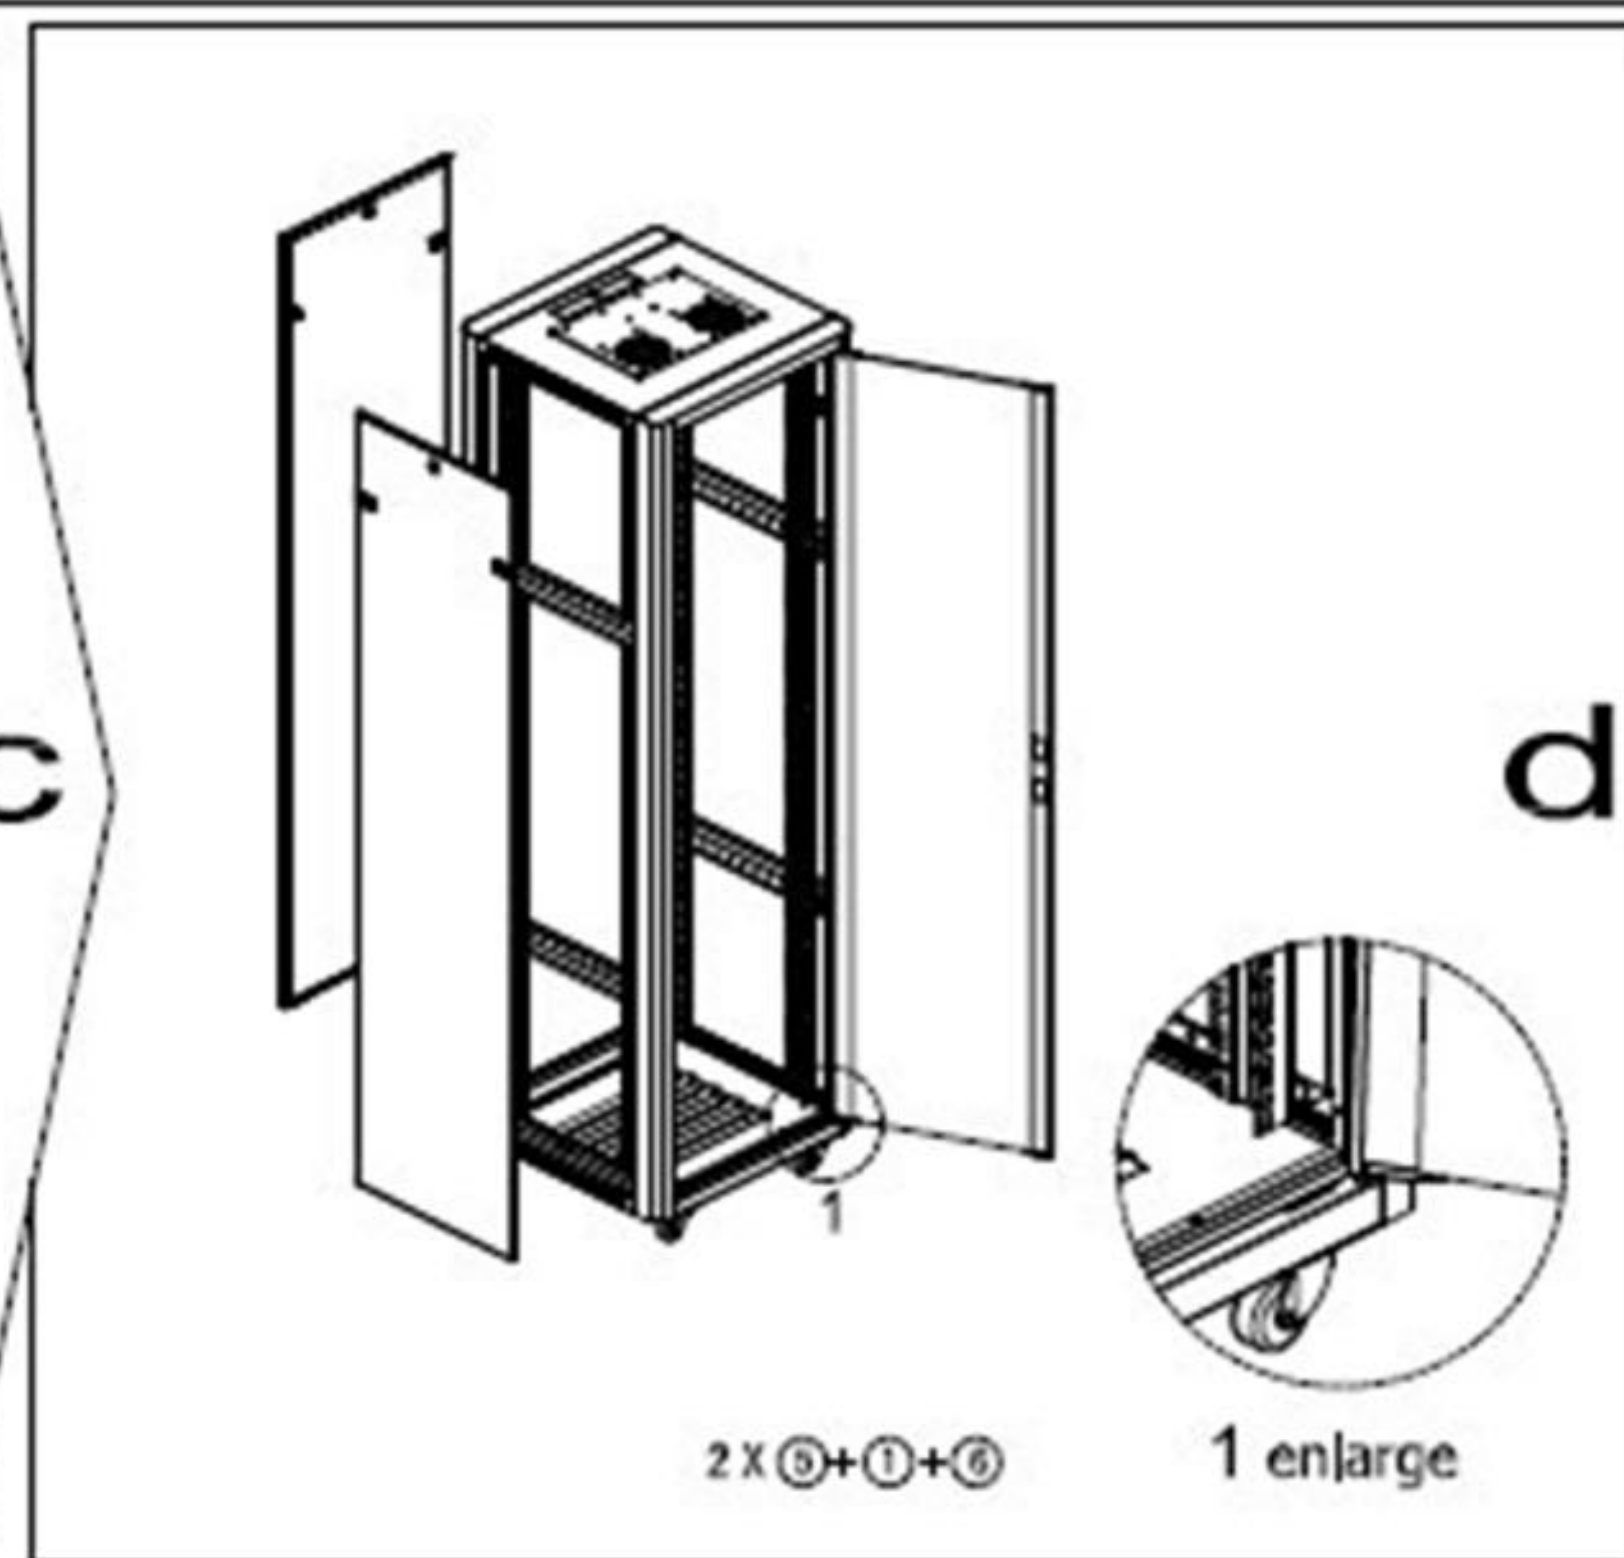
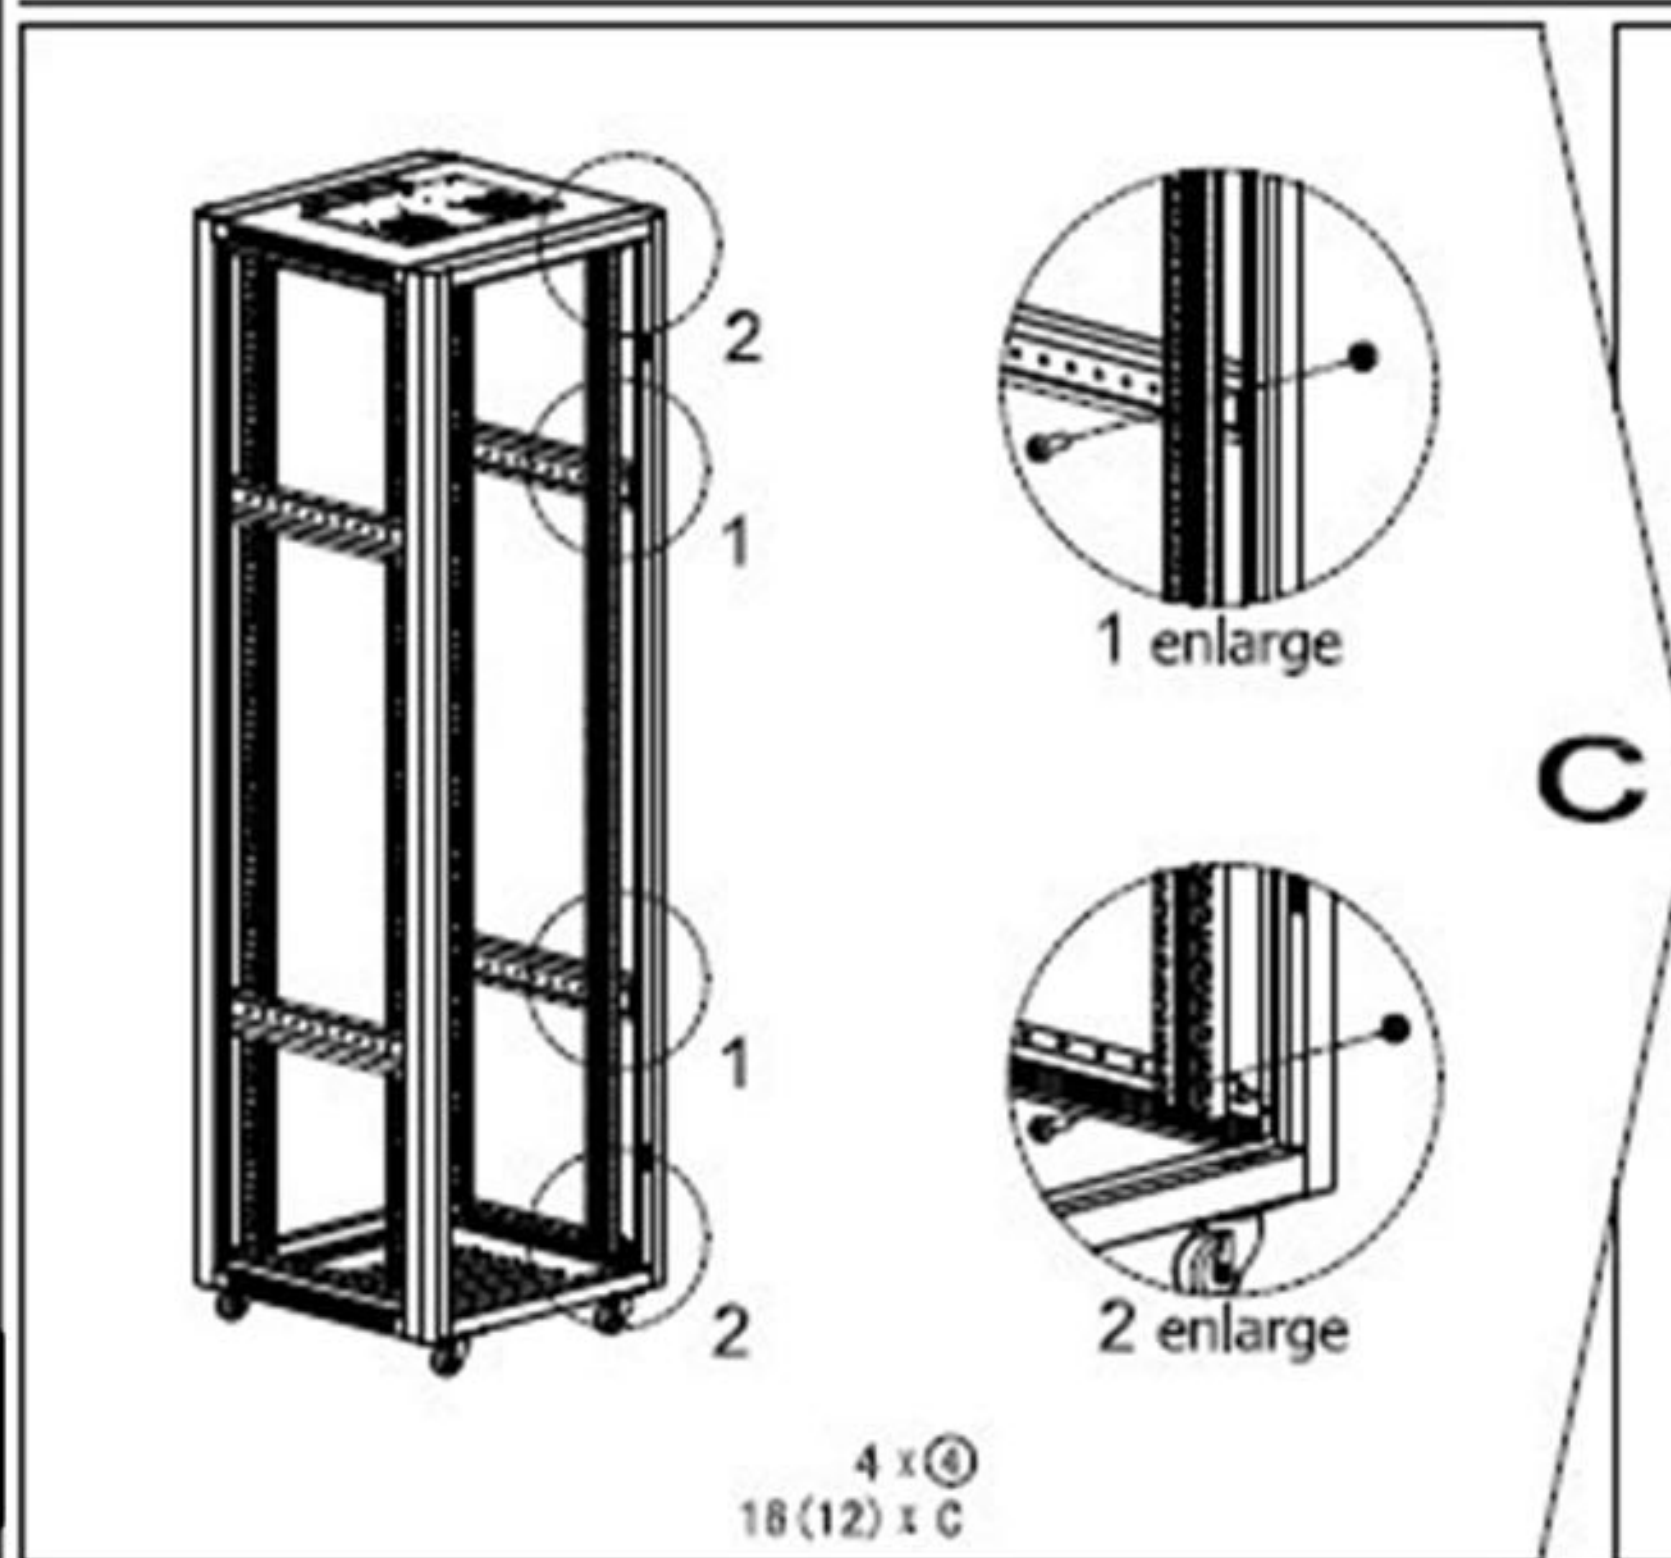
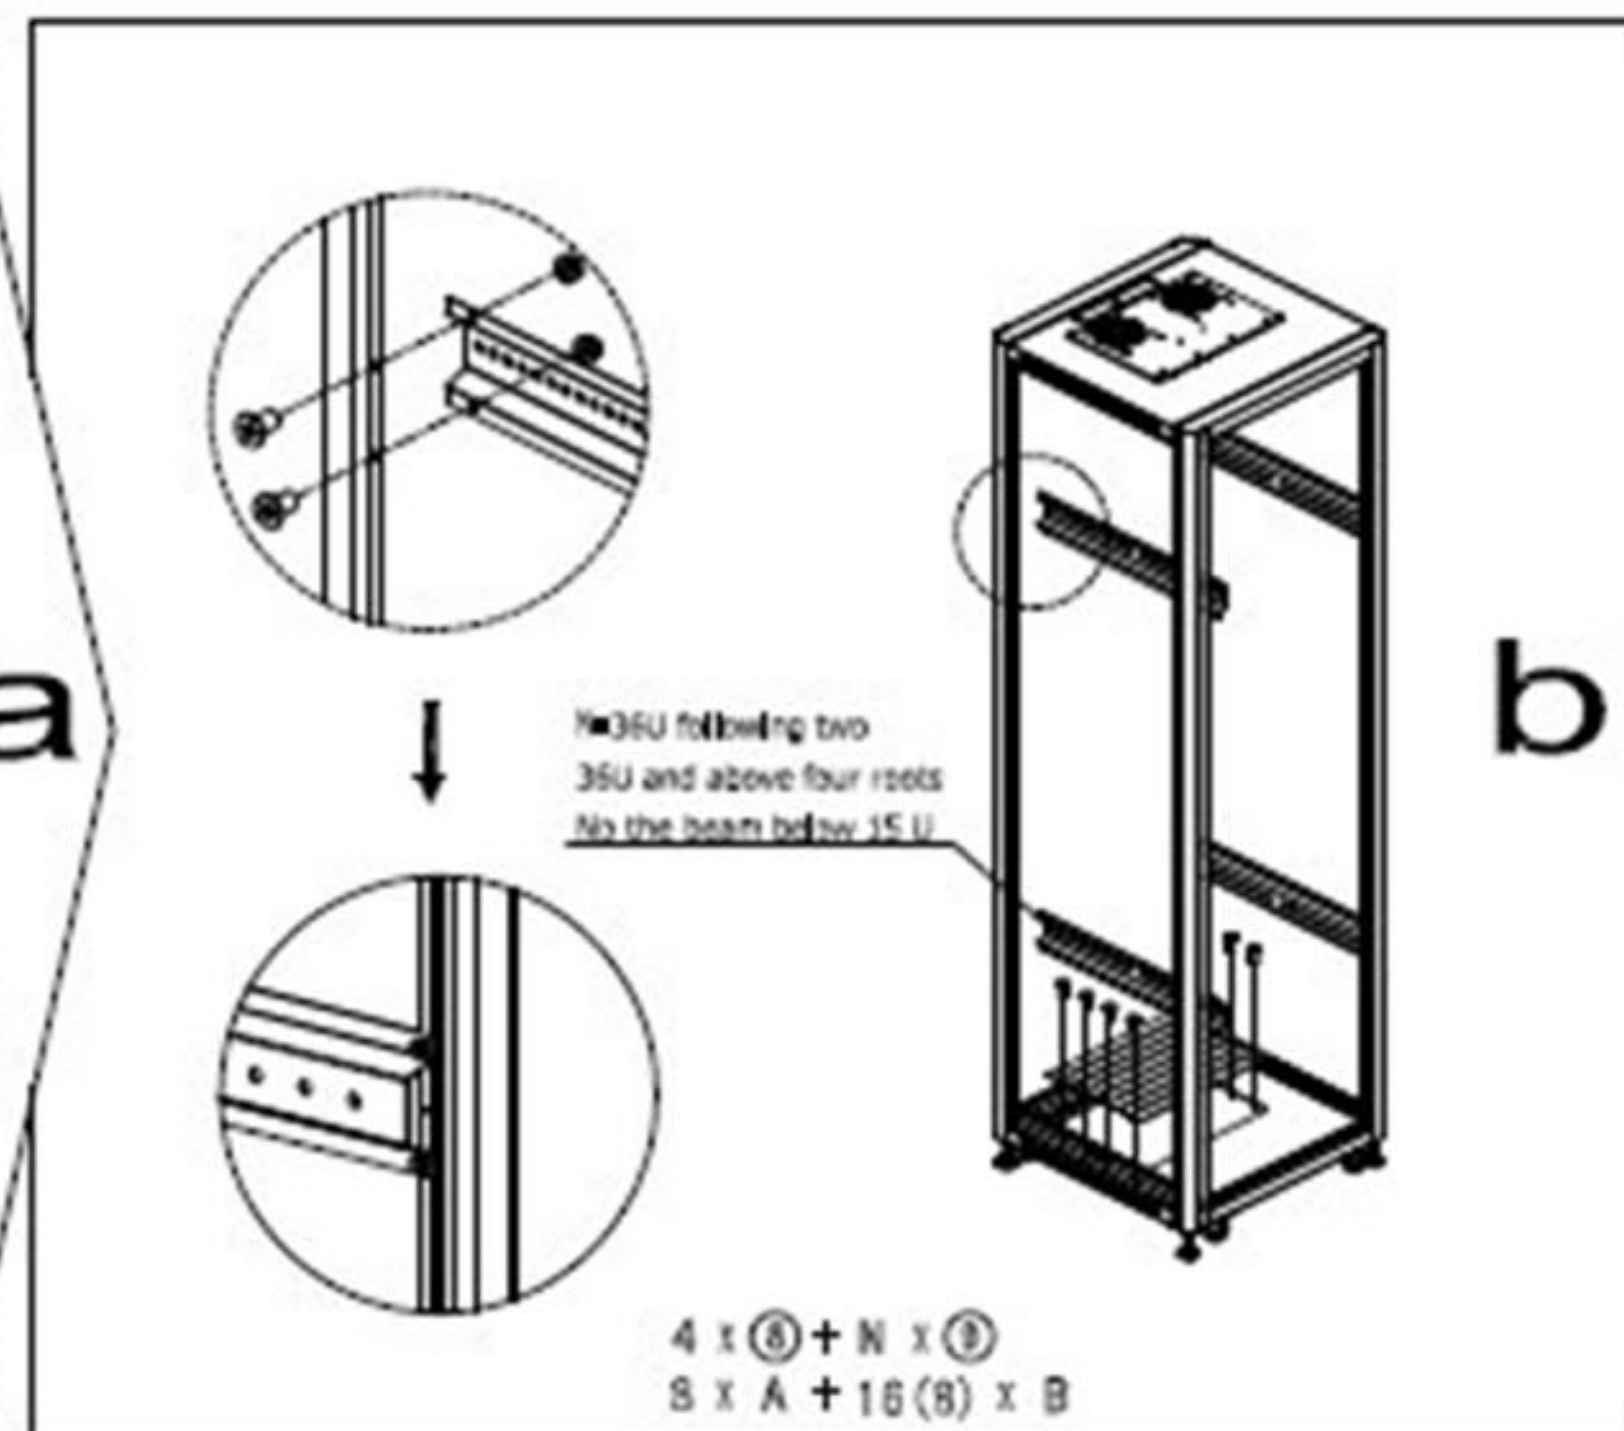
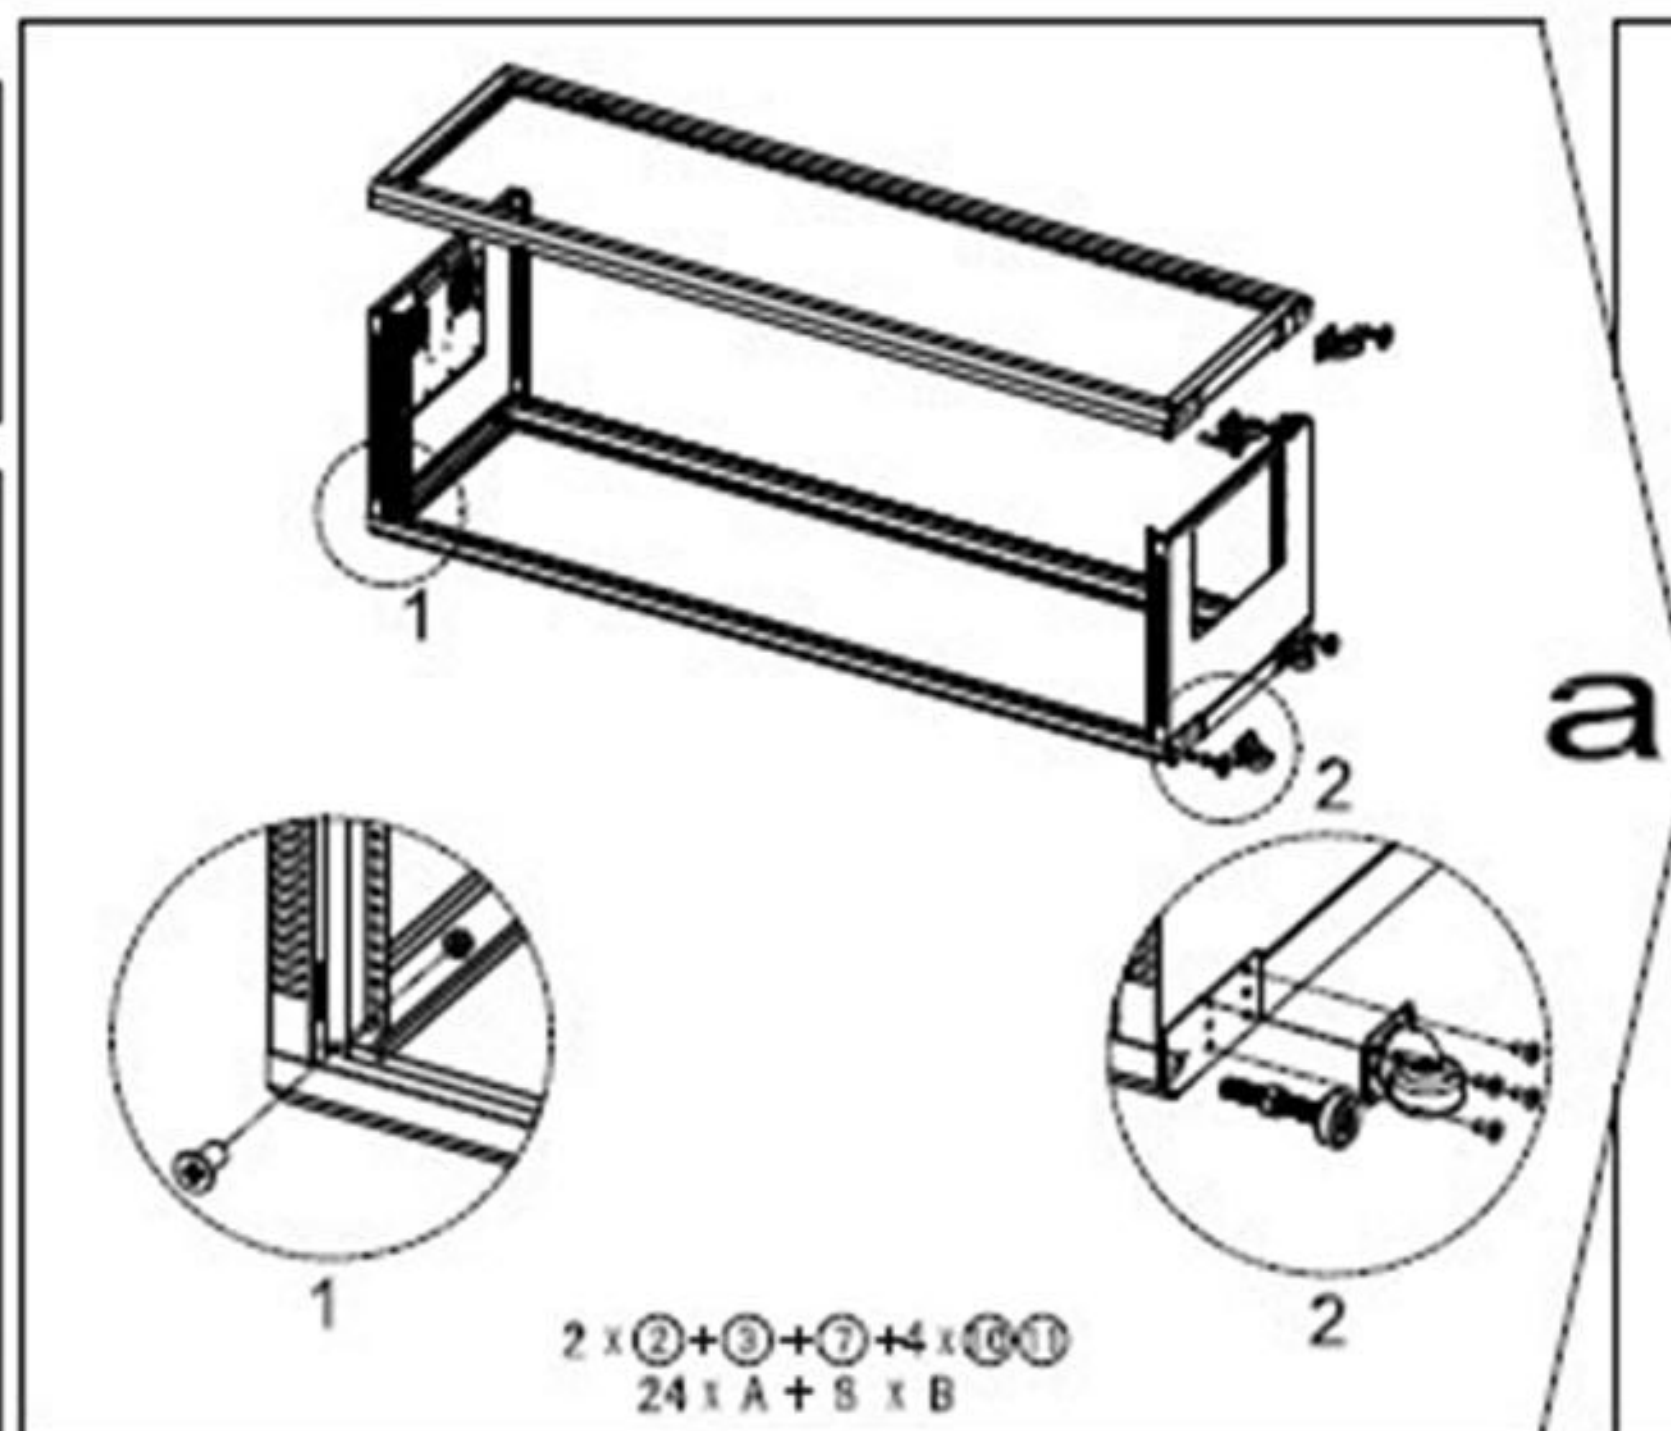
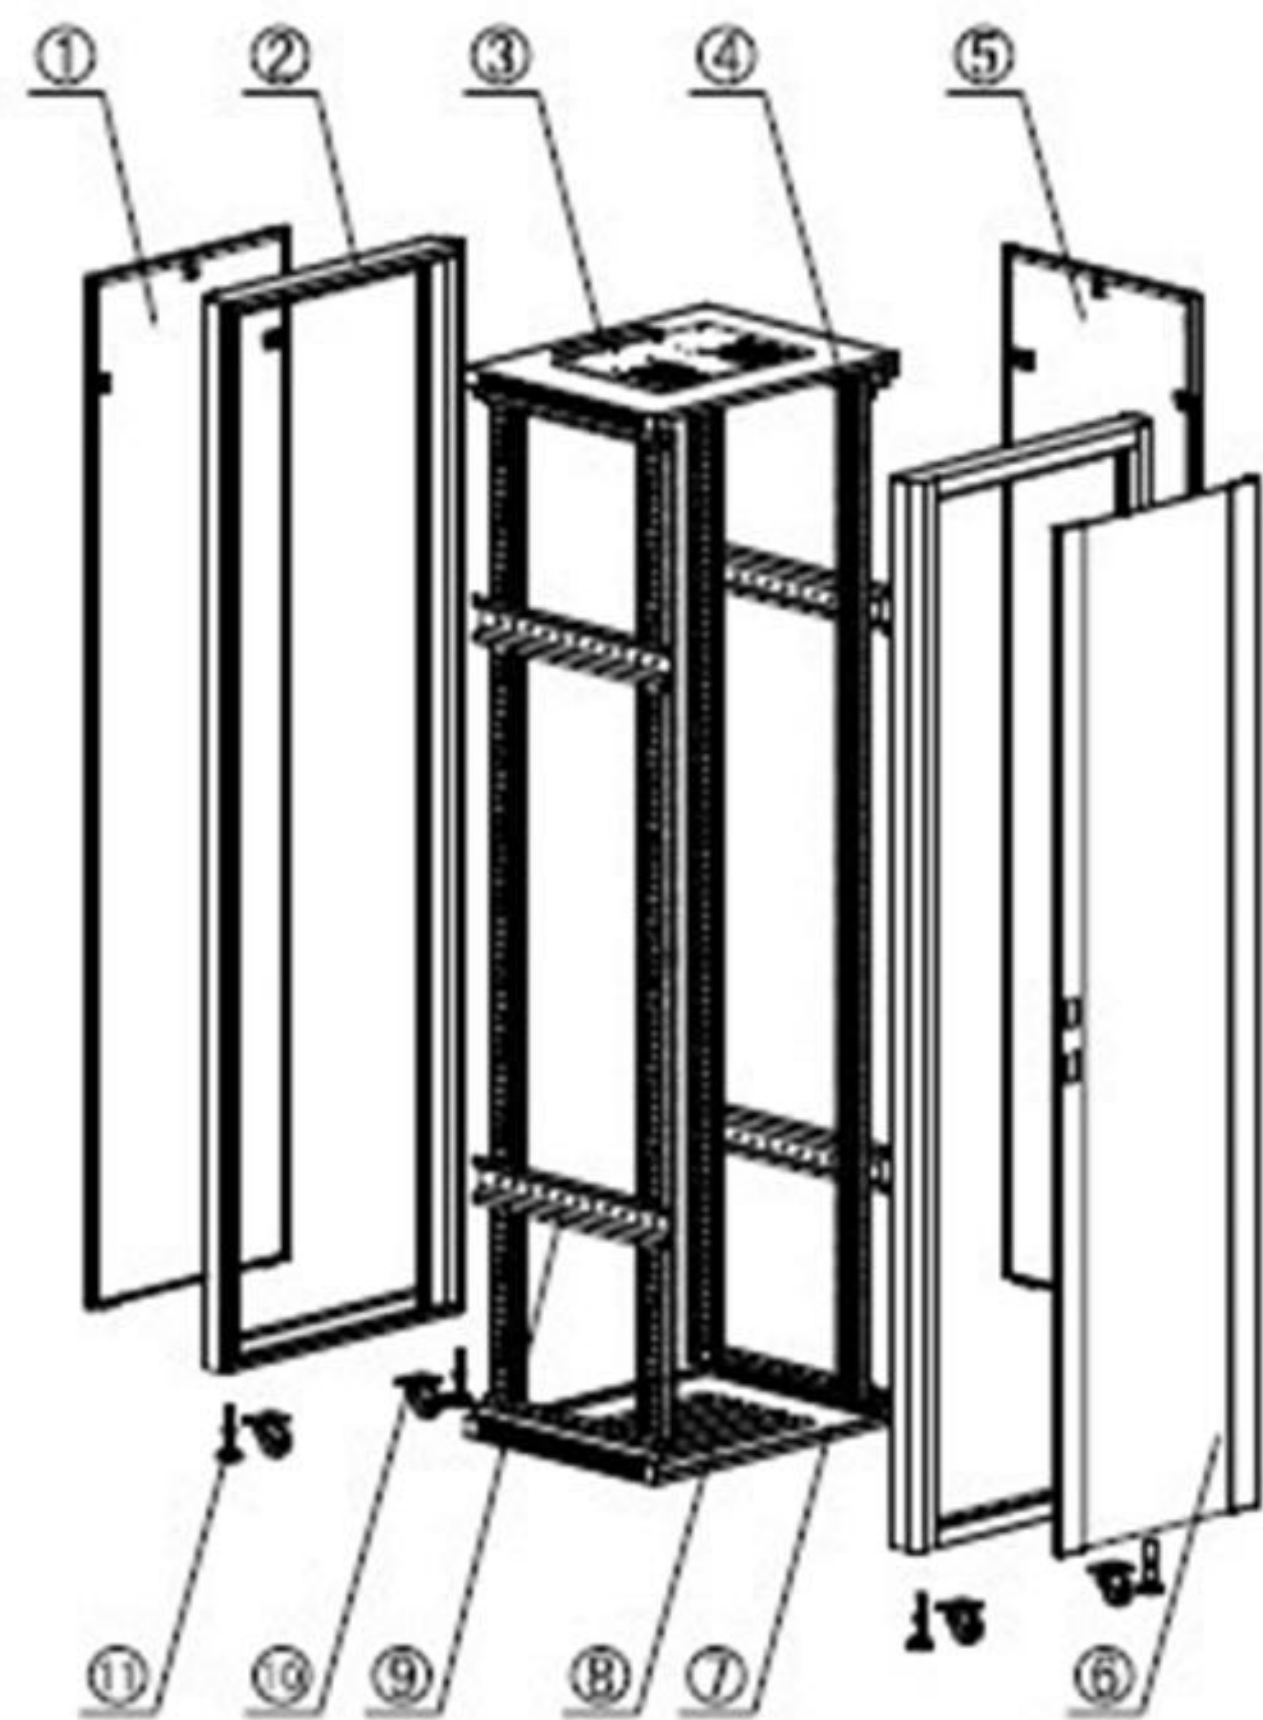
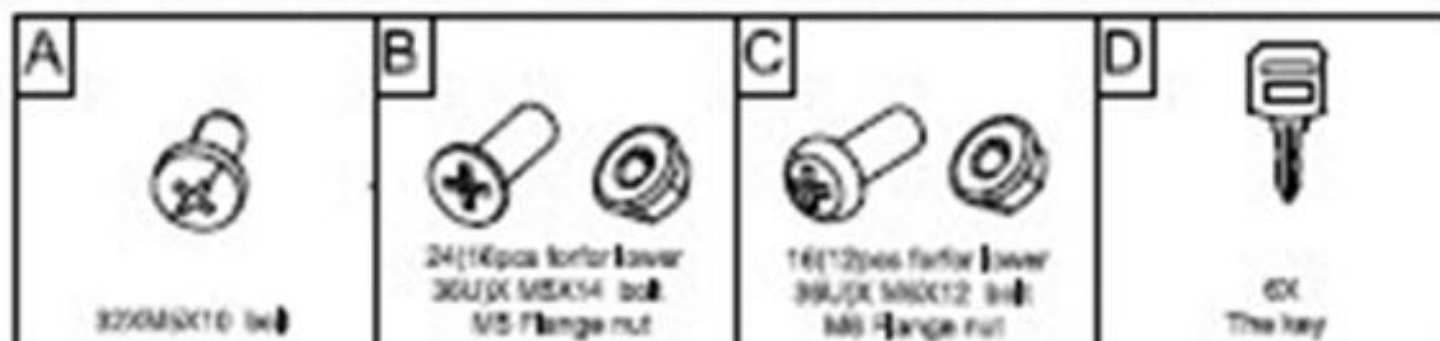




600 WIDTH TE CABINET INSTALLATION MANUAL

SUPPLIED PARTS AND HARDWARE


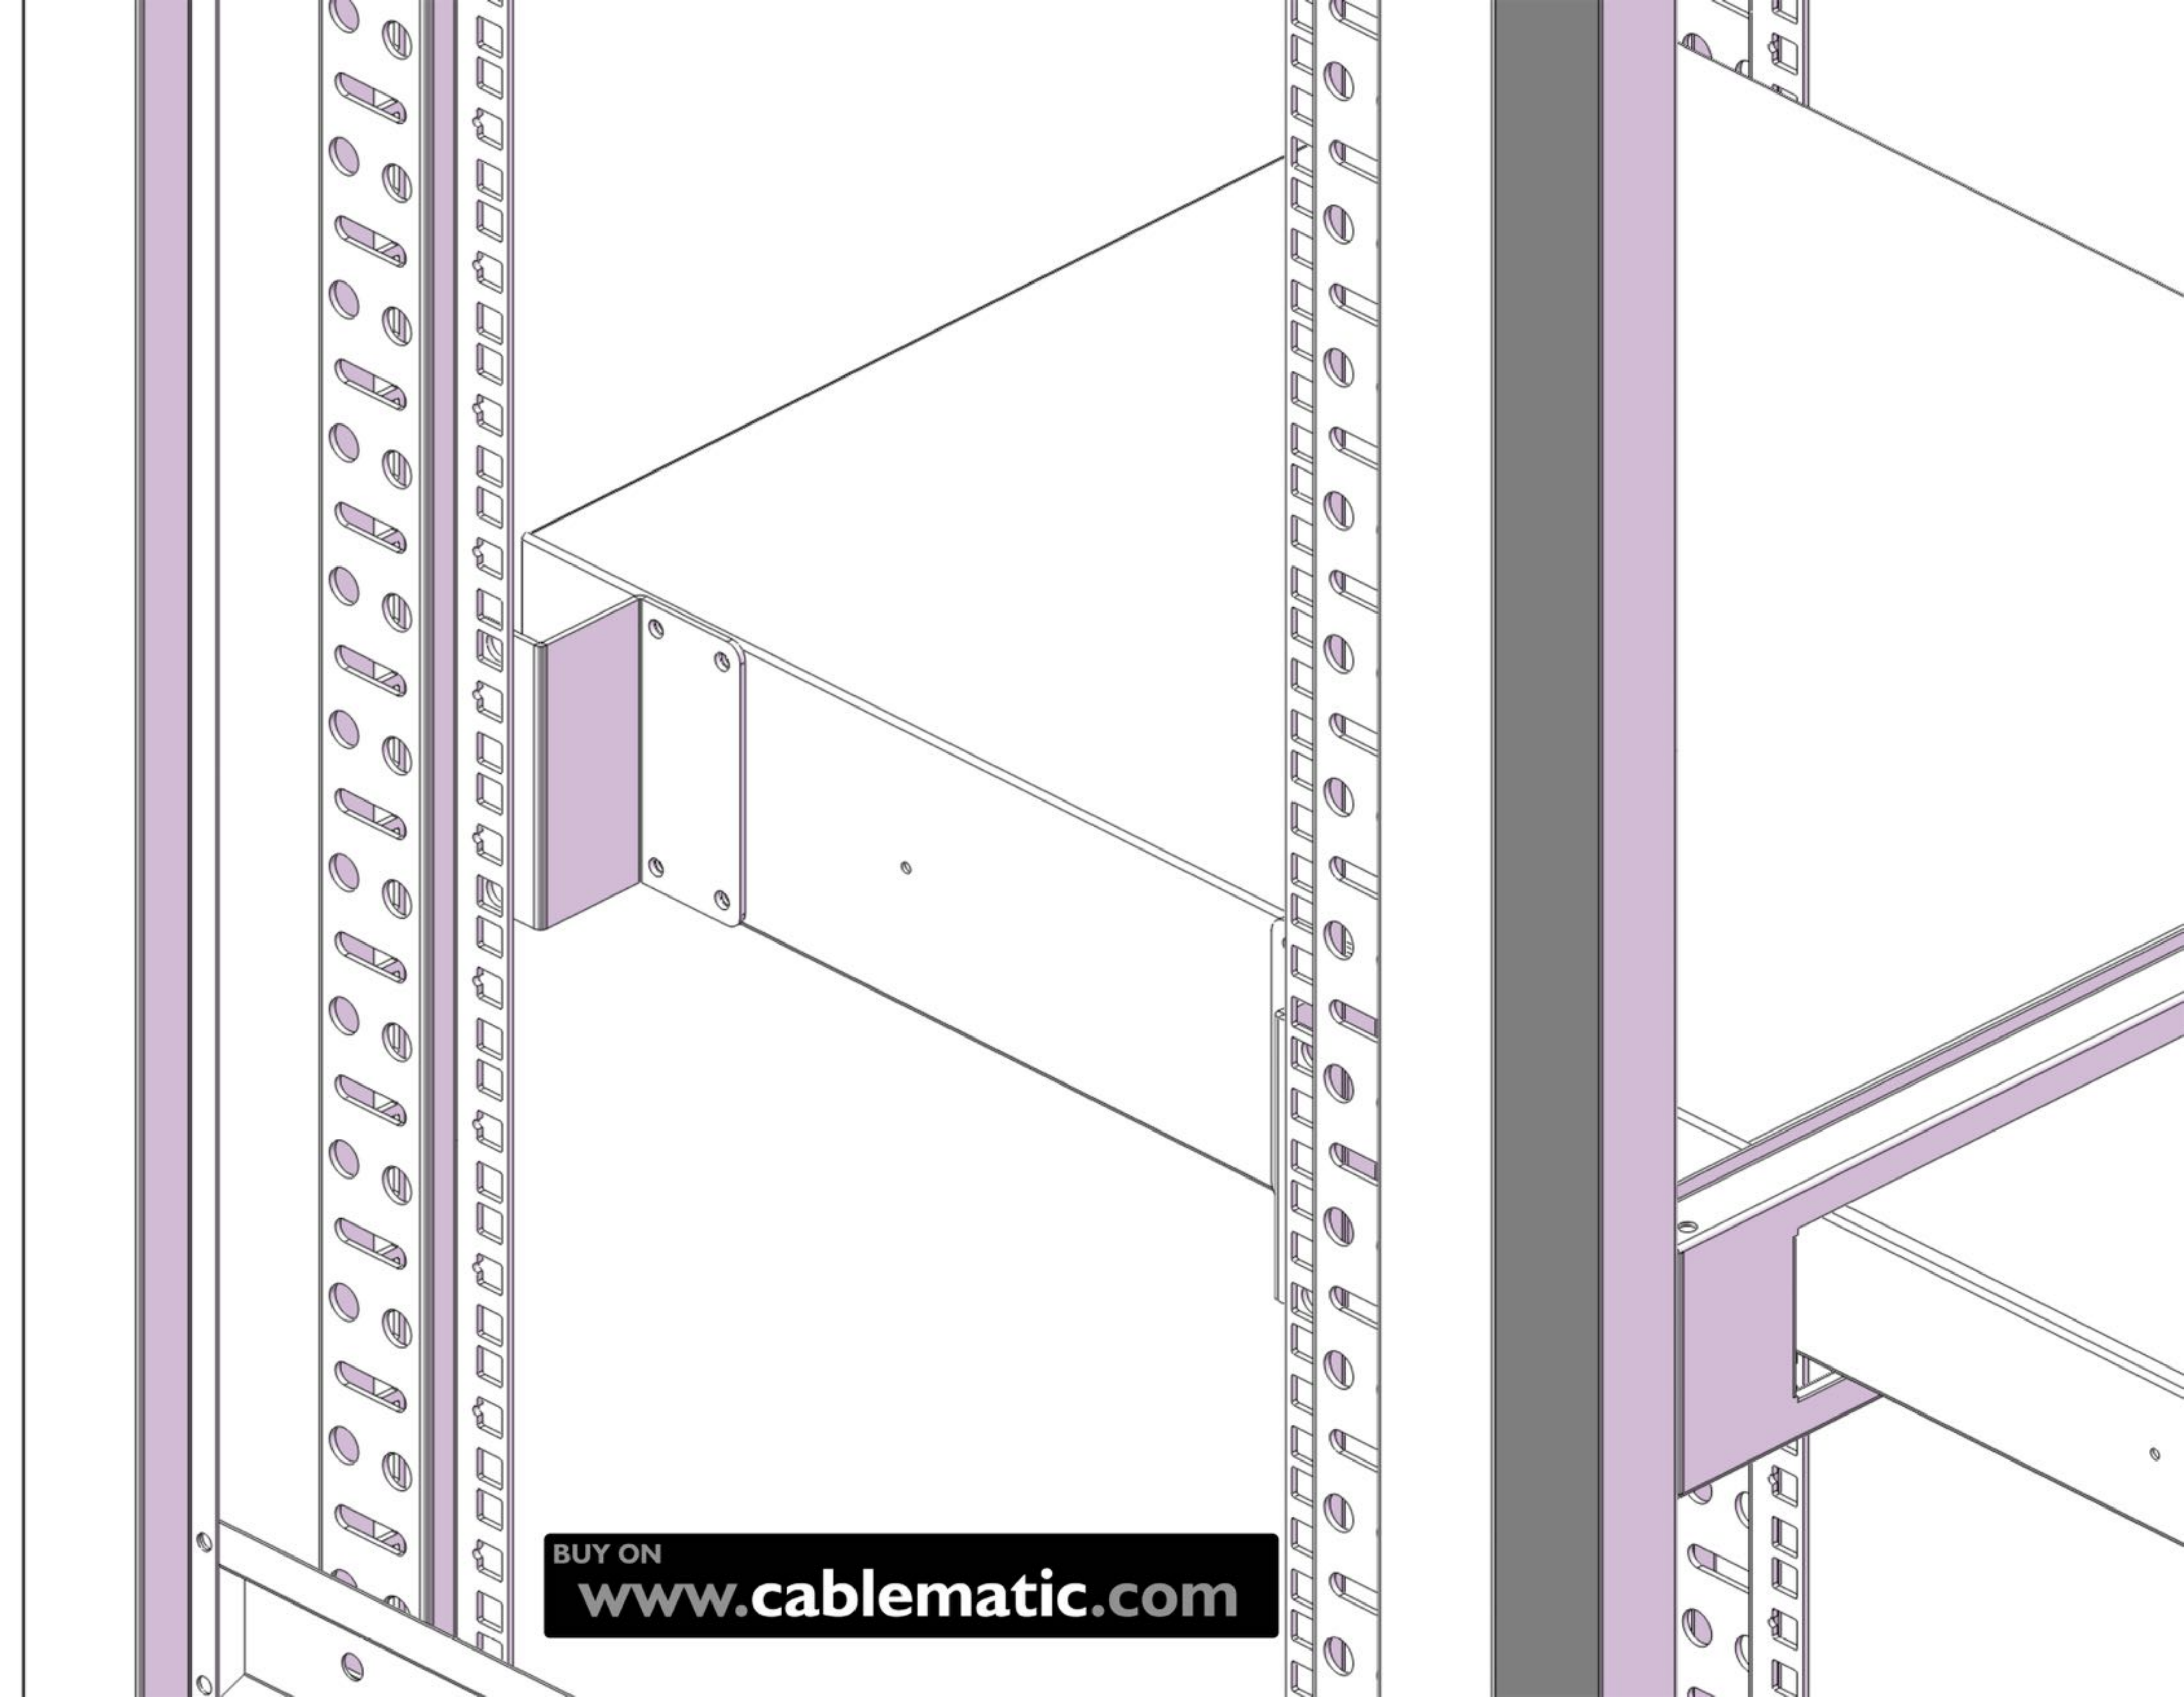


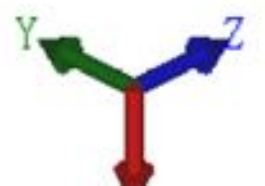

BUY ON
www.cablematic.com

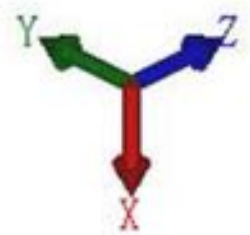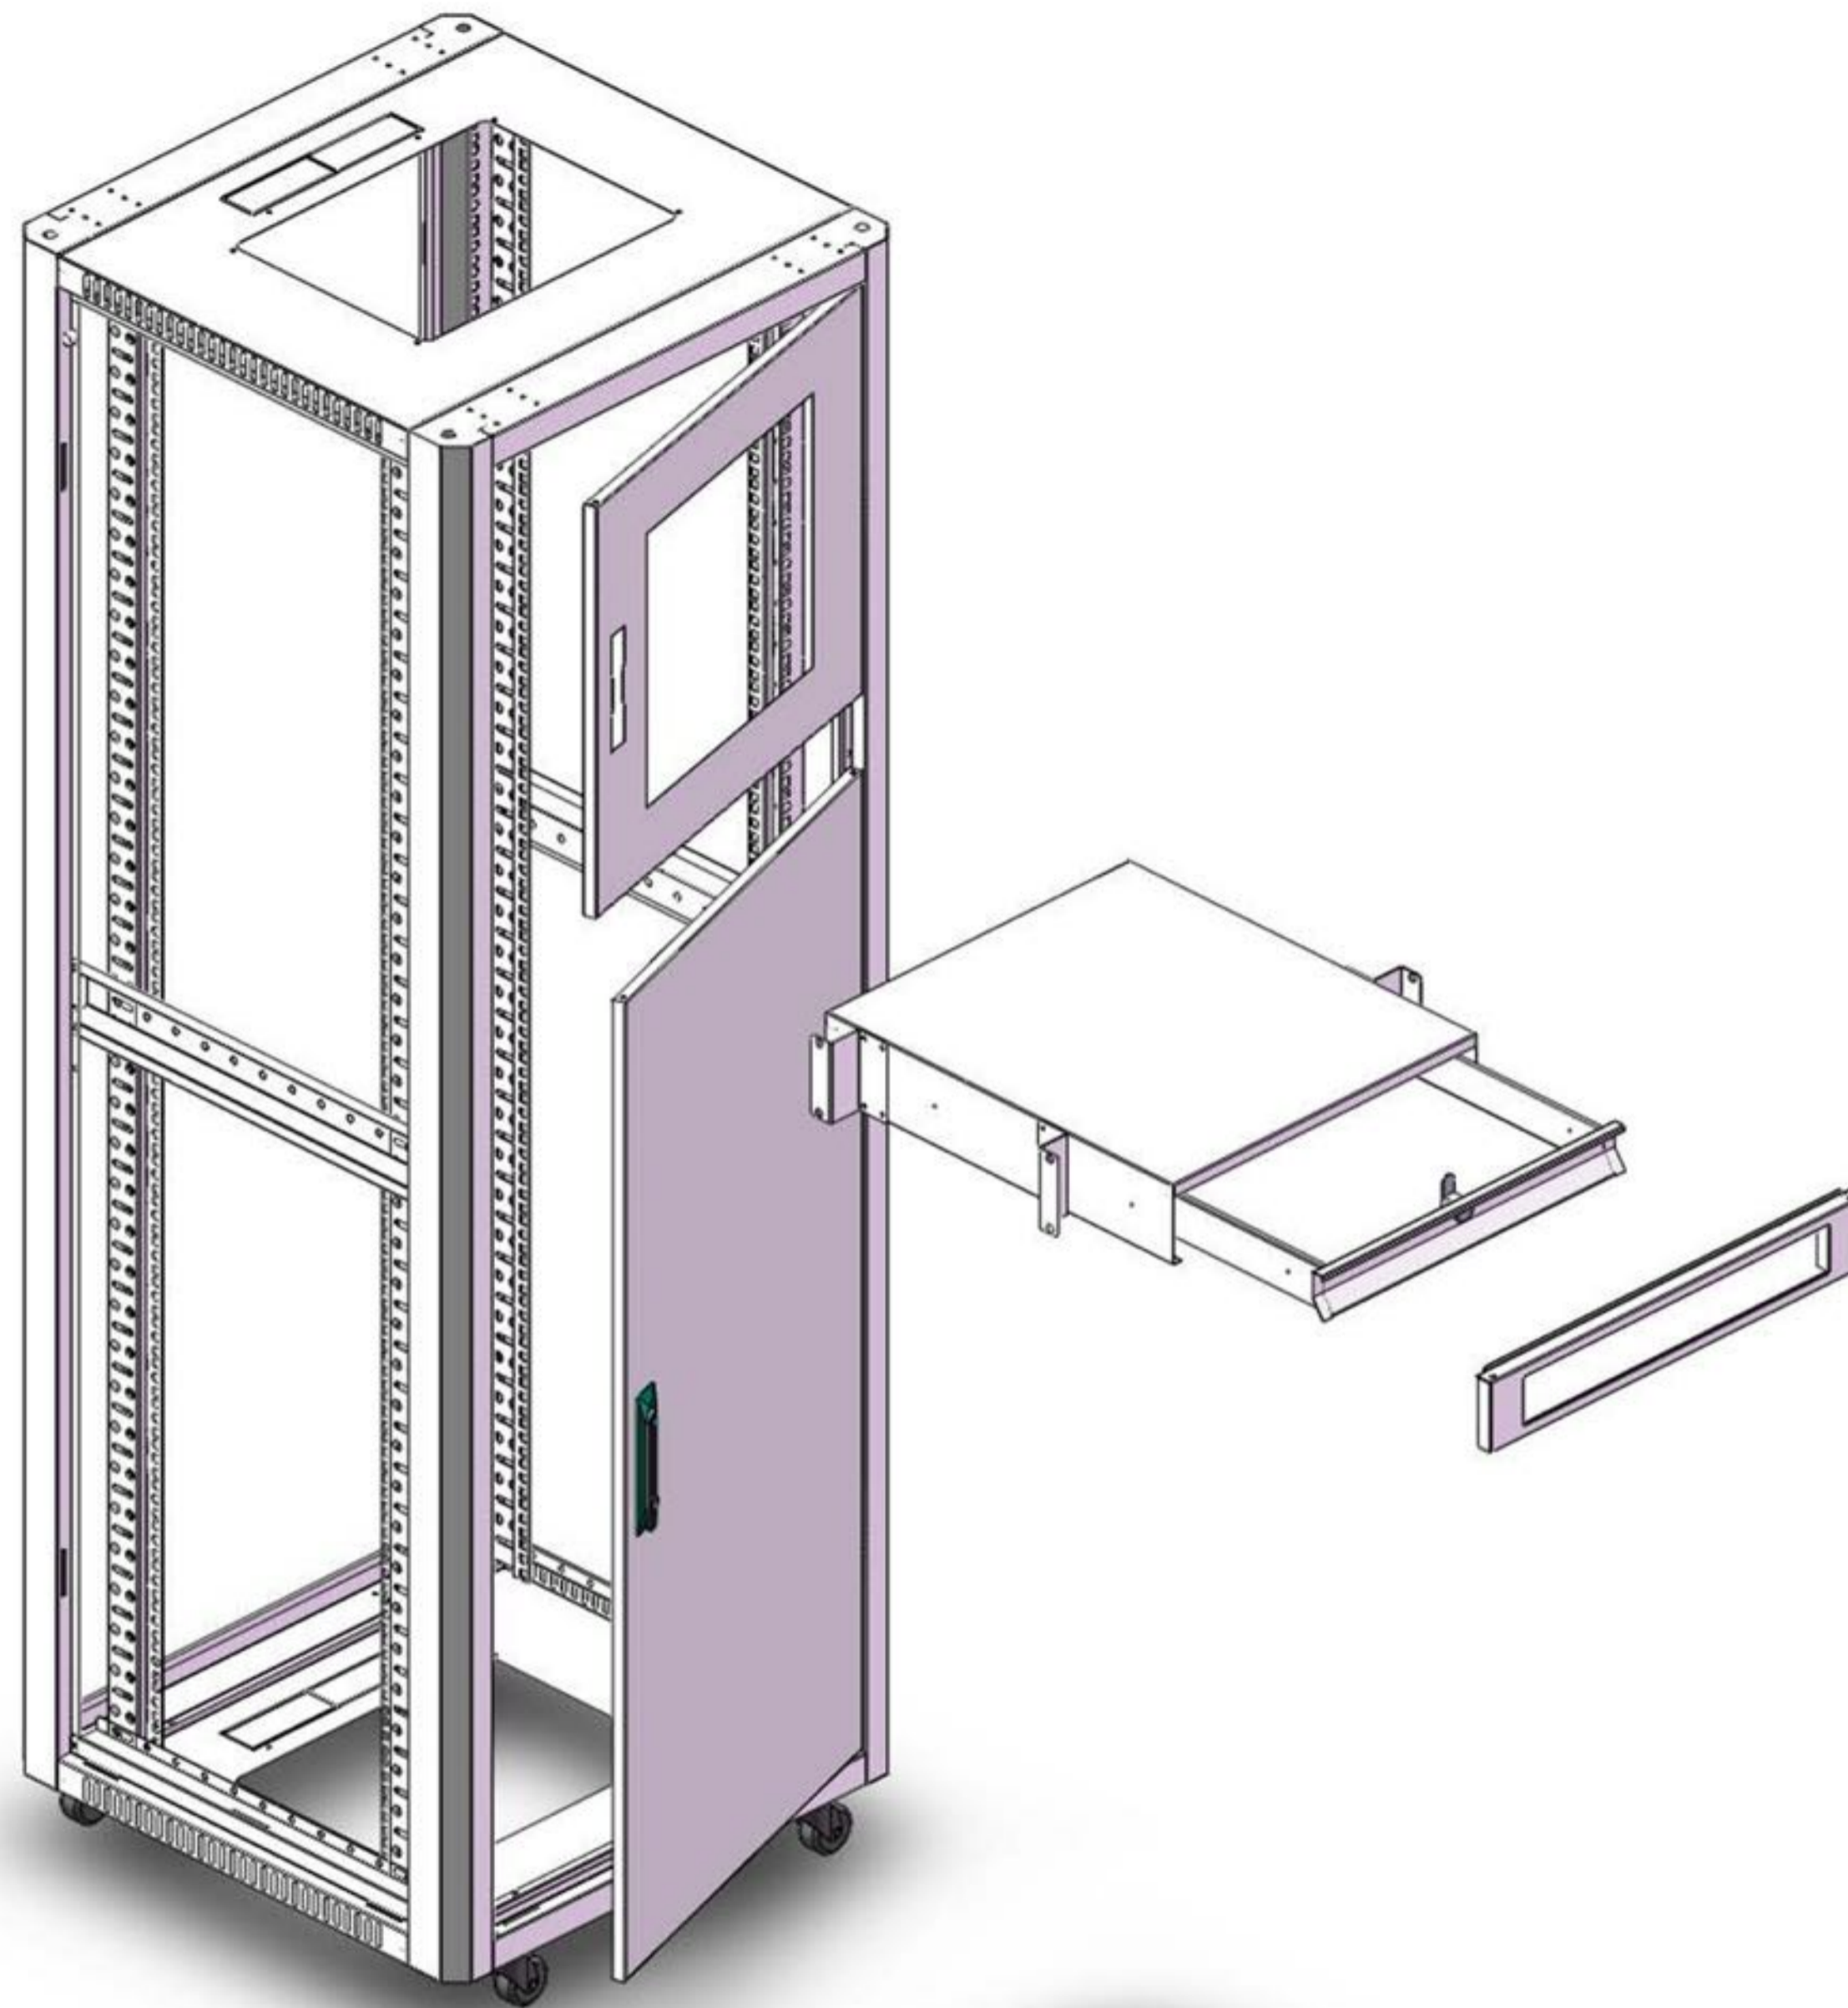

BUY ON
www.cablematic.com

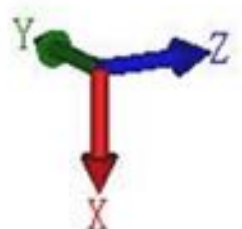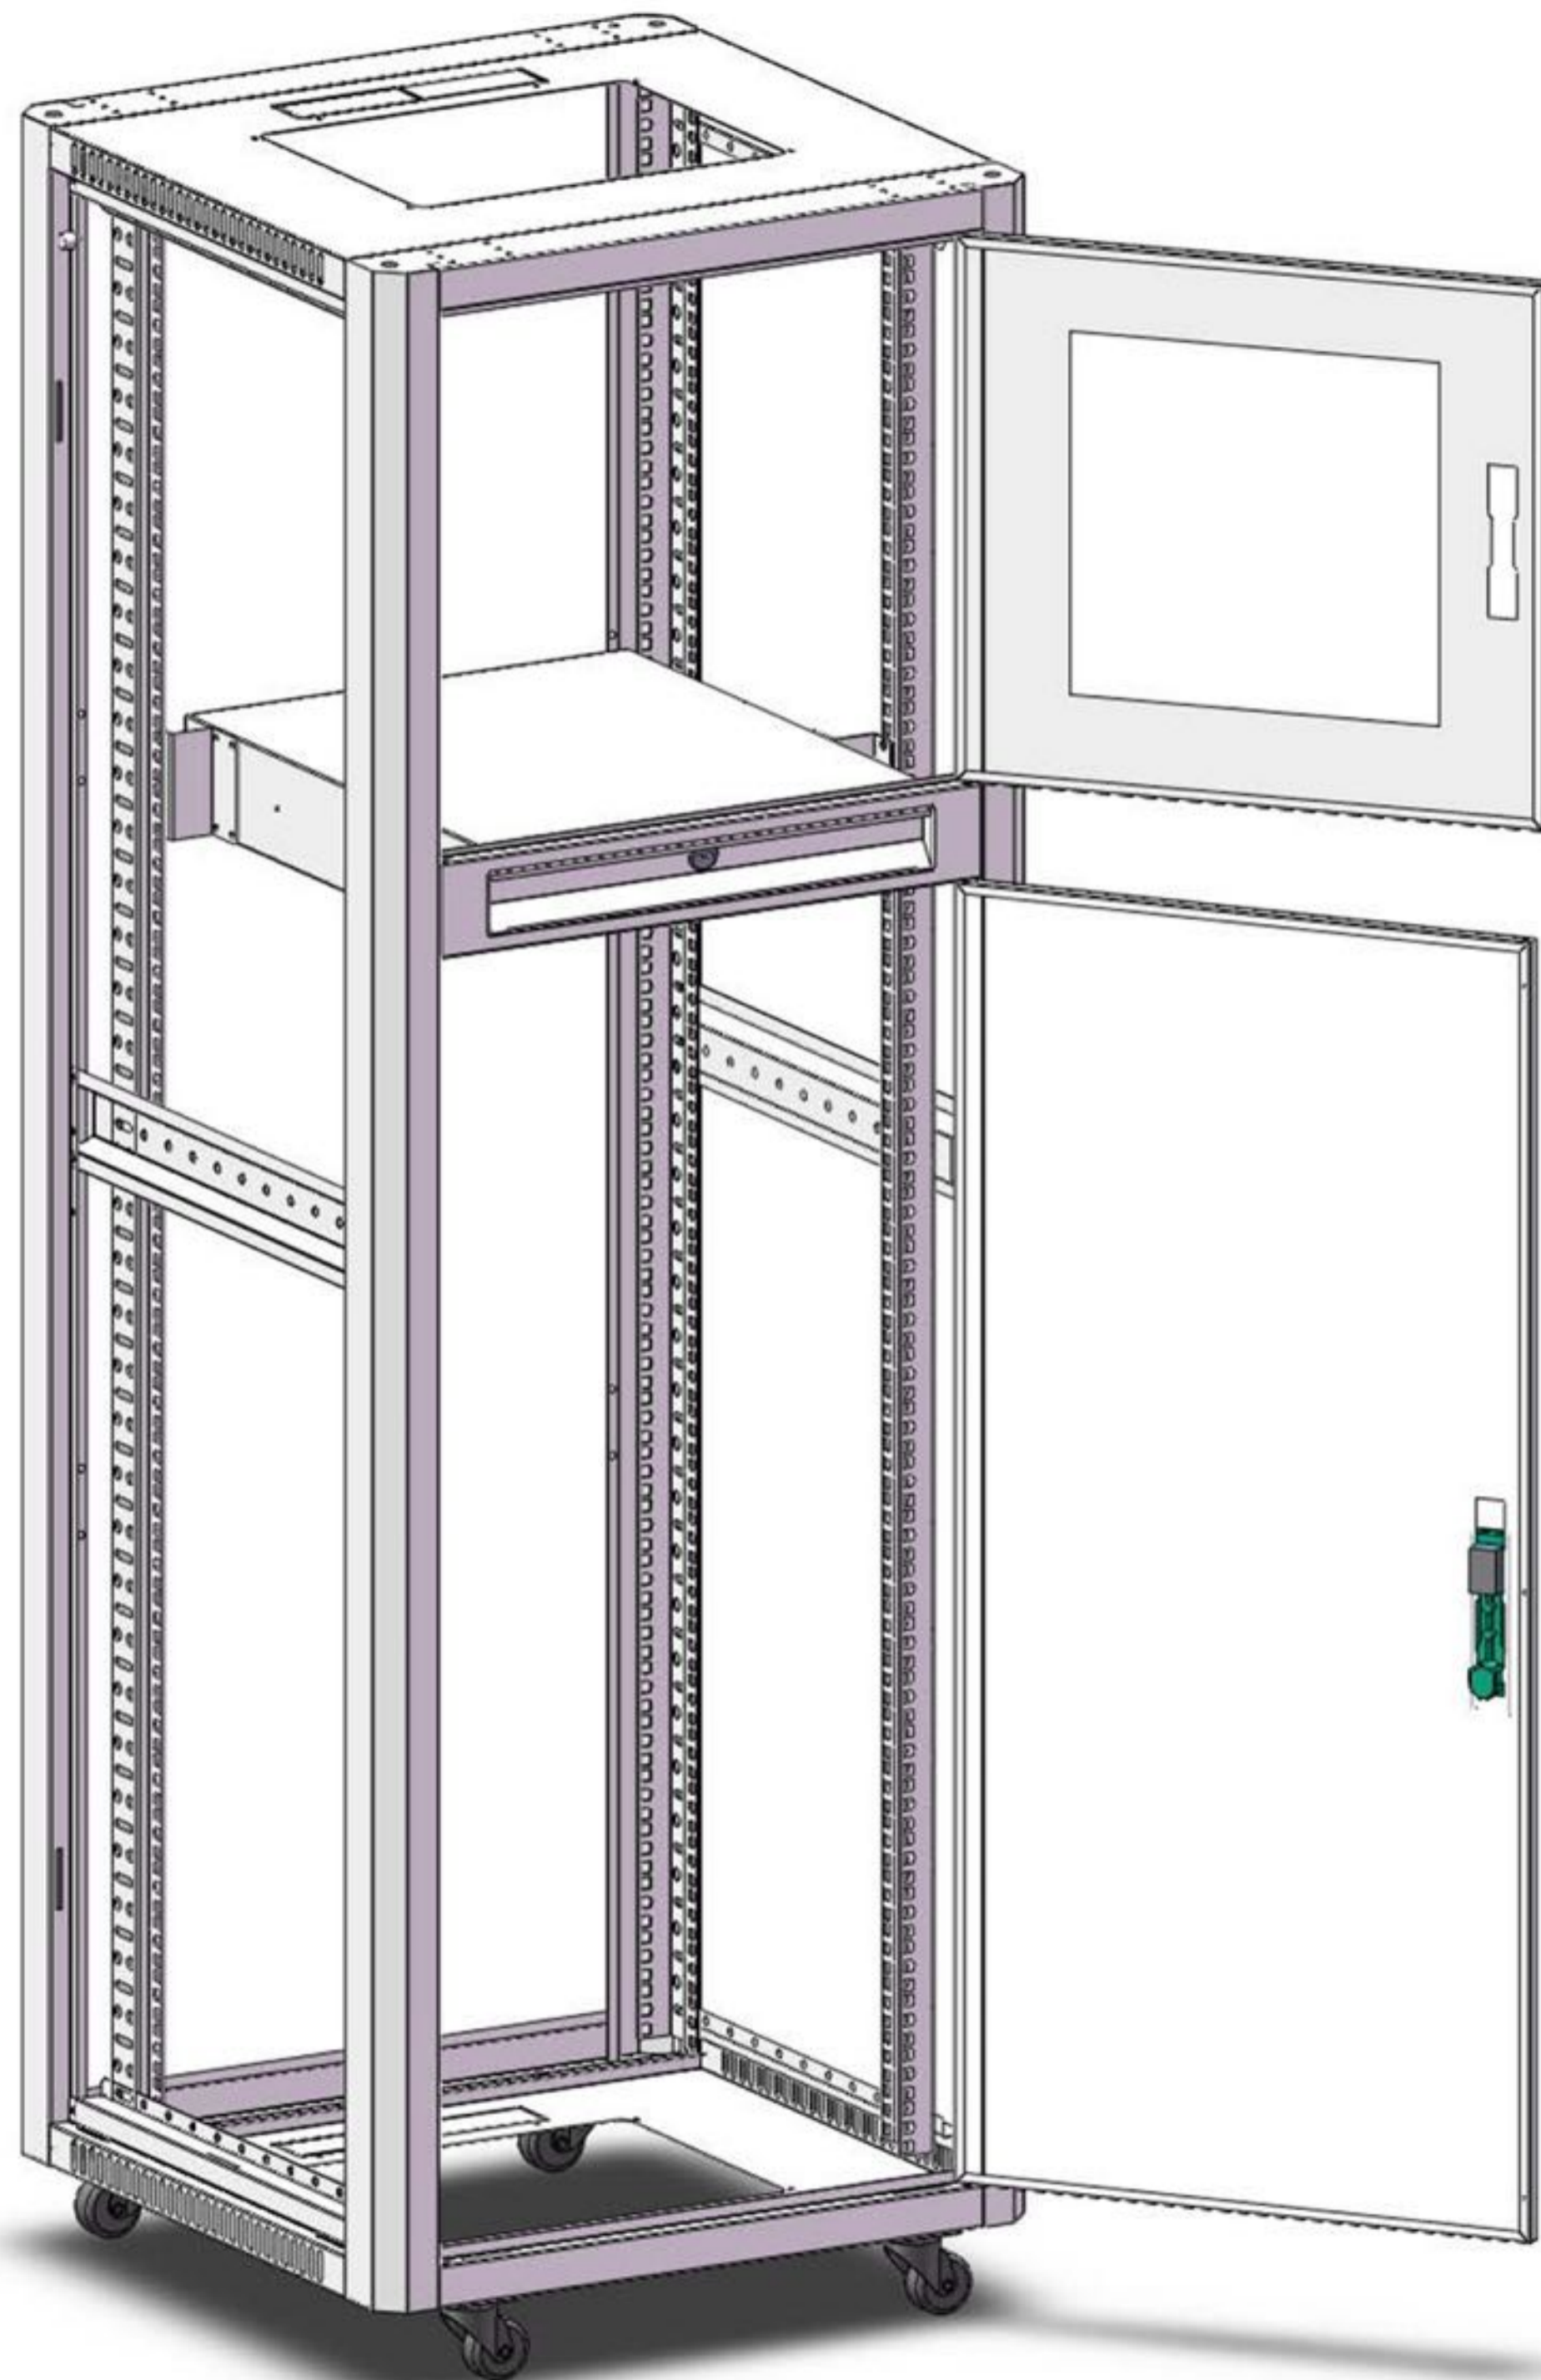

BUY ON
www.cablematic.com