



USB Screw Terminal Module Installation Instructions

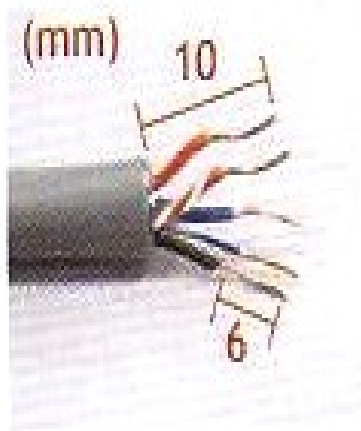

1. Strip the cable jacket length for about 10mm.
Keep 5 wires then cut the excess wires and the separator.

Strip the wire jacket length for about 6mm.


BUY ON
www.cablematic.com

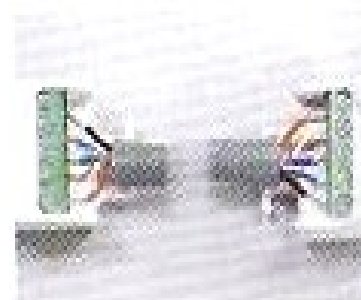

2. Arrange the wires and insert into the screw terminal block.

NOTE:

- a. The wiring schemes of the modular pair have to be the same on both ends. (Figure 1)
- b. Terminal D- and D+ **MUST** use the same pair of wire.

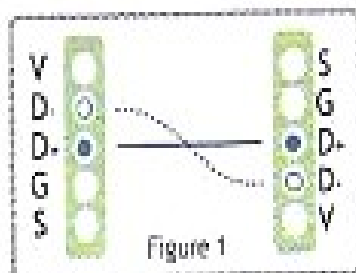

3. Use a screwdriver to tighten the wires onto the screw terminal.

Make sure all the wires are fastened.

Use a cable-tie to fix the cable.

Completion.

NOTE: Please DO NOT over-tighten the cable.