

BUY ON

www.cablematic.com


Warm Suggestion

Before installation, the mirror surface is protected by a layer of film. Please remove it when you are sure that all of the parts have been installed well!

Installation Steps


Step 1:

According to the Portable Anti-theft Mirror installation holes size, drill four holes in the wall, install the Plastic Swells, then use the M4 Screws to fix the Hose Chassis (with holes) to the wall.

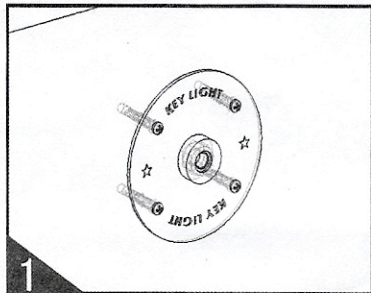



Step 2:

Tighten one end of the Corrugation Hose to the Hose Chassis (no holes) which is sticky on the back of the mirror.

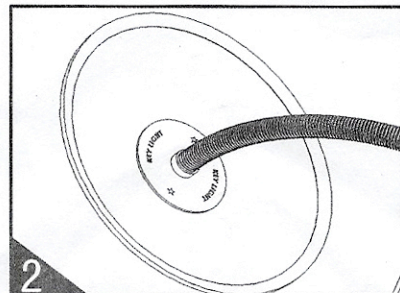

Step 3:

Tighten the other end of the Corrugation Hose to the Hose Chassis (with holes) which have been installed in the wall, then adjust the angle and position of the mirror well.

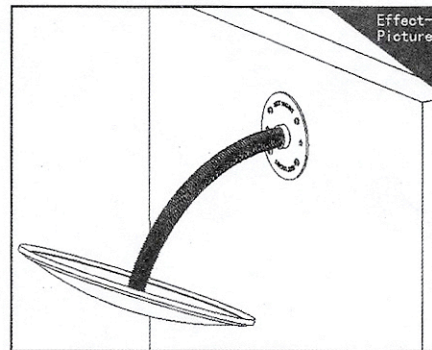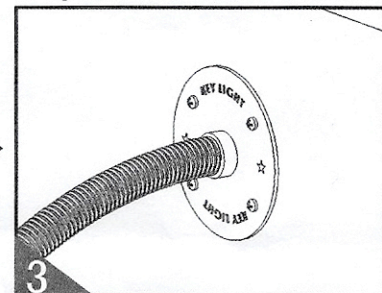

Caution

(1) **Periodical clean:** After a term the mirror must be cleaned carefully by a soft cloth damped with water, then dry it with cotton or soft tissue; The PC mirror should be cleaned by water and then air-dry it spontaneously.
(2) **Precaution:** Prohibit to move the lens to adjust the mirror's angle and position; / Prohibit using any escharotic or ammoniate on the mirror surface. (3) The final product is standard.