

For INTEL-Pentium D / PR(LGA775)



Step1

Take out the original CPU cooler.



Step2

Apply the proper amount of thermal paste on the CPU die.




Step3

Aim the push pin at the position each.



Step4

Push then into the motherboard one by one.

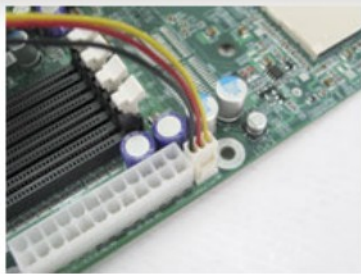

Step5

Connect the power.



Step6

Finished installation.