



--> Step1

Take out the original CPU cooler.



--> Step2

Apply the proper amount of thermal paste on the CPU die.




--> Step3

Put the main unit onto the CPU and fit the 4 holes.



--> Step4

Press the 4 clips step by step.

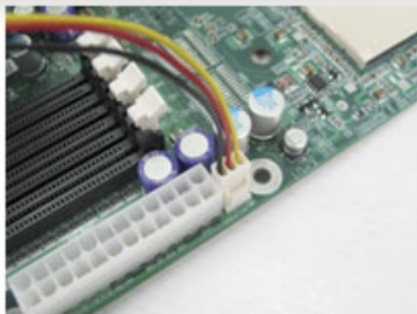

--> Step5

Connect the power cable of the fan to the motherboard.



--> Step6

Finished installation.