

# Frame Assembly Instructions

## Corners

All corners are colour coded. Match up the colours on each corner to the corresponding corner. Red to red and green to green.



Match Colours



Drop in corner connector blocks



Attach upright, tighten & connect power plugs.

## Straight Joins

All straight joins are colour coded white.



Loosen grub screws and slide out joining bars.




Slide into corresponding section so insertion is equal. Tighten grubs screw.

## Feet

Feet are attached to the base with 2 countersunk screws.



Screws line up with internal bolts.

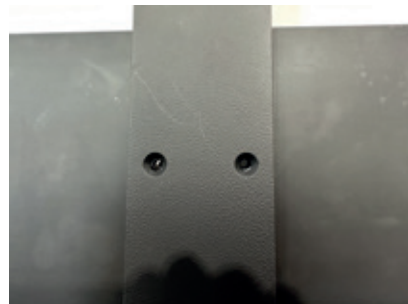

Align feet to holes from flat side.



Using allen key insert the 2 screws though the feet into the base.