

Assembly Instructions

Thank you for purchasing a Birlea product.

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag #ShareYourStyle and #Birlea. One winner will be selected at random each month.

To view our full terms and conditions please visit our website. www.birlea.com

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



ASSEMBLY INSTRUCTIONS 135CM STOCKWELL BED RUSTIC OAK EFFECT

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR 135CM STOCKWELL BED RUSTIC.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

Assembly should be carried out with this item laying flat, not standing upright.

Assemble on a soft, clean surface to prevent damages.

To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Always use on a level, even surface.


CARE & MAINTENANCE:


Periodically check all screws & fixings to ensure they are secure.

DO NOT push this product as this will cause damage.


Always lift this product with two people to reposition.

Keep any sharp objects away from this product.

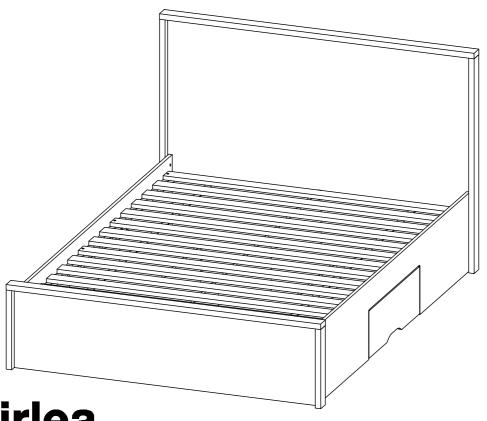

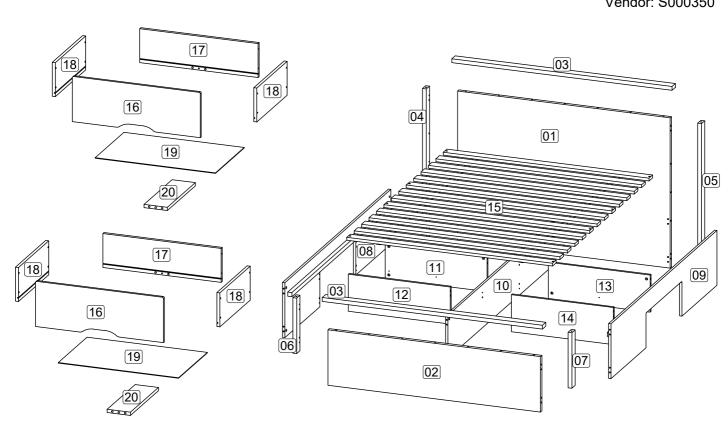

Parts List				Hardware List (BOX 3)				
Part	Descripion	Вох	Qty	Part	Description		Qty	
01	Headboard panel	1	1	A1	Cam lock		44	
02	Tailstock panel	3	1	A2	Minifix screw		44	
03	Headboard & tailstock bone	2	2	A3	Plastic cap	W	44	
04	Headboard bone (Left)	2	1	В	M8 x 30mm Wood Dowel		58	
05	Headboard bone (Right)	2	1	С	Allen key M4		1	
06	Tailstock bone (Left)	2	1	D	M3.5 x 16mm C.B Screw	()	24	
07	Tailstock bone (Right)	2	1	Е	M4 x 32mm C.B Screw	Дининин-	8	
80	Bed side panel (Left)	2	1	F	M4 x 38mm C.B Screw	#	16	
09	Bed side panel (Right)	2	1	G	JCBC Screw M6 x 60mm	()	6	
10	Center panel	2	1	Н	Flat washer M6 x 20mm	0	6	
11	Middle panel (1)	3	1	I	JRN nut	9	6	
12	Middle panel (2)	3	1	J1	16" Drawer slide (Left / Right)	(m) 1 00 T	4	
13	Middle panel (3)	3	1	J2	16" Drawer slide (Left / Right)		4	
14	Middle panel (4)	3	1	K	5/8 PCV Nail Leg	0	25	
15	Bed slat panel	4	1	** V-	** You will need a small mallet and a screwdriver for assembly.			
16	Drawer front	3	2					
			1	7				



^{**} Some screws and wooden dowel may remain.



Drawer back


Drawer side

Drawer bottom

Drawer bone


Vendor: S000350 Step 1: Prepare these parts for assembly using hardware parts A1, A2, B, C, I and K. DO NOT use any power tools as this may damage the frame and will invalidate any claim. (A2) x2 (B)x4 07 (A1)x4 11 (B) x4 (A2)x2 14 **(K)**x2 (A1)x4 06 **K**)x2 (B)x4 (A1)x4 12 B) x4 $(A1)_{x2}$ (K)x2 13 (B)x4 (A1) x10 20 x2 (B) x11 (K)x2 (A2) x3 (B) 01 **↓**04 **K**)x3 (A2) x6 (A1)x8 (B)x7 16 ×2 [02]**K**)x3 (A2) x4 (A1)x2(A2) x4 03x2**(K)**x4 (B) x4 08 (B) (B)x4 (A2) x3 (A2) x4 (A1)x2∟05 09 (A1)x2K x4 (A2) x4 (B)x4 10 (A2) x4 **(K)**x3 (K)[10] **9**-Birlea Page 3 of 7 Suppliers of inspiration

Step 2: Fix hardware J1 into panel (11), (12), (13) and (14) using hardware D with a screwdriver (not provided). DO NOT use any power tools as this may damage the frame and will invalidate any claim.

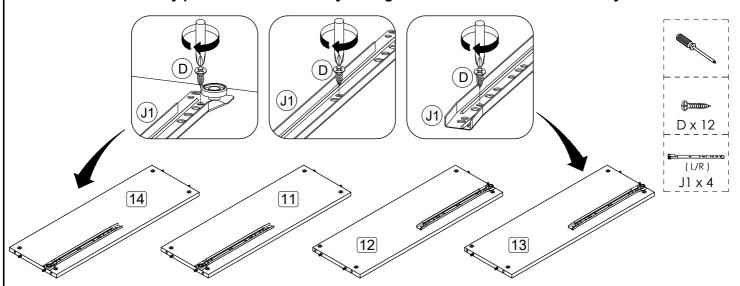


Step 3: Attach panel (3), (4) and (5) to panel (1) using hardware A1 and A2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

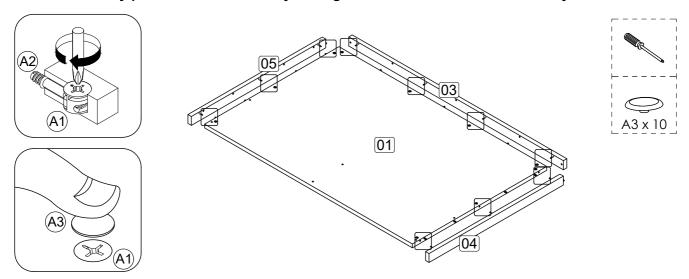


Step 4: Attach panel (3), (6) and (7) to panel (2) using hardware A1 and A2 with a screwdriver (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

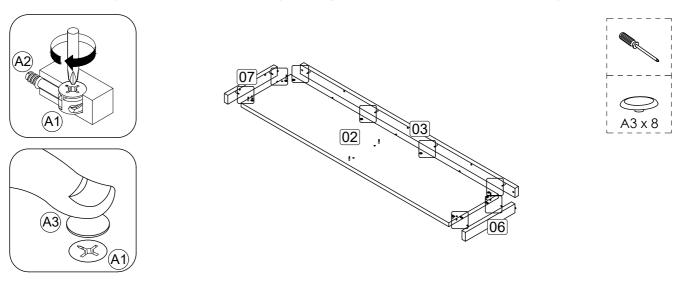




Step 5: Attach panel (11) and (12) to panel (8) and (10) then panel (13) and (14) to panel (9) and (10) using hardware A1 and A2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

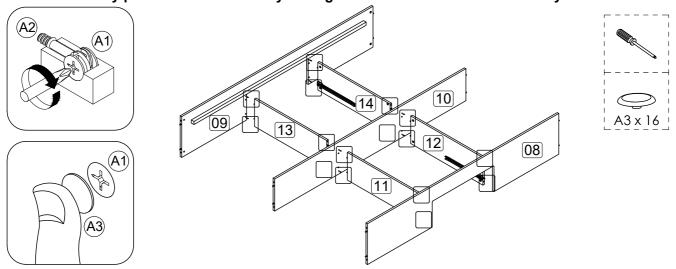


Step 6: Attach panel (8), (9) and (10) to panel (2) using hardware A1 and A2 with a screwdriver (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

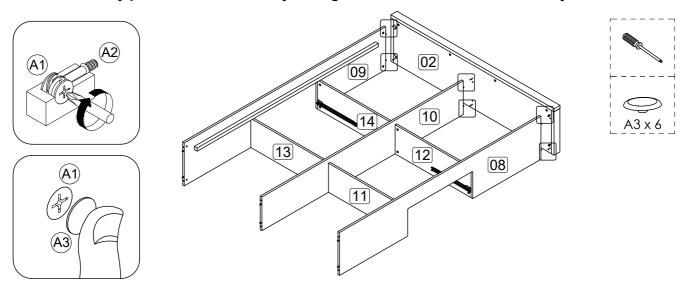


Step 7: Attach panel (1) to panel (8), (9) and (10) using hardware C, G and H.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

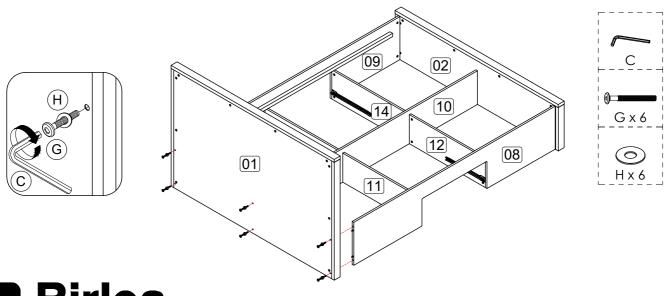


Step 8: Attach panel (15) to panel (8) and (9) using hardware E with a screwdriver (not provided).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

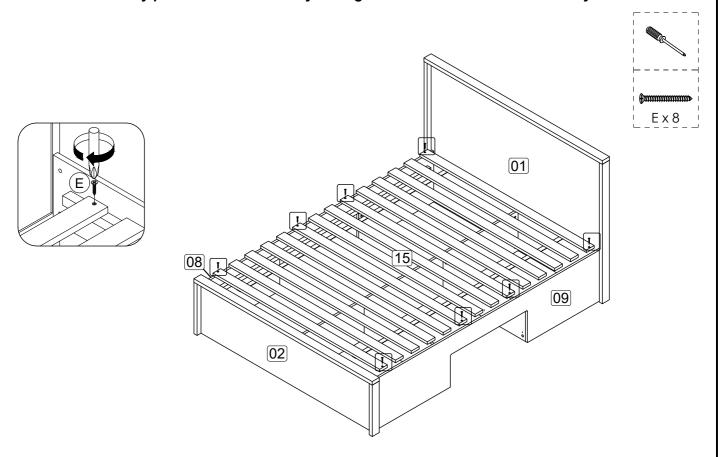

Step 9: Attach panel (20) to panel (16) and (17) using hardware A1 and A2 with a screwdriver (not provided). In this step only show one of the drawers.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

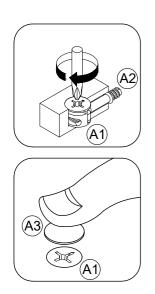

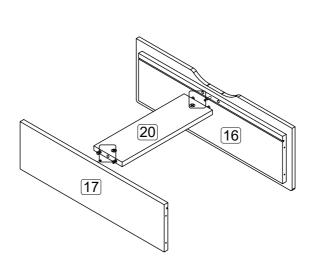







Step 10: Assemble the drawer components using hardware D, F and J2. In this step only show one of the drawers.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

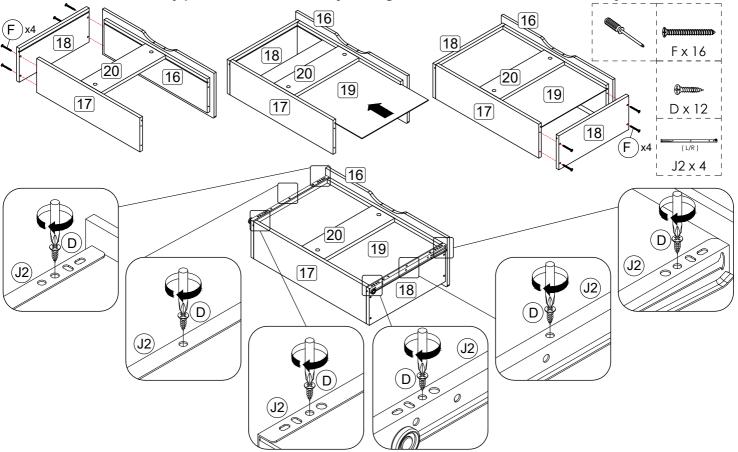

Step 11: Assemble the drawer in place along the drawer slides.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

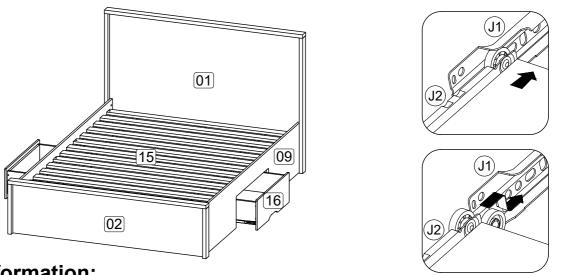

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on instagram.

