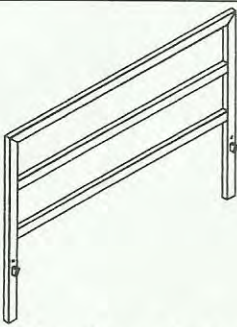
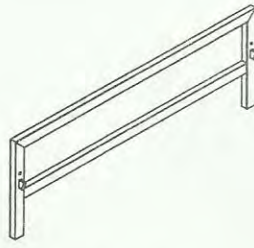
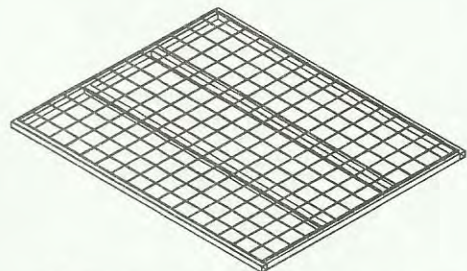
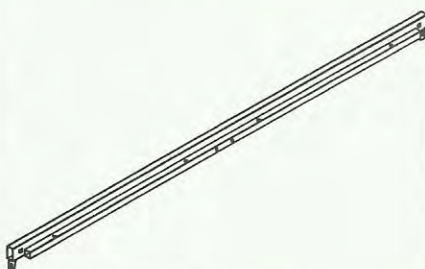
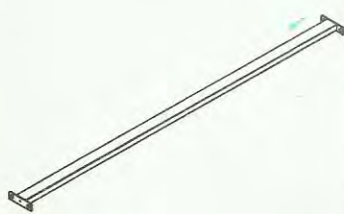







Assembly instructions

<p>1</p>  <p>Headboard x1pcs</p>	<p>2</p>  <p>Footboard x1pcs</p>	<p>3</p>  <p>Mattress bed frame x2pcs</p>				
<p>4</p>  <p>Side rail x2pcs</p>	<p>5</p>  <p>horizontal rail x1pcs</p>	<p>A</p>  <p>Bolt M6x90 4pcs</p>	<p>B</p>  <p>Bolt M6x35 8pcs</p>	<p>C</p>  <p>Bolt M6x15 4pcs</p>	<p>D</p>  <p>insert nut 4pcs</p>	<p>E</p>  <p>Allen key 4MM 1pcs</p>

